	图号		名称	说明书	尺寸		材质	
	型号	BB501	备注					
业务	客户		单号		版本	V1	日期	2024-3-6

170.00 mm

125.00 mm

BABY SWING CHAIR

USER MANUAL

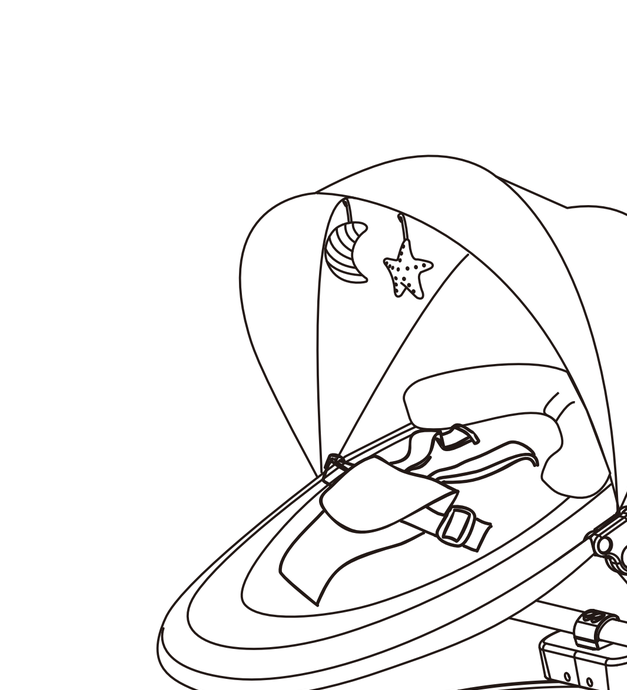

MODEL: BB501

IMPORTANT! KEEP IT FOR FUTURE REFERENCE.

Before installing and using, please follow the instructions carefully to ensure the safety of your baby.

Product Contents

Product Contents
Product Introduction 2
Product Specification 2
Product Features..............2
Parts Instruction 3
Parts list..............3
Installation 3
Assemble/disassemble base stand 3
To unfold the seat frame 4
Adjust the backrest 4
For Canopy Whit Toys 5
Safety Belt Instuction 5
User Instruction..............6
Button Description 6
Lock/Unlock 6
Remote Control 7
Power Supply 7
WARNING 7
WARNING 8
Clean & Maintenance..............9
Clean 9
Maintenance 9
Troubleshooting..............9
After-sales Service 10

Product Introduction

Product Specification:

Product Name	BABY SWING CHAIR
Model Number	BB501
Input Voltage	100-240V~
Output Voltage	5V
Output Current	1A
Frequency	50/60Hz
Application	Children up to a weight of 9 kg or unable to sit up unaided
Main Material	100% polyester fiber, strong iron base bracket
Certificate	EN12790

Product Features:

1.Soft fabric brings safe and comfort feeling.
2.Protecting baby's spine design on the basis of human engineering.
3.Contorlled by touching screen or remote controller, easy to operate.
4.With built-in soft songs&Bluetooth enabled for music.
5.With broadening seat, removeable seat cover, mosquito netting.

Parts Instruction

Parts List

1.Toys*2
2.Pillow*1
3.Mosquito Net*1
4.Seat Cover*1
5.Remote*1
6.Adapter*1 USB Cable*1
7.Seat Frame*1
8.Seat Base*1

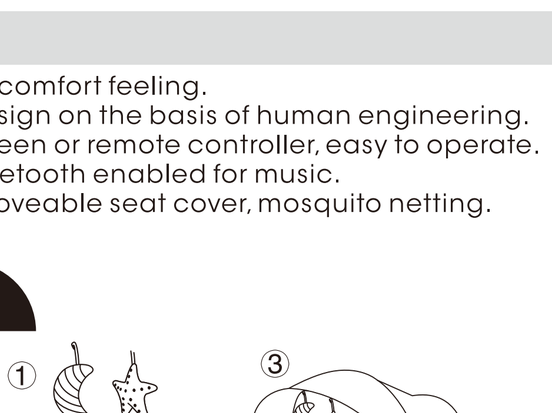

Installation

Assemble/disassemble base stand

Assemble:1.Remove the plastic locked buckle from the base stand
2.Put the seat frame in the base with" ▢ "shape components aligned
Disassemble:Press the button and pull up the seat frame from the base (stand back side of the swing)

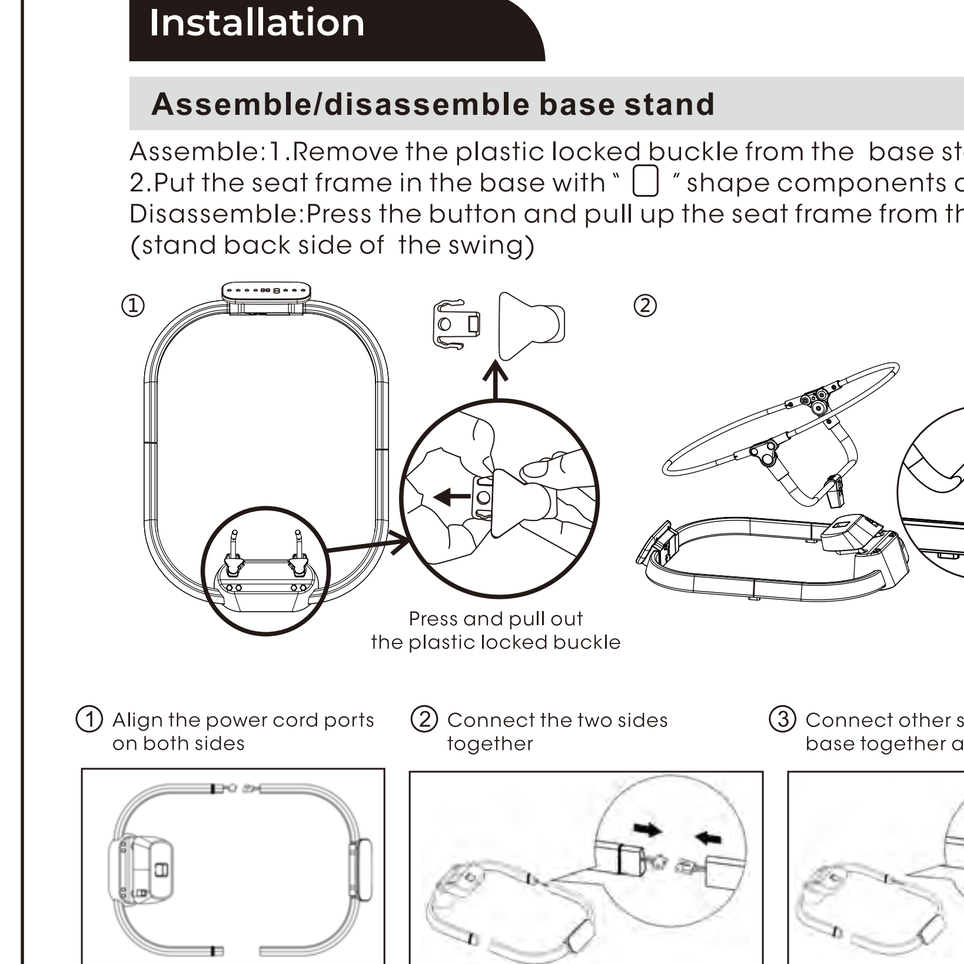

To unfold the seat frame

1.Press both buttons of left and right side, lift up the upper tube in the meantime
2.Press both buttons of left and right side, lift up the nether tube in the meantime

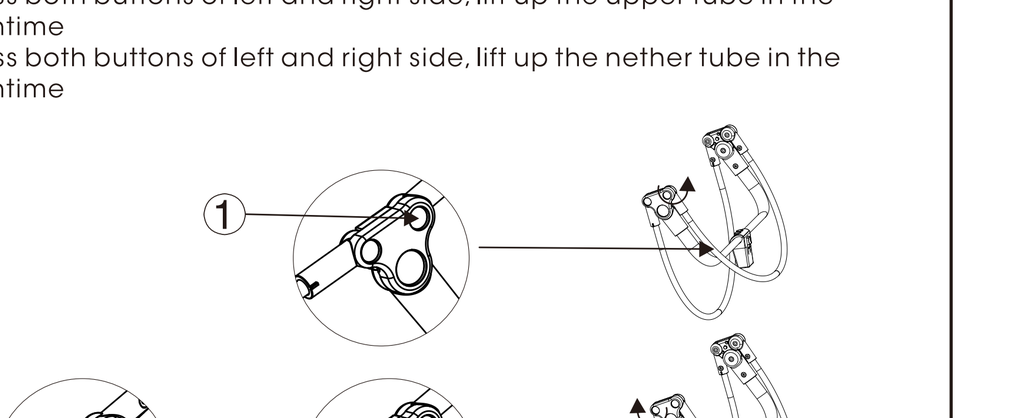

Adjust the backrest

1.Press button ① at the same time on the left and right side to adjust the recline of backrest.There are Level 0 & 1 & 2

2.Press button ② at the same time on the left and right side to adjust horizontal position of the baby swing.There are Level 0 & 1

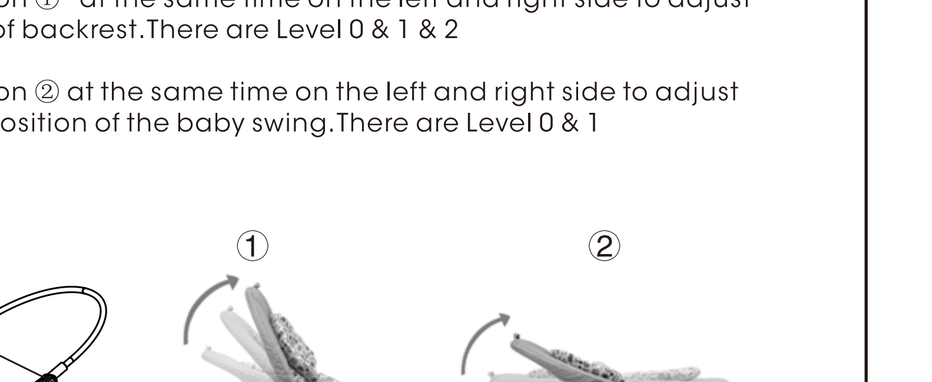

For Canopy With Toys

Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame, and attach mosquito net to the bottom of the seat frame.
Dismantling: Put out of the clasps to remove the canopy.

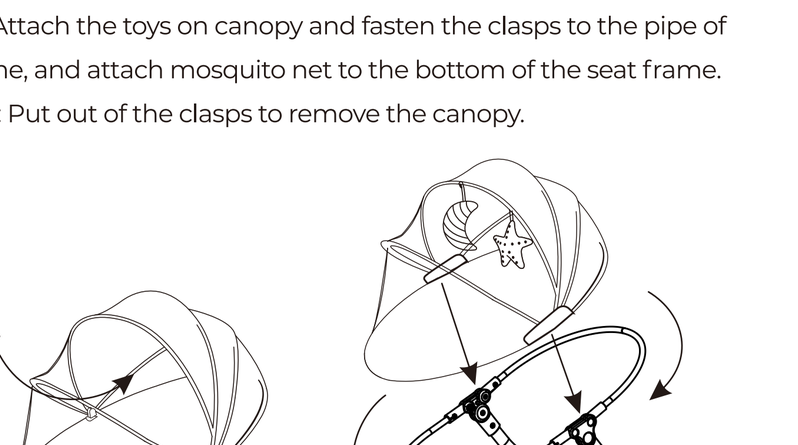

Safety Belt Instruction

Place the baby into the swing and let his legs across both sides of the crotch support restraint, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.
Note: Be sure to use the safety belt correctly when your baby lie on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

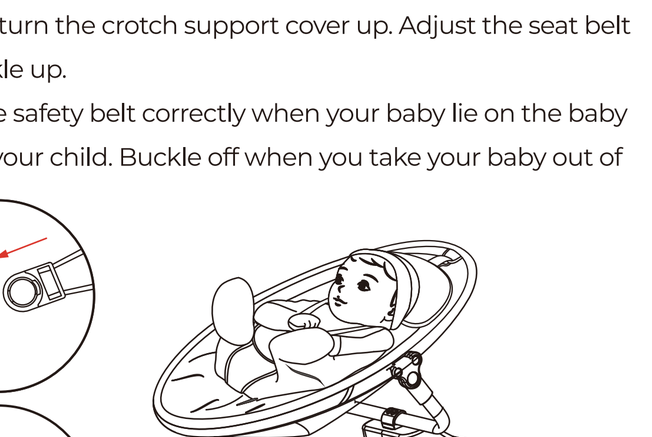

User Instruction

Button Description

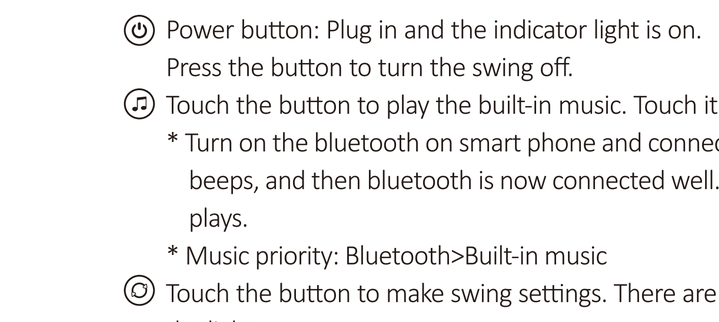

- Power button: Plug in and the indicator light is on. Press the button to turn the swing off.
- Touch the button to play the built-in music. Touch it again to turn the sound off.
  * Turn on the bluetooth on smart phone and connect with "BT_BABY". The swing beeps, and then bluetooth is now connected well. Then the music from phone plays.
  * Music priority: Bluetooth>Built-in music
- Touch the button to make swing settings. There are five swing gears indicated by the lights.
- Touch the button to set the time. The first touch will have the swing chair swing for 8 minutes, the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.
- Touch the button to play the next song.
- Touch the button to increase the volume gradually.
- Touch the button to decrease the volume gradually.

Lock/Unlock

Lock/Unlock:
1. Press down the button will stop swinging.
2. Boost up the button to unlock

Remote Control

⏻	Power on/off	⏯	Play/pause
Timer	Time setting	⏮	Previous song
USB/Music	Built-in music/ Bluetooth music	⏭	Next song
VOL+	Volume up	VOL-	Volume down

① ② ③ Three swing gears

SLEEP Sleep mode: press to enter sleep mode/gear 2 with timer 15 minutes

STOP Stop swing: press to stop swing, and press any gear key to resume swing.



⚠**BATTERY SAFETY PRECAUTIONS**

⚠ **WARNING!** This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell battery can cause internal chemical burns in as little as two hours and lead to death.
⚠ **WARNING!** Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Power Supply

1. DC plug can be inserted into 100-240V ~ 50 / 60Hz AC power supply.
2. The DC interface can be connected to the power bank (the power bank output is 5V⎓1A).
3. Adapter output parameters: voltage is 5V and current is 1A.



***In the following description, "toy" refers to "baby swing"**
-This product is assembled by adults.
-This toy is only to be connected to equipment bearing either of the following symbols.▣
-Transformers used with this product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
-Electric toy using transformers and power supplies shall not be intended for use by children under 3 years.
-The toy shall only be used with a transformer for toys or a power supply for toys (as applicable);
-The toy shall be used with the transformer or power supply supplied, if the transformer is supplied with the toy;
-The model number or specification of a suitable transformer or power supply for use with the toy, if not supplied with the toy;
-The transformer or power supply (as applicable) is not a toy;
-Toys liable to be cleaned with liquids are to be disconnected from the transformer or power supply before cleaning.

⚠WARNING

Fall hazard: Babies have suffered skull fractures falling while in and from bouncers.
• Use bouncer ONLY on floor
• ALWAYS use restraints and adjust to fit snugly, even if baby falls asleep.
• NEVER lift or carry baby in bouncer.
Suffocation hazard: Babies have suffocated when bouncers tipped over on soft surfaces.
• NEVER use on a bed, sofa, cushion, or other soft surface.
• NEVER leave baby unattended.
To prevent falls and suffocation:
• ALWAYS use restraints and adjust to fit snugly, even if baby falls asleep.
• STOP using bouncer when baby starts trying to sit up or has reached 9KG, whichever comes first.
• To avoid injury ensure that children are kept away when unfolding and folding this product.
• Do not let children play with this product.
• Transformers used with the infant swing are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they shall not be used.
• The infant swing shall only be sued with the recommended transformer.
• **FALL and STRANGULATION HAZARDS**:
Infants have suffered head injuries Falling from swings and have strangled in straps
• ALWAYS use restraints. Adjust to fit snugly.
• STOP using product when infant attempts to climb out(approximately 6 months)
• Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. if baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.
• **SUFFOCATION HAZARDS**: Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway. ALWAYS keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.

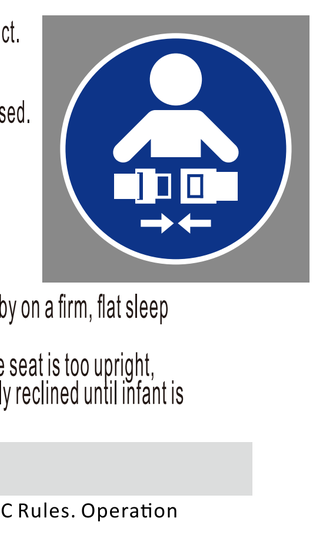

FCC Complance Sitatement

FCC Compliance Statements This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The base bracket should be installed and operated with minimum distance 10cm between the radiator and your body.

Clean & Maintenance

Clean

1. Clean the base bracket and seat frame with wet cloth and a mild detergent. Dry thoroughly then. Please do not use corrosive cleaner.
2. Removable and washable fabric
● Seat fabric: Clean it with wet cloth and a mild detergent, and dry it.
● Canopy: Take it off and put a little cleaner, wash it gently by hands. Rinse it with clean water, and then hang it to dry, avoiding exposure to the sun.
● Pillow: Tear the Velcro off and take the pillow off. Put a little cleaner, wash it gently by hands, and then rinse it with clean water. Hang it avoiding sun exposure.

Maintenance

1. Please check this baby swing regularly. Make sure of each part is well connected and well installed. Stop using for poor connection and connect/ install it again if necessary.
2. This product contains electronic components, which shall not be used in water or in a humid environment. Please ensure the product is dry, and store it in a cool and dry place, avoiding direct sunshine for a long time.

Troubleshooting

Fast self-inspection solution below

No.	Trouble	Solution
1	Not energized	1. Check whether the adapter and DC cable are firmly connected. If loose, connect them firmly. 2. DC cable may be damaged. Please contact customer service to replace DC cable.
2	The power lamp keeps flashing	Use matchable adapter with an output voltage of 5V and 1A
3	Motion lock stuck	Check the motion lock. Pull it up to unlock the seat frame.
4	Overstring/Strike	Power off and restart it again

Note: For other trouble, please contact our customer service for help.
Never disassemble and repair the swing by yourself.

After-sales Service

Thank you for purchasing our products. If there is any quality problem, please contact with the distributor.

Note:
1. From the purchase date, normal users can enjoy one year's free maintenance service for the circuit board components and one year's free maintenance service for the whole machine.
2. Other consumables and accessories are not covered by the warranty.

Non-warranty Coverage:
1. Improper use
2. Damage caused by natural disasters and other irresistible forces

备注：
材质：80g双胶纸
颜色：黑白印刷
结合方式：骑马钉
页数：12p

图号 (Drawing No.)	材料描述(Material)	表面处理(Treatment)	I	II	III	IV	V	VI	VII	VIII	IX	X	备注(Remark)

TOLERANCE mm	GRADE / SCALE	F	M	C	V	ANGLE FM CV	图幅	共 张 第 张	第三角画法	产品型号 Model
							单位 mm	比例		材料标记
							版本 (version) 03		批准/日期	图号
							佛山市熊宝宝科技有限公司		审核/日期	零件名称
									设计/日期	Part name