105g双铜双面四色印刷

MINI PRINTER USER MUNUAL

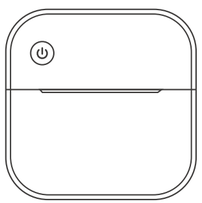

Please read the instruction manual carefully before using this product

Thank you for choosing our printer!
For a better user experience,we strongly recommend that you read our user manual before using the product!.

Product Appearance

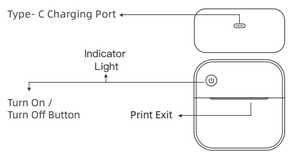

Indicator Light Description

1.If you turn on the printer without Bluetooth connection, the button light will constantly changing from dark to bright.
2.If you turn on the printer normally,the light button will steady on green.
3.If the printer is lacking of paper,the green light will flash.
4.If the printer head is overheating,the light button will steady on red,please wait 5 minutes before the next printing.
5.If the battery is too low,the red light will flash,please charge the printer in time.

Usage Guidelines

① Download the "Funny Print" APP

Method 1
Open "APP Store", search "Funny Print" APP and download it.

Download on the App Store

Method 2
Open the "Google Play " directly and search "Funny Print" APP and download it.

GET IT ON Google Play

Method 3
The "Funny Print" APP QR code will be printed automatically when you double-click the button after turned on the printer, you also can download it by scan the QR code on the paper.

②Usage Steps

Tips:
Please fully charge the printer for the first time, then unplug the charger before use!

❶ Please press the button and hold on for 3 seconds to turn on the printer!

❷ Open the "Funny Print" APP and Log in

❸ Please turn on the Bluetooth of your phone

❹ Open the "Funny Print" APP and Click the "+ Add device" in the upper left corner to looking for the printer device and connect it.

❺ After successful connection, you can start using this printer



③How to Replace The Printing Paper



❶ Open the cover of the print pod, remove the old printer paper

❷ Confirming the direction of paper roll placement(NOTE:The paper should be exposed to the bin 2cm inleng, so that the machine can automatically absorb paper when closing the bin box)

❸ Put the printer cover on then the machine can be used normally.

Warning ⚠

1.Input Parameter: 5V⎓1A, Fast charger is strictly prohibited.
2.Prohibited from disassembling, assembling, compressing, or throwing into fire.
3.If the battery is severe inflation, do not continue to use it.
4.Do not place the product in a high-temperature environment.
5.It is strictly prohibited to use it,if the printer is immersed in water
6.Replacing batteries with the wrong type poses a risk of explosion, be sure to dispose of used batteries according to the instructions.

Precaution

1. Unplug the charging cable promptly after charging is completed.
2. Improper charging may cause damage to the print head.
3. Do not touch the print head to avoid burns due to overheating.
4. Insert or remove the charging cable gently to prevent damage to the port due to excessive force.
5. Continuous printing may cause the print head to overheat and stop working. This is not a machine malfunction, and the printer can be used again after the print head cools down.
6.To avoid danger, do not use or charge in high-temperature, high-humidity, excessive smoke and dust environments, such as in the bathroom, sauna room, near open flames, etc.

Question & Answer

How to deal with Bluetooth connection failure?
1.To re-enable Bluetooth on your phone
2.To restart your mini printer
3.To reinstall the app and agree to all permission prompts
4.Try using another phone.
5.The machine cannot be connected to two phones at the same time, so do not be connected to other phones.
6.If the app cannot connect to the machine, you can double-click the power button to print a test page, which has a QR code. Scan the QR code, follow the prompts to redownload the app, and reconnect it again.

Scan the OR code to download the "Funny Print" APP

If you still have any questions, please feel free to contact us, we will reply you promptly within 24 hours!

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
–Reorient or relocate the receiving antenna.
–Increase the separation between the equipment and receiver.
–Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
–Consult the dealer or an experienced radio/TV technician for help

*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.