REMOTE CONTROL

CARTOONY CRUISERS

SET OF 2

USER MANUAL

Welcome to the world of Cartoony Cruisers! These vibrant vehicles, complete with removable figures and captivating lights, sounds, and music, are sure to spark the imagination and create thrilling adventures. This manual will guide you through the setup, operation, and safety precautions to ensure an enjoyable and safe playtime experience with your Cartoony Cruisers.

LET'S DIVE IN AND GET READY FOR ENDLESS FUN!

PACKAGE CONTENTS:

- 2 Cars (police and racer)
- 2 Figures (police and racer)
- 2 Remote Controls
- 2 USB Charging Dongles (each splits into 2 USB-C cables for dual charging)

OPERATING THE CARS:

CHARGING THE CARS:

1. Locate the charging port on the side of the vehicle. It has a silicone cover resembling a gas tank cap.

2. Plug the USB-C end of the charging cable into the vehicle's charging port.

3. Connect the other end of the charging dongle to a USB power source (not included), such as a computer, USB wall adapter, or portable power bank.

4. While charging, the indicator light next to the charging port will glow red. When fully charged, it will turn green.

5. Repeat the process for both vehicles.

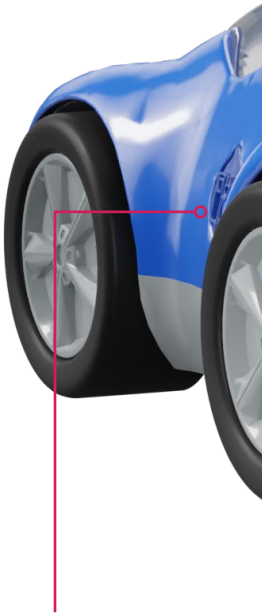

Charging port:
With charging indicator light

Power Button: Press to turn the vehicle on and off.

Mute/Unmute Button: Toggle sound effects on and off.

USING THE REMOTES:

Reverse: Drives the cars in reverse and turns to the left at the same time.

Charging Port: Connect the USB-C end of the cable to the charging port in the remote and the other end to a USB power source. The indicator light will turn red while charging and green when fully charged.

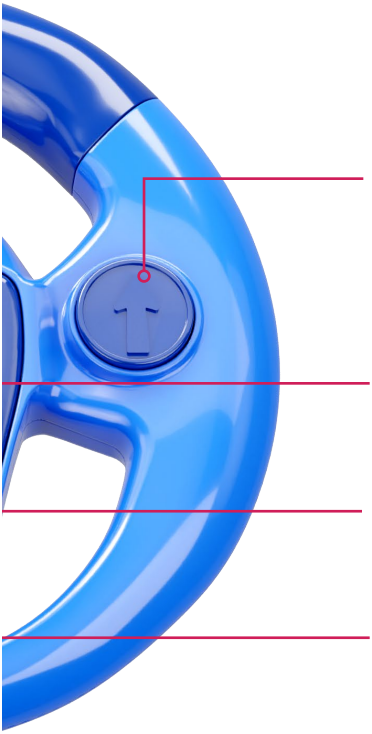

Reaction Light: The light on the front of the remote will react to the car's movements, adding visual feedback to the play experience.

Forward: Move the car forward in a straight line.

Horn: Press this button for a fun horn sound effect.

Music: Press this button to play lively and catchy tunes.

Siren/Vroom: Press this button to play the siren or vroom sound effects.

Note: Each remote and vehicle set operates on its own frequency, ensuring uninterrupted playtime enjoyment.

FCC WARNING STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NINJA BLAST

For any questions or issues with the product, contact us at: **support@ninjablastgames.com**