USA office: Fontana **AUS** office: Truganina **FRA** office: Saint Vigor d'Ymonville
GBR office: FDS Corporation Limited,Unit 4, Blackacre Road, Great Blakenham,Ipswich, Ip6 0FL,United Kingdom

Powered PA Speaker System
Système de Haut-parleurs de Sonorisation Alimentés

FP10764

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

EN

Before You Start

- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

FR

Avant de Commencer

- Veuillez lire attentivement toutes les instructions.
- Conservez les instructions pour vous y référer ultérieurement.
- Vérifiez toutes les pièces et les accessoires.
- Lisez attentivement chaque étape et suivez l'ordre correct.
- Nous recommandons que, dans la mesure du possible, tous les produits soient assemblés à proximité de la zone où ils seront utilisés, afin d'éviter tout déplacement inutile du produit une fois assemblé.
- Placez toujours le produit sur une surface plane et stable.
- Conservez toutes les petites pièces de ce produit et les matériaux d'emballage hors de portée des bébés et des enfants, car ils pourraient présenter un risque d'étouffement.

EN

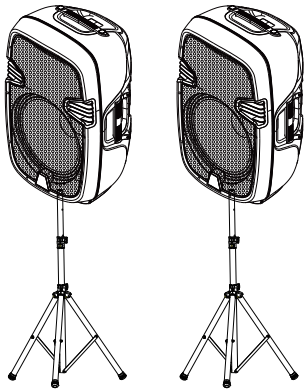

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

● CAUTION, TO REDUCETHE RISK OF ELECTRIC SHOCK, DO NOTREMOVE COVER [OR BACK]

● THIS PRODUCT MUST BE EARTHED

OPERATION

1. Prior to switching on,turn volume down to minimum.
2. Connect the audio source to the appropriate input socket.
3. Connect to the mains supply.
4. Switch on the audio source,followed by the active speaker.
5. Set the volume with the applicable control.
6. Adjust the bass + treble.

INSTRUCTIONS

● Do not overload the box to avoid damage to the speakers.

● Do not place an open fire(candles etc)on top or next to the box-FIRE HAZARD.

● Only connect to an earthed mains output of AC 120-240V ~ 50/60Hz.

● If the box is used outdoors,you need to make sure that no humidity can enter the box.

● When not in use,unplug the unit from the mains.

● Unplug the unit from the mains prior to checking or replacing the fuse.

● Make sure that the box is placed on a stable, strong surface.

● Only use suitable means of transportation if you want to move the box-BEWARE OF YOUR BACK!

● Always unplug the unit during a thunderstorm when it is not in use.

● If the unit has not been used for a long period of time, condensation can be occurred inside the house.

● Please wait the unit reaching room temperature before switching it on.

● Never try to repair the unit by yourself.It does not contain any user repairable parts.

● Run the main lead in a way that nobody can fall over it and nothing can be put onto it.

● Set the unit to the lowest volume before switching it on.

● Keep the unit out of the reach to children.

SPECIFICATIONS

	Powered PA Speaker System
System	Active 2-way full range
Woofer	12"
Tweeter	1"
Power	400W
Peak power	2000W
Impedance	8 ohm
Frequency Range	50Hz-18KHz|
Sensitivity	96dB(+/-2dB)
Connector	XLR/6.35mm/RCA
Mic Input L evel	<10 mV
Line Input/Output L evel	250mV
Voltage	120/240v AC 60/50Hz

CONTROLS LOCATION

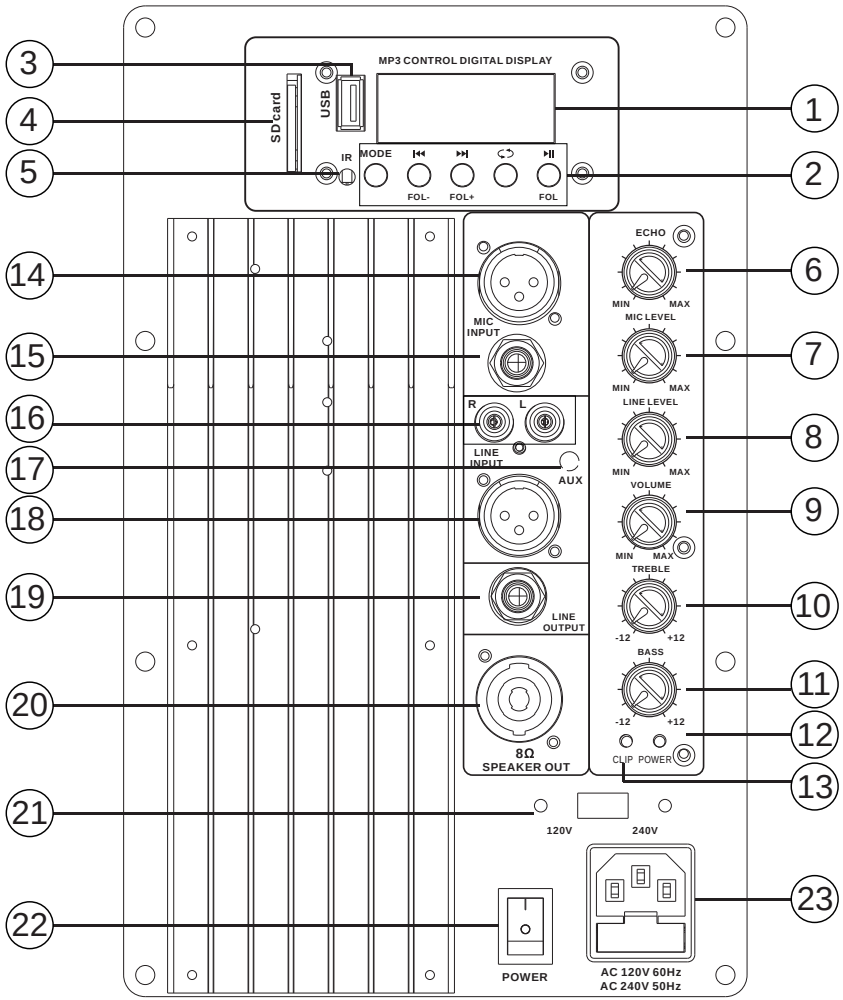

1. LCD screen

2. MP3 control

MODE:USB/SD/BT/FM convertor

⏮:Previous Song

Long press for fast rewind

⏭:Next Song

Long press for fast forward

⟲:Repeat one / Repeat all / Random

⏯:Play / Pause

FOL:Long press 3 seconds to enter the folder option function mode(press the previous/ next songs button to choose the folder)

3. USB input

4. SD card input

5. IR Remote control receiver

6. ECHO control

7. Mic input level control

8.Line input level control

9.Master Volume control

10.Treble control

11.Bass control

12.Power LED indicator

13.Clip LED indicator

14.XLR microphone input

15.6.35mm microphone input

16.RCA phone (R+L) line inputs

17.3.5mm line input

18.XLR line input

19. 6.35mm line output

20. Speaker out 8 Ohm

21.AC 120/240 Voltage Selectable

22. ON/OFF power switch

23. Fused IEC mains inlet

QUICK START GUIDE

Power

- Flip the switch UP to turn ON the speaker.
- Flip the switch DOWN to turn OFF the speaker.

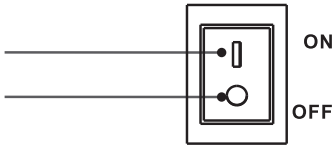

- Connect the POWER INPUT port to an external power source using the included power cord.



Bluetooth Pairing

1 Place your mobile device within 1 meter/3.3 ft of the speaker. Make sure Bluetooth is enabled on your mobile device.



2 Press the MODE button to set the speaker to Bluetooth mode.

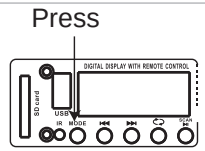

3 Select " Bluetooth" on your mobile device to pair with the speaker.

10 meters/33 ft max connection range after paired. Moving devices outside this range may cause disruption or signal loss.

FR

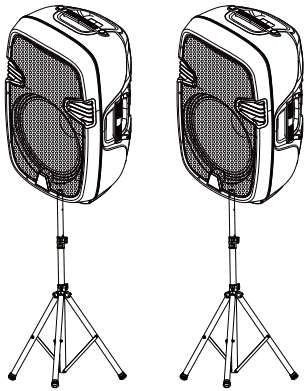

● ATTENTION, POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE PAS RETIRER LE COUVERCLE [OU LE DOS]

● CE PRODUIT DOIT ÊTRE MIS À LA TERRE

● AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR, RÉFÉREZ L'ENTRETIEN AU PERSONNEL DE SERVICE QUALIFÉ

OPÉRATION

1.Avant d'allumer, baissez le volume au minimum.
2. Connectez la source audio à la prise d'entrée appropriée.
3. Connectez à l'alimentation secteur.
4. Allumez la source audio, suivie du haut-parleur actif.
5. Réglez le volume avec la commande appropriée.
6. Réglez les graves + aigus.

INSTRUCTIONS

● Ne surchargez pas le boîtier pour éviter d'endommager les haut-parleurs.

● Ne placez pas de feu ouvert (bougies, etc.) sur ou à côté dela boîte - RISQUE D'INCENDIE.

● Connectez à une prise secteur mise à la terre de 120V/240V 60~50Hz.

● Si la boîte est utilisée à l'extérieur, vous devez vous assurer qu' aucune humidité ne puisse pénétrer dans la boîte.

● Lorsqu'il n'est pas utilisé, débranchez l'appareil du secteur.

● Débranchez l'appareil du secteur avant de vérifier ou de remplacer le fusible.

● Assurez-vous que la boîte est placée sur une surface stable et solide.

● Les boîtes peuvent être suspendues. Utilisez uniquement du matériel de montage solide et approuvé. Pendant le montage, assurez-vous que personne ne se trouve sous la zone de montage.

● Ne placez pas de liquide sur le boîtier et protégez-le de l'humidité. L'humidité peut raccourcir considérablement la durée de vie.

● N'utilisez que des moyens de transport adaptés si vous souhaitez déplacer le coffret - ATTENTION À VOTRE DOS !!

● Débranchez toujours l'appareil pendant un orage ou lorsqu'il n'est pas utilisé.

● Si l'appareil n'a pas été utilisé pendant une longue période,de la condensation peut se former à l'intérieur du boîtier. Veuillez laisser l'appareil atteindre la température ambiante avant utilisation.

● N'essayez jamais de réparer l'appareil vous-même. Il ne contient aucune pièce réparable par l'utilisateur.

● Faites passer le cordon d'alimentation de manière à ce que personne ne puisse tomber dessus et que rien ne puisse y être inséré

● Réglez l'appareil sur le volume le plus bas avant de l'allumer.

● Gardez l'appareil hors de portée des enfants.

SPÉCIFICATIONS

	Système de Haut-parleurs de Sonorisation Alimentés
Système	Gamme complète active à 2 voies
Haut-parleur de graves	12"
Tweeter	1"
Puissance	400W
Puissance de crête	2000W
Impédance	8 ohm
Gamme de fréquences	50Hz-18KHz
Sensibilité	96dB(+/-2dB)
Connecteur	XLR/6,35mm/RCA
Niveau d'entrée micro	<10 mV
Niveau d'entrée /sortie de ligne	250mV
Tension	120/240v AC 60/50Hz

EMPLACEMENT DES COMMANDES

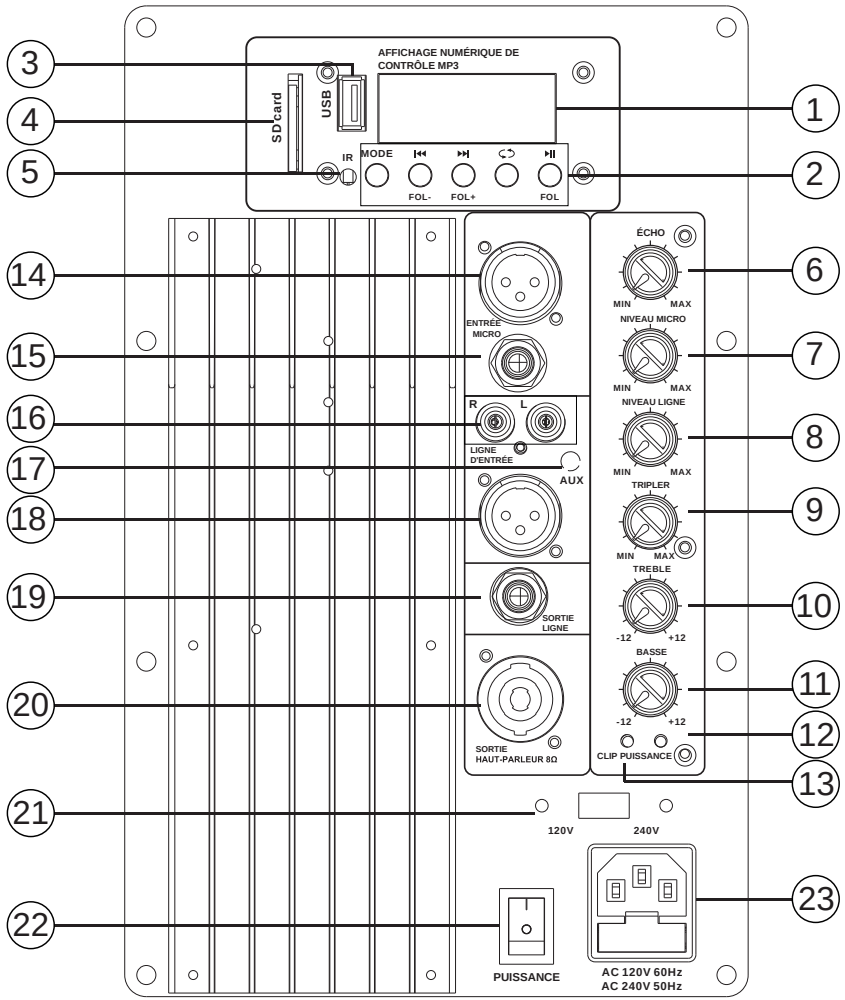

1. Écran ACL

2. Contrôle MP3

MODE: convertisseur USB/SD/BT/F M

(La distance effective de Bluetooth est de 15 mètres/49 pieds)

⏮:Chanson Précédente

Appuyez longuement pour un retour rapide

⏭:Prochaine Chanson

Appuyez longuement pour avancer rapidement

⟲:Répéter un / Répéter tout / Aléatoire ,

⏯:Jouer /Pause

FOL : appuyez longuement sur 3 secondes pour entrer dans le mode de fonction d'option de dossier (appuyez sur le bouton des chansons précédentes/suivantes pour choisir le dossier)

3. Entrée USB (la capacité de mémoire du disque flash USB doit être inférieure à 32 Go.)

4. Entrée de carte SD

5. Récepteur de télécommande IR

6. Contrôle ÉCHO

7. Contrôle du niveau d'entrée du micro

8. Contrôle du niveau d'entrée de ligne

9. Contrôle du volume principal

10. Contrôle des aigus

11. Contrôle des basses

12. Indicateur LED d'alimentation

13. Indicateur LED de clip

14. Entrée micro XLR

15. Entrée micro de 6,35 mm

16. Entrées de ligne téléphonique RCA (R + L)

17. Entrée ligne de 3,5 mm

18. Entrée ligne XLR

19. Sortie ligne 6,35 mm

20. Sortie haut-parleur 8 Ohm

21. AC 120/240 tension sélectionnable

22. Interrupteur marche/arrêt

23. Entrée secteur IEC avec fusible

GUIDE DE DÉMARRAGE RAPIDE

Puissance

- Basculez l'interrupteur vers le HAUT pour allumer le haut-parleur.
- Basculez l'interrupteur vers le BAS pour éteindre le haut-parleur.

- Connectez le port POWER INPUT à une source d'alimentation externe à l'aide du cordon d'alimentation fourni.



Couplage Bluetooth

1 Placez votre appareil mobile à moins d'un mètre de du haut-parleur.
Assurez-vous que la fonction Bluetooth est activée sur votre appareil mobile.



2 Appuyez sur la touche MODE pour mettre le haut-parleur en mode Bluetooth.

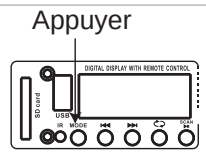

3 Sélectionnez "Bluetooth" sur votre appareil mobile pour l'associer à un haut-parleur.

Portée de connexion maximale de 10 mètres/33 ft après l'appairage. Le déplacement d'appareils en dehors de cette portée peut entraîner des perturbations ou une perte de signal.

EN

Return / Damage Claim Instructions

DO NOT discard the box / original packaging.
In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

Take a photo of the box markings.
A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

Take a photo of the damaged part (if applicable).
A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

Send us an email with the images requested.
Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

FR

Instructions De Retour / Réclamation De Dommages

NE PAS jeter la boîte/l'emballage d'origine.
Dans le cas où un retour est requis, l'article doit être retourné dans sa boîte d'origine. Sans cela, votre retour ne sera pas accepté.

Prenez une photo des marquages de la boîte.
Une photo des marquages (texte) sur le côté de la boîte est requise au cas où une pièce serait nécessaire pour le remplacement. Cela aide notre personnel à identifier votre numéro de produit pour s'assurer que vous recevez les bonnes pièces.

Prenez une photo des dommages (le cas échéant).
Une photo des dommages est toujours requise pour déposer une réclamation et obtenir rapidement votre remplacement ou votre remboursement. Assurez-vous d'avoir la boîte même si elle est endommagée.

Envoyez-nous un e-mail avec les images demandées.
Envoyez-nous un e-mail directement depuis le marché où votre article a été acheté avec les images ci-jointes et une description de votre réclamation.

FCC Warning

15.19 Labeling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement:

1.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator and your body