产品说明书

——Product description——

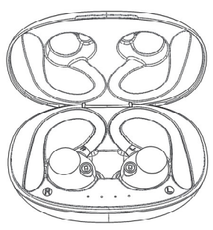

Netac TW03J
无线运动耳机

产品示意图

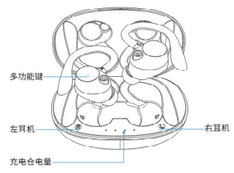

产品规格

版本	V5.4
支持蓝牙	A2DP,AVRCP,HFP,HSP,EDR
通信距离	≥10m
频带	2.402GHz-2.480GHz
喇叭阻抗	32Ω±10%
待机时间	200小时
通话时间	10小时
音乐播放时间	10小时
耳机电池容量	55mAh
充电仓电池容量	800mAh
耳机充电时间	约1小时
充电仓充电时间	约1小时
产品重量	78g

配对示意图

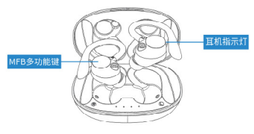

当耳机从充电仓里取出，耳机会自动开机，或者长按3秒左和右耳机MFB键开机，耳机指示灯红蓝灯交替闪烁（此时进入配对状态），等待连接。

开启用户手机蓝牙功能(或其他蓝牙设备)，并进行搜索或扫描，
此时手机会搜索到附近所有的蓝牙设备，点选搜索到的
耳机名称:Netac TW03J,并输入密码 0000(目前大部分手机不需要密码)
成功配对连接后，耳机指示灯息灭，表示配对连接成功！
此时可以进行手机电话、听歌

多功能按键

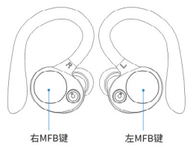

暂停/播放	双击左耳或右耳MFB键
上一曲	长按1秒左耳MFB键
下一曲	长按1秒右耳MFB键
音量加	播歌状态下三击左耳MFB键加1格
音量减	播歌状态下三击右耳MFB键减1格
接听电话	双击左耳或右耳 MFB键
挂断电话	双击左耳或右耳 MFB键
来电拒接	长按1秒左或右耳 MFB键
取消通话	双击左或右耳 MFB键
呼叫Siri	三击左或右耳 MFB键(不播放音乐时)
关闭Siri	双击左或右耳 MFB键

开机关机

1.初次并始使用的情况下，从充电盒子里掌出耳机撕掉保护膜。把耳机放回充电仓耳机就会开始充电并自动关机。当耳机从充电仓里取出，耳机就会自动开机，或者长按1秒左或右耳MFB开机。
2.当耳机不使用时，放回充电仓会自动关机。

如何配对

1.从充电仓拿起开机
2.耳机红、蓝交替闪烁（配对模式）
3.打开手机/平板的设置---蓝牙---打开蓝牙---搜索---Netac TW03J---配对/连接-播放音乐。

电脑/手提电脑配对的方法

打开电脑设置-设备-蓝牙和其他设备-开启蓝牙--添加蓝牙或其他设备-搜索蓝牙设备-Netac TW03J-配对/连接-播放音
注意：如果电脑没有蓝牙，请插入蓝牙适配器，下载蓝牙驱动后再正常使用。

如何给耳机充电

1.把耳机放入充电仓内，耳机就会自动关机然后开始充电，充电仓显示灯亮起，显示充电仓当前电量，说明充电仓正在给耳机正在充电。
2.耳机充满电后，耳机指示红灯就会灭掉。

给充电仓充电

1.请使用手机适配器给充电仓充电，可以使用电脑Type-c线或者其他Type-c接口的充电器进行充电。

如何重置？

两个耳机在充电仓内，取出左耳机双击MFB键后长按2秒
(蓝灯闪烁两次后关机)，放进充电仓。取出右耳机双击MFB键后长按2秒
(蓝灯闪烁两次后关机)，放进充电仓(左右耳机重置完成)。取出左右耳机，两个耳机自动组队成功。

手机传输距离

关于手机传输距离如下图所示

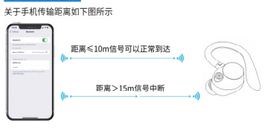

防水规格

生活防水(出汗、下雨、洗脸、淋浴等，水里游泳等除外)
*请注意手机的蓝牙信号不能在水中传输

注意 ⚠

1.请不要拆卸/重新组装产品，以免发生故障或火灾。
2.请避免接触腐蚀性液体，以免损坏产品。
3.不要放在-10摄氏度以下或者60摄氏度上的极端温度下。
4.远离小孩或宠物。
5.不让耳机接触尖锐物品，否则容易刮花。
6.请不要在雷雨天气使用避免损坏或发生电击。
7.1个月以上不使用的话，为了安全运行，请定期充电，保养。
8.因为蓝牙耳机信号不能在水中传输，游泳潜水将会导致信号断开或者中断。

为什么我搜索不到蓝牙?为什么不能连接蓝牙?

1.蓝牙的距离是10m，请确保没有障碍物，手机需要靠近耳机
2.如有其他手机或者设备连接过该耳机，请先解除配对
3.请重新启动蓝牙设备，然后尝试重设耳机

为什么耳机没有声音?或者音乐会断开?

· 请检查手机网络是否正常，网速是不是比较慢，音乐是不是正在加载中。
· 蓝牙的距离是10m，请确保没有障碍物，手机需要靠近耳机
· 周围环境的干扰或者磁场太强将会影响蓝牙信号传输
· 打开手机蓝牙界面，点击接触配对，删除配对记录，搜索蓝牙，再次配对。
· 你可以重启手机或者重置耳机

为什么不能给充电仓充电?

1.请确保充电线或者手机充电器是良好状态且正确连接。
2.有可能接触不良，用手指按耳机，并将耳机的充电触点完全连接到充电盒。
3.耳机的充电触点可能脏，多尘或出汗，放回充电盒充电时，请用酒精或者布擦拭。
4.耳机请擦干汗水放回充电盒充电，耳机指示灯亮起
5.如果听到“Low battery”的提示音，请为耳机充电。当充电盒LED灯显示剩余一格电量时，请为充电盒充电。请注意不要使耳机和充电盒中的电量耗尽。可能会缩短内置锂电池的使用寿命。

为什么耳机会自动关机?

请确保耳机有足够电量。另外耳机将自动断开蓝牙连接10min，将耳机重新放入充电仓，拿起耳机将自动开机。

安全预防

高质量的耳机，为了延长使用寿命，请参考以下说明：
1.请让本品远离高温、高湿、腐蚀环境。
2.请防止本品被撞击，跌落，弯曲，浸泡等。
3.请不要拆耳机或者充电座。
4.请不要让本品一直过度充电，这样会降低的的使用寿命。
5.如果它引起任何不适感或者疼痛，请停止使用本品。
6.使用由受监管的制造商认证的DC 5V-1A适配器。
反复充电和放电耳机会导致电池性能随时间降低，这对所有可充电电子产品来说都是正常的。

产品包装内有

1.蓝牙耳机2个
2.充电座1个
3.Type-c充电线1条
4.说明书1本

User Manual

——Product description——

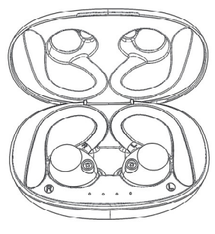

Netac TW03J
Wireless Sports Headphones

Product Photo

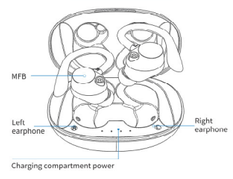

Product specification

Version	V5.4
Wireless support	A2DP,AVRCP,HFP,HSP,EDR
Communication range	≥10m
Frequency band	2.402GHz 2.480GHz
Electrical impedance	32Ω±10%
Standby time	200h
Call time	About 10h
Music playing time	About 10h
Earbuds battery capacity	55mAh
Host battery capacity	800mAh
Charging bin recharging time	About 1h
Charging time of headset	About 1h
Weight	78g

Wireless Pairing

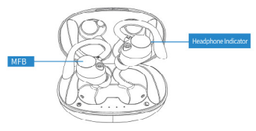

When the earphone is taken out of the charging case, the earphone will automatically turn on, or press and hold the left and right earphones for 3 seconds The MFB button is turned on, the headphone indicator light flashes red and blue alternately (at this time it enters the pairing state), waiting for the connection.

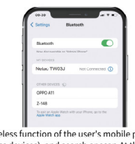

Turn on the Wireless function of the user's mobile phone (or other Wireless devices), and search or scan.At this time, the mobile phone will search all the Wireless devices nearby, and click the Headset Name: Netac TW03J, and enter the password 0000 (most mobile phones do not need a password at present)
After successful pairing and connection, the headset indicator light goes off, indicating that the pairing connection is successful!
At this time, you can make mobile phone calls and listen to songs

MFB Button

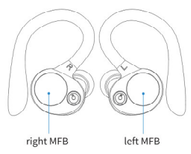

Pause / play	Double tap the left or right MFB button
Last Song	Press and hold the left ear MFB button for 1 second
Next Song	Press and hold the right ear MFB button for 1 second
volume+	In the state of playing music, triple-click the left ear MFB to add 1 grid
volume-	In the state of playing a song, triple-click the right ear MFB to reduce 1 grid
Answer	Double tap the left or right MFB button
Hang up	Double tap the left or right MFB button
Refuse to answer	Press and hold the left or right ear MFB button for 1 second
Cancel call	Double tap the left or right MFB button
Call Siri	Triple tap the left or right ear MFB button（When not playing music）
Close Siri	Double tap the left or right MFB button

ON/OFF switch

1.In the first time use, take the earbuds from the charging bin and peel off the protective film. Once put into the charging bin, the earbuds will turn off and initiate recharging automatically. When taken out from the charging bin, the earbuds will turn on automatically，Or press and hold for about 1 second or the right ear MFB to power on.
2.After use, put the earbuds into the charging bin, and it will turn off automatically.

How to pair

1. Take the earbuds out of the charging bin and it will start work automatically.
2. The red and blue lights will flash alternatively (entering pairing mode)
3. Access the settings of mobile phone/tablet -- Wireless -- Search -- Netac TW03J -- Pair/Connect -- Play music.

Pair with PC/Laptop

Turn on the computer Settings-Devices-Wireless and Other Devices
Initiate Wireless Add Wireless or Other Devices Search Wireless
- Netac TW03J - Pair/Connect - Play music.
Notes: If the computer has not Wireless function, please insert a Wireless adaptor,and download a Wireless driver for normal functioning

How to recharge the earbuds

1. put the headset in the charging bin, the headset will be automatically turned off and then charged.

The display lights up to show the current power of the charging chamber, indicating that the charging chamber is charging the headset.
2. When the headset is fully charged, the red light of the headset indicator will be off.

How to recharge the charging bin

1.Please use a mobile phone adapter to recharge the charging bin. You may charge via a Type-C cable connected to a computer, or other charger with a Type-C interface.

How to reset?

The two earphones are in the charging compartment, take out the left earphone and double-click the MFB button, then press and hold for 2 seconds
(Turn off after the blue light flashes twice), put it into the charging compartment. Take out the right earphone, double-click the MFB button and press and hold for 2 seconds(Power off after the blue light flashes twice), put it into the charging compartment (the left and right earphones are reset). Take out the left and right earphones.The two headsets are automatically teamed up successfully.

Mobile phone transmission range

The transmission distance of the mobile phone is shown in the following chart



Waterproof specification

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.)
* Note that the Wireless signal of mobile phones can't be transmitted in water.

Attention ⚠

1.Please avoid disassemble/reassemble the product in case of failure or fire accident.
2.Please keep away from corrosive liquids to prevent the product from damage.
3. Please avoid exposure to extreme temperatures below 10°C, or above 60°C.
4.Please keep beyond the reach of kids or pets.
5.Please mind contact with sharp objects to avoid scratch.
6.Please avoid use in thundering and raining days to prevent damage or electrical shock.
7.In the case of non-use for above a month, please charge regularly for maintenance.
8.As the Wireless signal cannot transmit in water, it is not suitable for swimming for diving.

Why cannot I detect Wireless? Why Wireless pairing failure?

1.The Wireless rang is 10m; please ensure no obstacles and place the mobile phone close to the earbuds.
2.If the earbuds are connected to other mobile phone or devices, please disconnect first.
3. Please reboot the Wireless device and reset the earbuds.

Why do the earbuds produce no sound? Or, why does the music playing stop?

1.Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2.To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.
3.The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.
4.Please wipe the sweat on the earbuds before putting into the charging bin, and the indicator lights will turn on.

Why do the earbuds turn off automatically?

Please ensure sufficient battery level. In addition, the earbuds will automatically disconnect Wireless for 10mins. Place the earbuds back to the charging bin and they will restart after recollecting.

Why cannot I recharge the charging bin?

1.Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2.To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.
3.The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.
4.Please wipe the sweat on the earbuds before putting into the charging bin, and the indicator lights will turn on.
5. If you hear the beep of "Low battery", please charge the headset.
When the charging case LED When the light shows one battery remaining, charge the charging case. Be careful not to let the earphones and the charger
The battery in the battery box is exhausted. May shorten the life of the built-in lithium battery.

Safety Precautions

To guarantee the service life of the quality earbuds, please refer to the Instructions as follows:
1.Please keep away from high temperature, high humidity and corrosive environment.
2.Please avoid bumping, falling, bending, soaking, and etc.
3.Please do not disassemble the earbuds or charging bin.
4.Please do not overcharge for a long time, which will shorten the service life.
5.In the case of feeling any discomfort or pain, please stop using the product.
6.Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities.Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

Packing Contents

1. Earbuds * 2
2. Charger * 1
3. Type-C charging cable * 1
4. User Manual * 1

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.