Freq. Stability NVNT ac40 5795MHz Ant1

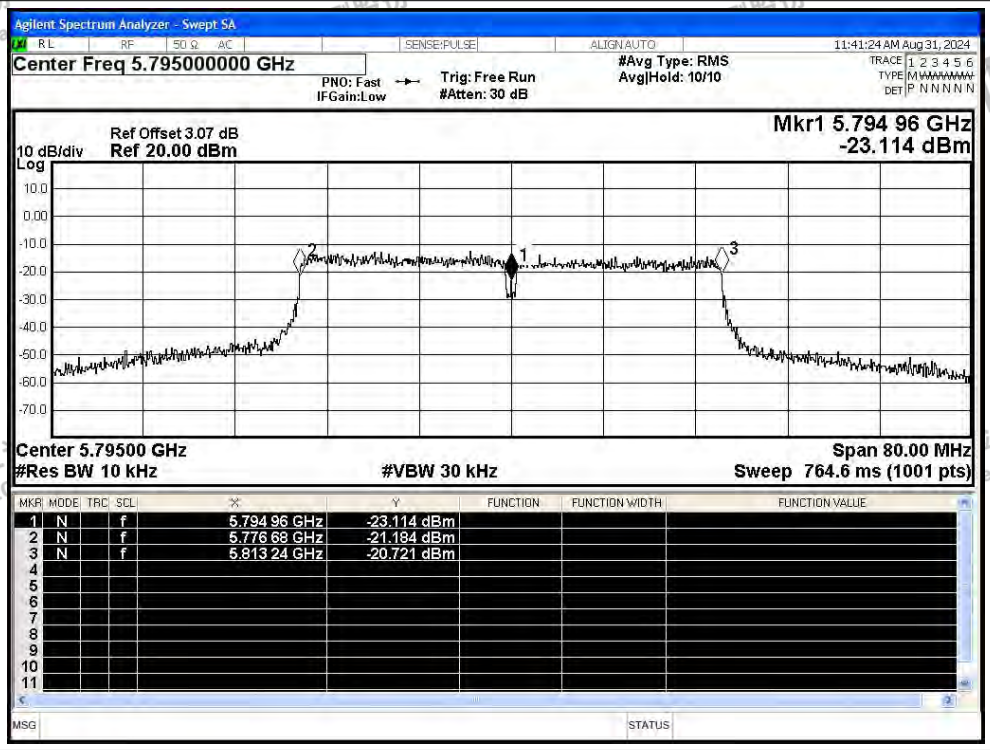

Freq. Stability NVNT ac80 5775MHz Ant1

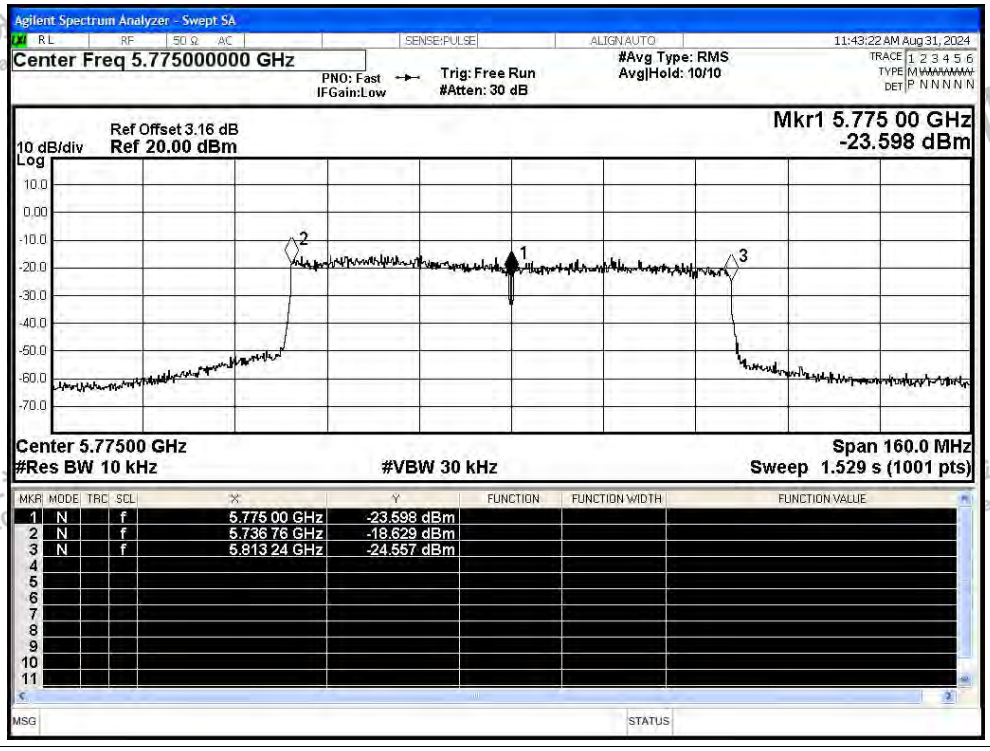

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5745	Ant2	5744.98	-20000	-3.48	25	Pass
NVNT	a	5785	Ant2	5784.98	-20000	-3.46	25	Pass
NVNT	a	5825	Ant2	5825	0	0	25	Pass
NVNT	n20	5745	Ant2	5744.98	-20000	-3.48	25	Pass
NVNT	n20	5785	Ant2	5784.96	-40000	-6.91	25	Pass
NVNT	n20	5825	Ant2	5824.96	-40000	-6.87	25	Pass
NVNT	n40	5755	Ant2	5754.96	-40000	-6.95	25	Pass
NVNT	n40	5795	Ant2	5795	0	0	25	Pass
NVNT	ac20	5745	Ant2	5744.98	-20000	-3.48	25	Pass
NVNT	ac20	5785	Ant2	5784.98	-20000	-3.46	25	Pass
NVNT	ac20	5825	Ant2	5824.98	-20000	-3.43	25	Pass
NVNT	ac40	5755	Ant2	5754.96	-40000	-6.95	25	Pass
NVNT	ac40	5795	Ant2	5795	0	0	25	Pass
NVNT	ac80	5775	Ant2	5775	0	0	25	Pass

Test Graphs

Freq. Stability NVNT a 5745MHz Ant2

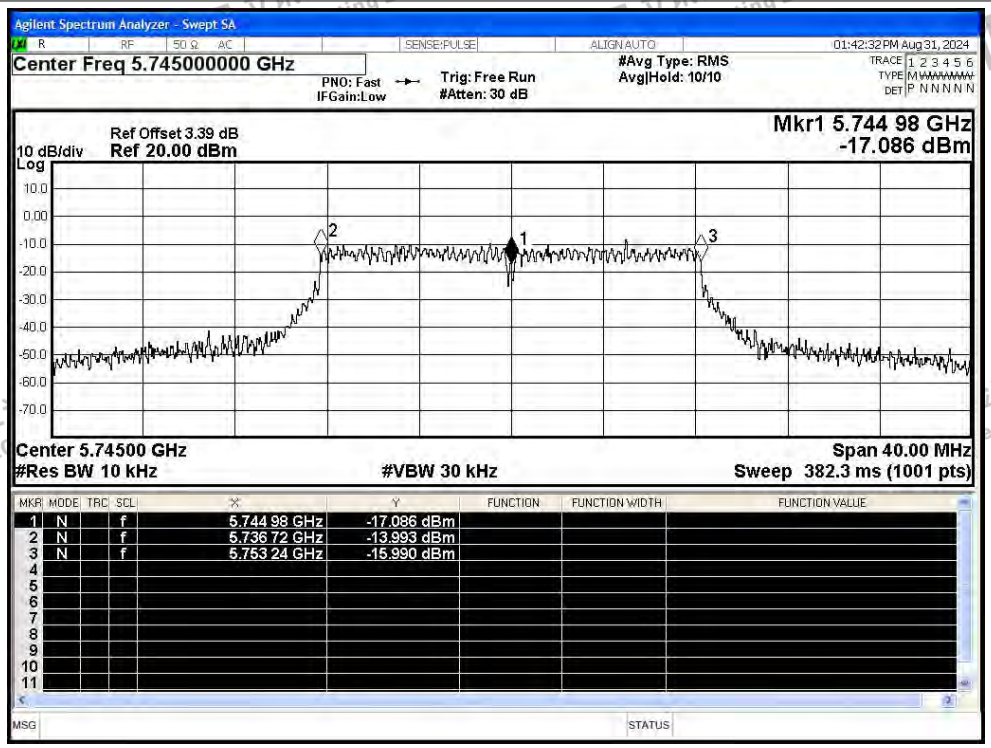

Freq. Stability NVNT a 5785MHz Ant2

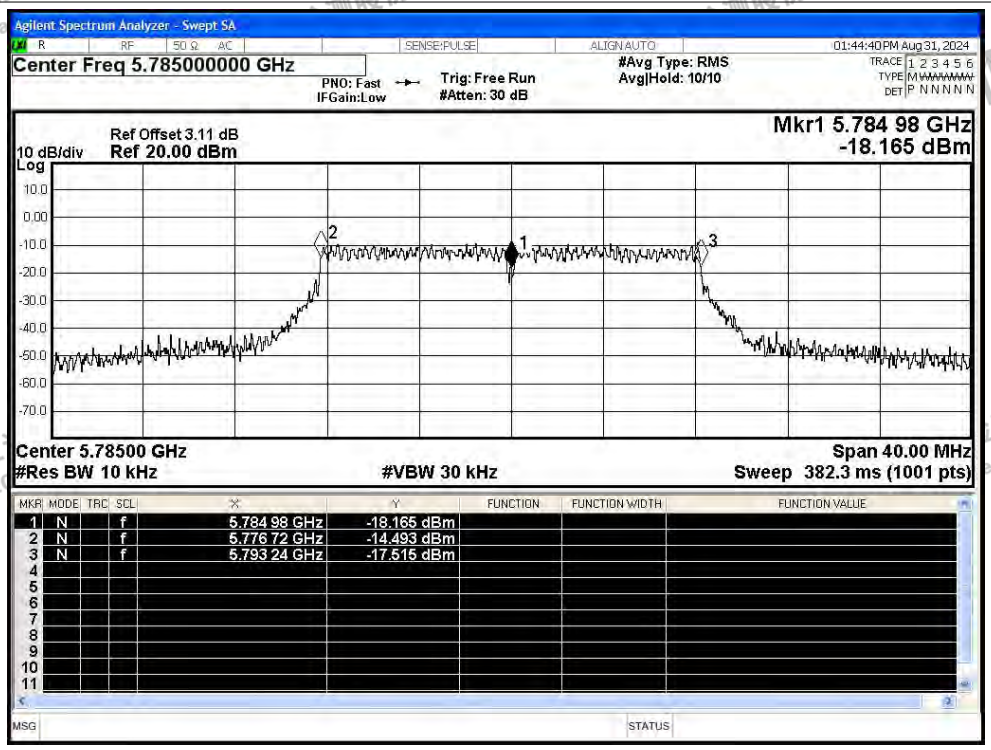

Freq. Stability NVNT a 5825MHz Ant2

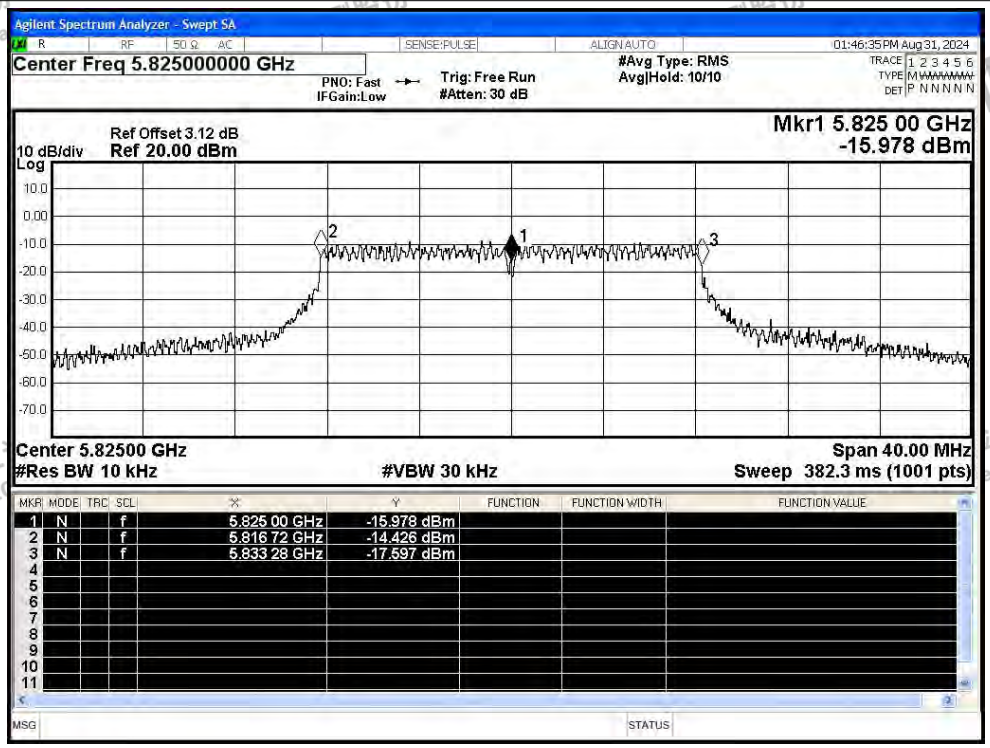

Freq. Stability NVNT n20 5745MHz Ant2

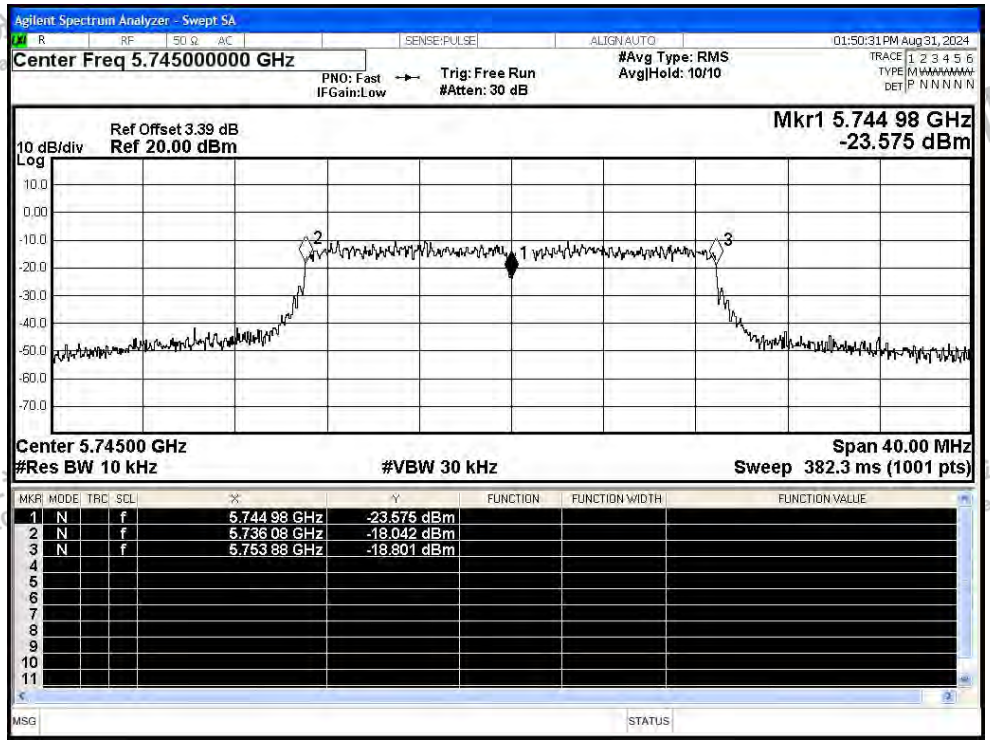

Freq. Stability NVNT n20 5785MHz Ant2

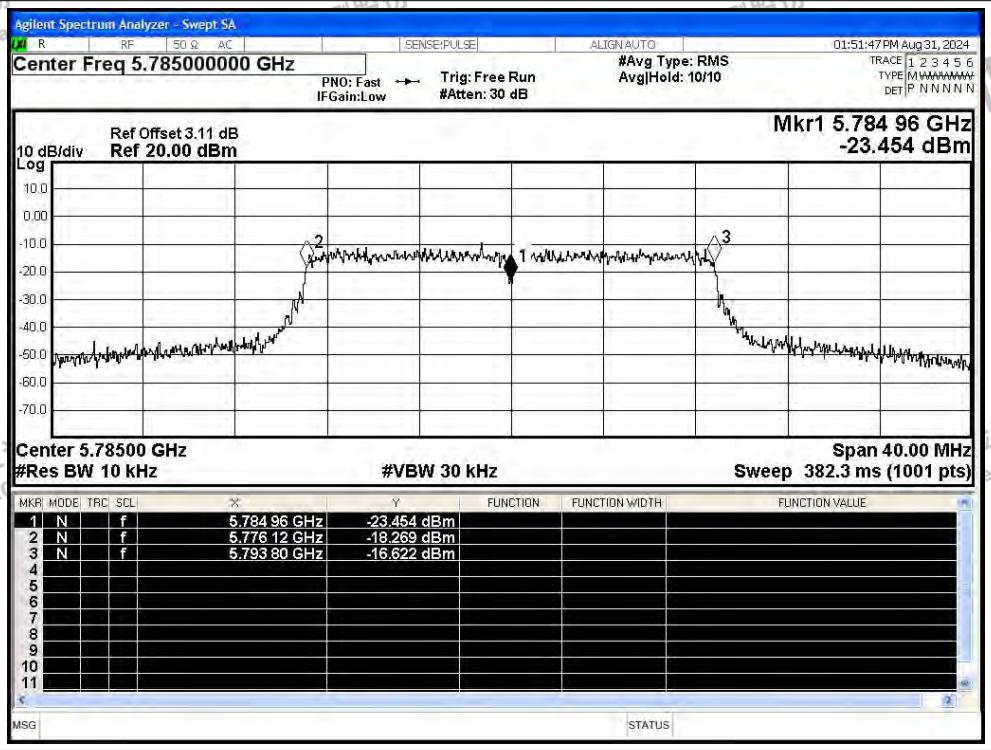

Freq. Stability NVNT n20 5825MHz Ant2

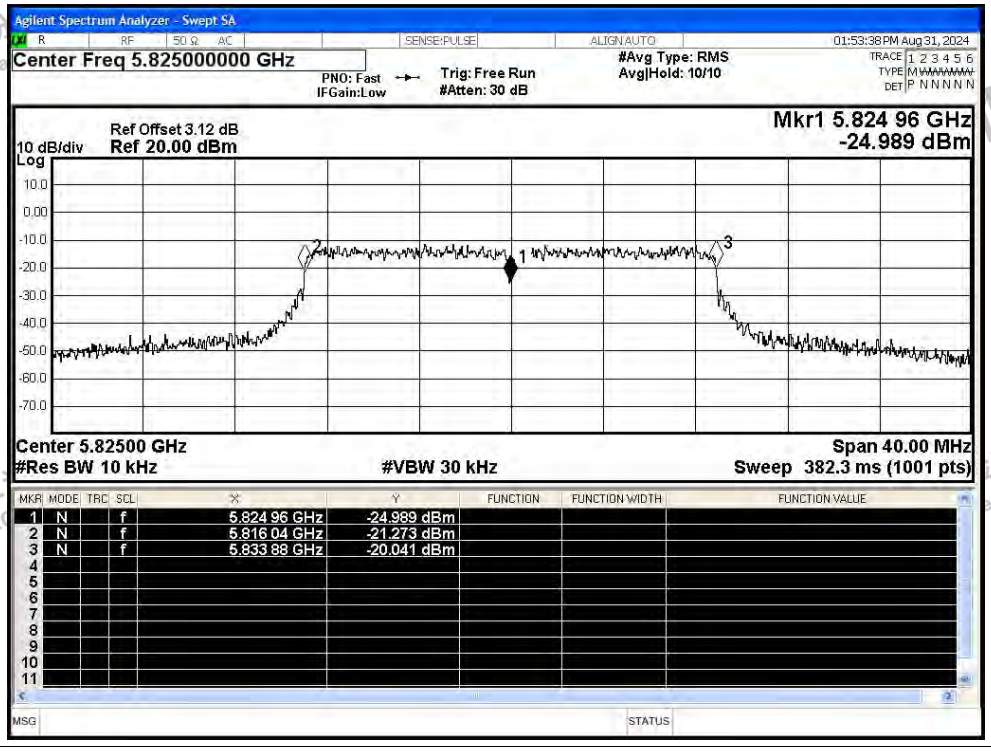

Freq. Stability NVNT n40 5755MHz Ant2

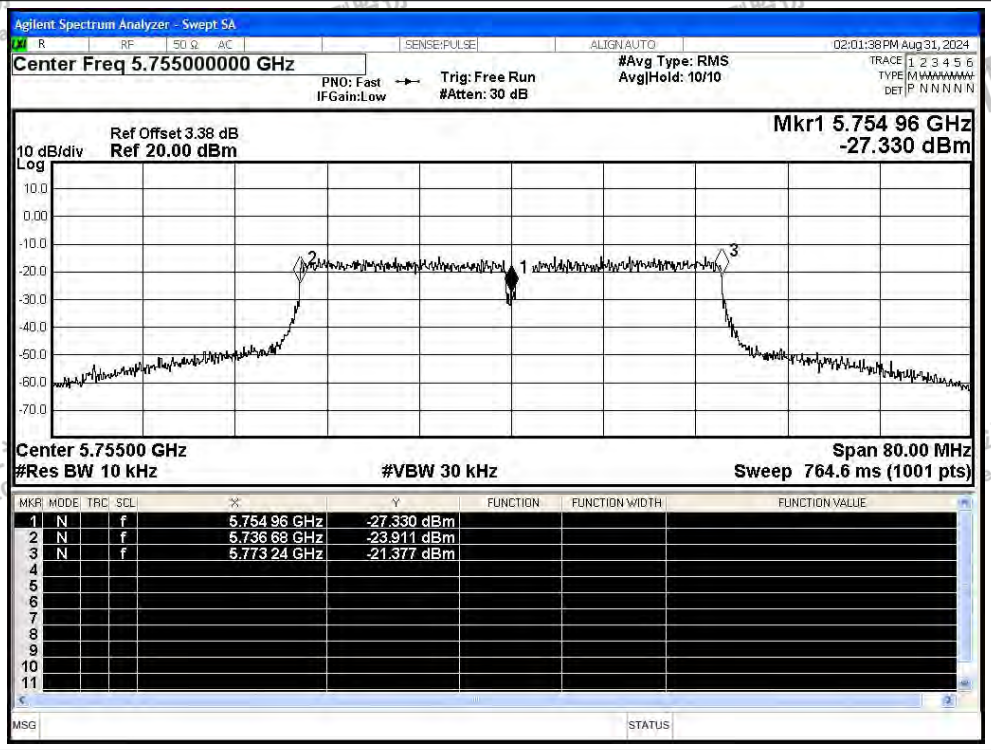

Freq. Stability NVNT n40 5795MHz Ant2

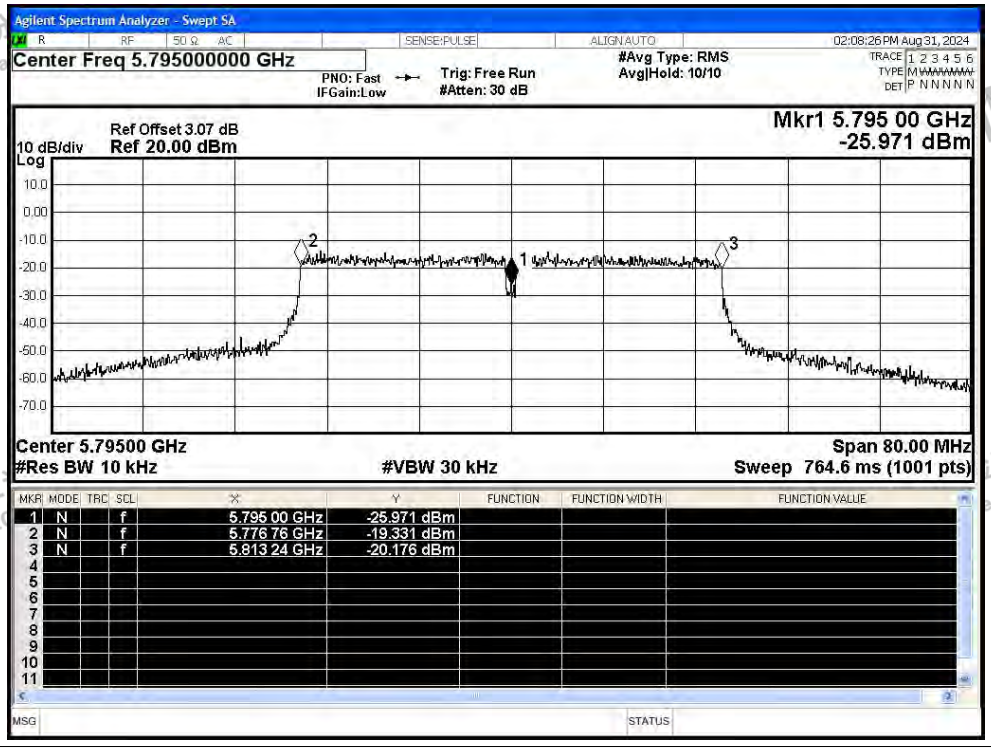

Freq. Stability NVNT ac20 5745MHz Ant2

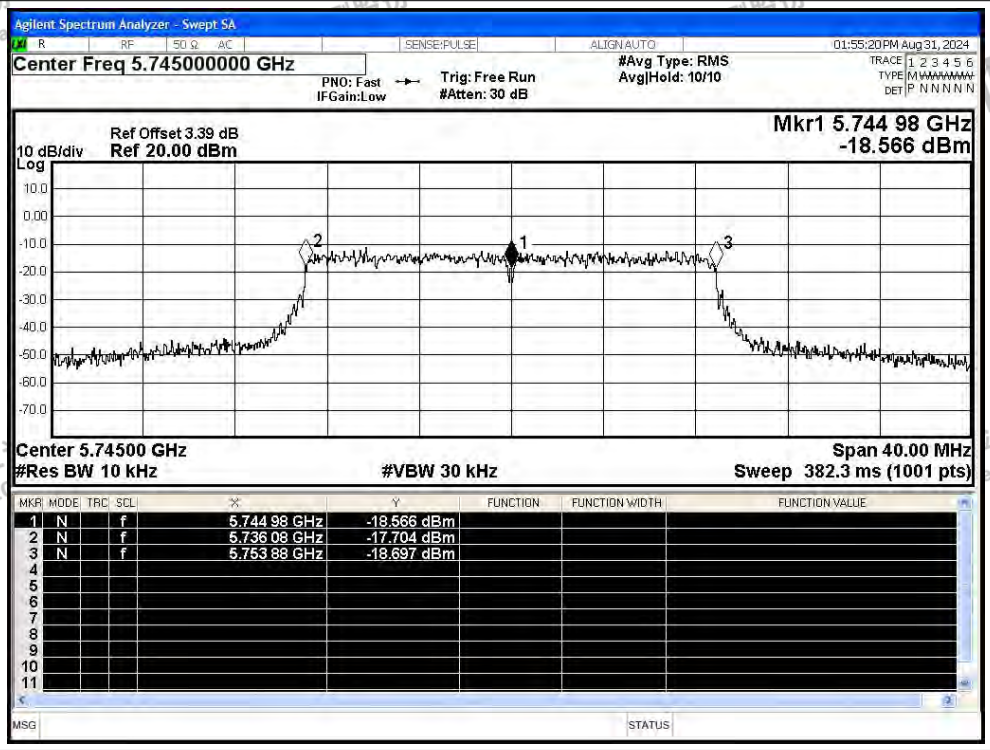

Freq. Stability NVNT ac20 5785MHz Ant2

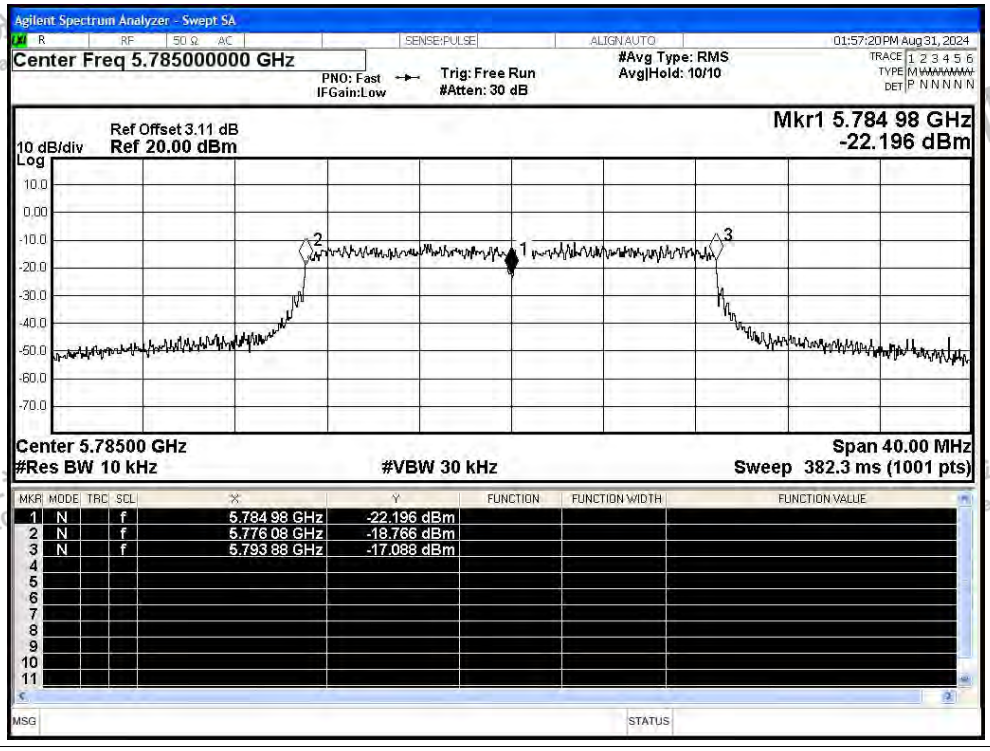

Freq. Stability NVNT ac20 5825MHz Ant2

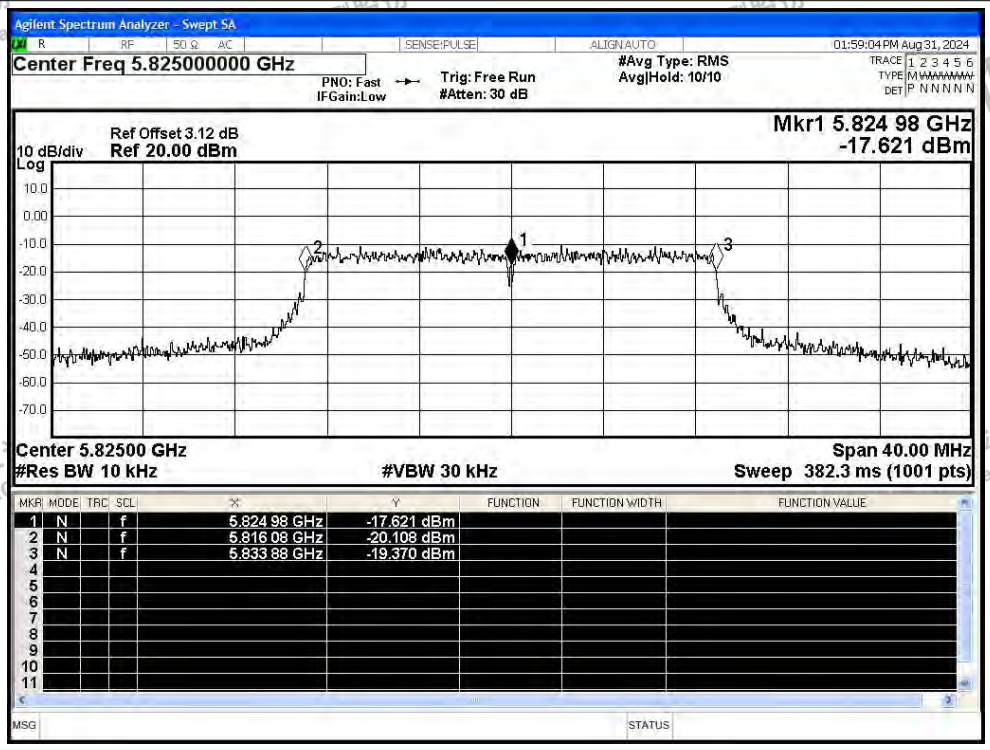

Freq. Stability NVNT ac40 5755MHz Ant2

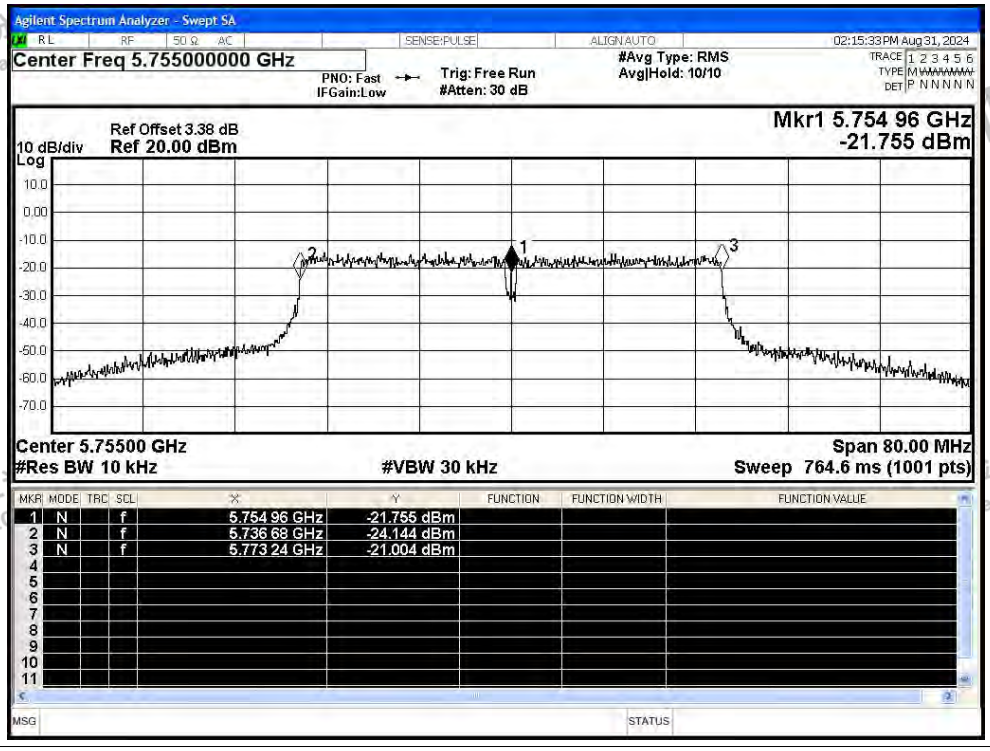

Freq. Stability NVNT ac40 5795MHz Ant2

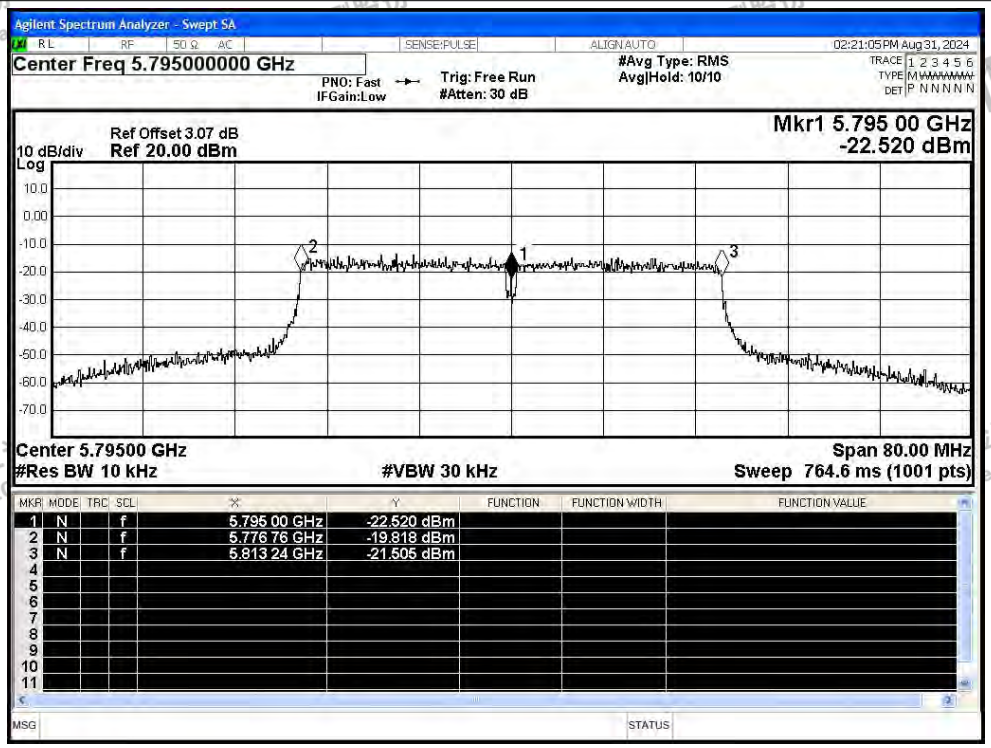

Freq. Stability NVNT ac80 5775MHz Ant2

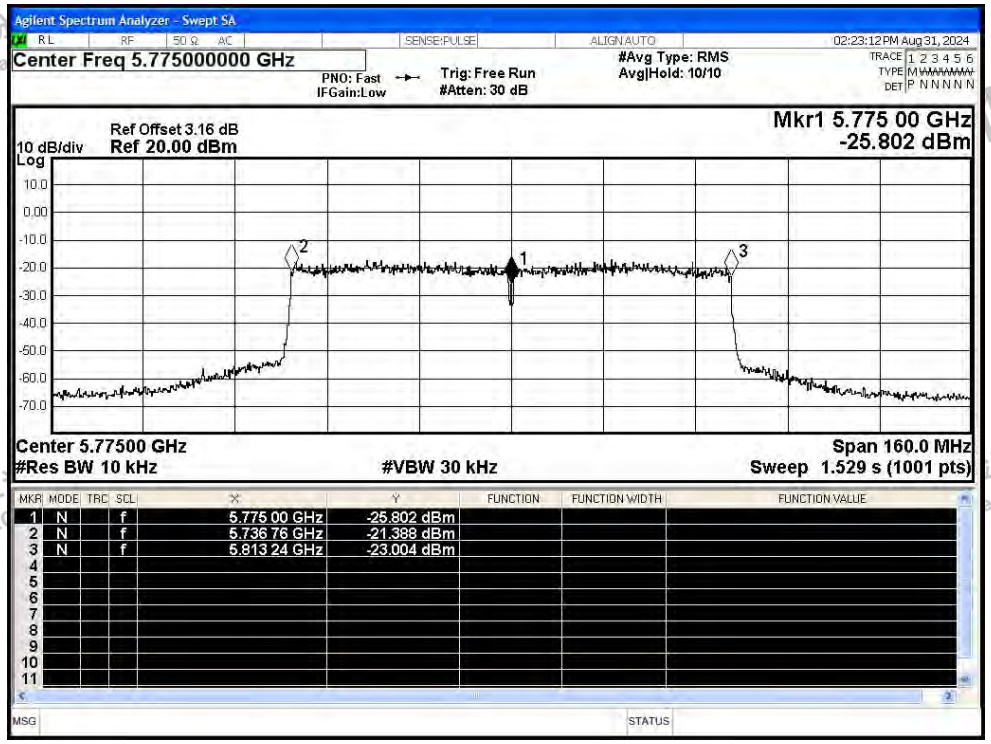

C.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	92.5	0.34	0.91
NVNT	a	5785	Ant1	93.84	0.28	0.91
NVNT	a	5825	Ant1	93.84	0.28	0.91
NVNT	n20	5745	Ant1	92.93	0.32	1.07
NVNT	n20	5785	Ant1	92.93	0.32	1.07
NVNT	n20	5825	Ant1	92.93	0.32	1.07
NVNT	n40	5755	Ant1	88.89	0.51	1.74
NVNT	n40	5795	Ant1	88.89	0.51	1.74
NVNT	ac20	5745	Ant1	92.89	0.32	1.06
NVNT	ac20	5785	Ant1	92.98	0.32	1.06
NVNT	ac20	5825	Ant1	92.89	0.32	1.06
NVNT	ac40	5755	Ant1	88.96	0.51	1.72
NVNT	ac40	5795	Ant1	87.75	0.57	1.72
NVNT	ac80	5775	Ant1	82.14	0.85	2.42

Test Graphs

Duty Cycle NVNT a 5745MHz Ant1

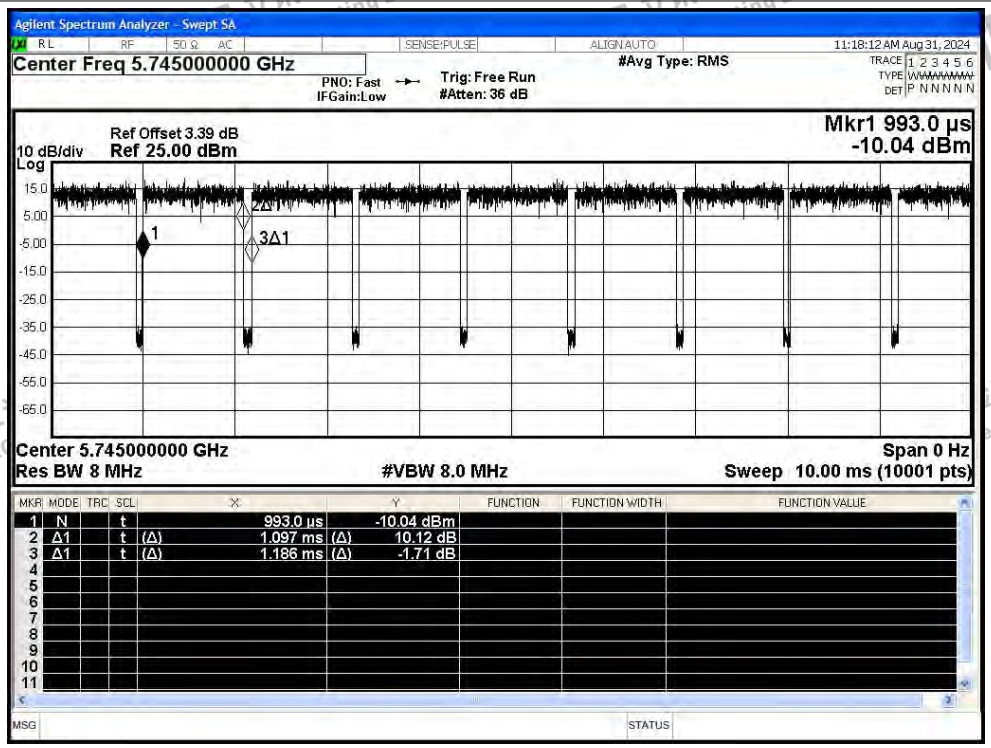

Duty Cycle NVNT a 5785MHz Ant1

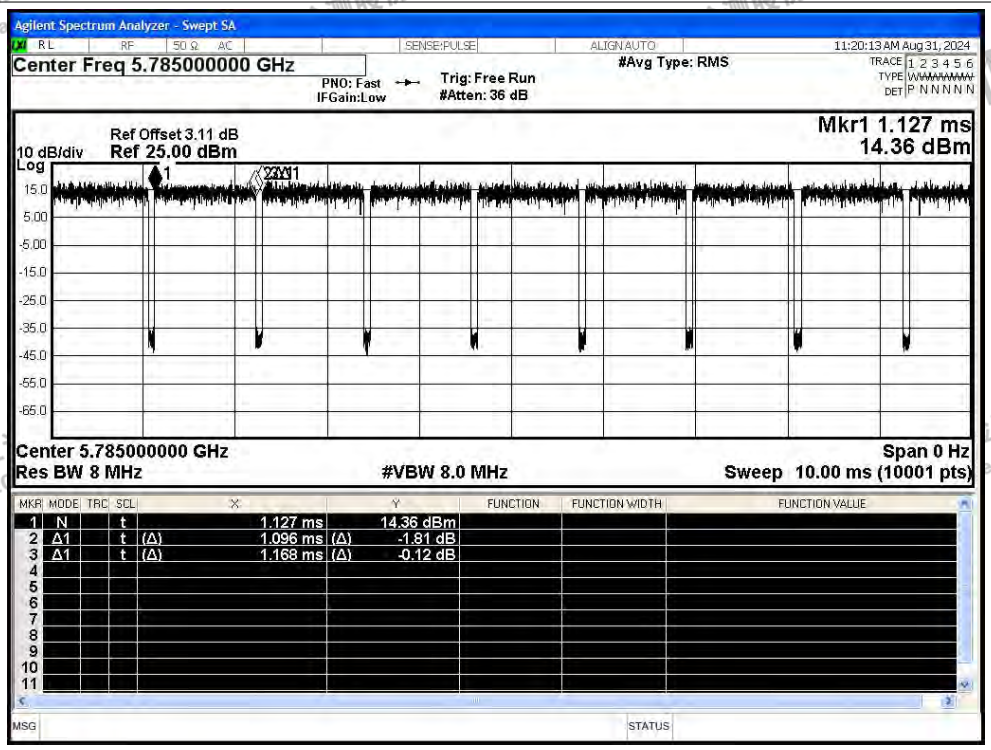

Duty Cycle NVNT a 5825MHz Ant1

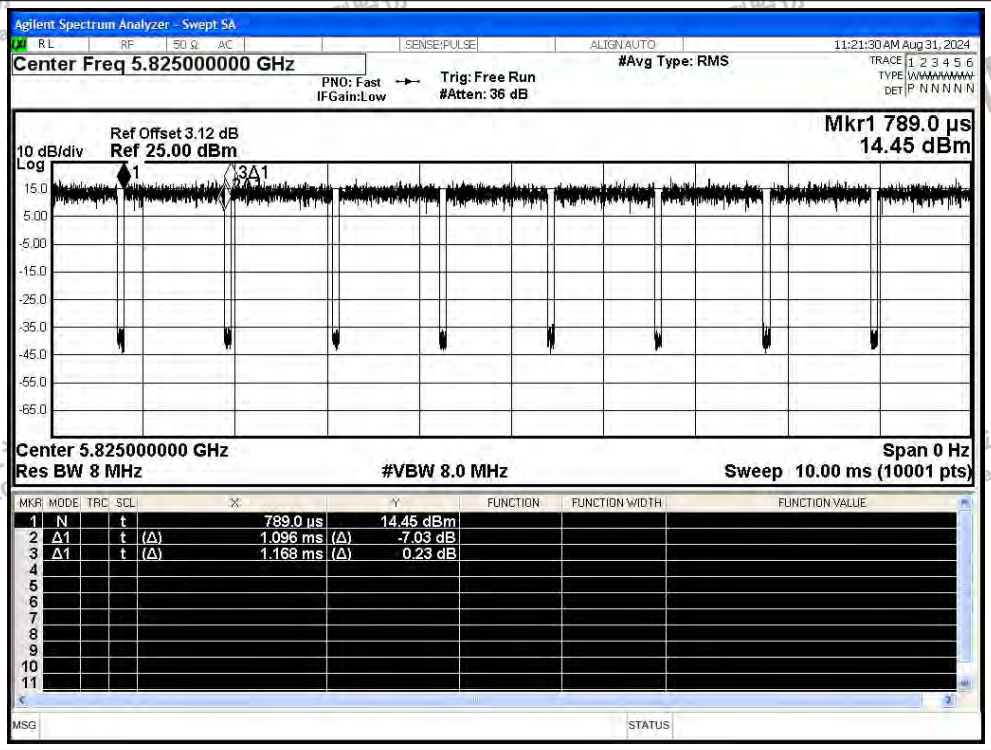

Duty Cycle NVNT n20 5745MHz Ant1

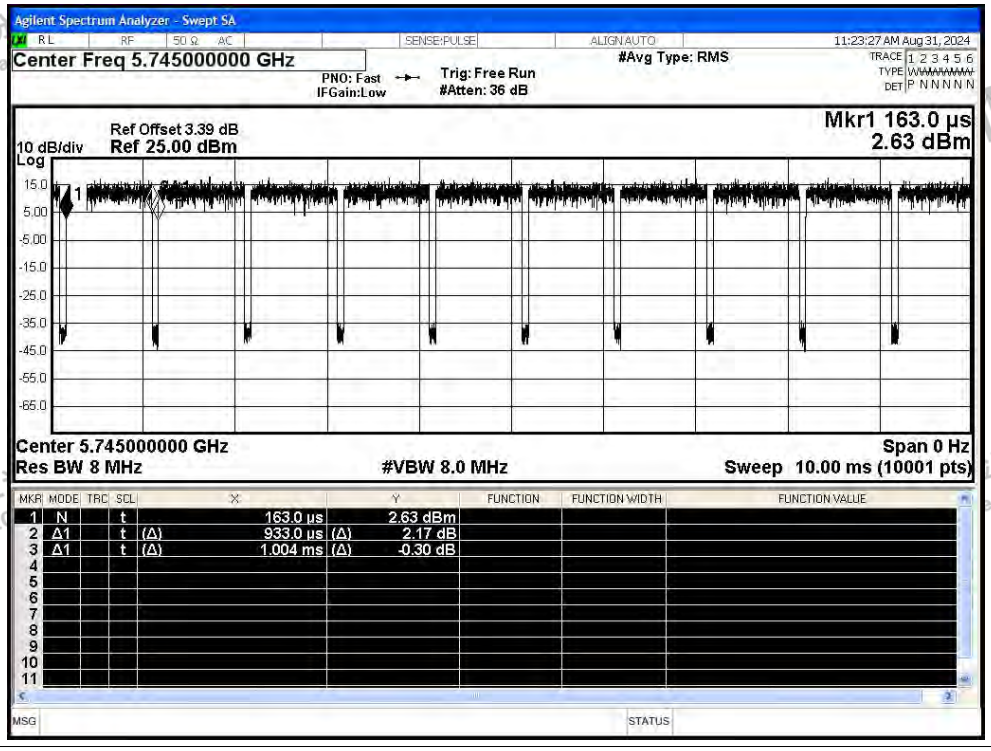

Duty Cycle NVNT n20 5785MHz Ant1

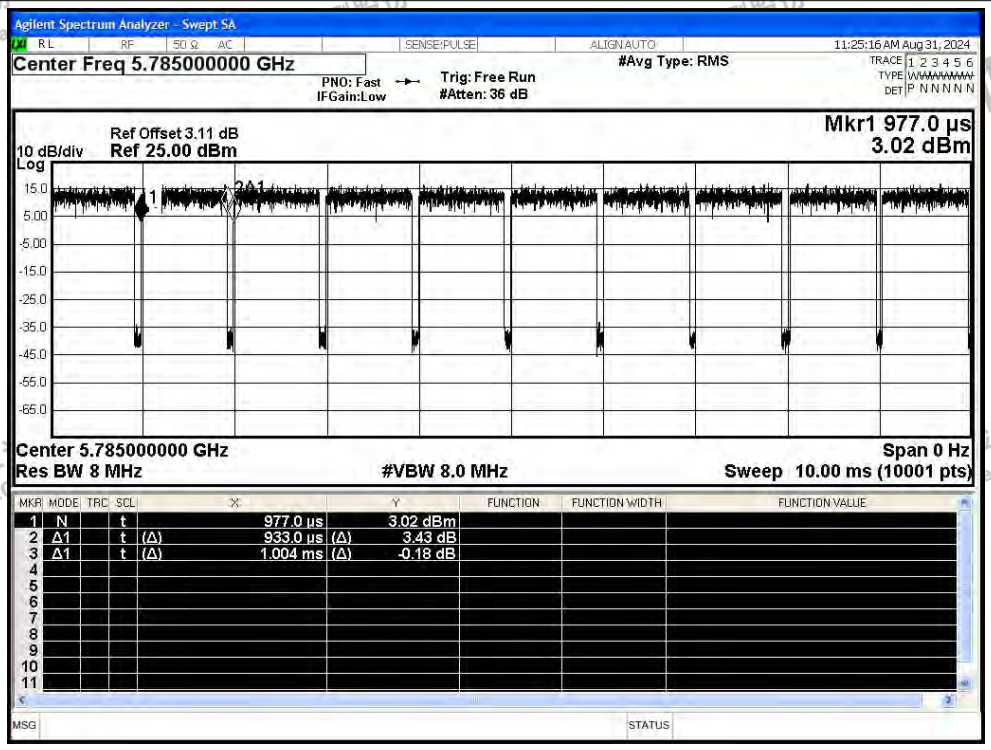

Duty Cycle NVNT n20 5825MHz Ant1

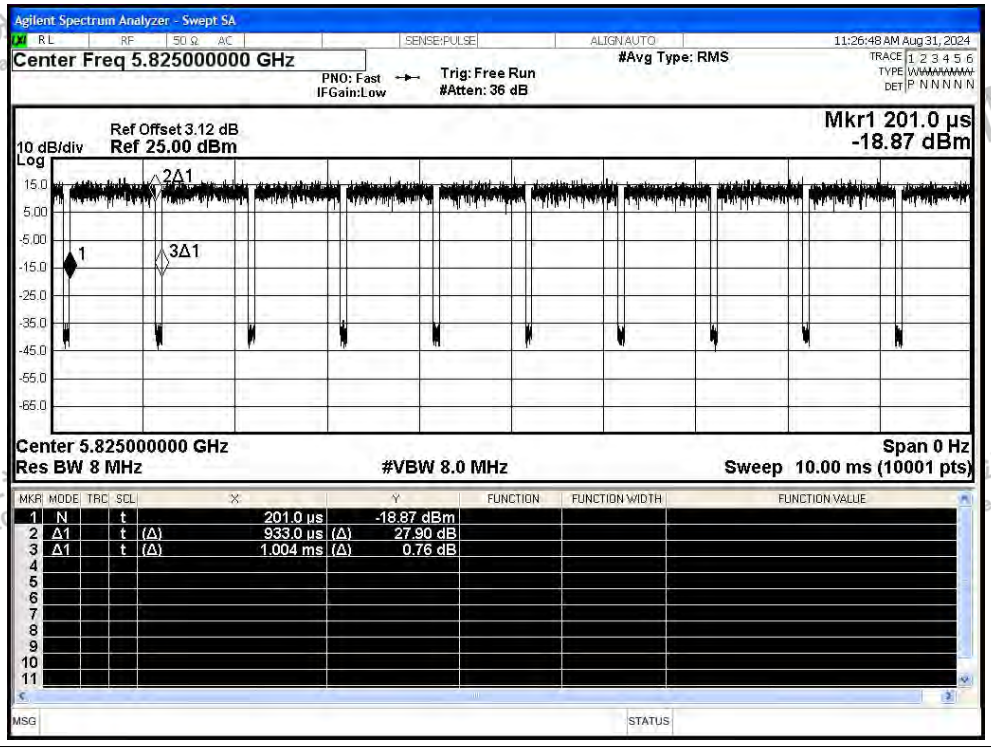

Duty Cycle NVNT n40 5755MHz Ant1

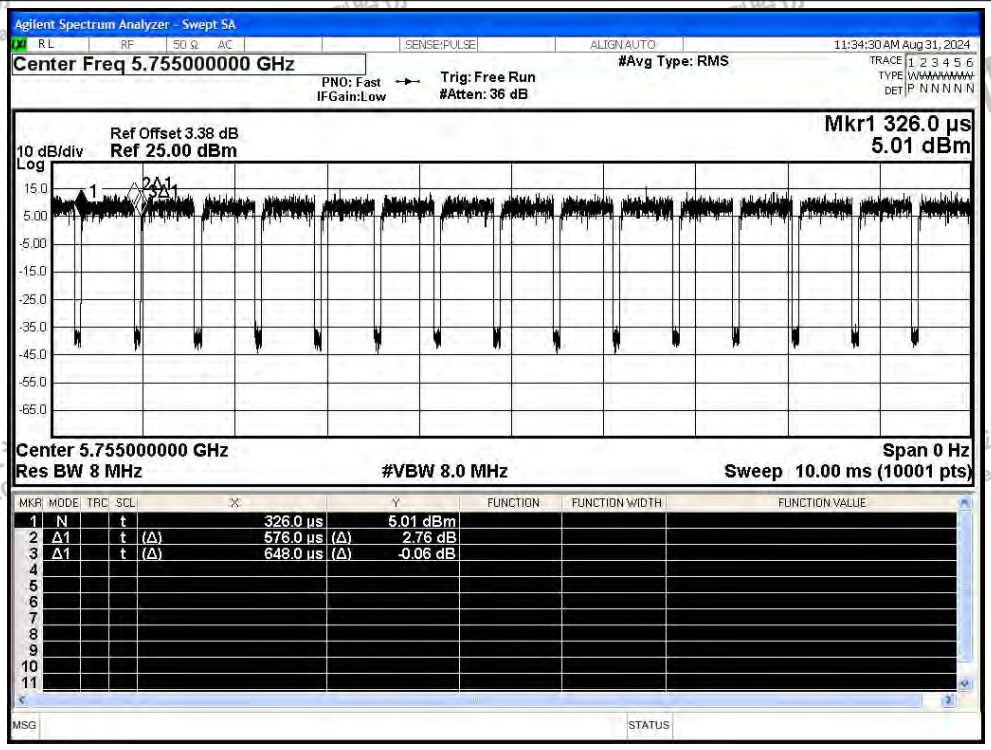

Duty Cycle NVNT n40 5795MHz Ant1

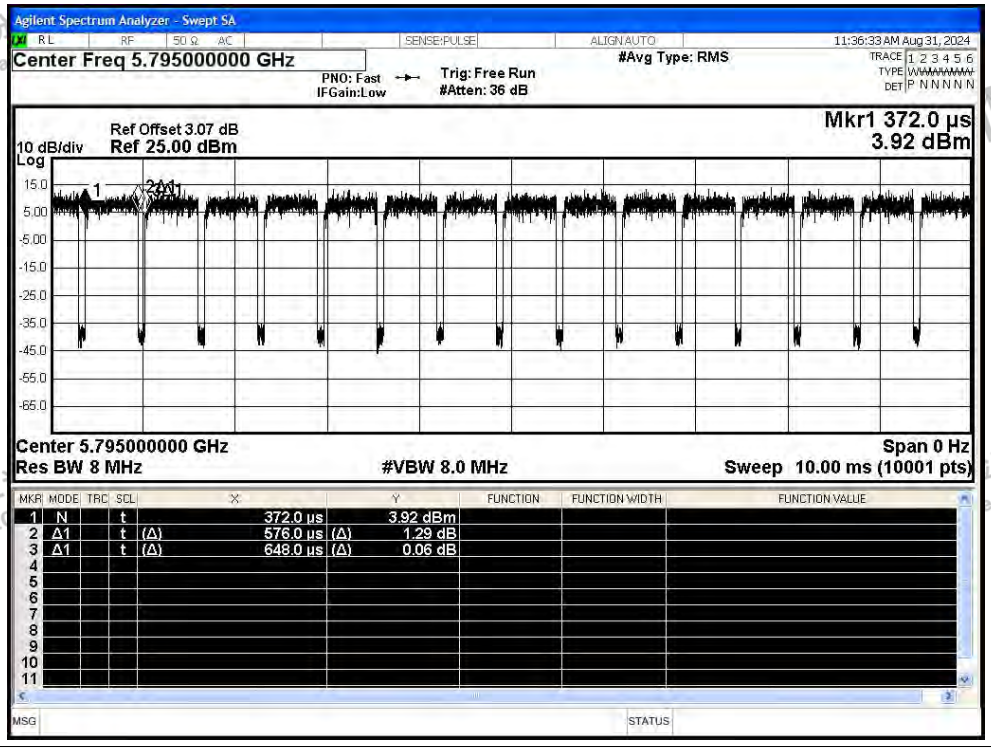

Duty Cycle NVNT ac20 5745MHz Ant1

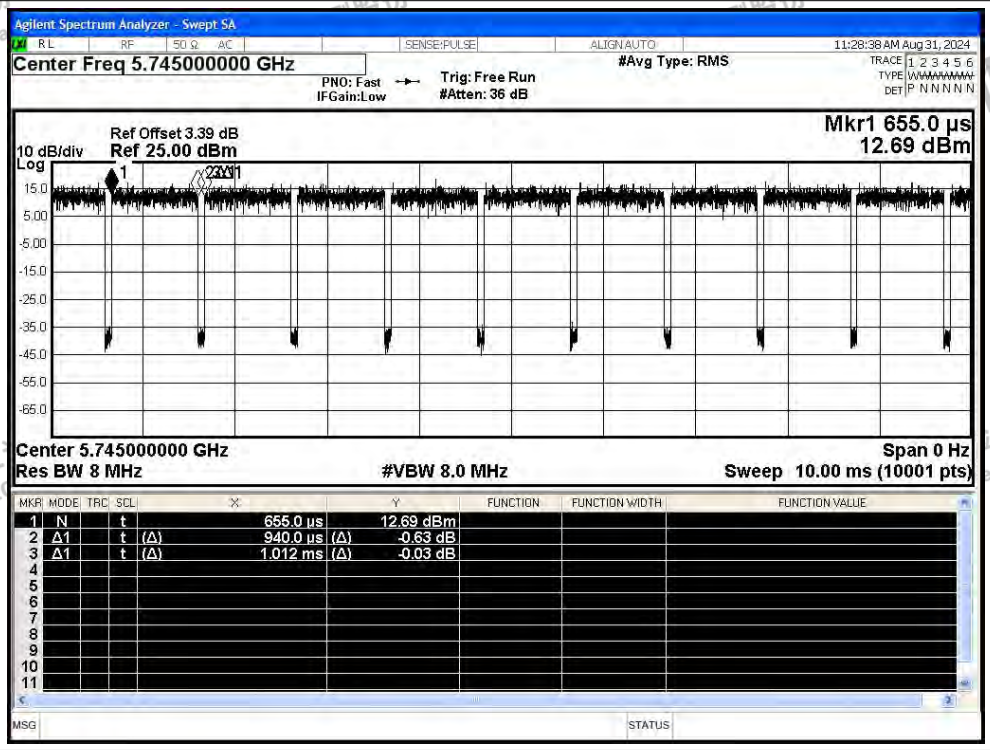

Duty Cycle NVNT ac20 5785MHz Ant1

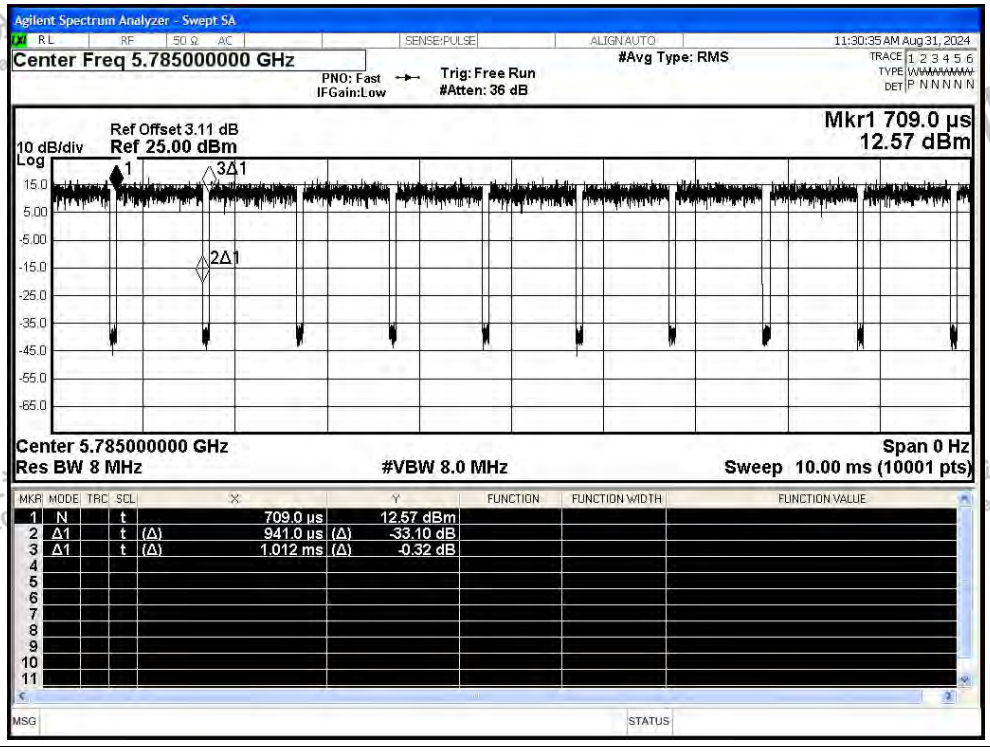

Duty Cycle NVNT ac20 5825MHz Ant1

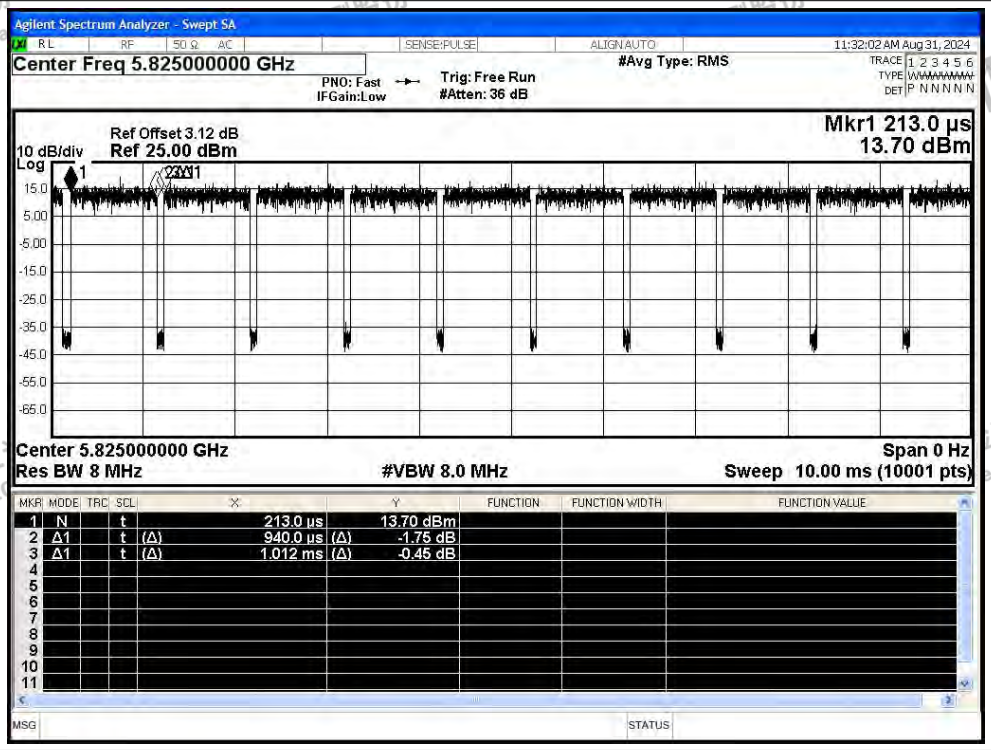

Duty Cycle NVNT ac40 5755MHz Ant1

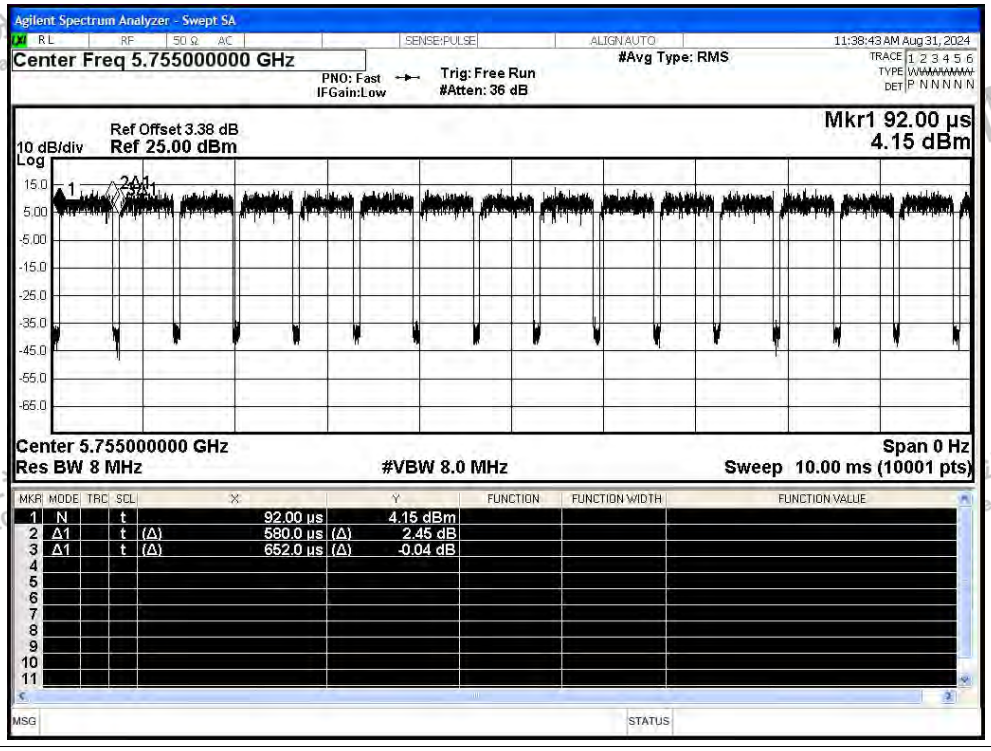

Duty Cycle NVNT ac40 5795MHz Ant1

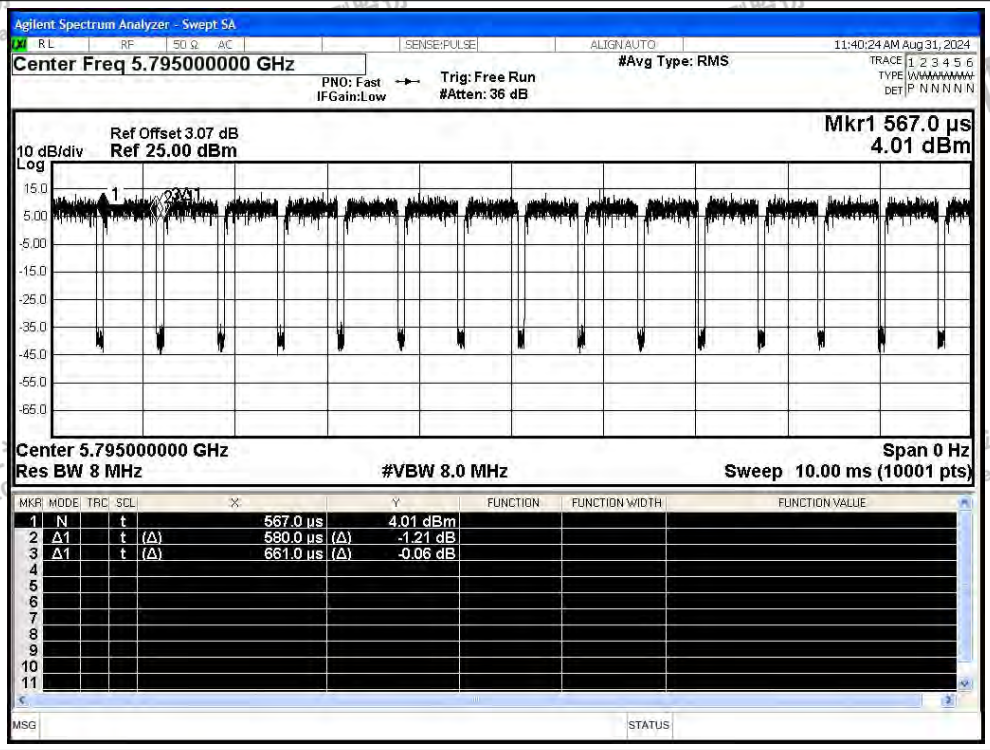

Duty Cycle NVNT ac80 5775MHz Ant1

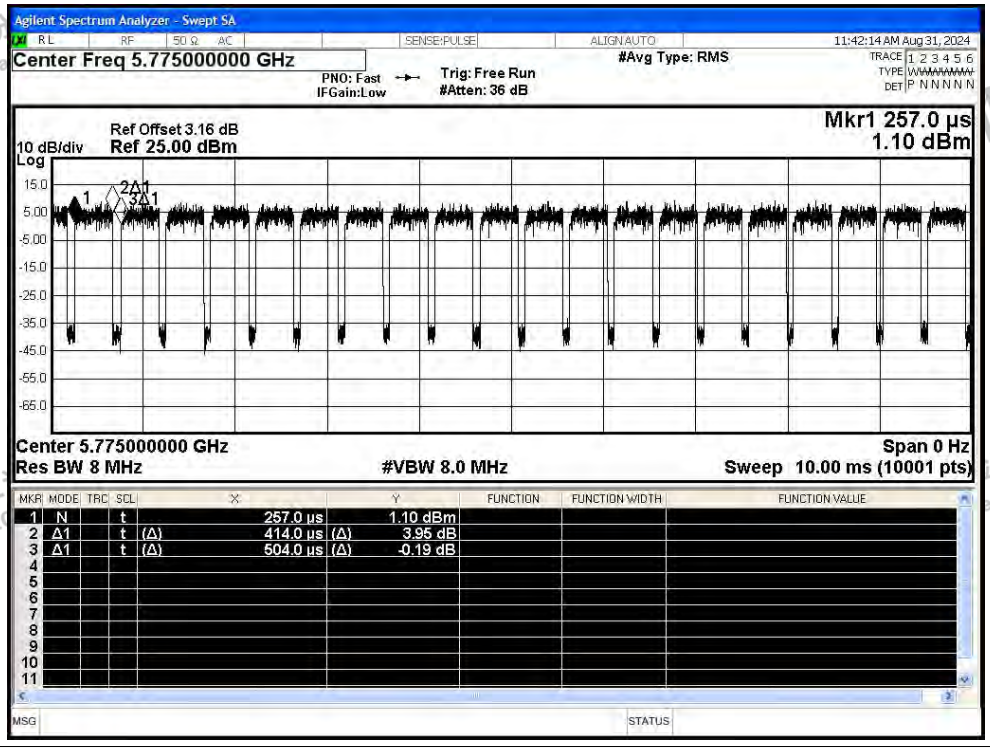

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant2	93.84	0.28	0.91
NVNT	a	5785	Ant2	93.84	0.28	0.91
NVNT	a	5825	Ant2	93.84	0.28	0.91
NVNT	n20	5745	Ant2	92.83	0.32	1.07
NVNT	n20	5785	Ant2	92.93	0.32	1.07
NVNT	n20	5825	Ant2	92.93	0.32	1.07
NVNT	n40	5755	Ant2	80.95	0.92	3.27
NVNT	n40	5795	Ant2	88.89	0.51	1.74
NVNT	ac20	5745	Ant2	92.89	0.32	1.06
NVNT	ac20	5785	Ant2	92.98	0.32	1.06
NVNT	ac20	5825	Ant2	92.89	0.32	1.06
NVNT	ac40	5755	Ant2	89.11	0.5	1.72
NVNT	ac40	5795	Ant2	89.11	0.5	1.72
NVNT	ac80	5775	Ant2	85.39	0.69	2.41

Test Graphs

Duty Cycle NVNT a 5745MHz Ant2

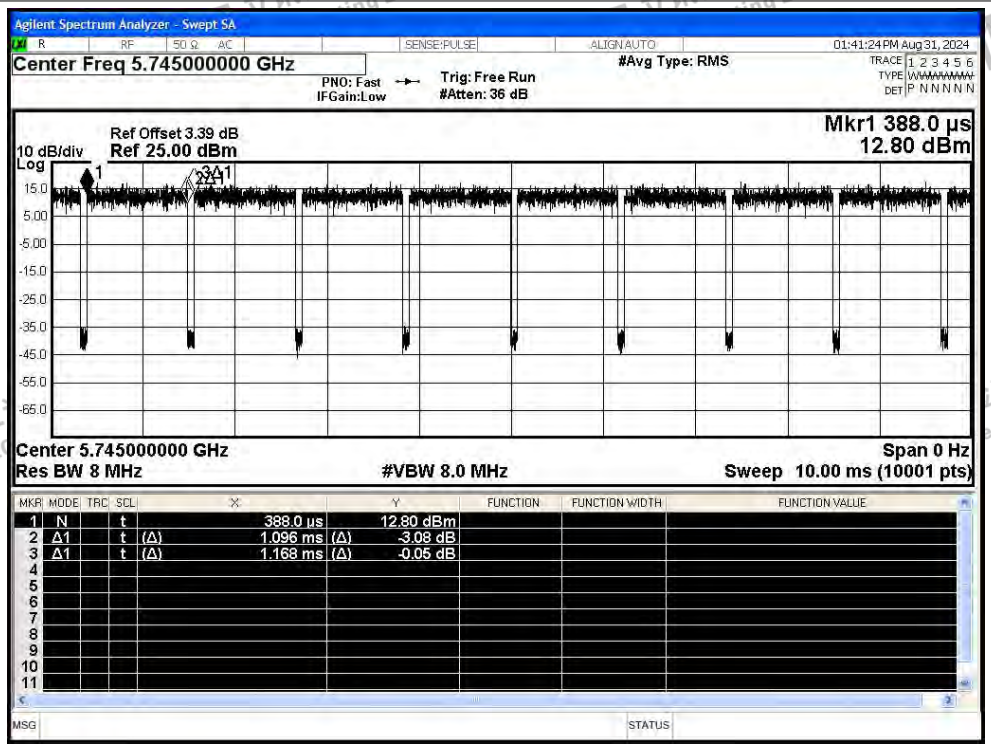

Duty Cycle NVNT a 5785MHz Ant2

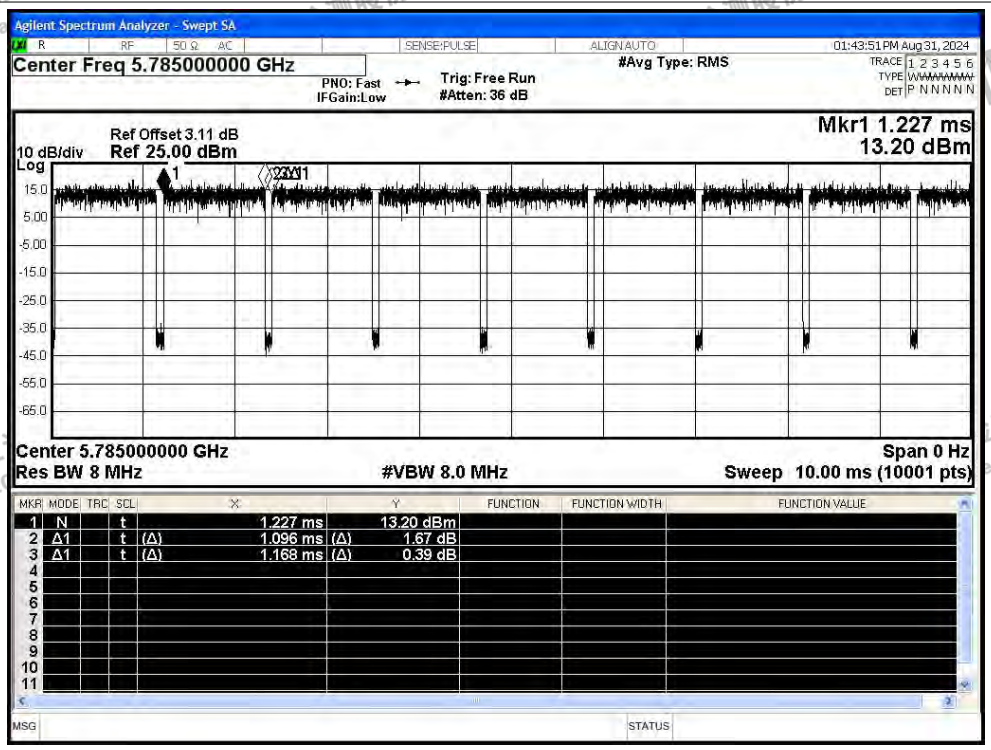

Duty Cycle NVNT a 5825MHz Ant2

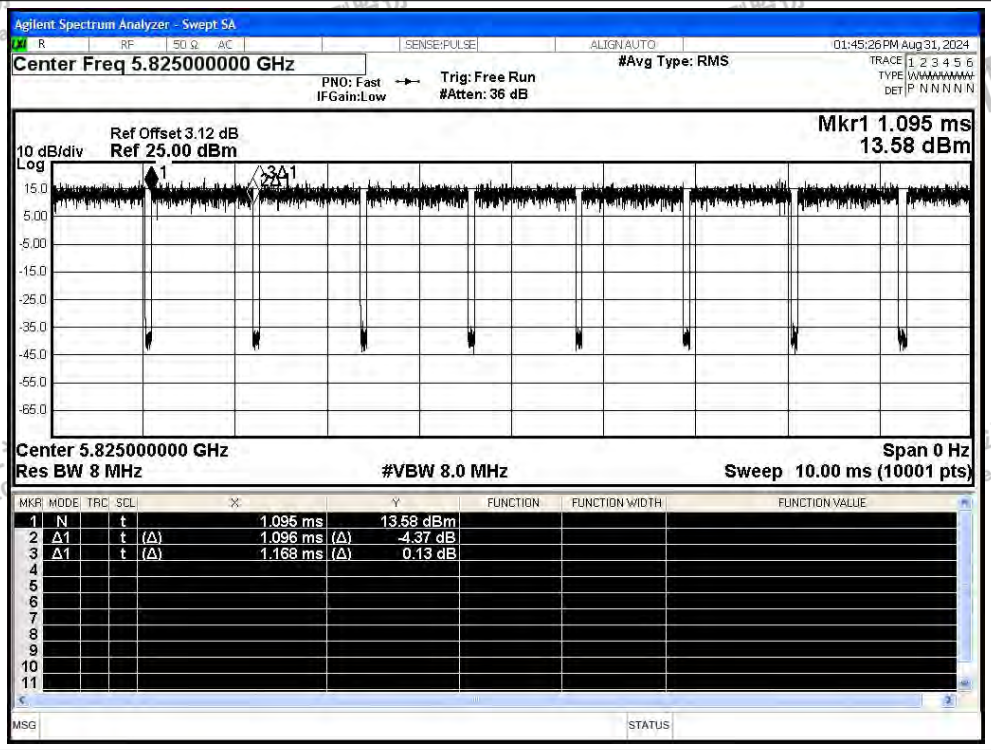

Duty Cycle NVNT n20 5745MHz Ant2

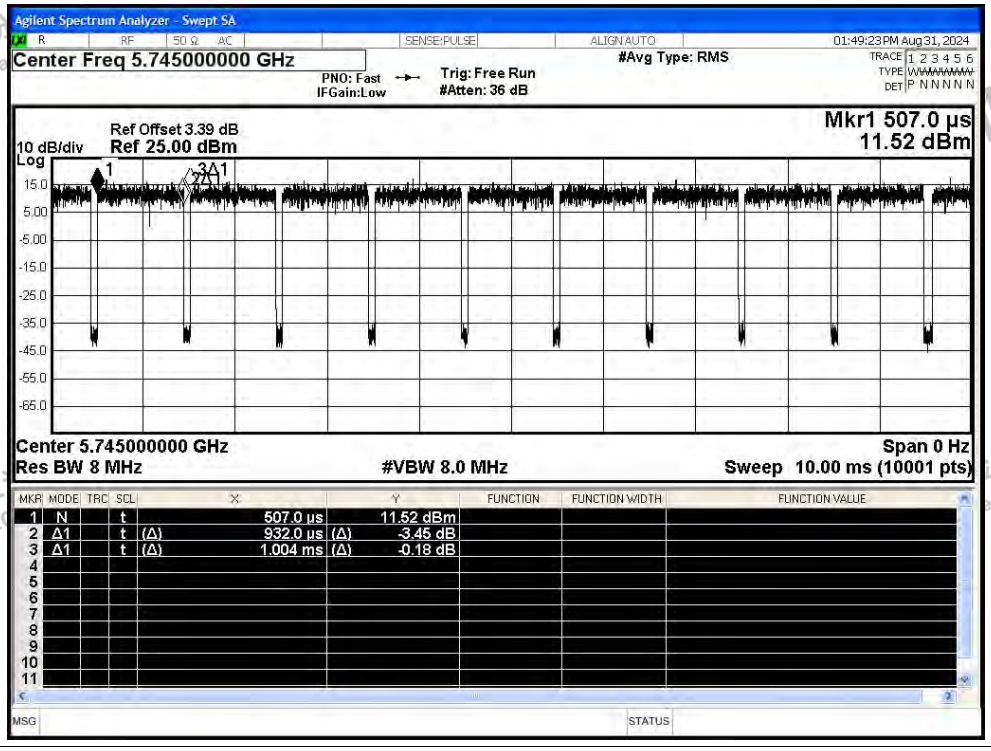

Duty Cycle NVNT n20 5785MHz Ant2

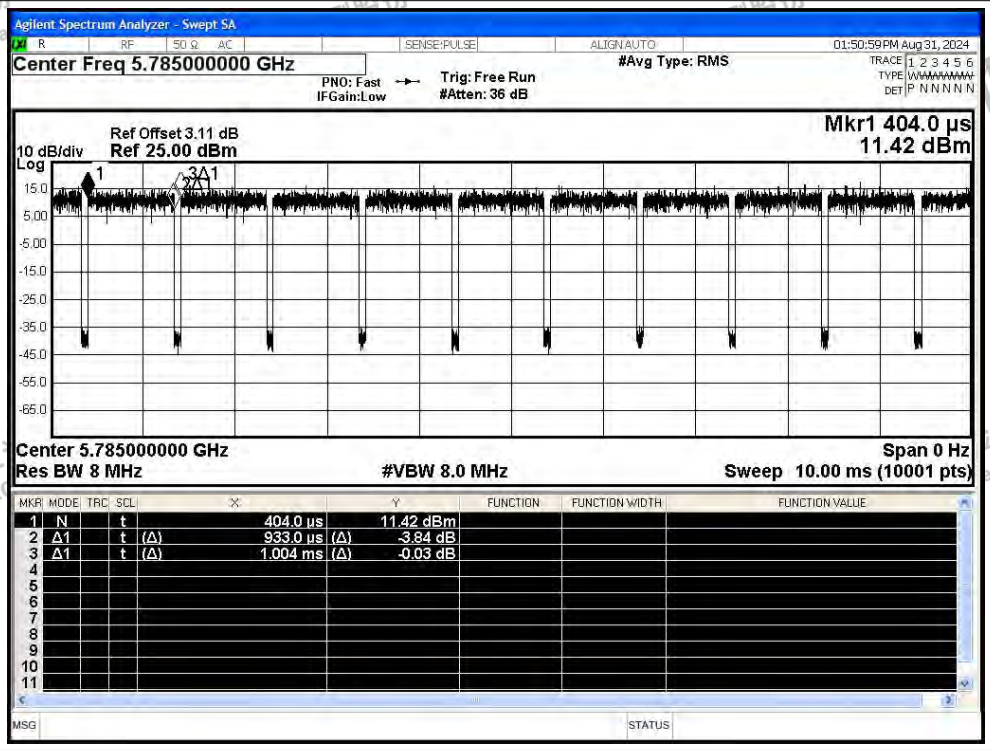

Duty Cycle NVNT n20 5825MHz Ant2

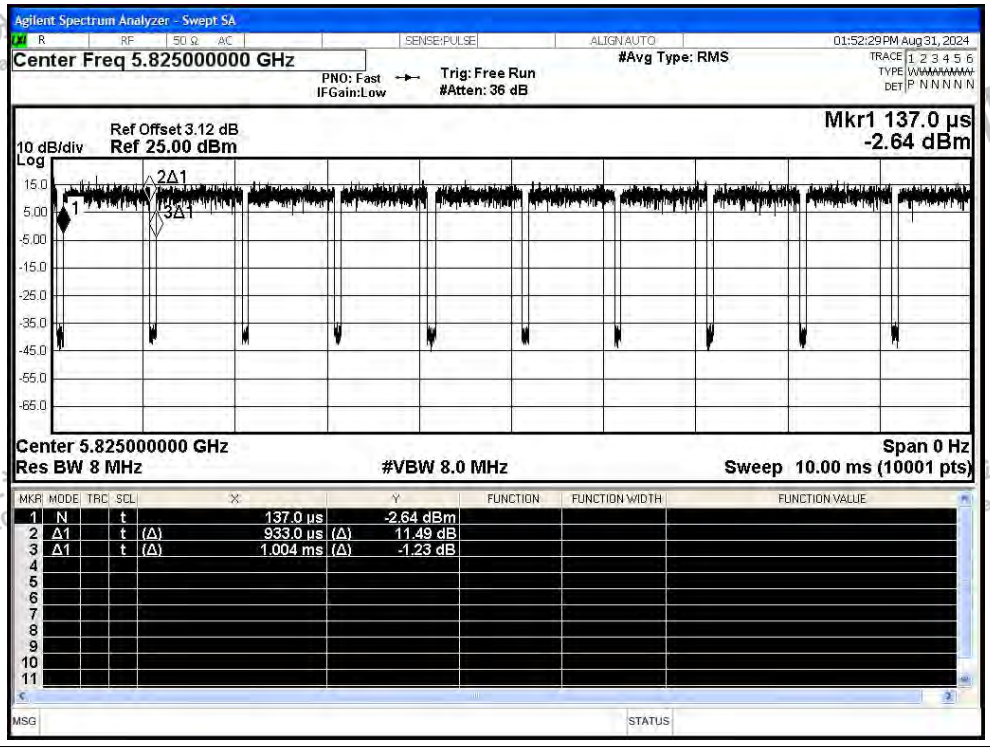

Duty Cycle NVNT n40 5755MHz Ant2

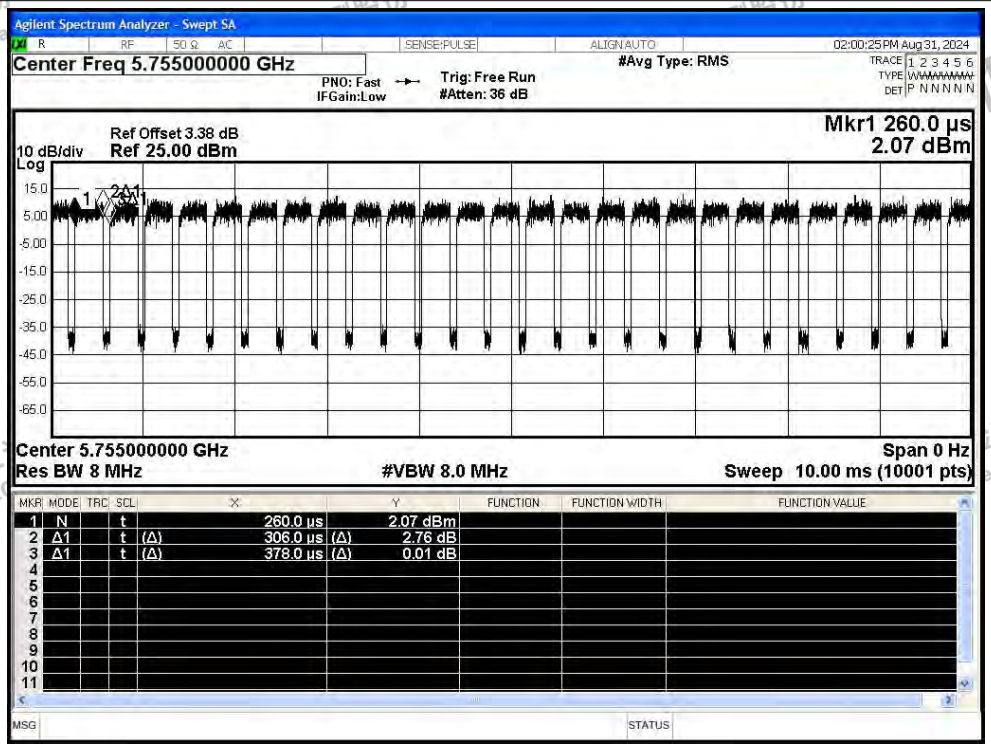

Duty Cycle NVNT n40 5795MHz Ant2

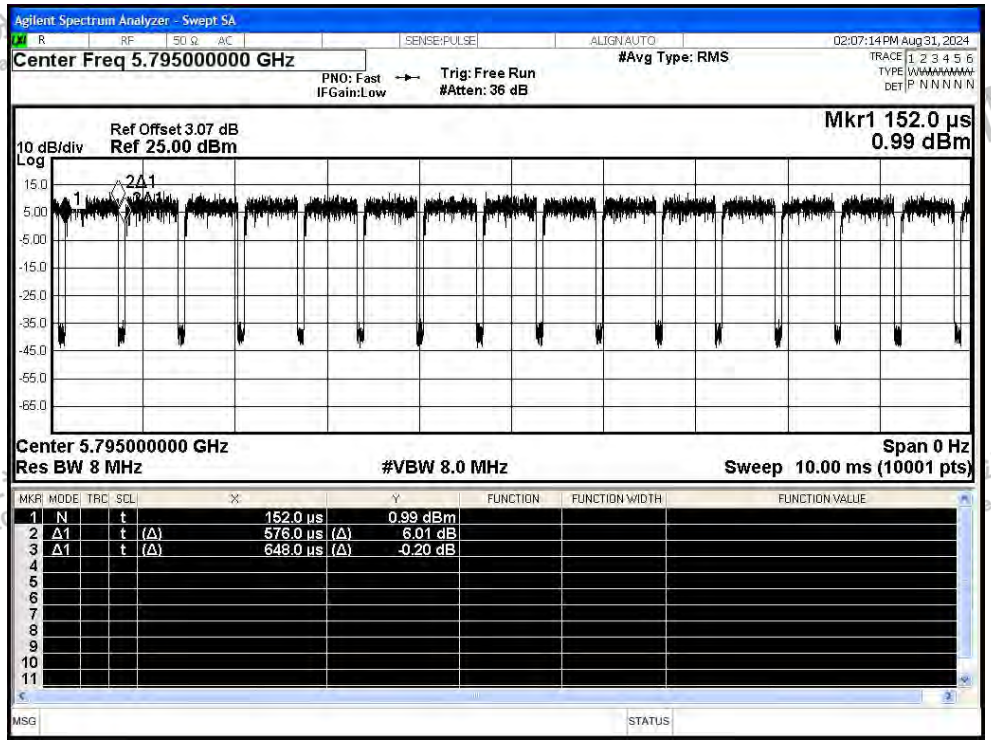

Duty Cycle NVNT ac20 5745MHz Ant2

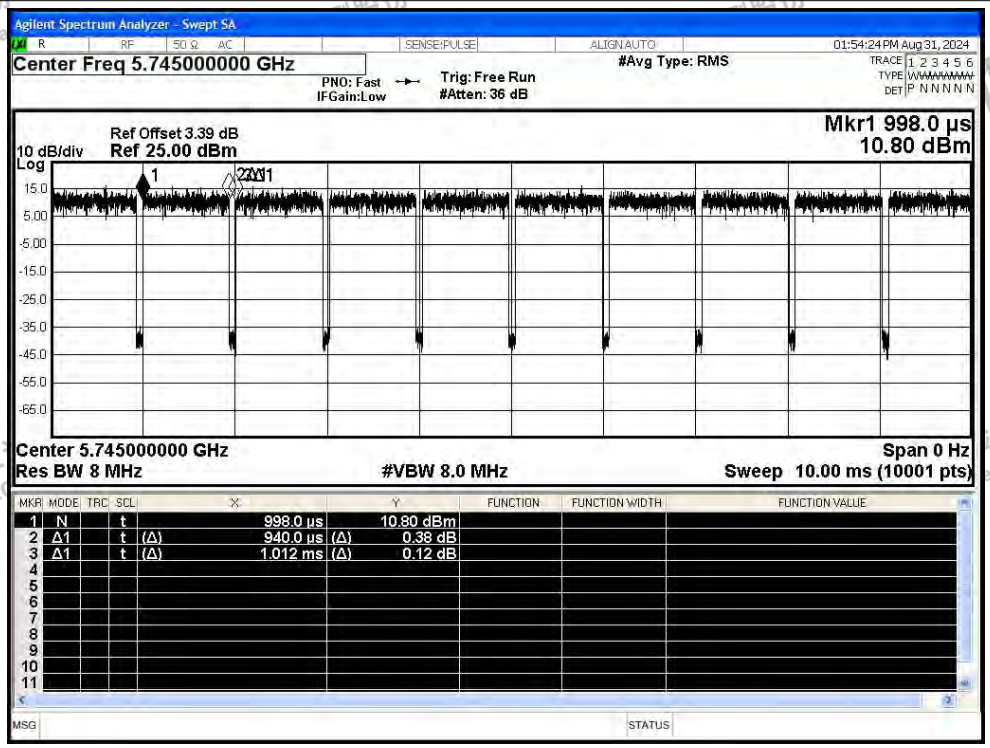

Duty Cycle NVNT ac20 5785MHz Ant2

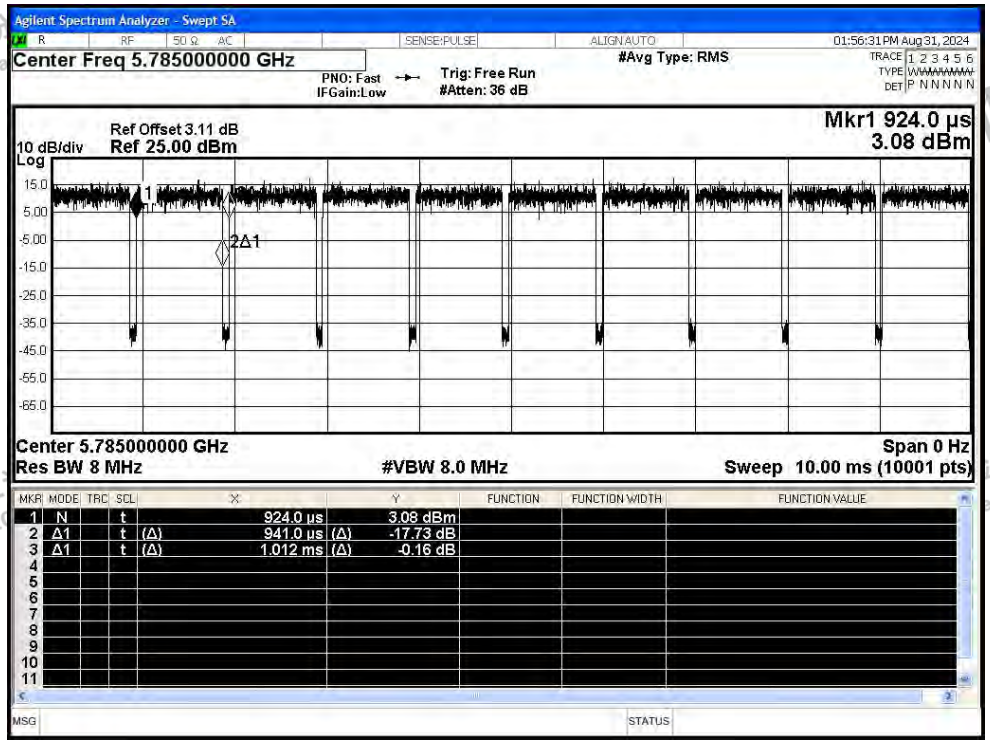

Duty Cycle NVNT ac20 5825MHz Ant2

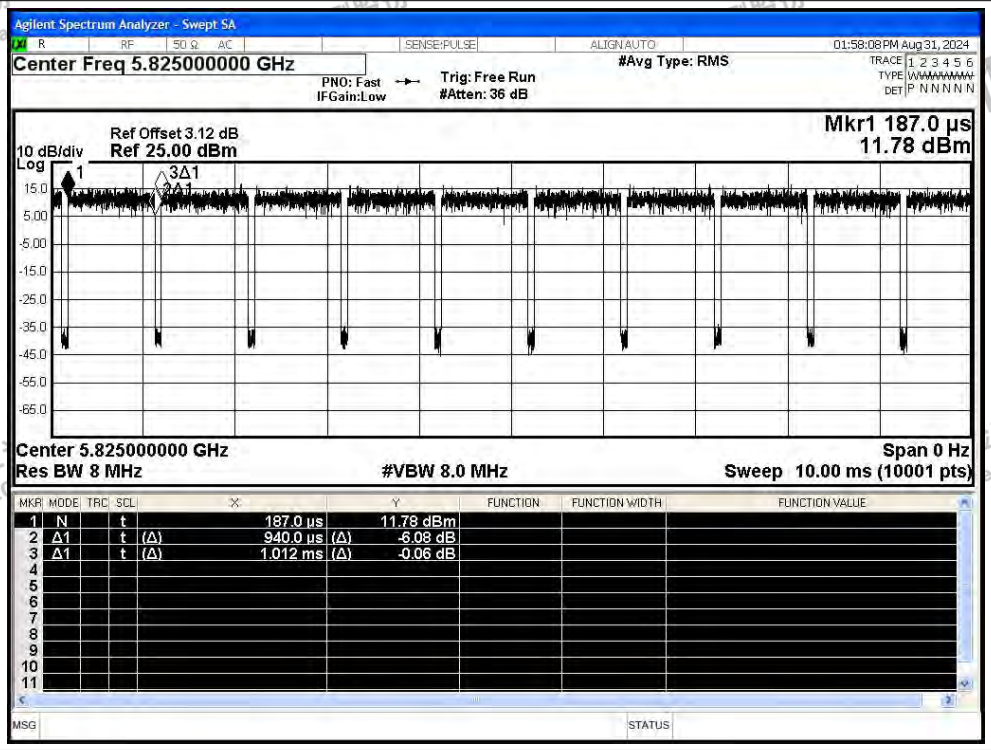

Duty Cycle NVNT ac40 5755MHz Ant2

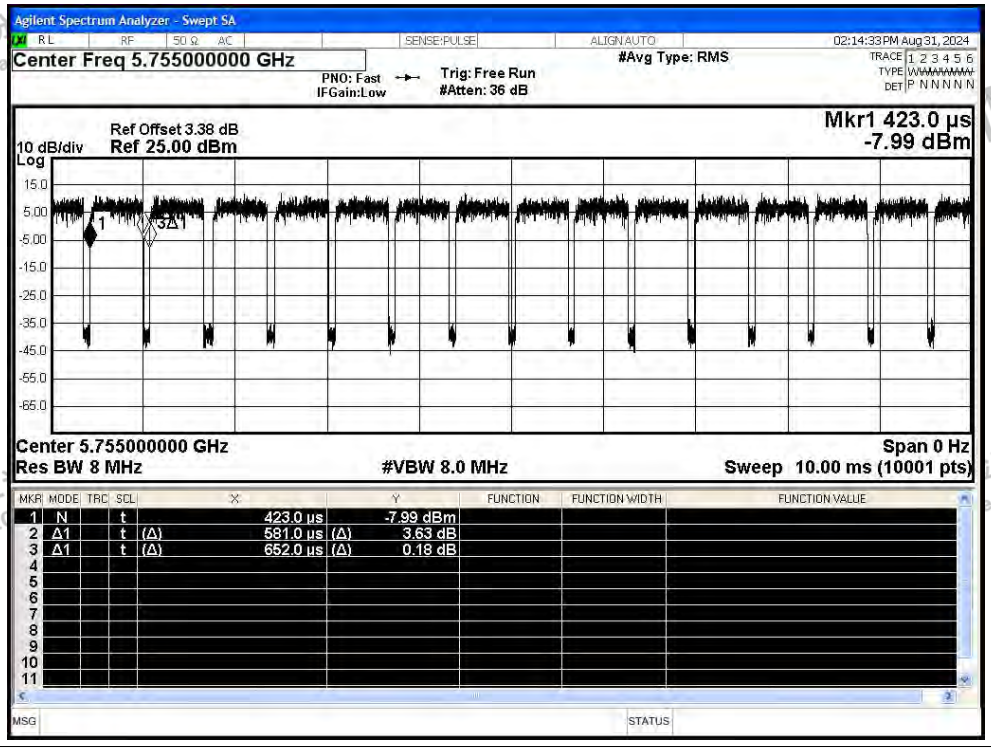

Duty Cycle NVNT ac40 5795MHz Ant2

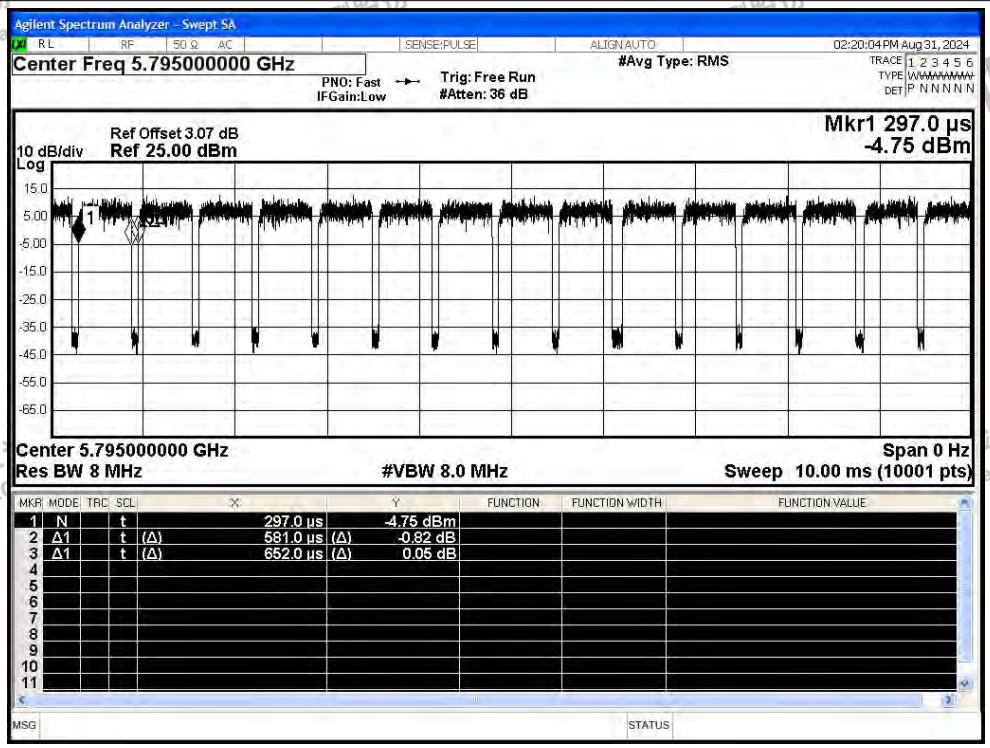
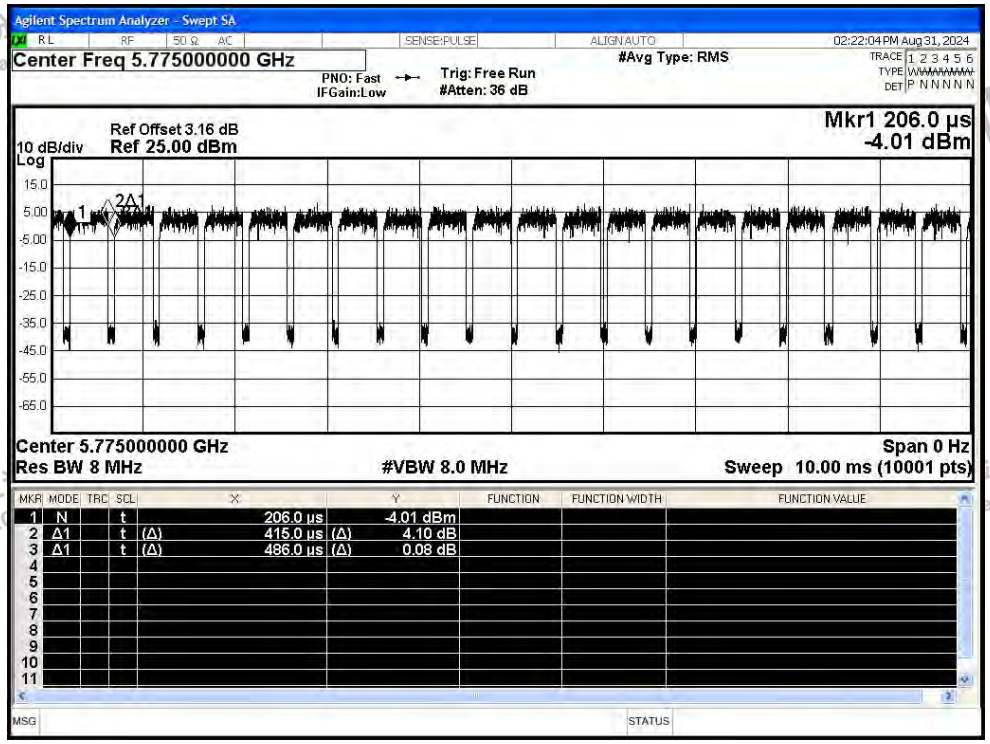
Duty Cycle NVNT ac80 5775MHz Ant2