无线K歌音箱

使用说明书

蓝牙名称: X5

结构和功能

1. 开关/模式　　2. 上一曲/音量-
3. 暂停　　4. 下一曲/音量+
5. 灯光

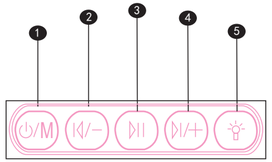

麦克风各功能使用说明

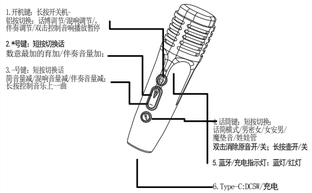

功能介绍

支持蓝牙连接播放音乐／支持TF卡播放音乐自带麦克风／K歌扩音功能／自带混响音效功能／耳机输出功能。

产品配件

音 箱

麦 克 风

Type-C 充电线

说 明 书

配件清单

音箱　　麦克风　　使用说明书　　Type-C

使用音箱表克风注意事项

开关机-

在关机状态长按开关机键，产品自动开机，在没有插入TF 卡时，默认进入蓝牙模式，语音提示为“蓝牙模式”；长按开/关机键关机。

蓝牙连接-

打开手机蓝牙设置并搜索该设备名称，然后进行配对连接，连接成功后将会有提示音发出且蓝灯常亮。

手机播放-

蓝牙连接成功后，打开手机音乐播放器，下载喜欢的歌曲或者伴奏进行播放，亦可在手机调节到合适的音量。

Tf卡播放-

将TF 卡插入设备中，本机将自动播放TF 卡中的音乐。

声音调整-

通过设备控制面板上的按键可以调整麦克风，伴奏的音量。

充电-

用标配的充电线连接充电器进行充电，充电时红灯常亮，充满时熄灭。

注意事项

1. 清洁机器前请断开充电器，并且关机。
2. 非专业人员请勿自行拆开设备，避免造成机器故障，并丧失保修权益
3. 请勿将设备放置在阳光直接照射的地方，以避免电子零件提早老化。
4. 避免在灰尘飞扬或环境脏乱的场所使用(灰尘容易引起设备故障)
5. 请勿将设备放置在过冷或过热的环境中，会导致设备无法正常运行。
6. 建议使用设备环境温度勿超过-10° C~40°C相对湿度10%-95%。
7. 请勿将任何物品塞入设备内，以避免引起机件短路或电路损坏，请勿洒落任何液体到本产品上。
8. 避免本机与硬物摩擦接击，以免造成表面刮花、脱落或其他硬件损坏。
9. 产品不得暴露在诸如日照，火烤或类似过热环境中。
10. 本产品禁止拆解、撞击、挤压或投入火中，电池若出现严重故障，请勿继续使用。
11. 该说明书含重要信息，请给予保留。

蓝牙连接

1. 长按音箱开机键开机，语音提示“蓝牙模式”同时指示灯闪烁，连接成功蓝灯常亮。
2打开手机蓝牙并扫描，搜索到设备后配对连接，连接上后可以听到设备发出连接成功提示音。
3．麦克风开机后自动配对音箱，未配对时蓝灯快闪，配对成功蓝牙灯常亮。
注：设备与手机连接一次后，蓝牙具有记忆功能，开机后会自动连接，如需断开，可通过手机设置断开蓝牙。如果只听音乐，可将麦克风音量调到最小。

唱K音响&表克风特色功能

智能防啸叫 一
10cm 内大声唱歌无啸叫。

收音灵敏度高 一
话筒5~10cm 唱歌不吃力，话筒音量大，音质好。

低延迟-

延迟小于40ms.

功能全-

5种音效； 一键消原音；
伴奏、混响、话筒音量灵活调节。

注：本公司产品不断创新，如有更改恕不另行通知

音箱参数

蓝牙版本：5.3版本　　喇叭直径：110mm
喇叭功率：10W　　工作电压：3.7V
频率范围：150Hz-20kHz　　混　响：回音声效混响
电源适配器：DC5V≤1A　（可与手机充电器通用）
充电时长：3.5-4小时

麦克风参数

拾音器：背极式电容咪头
工作电压：3.7V
频率范围：20Hz-20kHz
电源适配器：DC5V≤1A　（可与手机充电器通用）
充电时长：约2.5小时

产品信息

产品名称：无线K歌音箱
产品型号：X5

注：本公司产品不断创新，如有更改恕不另行通知

soundbox with microphone

User manual

BT name :x5X6

Parts an controls

1.Power/Mode　　2.Previous track/Volume-
3.Pause　　4.Next track/ Volume+
5.LED

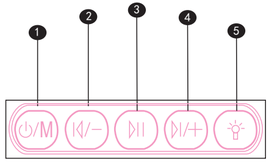



Instructions for microphone functions

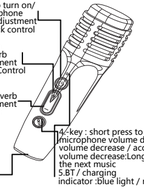

1.Power on key :long press to turn on/ off short press switch : microphone adjustment / reverberation adjustment style adjustment / double click control audio playback pause.
2. +key : short press to switch microphone volume up Reverb volume in crease accompaniment volume increase Long press Control the next music
3.-key :short press to switch microphone volume down Reverb volume decrease/accompaniment volume decrease : Long press Control the previous music
4.+key : short press to switch microphone volume down Reverb volume decrease / accompaniment volume decrease:Long press Control the next music
5.BT / charging indicator :blue light / red light
6.Type-c:DC5V/charging

Function

Support BT connection to play music /support TF card to play music / karaoke sound reinforcement function /built-in reverberation sound effect function /headphone output function.

Accessories



Loudspeaker box

Microphone

Type-c cable

Instructions

Accessories

Loudspeaker box　　Microphone
Type-c cable　　Instructions

Precautions for using speaker microphone

Switch on /off-

When the machine is turned off,the product starts automatically with the Chang An On/OFF key.When the TF is not inserted when the card is used, t will enter the BT mode by default,and the voice prompt will be "BT mode";Long press The ON /OFF key turns off the machine.

BT connectivity-

Open your phone's BT settings,search for the device name ,and Then make a pairing connection After the connection is successful,there Will be a prompt tone and the blue Light will always be on.

Mobile Playback:

After the BT connection is successful,open the mobile music player and download your favorite songs or the accompaniment can be played, and the volume can also be adjusted to the appropriate level on the mobile phone.

Tf card play·

Insert the TF card into the device,and the device will automatically play the music in the TF card.

Sound adjustment–

The volume of microphone and accompaniment can be adjusted through the buttons on the device control panel.

Charge-

Connect the standard charging line to the charger for charging.
The red light is always on when charging,and it is full off.

Attention

1.Please disconnect the charger and turn it off before cleaning the machine.
2.Non professionals are not allowed to disassemble the equipment by them selves to avoid machine failure and loss of warranty rights.
3.Please do not place the equipment in the direct sunlight to avoid premature aging of electronic parts.
4.Avoid using in places with flying dust or dirty environment (dust is easy to cause equipment failure
5.Do not place the equipment in an excessively cold or overheated environment,which may cause the equipment to fail to operate normally.
6.It is recommended that the ambient temperature of the equipment used should not exceed-10°C-40°C,Which is relatively moderate 10%-95%.
7.Please do not put any objects into the equipment to avoid short circuit or circuit damage.Please do not spill any liquid on the product.
8. Avoid friction and collision between the machine and hard objects to avoid scratching,falling off or other hardware damage.
9. The product shall not be exposed to the sun,fire or similar overheating environment.
10. It is forbidden to disassemble,impact,squeeze or put the product into fire.If the battery has serious failure,Do nor continue to use.
11. This manual contains important information,please reserve it.

BT

1.Press and hold the speaker power on key to start the machine,and the voice prompt "BT mode' will flash at the same time.Connect the success blue light is always on.
2.Turn on the mobile phone BT and scan,search for the device,and then pair and connect,and you can hear it after connecting The device sends a successful connection tone.
3. After the microphone is turned on,it will automatically pair the speakers When the microphone is not paired,the blue light will flash,and the BT light will flash always bright.
Note:After the device is connected to the mobile phone once,BT Has a memory function,and it will automatically connect when the phone Is turned on,To disconnect,disconnect BT through the phone settings.If you listen to music only,you can turn the microphone Volume adjust to the minimum.

Sing K audio &microphone features

Intelligent anti squealing-
Sing loudly without howling within 10cm.

High radio sensitivity-
It is easy to sing with a 5-10cm microphonele. microphone is loud and has good sound quality.

Low latency-
he delay is less than 40ms.

AI functions-
5 kindsound effects;One click to cancel the orginal sound;Flexible adiustment of accompaniment reverberation and microphone volume.

Note:The company's products are constantly innovative and subiect to change without notice

Speaker

Bluetooth　　version:5.3
Horn　　diameter:110mm
Horn　　power:10W
Working　　voltage:3.7V
Frequency　　range:150Hz-20kHz
Reverberation:echo　sound　effect　reverberation
Power　　adapter:DC5Vs1A
(common　with　mobile　phone　charger)
Charging　　duration:3.5-4　hours

Microphone

Pickup:back　pole　condenser　microphone
Working　　voltage:3.7V
Frequency　　range:20Hz-20kHz
Power　adapter:DC5Vs　1A
(common　with　mobile　phone　charger)
Charging　duration:about　2.5　hours

Information

Product　name: soundbox with microphone
Product　　model:X5

Note:The company's products are constantly innovative and subiect to change without notice

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.