Product Manual

What's in the box

charging cable

Product Manual

Troubleshooting Guide Card

After-sales Warranty Card

POP DAZZLE
CD Player

Operation Guide

When the battery is low, it is divided into two stages:
Stage 1: For every 20% decrease in battery level, one bar of the battery icon decreases.
Stage 2: When the battery level decreases to 20%, the battery icon starts to flash.

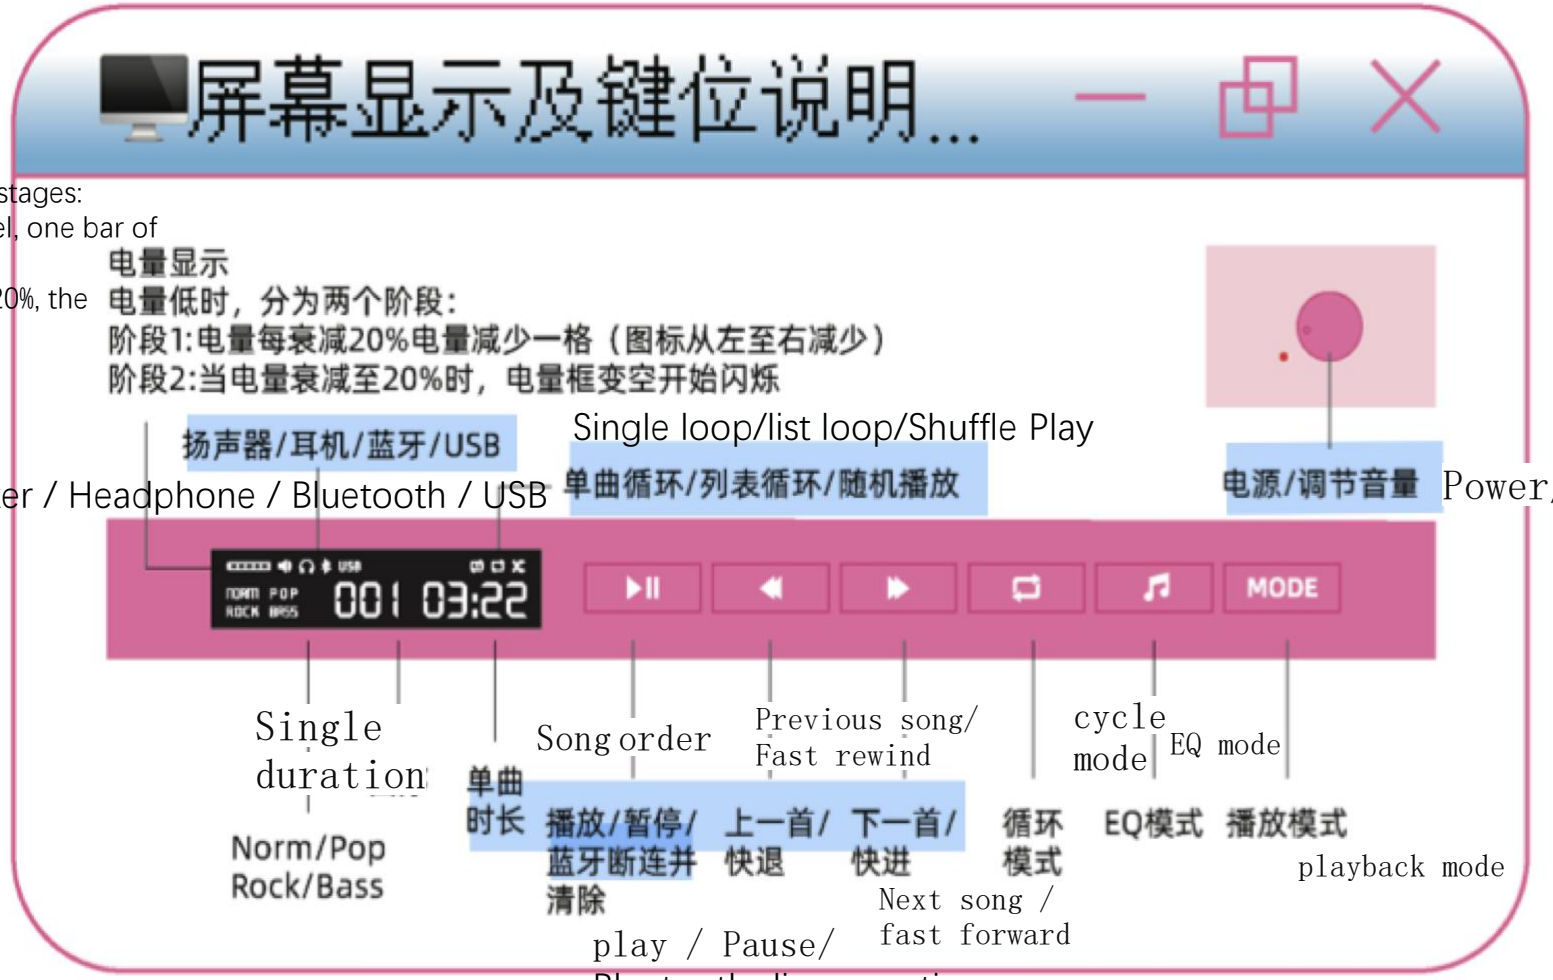

CD player all in one

Short press Switch Norm /pop/ rock/bass EQ modes

screen display Norm/Pop/ Rock/Bass

短按 切换标准/流行/摇滚/重低音的EQ模式
屏幕显示 Norm/Pop Rock/Bass

移动唱臂 启动播放
移回唱臂 停止播放（清除记忆）

Move the tonearm start playback
Move the tonearm back to stop playback (clear memory)

旋转 开/关机/调节音量

Spin Turn on / off volume adjustmen

蓝牙接收/发射模式下
搜索蓝牙时
指示灯为蓝色闪烁
蓝牙连接成功时
指示灯为蓝色常亮
充电时
指示灯为红色常亮
充满电时红灯熄灭

In Bluetooth receiving/transmitting mode
When searching for Bluetooth
The indicator light flashes blue
When Bluetooth connection is successful
The indicator light is solid blue
While charging
The indicator light is red and always on
the red light goes out when fully charged

Short press stop/play
Long press Disconnect Bluetooth and clear memory

短按 播放/暂停
长按 断开蓝牙并清除记忆

短按 切换CD/USB/蓝牙接收
长按 CD/USB模式下启动和关闭蓝牙发射

Short press Switch CD/USB/Bluetooth reception
Long press in CD/USB mode Turn Bluetooth transmitter on and off

Short press previous song
Long press In CD/USB mode-fast rewind

短按 上一首
长按 CD/USB模式下-快退

Short press next song
Long press CD/USB mode-fast forward

短按 下一首
长按 CD/USB模式下-快进

短按 循环模式切换
单曲/专辑/随机播放

Short press Cycle mode switching
Single/Album/Shuffle

Functional performance

play CD

Turn the knob to turn on

spin button

Move the tonearm to start the player

Move the tonearm back to stop playback

蓝牙音箱... Bluetooth Speaker

a.连接配对 a. connection pairing

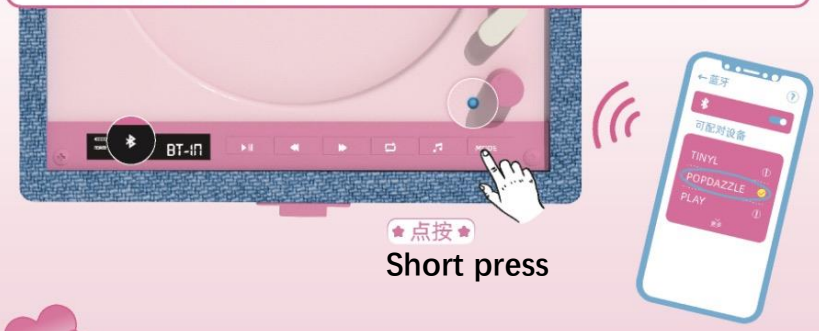

1. 点按MODE按键切换至BT-IN模式。蓝牙ICON亮起，指示灯亮蓝灯闪烁
2. 手机搜索并连接蓝牙信号“POPDAZZLE”
3. 连接成功后，指示灯蓝色常亮

1. Click the MODE button to switch to BT-IN mode.
   The Bluetooth ICON lights up and the indicator light flashes blue.
2. The mobile phone searches for and connects to the Bluetooth signal "POPDAZZLE"
3. After the connection is successful, the indicator light is blue.

b.断开连接 b. To disconnect Bluetooth

1. 长按MODE按键断开当前蓝牙连接，再次长按则恢复当前蓝牙连接
2. 长按播放按键即可断开当前蓝牙连接并清除当前记忆

1. Long press the MODE button to disconnect the current Bluetooth connection, and long press again to restore the current Bluetooth connection.
2. Long press the play button to disconnect the current Bluetooth connection and clear the current memory。

蓝牙发射... Bluetooth transmit..

注意：此功能只可在CD播放或USB播放模式时开启

Note: This function can only be turned on in CD playback or USB playback mode

a.连接配对 a. connection pairing

1. 播放CD或USB时，长按MODE按键即开启蓝牙发射模式
蓝牙发射ICON闪烁，同时指示灯蓝色闪烁
2. 确认外接蓝牙设备处于等待连接状态
3. 连接成功后，蓝牙发射ICON常亮，同时指示灯蓝色常亮

1. When playing CD or USB, long press the MODE button to turn on the Bluetooth transmission mode, the Bluetooth transmission ICON flashes, and the indicator light flashes blue.
2. Confirm that the external Bluetooth device is waiting for connection.
3. After the connection is successful, the Bluetooth transmit ICON is always on, and the indicator light is always blue.

b.断开连接 b. To disconnect Bluetooth

1. 长按MODE按键断开当前蓝牙连接，再次长按则恢复当前蓝牙连接
2. 长按播放按键即可断开当前蓝牙连接并清除记忆

1. Long press the MODE button to disconnect the current Bluetooth connection, and long press again to restore the current Bluetooth connection.
2. Long press the play button to disconnect the current Bluetooth connection and clear the current memory。

支持USB...
Support USB
USB
接入
access point
128GB
1 接入你的USB存储器
Connect your USB memory
2 点按MODE按键切换至
USB播放模式，USB ICON亮起
Click the MODE button to switch to USB playback mode, and the USB ICON lights up.
Short press
点按
3 等待自动播放
Wait for autoplay

Maintenance and safety matters

1. Only use discs labeled with the CD logo.
2. Do not affix stickers or adhesive tape to the CD disc.
3. Do not expose the CD to direct sunlight or near heat sources.
4. The CD player must not be exposed to water or sunlight.
5. In case any foreign objects or liquid enter the CD player, immediately turn off the power and contact someone experienced in electrical repairs for assistance.
6. Do not stack heavy objects on the CD player to avoid damage.
7. Do not place it near strong magnetic fields or power plants.
8. Avoid contact with chemicals such as benzene or diluents.
9. Dispose of packaging, batteries, and old electronic products properly by sorting them.
10. Do not expose batteries to strong light or heat sources.

PART6

产品规格

Product specification coefficient

可播放格式	Playable formats	CD-DA/MP3（CDR-RW）	
CD-R/RW播放格式		MP3（32-320k bps）	CD-R/RW playback format
支持音频格式	Support audio formats	CD | MP3 | DSD | WMA	
蓝牙输出格式	Bluetooth output format	支持SBC与AAC	Support SBC and AAC
主机音频输出		3.5mm立体声音频输出插孔/蓝牙5.3	Host audio output 3.5mm stereo audio output jack/Bluetooth 5.3
功率	power	5W，待机功率0.5W	5W, standby power 0.5W
电源	power supply	DC 5V/2A TYPE-C接口/内置电池2000mAh	DC 5V/2A TYPE-C interface/built-in battery 2000mAh
尺寸	Dimensions	182mm*186mm*102mm	
净重	Net weight	1020g	
配件	Accessories	TYPE-C电源线*1、CD播放器*1	TYPE-C power cord*1, CD player*1

*本产品不支持使用干电池

TIPS!

This product does not support the use of dry batteries

FCC Compliance Statement:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction