■故障

初期故障需保留換新，請通過電子郵件聯繫以下客服中心
(依據資深確認與客服支援，回覆可能需要幾個工作天的時間)

km5 支援中心 : customer_support@km5.co.jp

■無償保証範囲

以下情況不在保證換新範圍內：
・如果您不能提交保證卡和收據給的產品。
・保證卡中未記載店鋪收購日期、或者無法出示確認購買日期的保修卡（發票、收據、發貨單等）。
・保證書被認定為偽造、篡改等。
・因本公司或本公司指定機構以外的第三方或客戶的修改、分解、修理造成產品故障。
・當產品超溫度、濕度、振動等超出預設工常規範的環境範圍而發生故障。
・購買後在運輸過程中因撞擊、跌落等造成產品損壞。
・因地震、災害、雷擊、風災、水災、氣敵自然災害、污染、電壓異常等外部因素導致產品故障。
・其他被認定為不允許免費更換的原因。

■CP1/2 Q&A

https://km5.co.jp/pages/q-a

■km5 Inc.

https://www.km5.co.jp/

■如何插入歌詞卡

1. 按開蓋按鈕打開蓋子



* 蓋子會停在 45°

2. 將托盤從蓋子背面向旁滑動並取出



* 將手指插入托盤中央的圓孔即可輕鬆滑動。

3. 托盤可容納最大 12cmx12cmx1.8mm 的 CD 封面

* 放置大於 12 cm x 12 cm x 1.8 mm 的物體可能會導致損壞。

4. 將 CD 封面放在蓋子的那一側

* 與產明面口對齊

5. 從蓋子背面插入托盤



* 將封面放在邊緣上

6. 將托盤向右滑動即可安裝



* 請移動直到托盤卡緊

■故障の場合

修理が必要な場合は下記サポートセンターにメールでご連絡ください。
(お返事には土曜日曜祭日以外に数日かかる場合がございます)

km5 サポートセンター : customer_support@km5.co.jp

■保証範囲

以下の場合には、保証対象外となります。

・故障したお製品をご提出いただけない場合。
・購入日が確認できるレシート、納品書などをご提示いただけない場合。
・レシート、納品書などの偽造・改変などが認められた場合。
・弊社及び弊社が指定する機関以外の第三者、ならびにお客様による改造、分解、修理により故障した場合。
・通常一般家庭内で想定される使用環境の範囲を超える温度、湿度、振動等により故障した場合。
・本製品をご購入いただいた後の輸送中に発生した衝撃、落下等により故障した場合。
・地震、災害、落雷、風水害、その他の天変地異、公害、異常電圧などの外的要因により故障した場合。
・その他、無償修理または交換が認められない事由が発見された場合。

■CP1/2 Q&A

https://km5.co.jp/pages/q-a

■km5 Inc.

https://www.km5.co.jp/

■歌詞カードの入れ方

1. オープンボタンを押し蓋を開ける

※蓋は途中で止まります

2. 蓋の裏からトレイを無にスライドさせて外す



※トレイ中心の丸穴に指を入れると簡単にスライドできます

3. トレイには 12cmx12cmx1.8mm までの歌詞カードが入ります



※12cmx12cmx2mm 以上のモノをふれと故障の原因となります

4. 歌詞カードを面倒に置く

※透明窓に位置を合わせる

5. 蓋の裏からトレイを差し込む



※凹みを左上に

※トレイを左側に寄せて入れる

6. トレイを右にスライドさせて取り付ける

※カチッと音がなるまで入れる

■km5 Inc. Support Center

If you cannot replace, please contact us by email.
(It may take several days for a reply.)

mail:customer_support@km5.co.jp

■Scope of Warranty

The following cases are not covered by the one year warranty.
・If you cannot submit the defective product.
・If you are unable to present your receipt.
・If the receipt is forged.
・If the user modifies/disassembles/repairs, etc.
・If the product malfunctions due to temperature/humidity/vibration exceeding the normal environment.
・Malfunctions due to drops or shocks that occur after purchase.
・Failures caused by external factors such as disasters,(earthquakes/lightning/flood damage/abnormal voltage/etc.)
・If any other non-warranty reason is discovered.

■CP1/2 Q&A

https://km5.co.jp/pages/q-a

■km5 Inc.

https://www.km5.co.jp/

The FCC requires a warning:
This device complies with Part 15 ofthe FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference thatmay cause undesired operation.

■How to insert the card

1.Slide the open button to open the lid



*The lid can only be opened halfway.

2. Slide and remove the tray



*The tray has a hole that you insert your finger into.

3.The tray holds 12cmx12cmx1.8mm cards.



4. Place the card on the lid

*Align the card with the transparent window

5. Place the tray



*Make sure the indentation of the tray is at the top left.

6. Slide the tray to the right to install it

*Insert until it clicks.

km5

Cp1
Instant Disk Audio

Quick Manual

Please be sure to read the instructions for operating the CP1 CD player
with Bluetooth and precautions for safe handling before use.

■Contents

CD player x1, Manual x1

■Specification

Product Name:	Instant Disk Audio CP1
Model Number:	CP1-003
Disk Format:	CD/CD-R/CD-RW/MP3
Disk Size:	12cm / 8cm
APS(Shockproof):	2M SDRAM
Connection:	Bluetooth®/ 3.5mm Stereo earphone jack
Compatible Standards:	Bluetooth®5.1(Mode AC6956C)
Reachable Range:	About 10mm
Lithium Ion Battery:	1800mA.h
Charging Method:	USB Type-C
Charging Time:	About 3 hours
Play Time:	About 7 hours
Operating Temperature:	0°C~40°
Storage Temperature:	-5°C~40°
Size:	140mm x 160mm x 26mm
Weight:	280g

■Notes on Bluetooth®

1. This product is a wireless equipment that uses 2.400-2.4835GHz.
   Bandwidth of mobile object identification device can be avoided.
   The radio wave system uses the GFSK system, and the interference distance is approximately 10m.
2. Before using this product, please check whether other wireless stations (*1) are operating nearby.
   If radio wave interference occurs between this product and another wireless station (*1),
   please change the location of use or stop using this product.

*1: In addition to industrial, scientific, and medical equipment that uses the same 2.4GHz frequency as this product,
other similar radio stations, school radio stations for mobile object identification that require a license to be used in factory production lines,
etc, This refers to specified lowpower radio stations that do not require radio communication, and amateur radio stations.

⚠ Warning

1. Do not use it in equipment where malfunction may have a huge impact. In rare cases, the product may be affected
   by external radio waves of the same frequency or mobile phone radio waves, resulting in malfunction, reduced operation, or non-operation.
2. Do not use this product in places where the use of radio waves is prohibited, such as hospitals.
   The radio waves from this product may affect electronic devices and medical devices (e.g.,pacemakers).
3. Please note that we will not be held responsible for any accidents or social damage caused by the failure of this product.

■Part Name

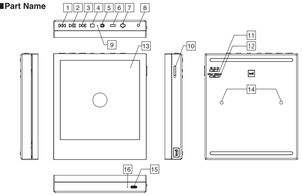

1 Long press for fast reverse / Short press Last song/Long press for fast forward
2 Play/Pause/Long press to power on
3 Short press Next song/Long press for fast forward
4 Stop/Long press to power off
5 Bluetooth
6 Volume down
7 Volume up
8 3.5mm Stereo earphone jack
9 Bluetooth lamp
10 Open button
11 Mode switch <Loop 1song/play all songs/loop play all songs>
12 Hold switch
13 Card tray (120mmx120mmx2mm)
14 Screw hole
15 USB Type-C
16 Charging lamp

■Bluetooth® connection method

5 Turn on the product and press and hold the Bluetooth button.
The blue LED lamp will flash and the device will be in standby mode.
Check whether the Bluetooth connected device is paired with another device and wait
for connection near this product. Once the connection is complete, the blue LED lamp will turn on.

取扱説明書

Bluetooth®機能付き CD プレーヤー CP1（以下本製品）の操作方法と安全にお取り扱い頂くための
注意事項を記載していますのでご使用前に必ずお読みください。

■同梱物

CP1本体 1個、取扱説明書 1 部

■製品仕様

製品名：	Instant Disk Audio CP1
型番：	CP1-003
ディスクフォーマット：	CD/CD-R/CD-RW/MP3
ディスクサイズ：	12cm / 8cm
ASP(耐衝撃)：	2M SDRAM
接続方法：	Bluetooth® 無線方式 /3.5mm ステレオ イヤフォンジャック
適合規格：	Bluetooth®5.1(Mode AC6956C)
到達レンジ：	約 10mm~20m
リチュムイオンバッテリー：	1800mA.h
充電方法：	USB Type-C
充電時間：	約 3 時間
再生時間：	約 7 時間
動作温度：	0°C~40°（ただし結露なきこと）
保存温度：	-5°C~40°（ただし結露なきこと）
外形寸法：	140mmX160mmX26mm
重量：	280g

■Bluetooth® 無線についてのご注意

1. 本製品は 2.400-2.4835GHz を使用する無線設備です。移動体識別装置の帯域が回避可能です。
   電波方式は GFSK 方式を採用し、有干渉距離は約 10m です。
   2.4GHz 帯は、医療機器や IEEE802.11b/11g/11n 規格の無線 LAN 機器などでも使用されています。
2. 本製品を使用する前に、近くで他の無線局（※1）が運営されていないか確認してください。
   万一、本製品と他の無線局（※1）との間に電波干渉が発生した場合は、使用する場所を変更するか、
   または本製品の使用を停止してください。

※1: 本製品と同じ 2.4GHz 帯を使用する産業・科学・医療機器のほか、他の同種無線局、工場の生産ラインなどで使用される免許を要する
移動体識別用の構内無線局、免許を要しない特定小電力無線局、アマチュア無線局をさします。

⚠ 警告

1. 誤作動により重大な影響を及ぼす恐れのある機器では使用しないでください。 稀に外部から同じ周波数の電波や携帯
   電話の電波の影響を受け、誤作動する、動作が止まる、または動作しなくなることがあります。
2. 病院など、電波使用が禁止されている場所では本製品を使用しないでください。本製品の電波で電子機器や医療機器
   （例えばペースメーカー）などに影響を及ぼす恐れがあります。
3. 本製品の故障などにより事故や社会的な損害などが生じても、弊社ではいかなる責任も負い兼ねますので、ご了承ください。

■各部分の名称

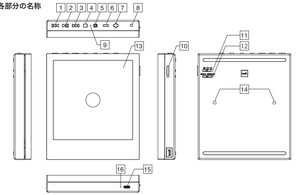

1 ボリューム ボタン
2 ブルートゥース ランプ
3 オープンボタン
4 モードスイッチ <1 ホループ再生 / 全曲再生 / 全曲ループ再生>
5 ホールドスイッチ
6 歌詞カードトレイ (内容量 120mmx120mmx2mm まで)
7 ネジ穴 (M4 ネジ対応)
8 USB-C 端子
9 充電ランプ
10 ボリューム ボタン
11 ブルートゥース ランプ
12 オープンボタン
13 モードスイッチ <1 ホループ再生 / 全曲再生 / 全曲ループ再生>
14 ホールドスイッチ
15 歌詞カードトレイ (内容量 120mmx120mmx2mm まで)
16 ネジ穴 (M4 ネジ対応)

■Bluetooth® 機器の接続方法

5 本製品の電源がオンになっている状態でブルートゥース ボタンを長押しして Bluetooth をオンにします。
すると青いランプが点滅し、ブルートゥース接続機器をペアリングする準備が整います。
ブルートゥース接続機器が他の機器とペアリングされていないかを確認し、本製品の近くで接続を待ちます。
接続が完了したら青いランプが点灯します。

使用説明書

在使用附屬浮動動的 CD 播放器 CP1（以下簡稱「本產品」）之前，請務必閱讀它的操作方法和安全操作注意事項。

■附件

1 個主機，1 本使用說明書

■產品規格

產品名稱：	CP1 藍牙錄音器
型號：	CP1-003
光碟格式：	CD/CD-R/CD-RW/MP3
光碟尺寸：	12CM or 8CM
ASP（抗衝擊）：	2M SDRAM
連接方式：	Bluetooth® 5.1/3.5mm 立體聲耳機插孔
適合規格：	Bluetooth® 5.1(模式 AC6956C)
機械移動範圍：	約 10m~~20m
容電池：	1800mA.h
充電方式：	USB Type-C
充電時間：	約 3 小時
播放時間：	約 7 小時
操作溫度：	0°度 40°（無冷凝）
保存溫度：	+5°度 60°（無冷凝）
尺寸：	140mmX160mmX26mm
重量：	280g

■ Bluetooth 注意事項

1. 本產品是使用之 2.400-2.4835GHz 的無線電設備。可以避開移動識別設備的區域。
   無線電系統採用 GFSK 系統，干擾距離約 10m。
   該機器操作於IEEE802.11b/11g/11n 無線 LAN 設備也使用 2.4GHz 頻段。
2. 使用本產品前，請檢查附近是否有其他無線電台（*1）在運行。
   萬一本產品與其他無線電台（*1）之間發生無線電波干擾，請更改使用地點或停止使用本產品。

*1：除了使用與本產品相同的 2.4 GHz 頻段的工業、科學和醫療設備外，其他同類型無線電台，
用於移動識別的學校無線電台需要獲得許可才能在工廠生產線中使用，等 每不需要無線電台的指定小功率無線電台和業餘無線電台。

⚠ 警告

1. 請在對於因故障可能產生巨大影響的設備，在機少數情況下，它可能會受到相同頻率的外部無線電波或手機無線電波的影響，
   從而可能導致其發生故障，變慢或停止工作。
2. 請勿在醫院等禁止使用無線電波的場所使用本產品。 本產品的無線電波可能會影響電子設備和醫療設備（例如心臟起博器）。
3. 請注意，對於因本產品故障造成的任何事故或社會損失，本公司概不負責。

取得電線證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。
應避免影響附近雷達系統之操作。高增益指向性天線只得應用於固定式點對點系統。

■ 各部分名稱

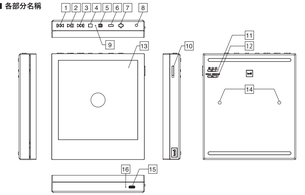

1 上一首曲目按鈕
2 播放 / 暫停按鈕（開機）
3 按住 下一曲目按鈕
4 停止按鈕（關機）
5 Bluetooth 按鈕
6 降音量按鈕
7 提升音量按鈕
8 3.5mm 立體聲插孔
9 Bluetooth LED
10 開蓋按鈕
11 重放模式切換
12 保持鎖定開關
13 CD 封面托盤托（最大尺寸 120mmx120mmx2mm）
14 螺絲孔（專用 M4 螺絲）
15 USB-C 端子
16 充電 LED

■Bluetooth® 連接方式

5 在本產品的電源開啟的情況下，按住 Bluetooth 按鈕以開啟 Bluetooth 。
藍燈閃爍，表示 Bluetooth 連接設備準備好配對。
檢查連接設備是否與其他設備配對，並在本產品附近等待連接。
連接完成後，藍燈長亮。

限用物質及其化學符號 Restricted substances and their chmical symbols						
單元 Unit	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 Cr6+	多溴聯苯	多溴二苯醚
標準含量	<1000ppm	<100ppm	<1000ppm	<1000ppm	<1000ppm	<1000ppm
電路板	-	O	O	O	O	O
外殼	O	O	O	O	O	O
金屬結構件	-	O	O	O	O	O
線材	-	O	O	O	O	O

備註1：(O) 是指該項限用物質之百分比含量未超出百分比含量基準值。
備註2：(-) 是指該項限用物質為排除專案。

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.