折叠后成品尺寸：85X120mm
材质：200G铜板纸单黑 两面印 五折页

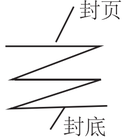

折法

封页

磁虎

Wireless keyboard & mouse set
无线键鼠输入设备

Instruction Manual
使用说明书

喵萌

Instruction Manual

Thank you for selecting Geezer products, in order to let you further understand the use of this wireless keyboard and mouse set, please read this manual carefully before using it .

1.Package Contents

Wireless Keyboard 1PCS
Wireless Mouse.....1PCS
Nano Receiver.....1PCS
Instruction Manual 1PCS

2.Product installing instructions

1. Remove the USB receiver from the bottom of the mouse and plug it into the USB port of your computer.
2. Open the battery cover at the bottom of the mouse, and put an AA (No.5) battery into the battery bin (note that the positive and negative polarity of the battery must be correct). The LED light at the bottom of the mouse will light up once and then turn off, and cover the battery cover.
3. Open the battery cover at the bottom of the keyboard, put two AAA(No.7) battery into the battery bin (note that the positive and negative polarity of the battery must be correct), and close the battery cover.
4. The USB receiver can also be loaded into the receiver slot at the bottom of the mouse when carried out or not in use.

3.product description

wireless keyboard

Multimedia function key

Esc	Multimedia lock key	F4	Mute	F8	Search
F1	Previous Track	F5	Volume down	F9	Email
F2	Play/Pause	F6	Volume up	F10	favorites
F3	Next Track	F7	Homepage	F11	save
				F12	Set up

Press FN +ESC two keys at the same time, the default is to switch between multimedia function and F1 to F12 shortcut keys.

For example, press F7 to bring up the browser home page. Press FN + Esc at the same time The shortcut function of F7 will pop up.)

Indicator light
1 Keypad lock A Caps Lock indicator LED
Low battery indicator / 2.4G connection indicator LED

Wireless Mouse

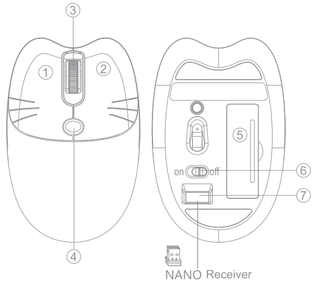

① left button ② right button ③ Wheel button ④ DPI key
⑤ battery slot ⑥ on/offToggle switch ⑦ Receiver slot

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the device and receiver.
--Connect the device into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipmentv

质保卡

保修期限：
购买日期：
购买地点：
产品序列号：
盖 章

产品维修记录

日 期	维修情况

备注：请清楚填写各条目，请勿擅自涂改，并妥善保管好本保修卡，以维护您的合法权益。如需服务或有任何疑问，请与我们联系。

封底

合格证

深圳市雷神科技信息有限公司，
品牌：磁虎 公司
地址：深圳市宝安区沙井镇后亭大埔路13号3楼

使用说明书

感谢您的支持，为了使您更进一步的了解此无线键鼠套装的使用，请您在使用前认真阅读此说明书！

1.包装内容物

无线键盘.....1PCS
无线鼠标.....1PCS
接收器.....1PCS
使用说明书(含质保卡）.....1PCS

2.产品安装说明

1. 从鼠标底部取出USB接收器，插到电脑的USB端口。
2. 打开鼠标底部电池盖，将一节AA（5号）电池装入电池仓中（注意电池的正负极性必须正确）鼠标底部LED灯将会点亮一次后熄灭，盖上电池盖。
3. 打开键盘底部电池盖，将两节AAA(7号) 电池装入电池仓中（注意电池的正负极性必须正确），盖上电池盖。
4. 外出携带及不使用时, 也可以将USB接收器装入鼠标底部的接收器槽内。

3.产品描述

无线键盘

多媒体功能键

Esc	多媒体锁定键	F4	静音	F8	搜索
F1	上一曲	F5	音量减	F9	邮箱
F2	播放/暂停	F6	音量加	F10	收藏夹
F3	下一曲	F7	主页	F11	保存
				F12	设置

Fn+(Esc) 两键同时按，默认为多媒体功能与F1到F12快捷键之间的切换，比如(按F7键，默认弹出的是浏览器主页，此时同时按 Fn+(Esc) 则弹出F7的快捷功能)

右上角指示灯
A 大小写切换指示灯
低电量/2.4G连接指示灯

无线鼠标

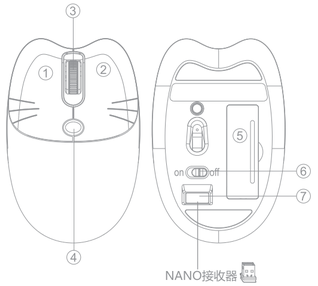

①左键 ②右键 ③滚轮键 ④DPI键
⑤电池仓 ⑥on/off拨动开关 ⑦接收器卡槽

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the device and receiver.
--Connect the device into an outlet on a circuit different from that to which the receiver is connected.
--Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipmentv

产品中有害物质含量

部件名称	有害物质						
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板组件*	×	○	○	○	○	○
外壳及附件	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○：表示该有害物质在该部件所用材料中的含量均在GB/T 26572规定的限量要求以下。
×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
表中标记"×"的部件，根据全球技术发展水平暂时无法找到有害物质的替代。

印刷电路板组件*：包括印刷电路板及其零部件，电子元器件等

根据产品型号不同，您所购买的产品可能不会含有以上所有部件

在中华人民共和国境内销售的电子电气产品必须标识此标志，标志内的数字代表在正常的使用状态下的产品的环保使用期限。

合格证
QC PASS

封底