Smart Toilet

Product User Manual

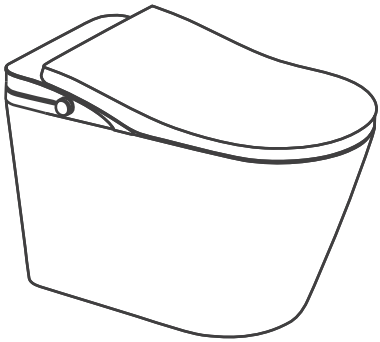

Product Name: Intelligent Toilet

Model: K1

Thank you for purchasing our product . Please read this manual before installation and use to ensure that your product will function at peak performance .
Read this manual thoroughly and store in a safe place for future references .

IMPORTANT SAFEGUARDS

When using electrical products ,especially when children are present ,
basic safety precautions should always be followed , including the following

READ ALL INSTRUCTIONS BEFORE USING

DANGER – To reduce the risk of electrocution

1.Do not use while bathing
2.Do not place or store product where it can fall or be pulled into a tub or sink
3.Do not place in or drop into water or other liquid
4.Do not reach for a product that has fallen into water . Unplug immediately

WARNING– To reduce the risk of burns , electrocution ,fire or injury to persons

1.Close supervision is necessary when this product is used by ,on ,or near children or invalids
2.Use this product only for its intended use as described in this manual . Do not use attachments not recommended by the manufacturer.
3.Never operate this product if it has a damaged cord or plug , if it is not working properly , if it has been dropped or damaged , or dropped into water . Return the product to a service center for examination and repair .
4.Keep the cord away from heated surfaces
5.Never block the air openings of the product or place it on a soft surface , such as a bed or couch ,where the air openings may be blocked. Keep the air openings free of lint, hair , and the like.
6.Never use while sleeping or drowsy
7.Never drop or insert any object into any opening or hose
8.Do not use outdoors or operate where aerosol(spray)products are being used or where oxygen is being administered
9.Connect this product to a properly grounded outlet only . See grounding Instructions
10.Do not use while bathing
11.Risk of Electric shock. Connect only to a grounding type receptacle protected by a ground–fault circuit–interrupter(GFCI)
12.CAUTION– Risk of electric shock , do not remove cover (or back).Refer servicing to qualified service personnel .

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This product should be grounded . In the event of an electrical short circuit , grounding reduces the risk of electric shock by providing an escape wire for the electric current . This product is equipped with a cord having a grounding wire with a grounding plug .
This plug must be plugged into an outlet that is properly installed and grounded .

DANGER–Improper use of the grounding plug can result in a risk of electric shock

If repair or replacement of the cord or plug is necessary ,do not connect the grounding wire to either flat blade terminal . The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.
Check with a qualified electrician or serviceman if the grounding instructions are not completely understood ,
or if in doubt as to whether the product is properly grounded .

The functions may vary from different part no

Category	Functions	
Convenience	Female Washing	●
	Hip Cleaning	●
	Massage Washing	●
	Moving Washing	●
	Self-cleaning nozzle	●
	One key stop	●
	Position Adjustment	●
	Water heated instantly	●
	Seat Induction	●
	Seat Heating	●
	Warm air drying	●
	Wind temperature adjustment	●
	Water temperature adjustment	●
	Water pressure adjustment	●
	Automatic flushing	●
	Flush during power failure	●
	Mute slow down	●
	Night light	●
	Leakage protection	●
	Energy saving	●
	Double filtration	●
	One key side knob	●
	Anti-fouling glaze	●
	Flame retardant material	●
Safety	12V safety voltage	●
	Remote control	●
	Anti bacterium seating	●
	Digital desplay screen	●
	Foot sensor flushing	●
	Decorated light	●
	Baby mode	●
	Foot sensor open seat	●
	Foot sensor open cover	●
	Auto open cover	●
	Baby seating	●

User Friendly design

New features to offer you an enjoyable experience

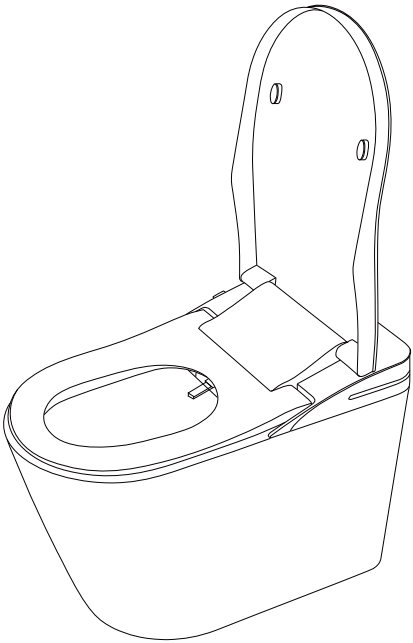

Contents

Before use

Parts information -------- 1
Overview ---------- 2
Rotated switch ---------- 1
Remote control -------- 2
Warnings and safety ----- 1
Warming ---------- 2
Attention ---------- 1

Functions

Installation ---------- 1
Before you install -------- 2
Installing your product ---- 1
Function explanations ---- 2
Maintenance ---------- 1
Surface cleaning -------- 2
Nozzle maintenance ----- 1

Troubleshootiong

Troubleshooting -------- 1
Power button ---------- 2
Wash functions -------- 1
Dryer ---------- 2
Heated seat ---------- 1
Remote control -------- 2
Toilet unit ---------- 1
Soft-closing feature ----- 1
Specifications ---------- 2

Smart Toilet
Part Information

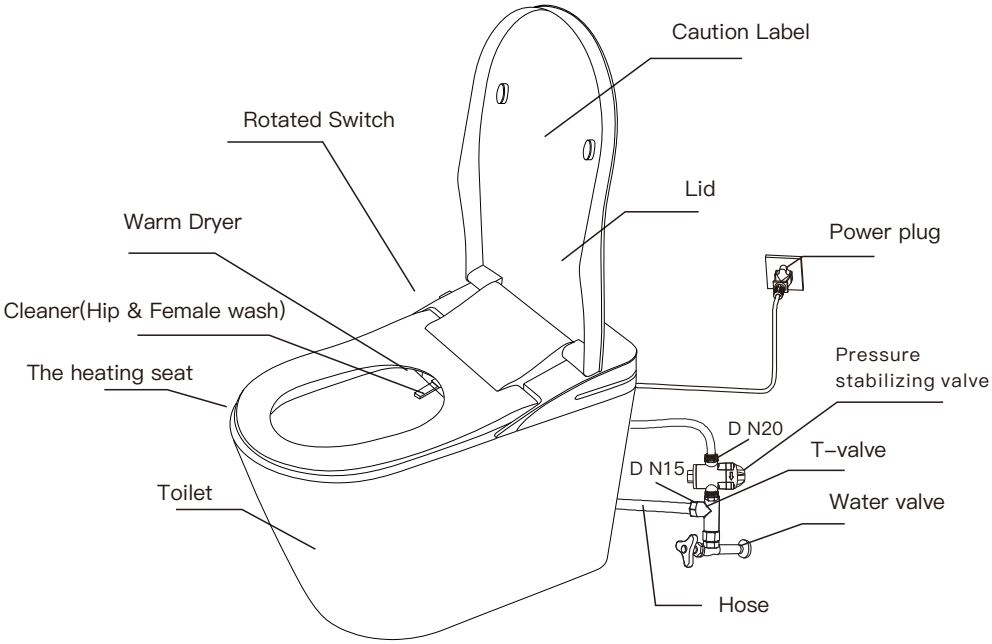

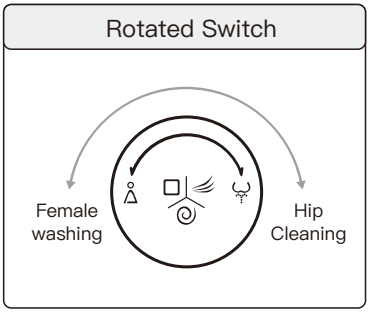

Remote control

FCC ID: 2BH90-MIJIC
This device complies with Part 15 of the FCC Rules. Operation is subjectto the following two conditions: (1) this device may not cause harmfulinterference, and (2) this device must accept any interference received,including interference that may cause undesired operation.

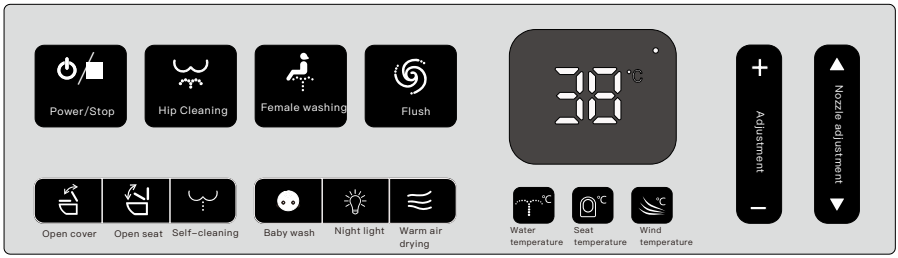

Power/Stop

You can stop the "Hip cleaning' "Female cleaning", "brying"and other operaation when operation

Hip Cleaning

Press this button when you are seated, the Hip wash cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

Female washing

Press this button when you are seated, the female cleaning, nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

Warm air drying

Press this button to start drying when you are seated. Warm air drying will stop automatically affer 3 minutes.

Adjustment

Press this button during the "hip" or. "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

Nozzle adjustment

It can increase or decrease the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

Flush

Press this button and will start flushing.

Open cover

Press this button, the seat cover will open automatically, and then press it again, the seat cover will close automatically.(For automatic open seat cover configuration)

Open seat

Press this button, the seat opens automatically, and press again to close the seat automatically. (For automatic open seat cover configuration)

Water temperature

4 degrees can adjust the water tempature , the tempature can be set as, one degree :
the enviroment tempature,
second degree : about 34°C,
Third degree : about 37°C,
Forth degree : about 40°C

Seat temperature

4 degrees can adjust the seat tempature the tempature can be set as,one degree :
the enviroment tempature,
second degree : about 34°C,
Third degree : about 37°C,
Forth degree : about 40°C.

Wind temperature

4 degrees can adjust the wind tempature the tempature can be set as , one degree:
the enviroment tempature,
second degree:about 35°C,
Third degree :about 45°C,
Forth degree : about 55°C.

Baby wash

After the baby is seated then press the baby wash button ,it will start the hip cleaning automaticly , and the washing pressure will be adjust to the lowest level automaticly ,it will change to mobile cleaning when press one more time , and auto close the baby washing when you press the " stop " button

Self-cleaning

Nozzle extended and water out for nozzle washing

Night light

The night light can be turned on or off in the power-on state.

Remote control pairing

Switch the knob to the hip cleaning for about 3 seconds ,when you hear a sound , press any button of the remote ,then can pair the remote to the toilet .

Warnings and Safety

Please read thoroughly

First of all, thank you for purchasing our product, To ensure proper and safe use of thisproduct, carefully read this section prior to any usage.
Afterwards, store this manual ina safe place for any needed future reference.
The hazards and warnings listed herein are important to our user's safety.
Significant consequences may result from failure to heed warnings.
The company will not be heldiable for any injuries to the user and damages to the product due to improper usageand/or failure to heed safety warnings.

Explanation of Terms and Symbols

Warning--Indicates possible injury resulting from improper usage due to negligence of this sign.
Attention--Indicates human injury or property loss that may result inimproper usage due to negligence of this sign.

⚠	Note： When used with the above "Warning" and "Attention" signs, indicates a strict request to follow noted precautions
🛇	Prohibits any individual from performing any action with this symbol
	Prohibits any individual from dismantling product
	Keep product away from any wet environments, including , but is not limited to, humid environments, close proximities to baths, showers or sinks
	Do not touch!
	Do not touch with a wet hand !
	Keep away from any extreme heat or fire
!	Operate only as instructed
	Pull out the power plug !
	Protective grounding

⚠ Warning

This product needs to be properly grounded
*Risk of electric shock
*If unsure , contact an electrician
of Electrical installation company

Do not place a lit cigarette along
with other burning abjuects into the unit.
*Risk of fire

Do not touch ,insert or pull out the
power plug with a wet hand .
*Risk of electric shock

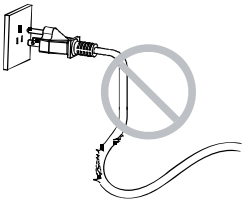

The power socket in use should be
whithin the specified range (AC120V).
*Risk of fire and/or electric shock

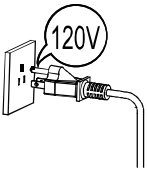

Do not pull , damage , bend , twist ,
stretch,roll,bundle ,clamp or squeeze
the power cable .Do not place
anything on power cable
*Risk of fire and /or electric shock

If the power cord is damaged , to
prevent any injuries or accidents , it
should be replaced by a professional .
*Risk of fire and /or electric shock

Do not use a power socket in poor
condition or a damaged power plug
*Risk of fire and /or electric shock

Do not use during thunderstorms
(pull out the power plug during storms).
Failure in doing so may lead to injury
or fault in the product

When the seat ring or the cover plate
is damaged , to avoid any harm,
be sure to pull off the power plug ,
close the water source and contact your local
distributor for replacement
*Risk of fire or electric shock

Periodically unplug the power plug
and wipe off any dust from the
power plug with a clean, dry cloth.
*Fire risk

Any person with a disability ,
the elderly , and children ,
should be using this product with
the supervision of another individual
Be advised that sitting on the heated seat for
an extended amount of time may result in burns

This product is not a toy ,Advise
children not to play with product.
*Risk of injury

Do not dismantle , repair or alter
this product on your own .Call in a
professional , or contact Dyconn
Faucet for further advice .
*Risk of fire , eletric shock, and/or other
accident that may lead to injury.

⚠ Warning

For cleaning or maintenance of plastic parts , do not use any harsh cleaning agents .(These include ,but are not limited to products such as :concentrated sulfuric acid , concentrated nitric acid , glacial acetic acid,carbon tetrachloride, chloroform,acetone ,butanone, benzene , methylbenzene,phenol , methylphenol, dimethylformamide,methyl ether, soybean oil, acetate, 40% nitric acid ,thick salt acid ,95% alcohol, gasoline, kerosene or brake oil, etc.
*Risk of damaging parts that can lead to accidents and injuries

Do not use polluted water or water meant for industrial .
*Risk of urocystitis or dermatitis
*Untreated water may also cause corrode inner workings of unit and may cause electrical shock or a fire.

Do not apply any force to the unit's seat and lid .Do not stand on the lid or open or close the lid and seat forcefully .
*This may result in product damage and/or user injury .

Do not add water or detergent into the unit or on to the wireless remote. Do not soak the product with water or cleaner.

※Risk of fire and/or electric shock.

Do not place your hand or any other object into the dryer trap, and do not cover the dryer and dryer trap during product use
*Risk of fire , electric shock , and /or other accident that may lead to user injury

Do not install product in a humid environment or a soak room .
Do not spray or soak this product with any form of liquid to prevent any damage to the product.
*Risk of fire and/or electric shock .

Do not spray urine at the dryer tarp.
*Risk of electric shock

Read the following for proper battery usage
–Properly install the battery according to its correct polarity
–Remove the battery during long periods without use
–Replace the battery before it reaches the end of its usage . Failure to do so may result in interrupted control signals
–Cover the battery with tape before disposal
*This will prevent battery fluid leaks that may cause fire and/or other damages.

Warning

Place the battery out of children and infant reach
*If battery is swallowed , contact a doctor immediately
If battery fluid leaks onto user , quickly rinse off area using water
If battery fluid gets into eyes , don not rub your eyes .Qucikly rinse it with water and consult a doctor immediately
*May result in vision impairement or blindness

When the battery is in use ,do not do the following operations
Do not hold or store with metal objects (such as a necklace or a watch)
Do not mix new and old batteries
Do not pull battery apart battery or throw it into water and/or fire .Battery fluids may cause a fire

Attention

Do not use the heated seat or warm dryer temperature for an extended amount of time.
*Extended use may result in burns

While using this product, make sure that the skin is in contact with the seat sensor area. Otherwise , product may not operate correctly .
Children and smaller individuals may have trouble staying in contact with sensor area.

Do not spray urine in the direction of the bidet nozzle.
*Doing so may result in blockage to the bidet nozzles and cleaning area.

Do not use your old hose component.
Use the one provided with your product .
Anything else connected to the older hose may need to be replaced.
*Risk of water leakage and /or property loss /damage.

In case of sudden power failure , remove the power plug and close the angle valve to prevent water leakage
*Risk of water leakage and/or property loss /damage.

Avoid direct sunlight or heat.
*Risk of product discoloration.

Do not supply electricity with an external switch. Le: connecting the universal part to a timer switch .
*Run the risk of issues caused by improperly resetting the thermal breaker .

When the filter is being replaced, be sure to close the water supply angle valve. When the filter is being installed, be sure to fasten it with force.
*Risk of water leak

Pull out the power plug when the product is in disuse for and extended amount of time .Make sure to shut off the water and remove the water inside the product.
*Risk of fire, leaks ,and product damage .

When storing or transporting in cold climate, make sure to remove all water from the unit. Product may crack and other damages may occur due to freezing water.
*Risk of fire , leaks,and product damage .

Intelligent Toilet Installation

Tools required for installation

Drill
(Dia. 0.24in)

Silicone gun

Teflon tape

Knife

Marking pen

0.91 - 0.98 in
(Spanner model varies for different pipes)


screw driver

Measuring tape

Measuring cup

Item list (confirm that all below items are inside the box)

Intelligent toilet(1 set)	Remote controller set(1 set)	 Sealing Flange Mounting accessory kit(2 pcs)
 Installation Book & User Manual	Wax Ring(1 pcs)	 Mounting Template

Please confirm all the aforementioned items are inside the package.
If there are any omissions ,please contact our customer servise .

The following are to be purchased by consumers themselves

9Volt 1.5Volt Two AAA Battery	 T-valve(1 pc)

Before you install

Water pressure check , dimensional drawing

Confirmation of water pressure

The minimum dynamic operating water pressure is 35 psi ,
and the maximum static water pressure is 108 psi.

Determination method for minimum water flow

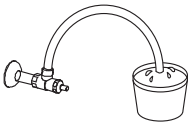

(Tools:stopwatch ,
measuring cup.)

Open the angle valve for water supply .
Ensuring a flow of water at least 10.57 GPF/min.

If the above conditions cannot be met ,
the best flushing effect cannot be achieved
and an additional booster pump is required
to increase the pressure

Confirm dimensions of product with installation space

Unit:mm

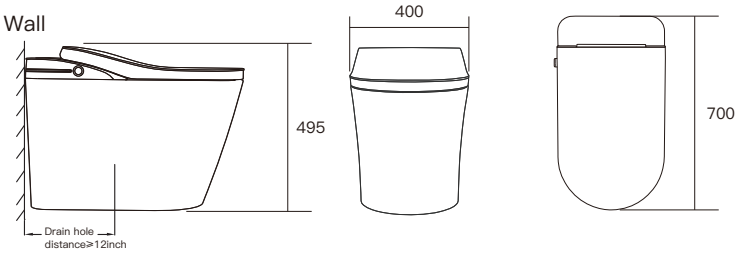

Side profile

Front view

Top view

Installing your product

Install your unit using the following steps

1 Open the box right side up

Remove the accessories frist , then remove the unit from the top , as shown in the diagrams below.

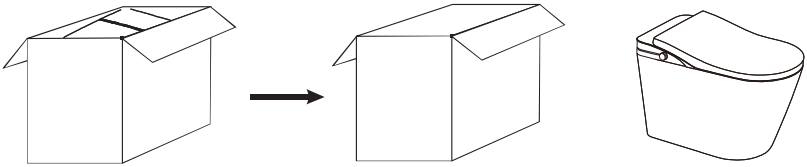

2 Mark your drainage hole with a cross

Cardboard installation
–Align cardboard with the centerline of drain outlet
–Draw contour line according to cardboard

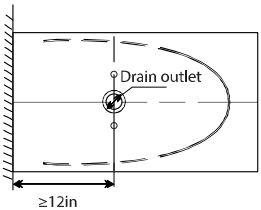

3 Mounting bracket installation

Assemble the mounting bracket with bolts and then install them to the pre–installed flange plate on the ground and lock tight with nuts.



4 Install the ceramic body , water supply hose , T-valve

1,Place the wax ring on the drain hole at the bottom of the ceramic

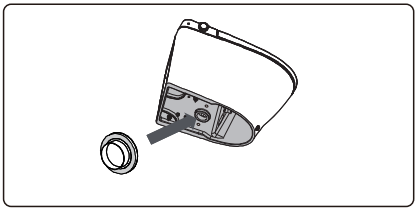

2.Install sealing flange into drain outlet
3.Install ceramic toilet on corresponding position according to contour line

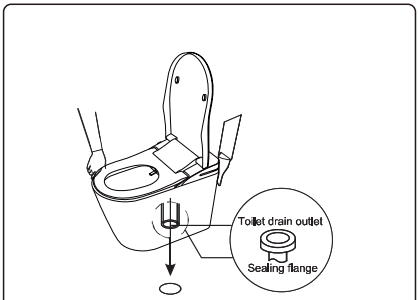

Tips:The toilet is heavy , and it needs to open the seat cover to carry it by two people .

4.Attach the flush water hose to the T-valve and tighten

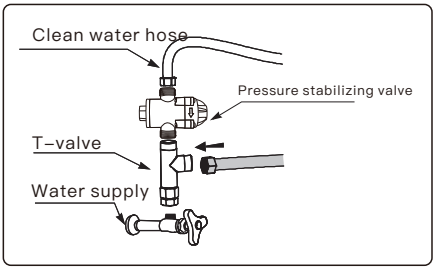

5.Attach the flush water hose to the T-valve and tighten

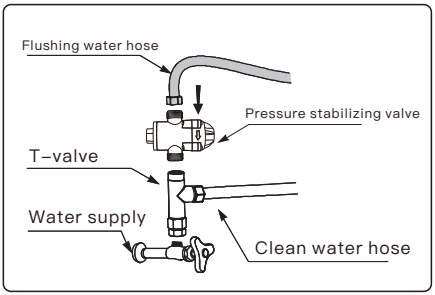

6.Connect the T-valve to the water supply and tighten. Use gasket to prevent water leakage

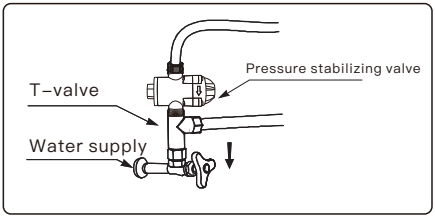

7.Finish installation.

5 Installing the remote

1.Drill two 6mm (0.24inch)diameter holes on the wall(about 1.77 in deep)
2.Knock the anchors into the hole with a hammer
3.Secure the holder with anchors
4.Use the screws to secure the holder to the wall
5.Remove the battery cover from the backside of the remote to install batteries
6.Once finished,remote is ready to be placed in its holder
Detailed steps shown in the diagram below:
–Please use proper mounting tools for special wall surfaces (such as wood ,HDF, etc.)
–The remote control holder should be installed away from the bidet's spray trajectory
–The remote control holder should be installed within reach when seated on unit.
–Make sure there is nothing to block the transmission between the toilet and its remote .

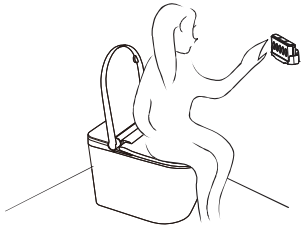

Steps:

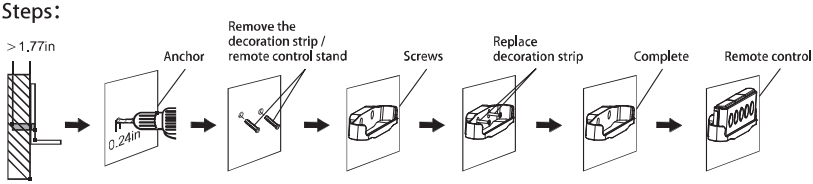

6 Installing and replacing the battery box

Install and replace the emergency flushing battery

1. Find the backup battery box behind the toilet
2. Open the backup battery box
3. Install the 9V square battery in the correct direction
4. Replace the battery box cover

When delivered from the factory,
the battery has been installed in the battery box.



Spare Battery

*Please confirm the battery's positive and negative poles .Please do not charge , disassemble, fire the battery ,or mix with used batteries or different kinds of batteries to avoid liquid leakage or explosion.
*The battery box has a moisture-proof function.Please ensure that the set screws are screwed in place to achieve a good seal effect.
*If the battery needs to be replaced . It is recommended to contact your local dealer to have it replaced by specialized personnel.

7 Testing water flow

1.Open the water supply angle valve to maximumas shown in the figure.

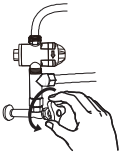

2.Confirm various connecting parts are not watereaking.
*In case of water leaking, unfasten the nuts againand install them again.

8 Connecting power

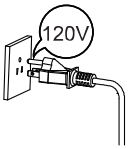

1.Connect to the grounding.
2.Plug in AC 120V power plug.
3.Check to see if the power is on.

(1) Check to see if the power lightis on. If not, push the resetbutton.
(2)Once the power light is onthe toilet will run its initialdiagnostice: ights will turn on.cleaning nozzle will extend,the motor will begin to runand water will run through thesystem. Once the light is off, the self-diagnostic is complete.
(3)Powered on: Press and holdthe knob for 3 seconds to enterthe standby mode.

Testing the product

Test whether the functions of the buttons on the remote controller and the knobs on the side of the body are normalAre all the functions working properly

Rear Wash, Front Wash (Including water pressure & nozzle position adjustment)Heated Dryer, Water & Seat temperature Adjustment, Nozzle cleading, Anion Deodorization,Remote control. All functions listed above should be tested.

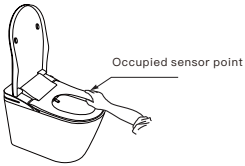

Checking Rear Wash

Please use your hand to hold the seat sensor area, turn the knob forward orpress the ”Rear Wash” button on the remote controller, and use your hand tocover the front of the washer to block the flow of wash water to avoid spraying water on your body or clothing.

Matching your remote control code

When the product leaves the factory, the remote control and the product are connected, if theremote control went failure, please re-connect the code as following methods.

1.Unplug the product’s plug, press the stop ket for few seconds until the level light is flickered.

2.Plug the attaching plug when the remote control get closer to the product.

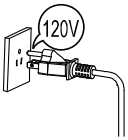

3.The level light stops flickering and then it is lighted on.

4.At the time, the remote control and product is re-connected.

Function Explanations

Power / Stop

Stand by: Press it for 3s to activate it.
Activated : under the hip cleaning ,
female washing, drying mode, press it for short time to stop it .
Activated and not sitting on the seat ,press it for short time to flush , press it for 3s to enter to the standby mode .

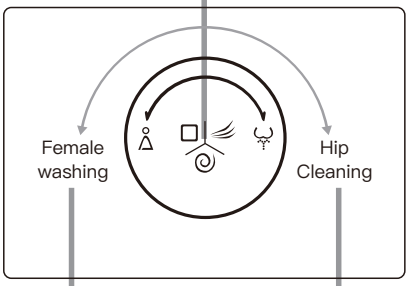

Front wash

Under no cleaning and drying mode ,
and seating the toilet

Rotate backward by 45 ° to enter the women's washing mode, which defaults to the static cleaning mode,
Rotate in this direction again to switch to mobile cleaning mode.

Rear wash

Under no cleaning and drying mode ,
and seating the toilet

Rotate forward by 45 ° to enter hip wash mode, which defaults to static wash mode,
Rotate in this direction again to switch to mobile cleaning mode.

When starting up, short press the knob to send ceramic flushing command when there is no function.

■ Auto flush

When the seat sensor no longer detects a user , it will automatically flush .

The toilet will only flush once.

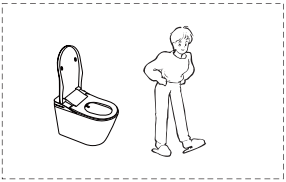

■ Emergency Flushing

When the product is not powered-on , short press the rotated switch button on the side of the product or slightly touch the “Foot touch” button . It can achieve emergency flushing function

*If the above opearation does not work , you need to replace the battery or contact your local dealer.

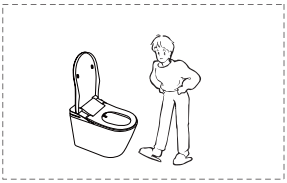

■ Dryer flush

Press the “Dryer”button

The warm air function is activated and a flush is performed.

*Rear / front wash is not available during flushing

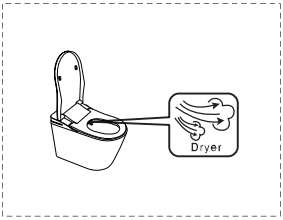

■ Kick flush

Tap the “Kick button” with your foot for easy , manual flushing

Note that the “kick flush”function is available when user is sitting on the toilet seat .

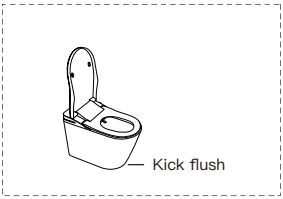

■ Microwave induction

Microwave will detect any user within a 3ft radius.

Lid will open automatically for any user within a3ft radius.
Close automatically when it no longer detects a user.

■ Kick to open lid / seat

Tap the “Kick Button” with your foot to raiseyour toilet lid / seat.

Tap the kick button once: Lid opens.
Tap the kick button twice: Seat raises.
Tap the kick button three times: Seat and Lid Will close and toilet will flush.
*Please do not touch the button forcefully
*Rear / front wash is not available during flushing

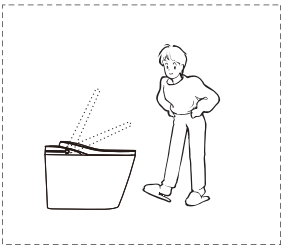

Smart Toilet
User-friendly Design

- **Slow-closing lid /seat**

  Preserve your toilet's life and allows you to close the lid /seat silently .

- **Water purification**

  Equipped with dedicated filter to ensure your bidet will only spray clean, filtered water.

- **Damper**

  The product has installed the damper which provide the toilet cover and toilet seat with a buffer function,to achieve the mute effect.

- **8 Layers of safety**

  8 different built-in safety features to protect the user and product.

- **Memory mode**

  After power failure, water temp, water pressure, seat temp, and wand position are allrestored to mid-range after power failure.Night light is turned on by default after power failure.On / off,
  keep the last memorized setting state.

- **Self-cleaning Nozzle**

  The washer can automatically clean, keeping bacteria and stains away.

- **Pre-flush**

  After seating, the product will flush once towards the seat to ensure that the seat wall is moistened

- **Antibacterial Seat**

  Antibacterial material is used for the seat

Smart Toilet Maintenance

Regular maintenance is required to ensure normal use

Note

- Cut off the power and water supply before maintenance
- Direct water wash to the entire products is prohibited

Maintenance of product surface and ceramics

- Wipe dust or stains with a soft wet cloth
- A wet soft brush , cloth or sponge may be used to clean the ceramic area

  *Do not use abrasive cleaning solutions , such as alcohol,bleach , paint thinner , cresol, benzene ,gasoline ,etc.

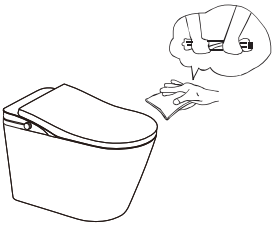

⚠ WARNING

Do not spray water ordetergents on the toilet,remote control or the power cord. Doing so may cause electrick shock or fire.

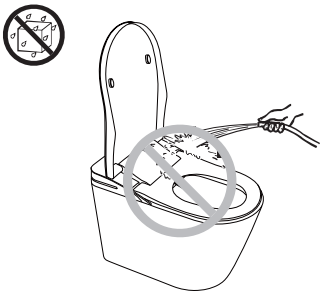

■ Maintenance during Winter SeasonDuring winter season

The water inside mayfreeze after long periods of storage andnon–usage.Please take measures to prevent.

Note

- Before connecting the product to the watersupply and electrical outlet, allow it to defrostfor 30 mins in a warm indoor environment.
- In cases of extreme cold/freezing/nozzlestuck in place, wrap the water input line witha warm towel.Never pour hot water or use ahot dryer directly on the toilet.

Maintenance of the nozzle

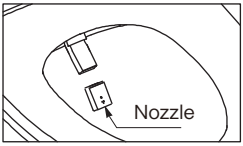

Press the“Nozzle Clean”button on the remote control without occupying the seat.
The nozzle will extend. Proceed to clean with a soft toothbrush.

*Do not forcefully hold the nozzle,otherwise it may break.

*Please change the spout if itblocked.

Smart Toilet
Troubleshooting

If the user should run into any issues, please consult the troubleshooting guide below.
If problem persists,please contact a professional.

Power Button

Phenomenon	Fault Diagnoses	Solutions
Not working	Check whether the attaching plug is loose or not	Please check the circuit
	Check whether the power is switching on or off (the power light is not on)	Press rotated switch for 3s, the power light is on.
	Check whether there is any electric leakage or not	Please unplug the attaching plug and contact with local distributor to repair.

Wash Function

Phenomenon	Fault Diagnoses	Solutions
No water from the spout	Check whether or not the water supply cuts off	Wait for the water supply restoring
	Check whether or not the angle valve switches off	Open the angle valve
	Check whether or not the water filter is blocked	Clean the filter mesh or change the water filter
	Check whether or not the inlet pipe is flexed	The inlet pipe must be straight
The intensity of cleaning is not strong enough	Check whether or not the water pressure or cleaning switch to low level or not	Regulate the water pressure according to the instruction manual
	Check whether or not the inlet filter is blocked	Clean the filter mesh or change the water filter
Unusual water flow from the spout	Abnormal operation	Unplug the attaching plug for one minute and then plug it again
The water temp is not warm enough	Check whether or not the water supply switches to low level	Regulate the water temp according to the instruction manual
The cleanser is always leaking	Solenoid valve no longer has any effect	Please contact with our qualified maintenance personnel for repairing
The cleaning function is not working normally	The human induction system of the toilet seat no longer has any effect	Please contact with our qualified maintenance personnel for repairing

Dryer

Phenomenon	Fault Diagnoses	Solutions
The dryer blows cold air	Check whether or not the dryer switches off	Regulate the temperature of dryer according to the instruction manual
	Check whether or not the heating element of dryer is damaged	Please contact with our qualified maintenance personnel for repairing

Heated Seat

Phenomenon	Fault Diagnoses	Solutions
The seat temp is too low or is not hot	Check whether or not the temp of toilet seat is on the “off” position	Regulate the temperature of toilet seat according to the instruction manual

Remote Control

Phenomenon	Fault Diagnoses	Solutions
The blue light of water temp is flickered	Low battery	Please replace a new battery
Remote control is not working	Check whether or not there is any water on the remote control	Wipe off water by dry towel

Toilet

Phenomenon	Fault Diagnoses	Solutions
The product is not flushed clean	No power supply	Power restoration
	No water from the spout	Please contact with our qualified maintenance personnel for repairing
	No water but have the sound of flushing	1.Check whether or not the pipeline is blended or not, please keep the water supply pipeline open and smooth 2.Check there is any damage of water pump
	Have water all the time	Please contact with our qualified maintenance personnel for repair if there is any unusual from the water inlet valve

Slow descent function

Phenomenon	Fault Diagnoses	Solutions
The function of flipping the seat cover/ring up by foot touch cannot open or close	Auto-damping is damaged	1.Recharge after unplug the attaching plug. 2.Please contact with our qualified personnel if the following solution is not working.

Changes or modifications to this unit not expressly approved by the party responsible forcomplance could vold the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

☐ Reorient or relocate the receiving antenna.
☐ Increase the separation between the equipment and receive.
☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
☐ Consult the dealer or an experienced radio/TV technician for help.

Smart Toilet Specifications

Rated voltage		120V~
Frequency		60HZ
Rated power input		1050W(When inlet water temp in 59°F)
Seat and dryer temperature range		4 diffdrent levels
Dryer temperature range		35°C~55°C(95°F~130°F)
Water supply hose type		DN15(G1/2")
Water Inlet	Minimum pressure	35psi,ensuring a flow of water at least 10.57GPF/min)
	Maximum pressure	About 40W
Toilet	Flush type	Tornado flush
	Rough-in	Rough-in 12in
Flushing	Heating type	Instant heating
	Washing temp range	OFF/34°C~40°C (93°F~102°F) (4 levels)
	Safety system	Butterfly thermostat, thermal fuse, flow sensor
Dryer	Dryer temp range	OFF/35°C~55°C (95°F~131°F) (4 levels)
	Dryer air speed	> 4m/s
	Safety system	Thermal fuse, bi-metal
Heated seat	Heat temp range	OFF/34°C~40°C (93°F~102°F) (4 levels)
	Safety system	Thermal fuse
Power cable length		Appx.34.25 in