正反面印刷，风琴折，90*120mm

智能遥控打窝船

GPS版本

使用说明书

“渔”悦生活由我智创

◆ 充电更快

1、料仓均可单独提控。
2、夜灯采用强蓝光设计，

功能：

① 船在夜航中定位辨别方向
② 对鱼群起到一定的诱作用

双手遥控器按键功能说明

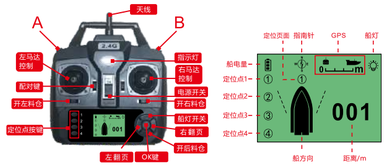

“渔”悦生活由我智创

开机
1. 将电池仓内的电源接头对接上，拨动船身开关.
2. 将遥控器电池装上，拨动遥控器开关，开机完成.

校准
1. 船放入水面，将船开出离岸7米远，确保周边内无障碍物；
2. 按下OK+A按键，(船进入自动校状态）遥控器红灯闪动，船先右转动一圈，然后左转动一圈，完成后停止转动，校准完成。(不校准船在航行时会跑偏)

注意：遇到有障碍物时,按B键会退出校准，

定位点存储
1. 摇控器显示屏上GPS图标有显示时，才能操作定位点储存
2. 按下OK+定位点1234按键任意一点进行地点存储，一页最多存储4个定位点，操作成功后，屏上显示相应编号。定位点一共有4页。按左右翻页键即可操作16个定位点
3. 长按下OK键，自动清除所有定位点.

注意事项：船在下水使用定位成功后，需先在岸边定第一页1号点为原点，当船信号差，失去控制或低电时，船会返回第一页1号原点

自动返航和巡航操作
显示屏的定位页面显示有4页,当显示1时就是第一页，显示2就是第二页,按左右翻页键切换
1. 在船使用前必须先设置个原点，标准设置为第一页的1号点为原点
2. 按下遥控器的地点编号1-2-3-4任意一键，船将自动行使到指定定位点
3. 到达目标点1米范围左右，行使结束，《遥控器屏幕上会有距离显示，显示距离为定位点和船的距离》当船在航行时出现跑偏或跑的位置不对时，请重新校准.

注意：按B键退出自动返航

定速巡航
1. 左右手柄推到最顶时
2. 按B键，进入巡航模式；
3. 左右手柄可以微调船航行的方向；

备注：按B按键退出巡航

船电量显示
1. LCD屏显示船电量，一共有4个等级，电池图标1格时进行充电或者更换电池；
2. 电池图标开始闪烁时进行低电状态，船将自动返航到原点（1号点）；

无线信号
1. 船信号差时，遥控器将“滴”提示；
2. 船长时间信号差，船将自动返航到原点（1号点）

失联自动返航
1.当遥控器电量低 / 自动关机 / 手动关闭遥控器时,一分钟左右船会自动返回到原定位点.1号点

“渔”悦生活由我智创

流线型船体
- 航行更平稳
- 抗风浪性更强

7.4V 大容量电池
- 充电更快
- 续航时间更长

电池使用与充电说明:

◆主机电池（ 标配 ）

◆电池通电接口
（标配一组电池）

◆电池充电

“渔”悦生活由我智创

保养维护：

◆遥控器
在长时间不使用时请取出电池。

◆马达
每次使用完要检查马达是否有缠绕杂物

◆船体
2、使用完毕后请擦拭水分保持船体的干燥和清洁 。
3、电池在长时间不使用时请取出并充电存放。
4、不要摄魔性液体和物品一起存放。
5、请勿靠近高温物体。
6、不用时，请将打窝船放置在配套的袋子中存放起来，以防沾尘土。

打窝船常见问题解决方法

	问题点	解决方法
1	不开机	1.检查船身和遥控器电池连接是否正确。 2.检查船身上的开机和遥控器开关是否打打开。 3.给电池充电或更换电池。
2	遥控距离短	1.检查船身天线有没有扭到位。 2.如果遥控器上的指示灯闪，请更换遥控器电池。 3.更换天线。
3	单边螺旋桨不转	1.如船在陆地上，其中一个马达时转时不转，是正常现象，因为产品里面的陀螺仪在陆地上不生效，必须在水面才能工作。
4	船跑偏航	1.检查螺旋桨有没有杂物缠绕。 2.把船放陆地上，必须是平地，然后把遥控器和船重新配码。
5	船和遥控器能开机但是控制不了	1.把遥控器和船重新配码
6	船开机后自动控制船功能	1.检查遥控器的按键有没有卡住。 2，如没按键卡住大部分是遥控器有进过水，得更换遥控器。
7	GPS船没定位	1.首先船必须得在户外开阔地方才会有定位信息，在房子里面是搜索不到卫星定位的。 2.GPS定位时间，从开机到显示定位时间是60秒内，天气好的情况下是30秒内。
8	GPS遥控器显示999	1.这种情况一般出现在上次使用时定的定位点距离，按遥控器的OK键可清除上一次的所有定位信息
9	GPS船螺旋桨自动开启，和船自动行驶或返航	1.这种情况出现在有设置了定位原点情况下，船身系统检测到电池电量低和检测不到遥控器的信号而自动执行返航。 2.GPS信号丢失，这种情况出现的条件有两种一是周围的磁场干扰，二是天空上的云层太厚。
10	GPS船自动返航走的线路偏离大	1.GPS船在利用定位自动返航路线跑偏10-30度是正常，超过这个范围，请把船按说明书说明重新效准。 2.在每次更换新的使用环境都要效准一次。
11	GPS船返航转圈	1.把船放在平地上，将船和遥控器重新配码，在配码时船会重新自动恢复舵螺仪。
12	料仓打不开	1.按遥控器打料仓按键时有声音响，这种情况是需要更换舵机或舵机抽头脱落这种情况较少。 2.按遥控器打料仓按键时无声音响，这种情况是遥控器有问题，需更换遥控器。
13	GPS船在水面无法较准	1.重新在平地上和遥控器配码。 2.配码后还无法解决就需要更换船主板
14	GPS船遥控器显示屏闪	1.更换遥控器电池。

Smart Remote Control Fishing Bait Boat

GPS Version

Instruction Manual

“FISH” IS A LIFE OF MY LIFE

◆ **Fast Charging**
1. the hopper can be operated separately.
2. the night light is designed with the blue light.

Function:
a. it can help find the direction and position.
b. it can lure the fish

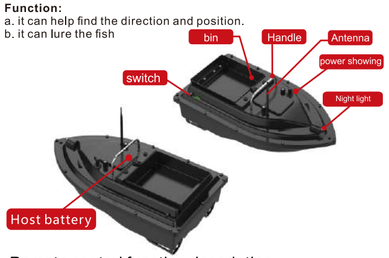

Remote control function description

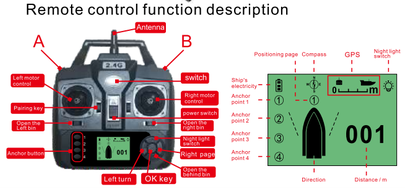

“FISH” IS A LIFE OF MY LIFE

Starting Up
1. Please kindly connect the joint of the battery case, and turn on the power of the boat.
2. Set up the battery of the remote controller, and turn on the power of the remote controller, than finish the starting.

Calibration
1.Put the boat on the water, keep it from the shore side about 5-7 meters, and make sure that there is no obstacles at the surrounding.
2.Please kindy press the “OK+A” button,(the boat will be into the calibration automatically), the red light of the remote controller is flicker. The boat will turn right one lap and left one lap automatically. The boat will stop automatically after these two laps.The calibration is finished. (If there is no calibration , the boat will be off tracking.)
Note: Please press the “B”key and out off the calibration if the boat is with the obstacles.

Anchor Point Storage
1.When the GPS icon is displayed on the remote control display screen To operate the anchor store.
2.Please kindly press the “OK “ key+anchor point 1234 button at any point and site storage, one page stored four anchor points at mostly, the corresponding number shown on the screen after the operation is successfully. There is 4 pages for the anchor point. Press the left and right pages to operate the 16 anchor points.
3.Long pressing for the the OK button, will remove all stored information automatically .
Note: It should be set the 1 point of the first page as the origin point at the shore after the boat is in the water positioning successfully. ship signal is poor, out of control or low power, the boat will return to the 1 the origin point of the first page when the signal is poor or out off controlling or low power.

Automatic Return and Cruise Operation
oning showing page on the diThere are 4 ges for the positisplaying screen When the displapaying 1 is the first page, showing 2 is the second page, press the left and right page key to switch.
1.It must set an original point before using the boat. The standard setting is the 1 anchor point of the first page.
2.Please press the any number 1-2-3-4 of the remote controller, the boat will run to the pointed position automatically.

“FISH” IS A LIFE OF MY LIFE

3.When the boat is to the target point about 1M range, the sailing is ended (the s tcreen ofhe remote controller is showing the distance, the displaying distance is between the anchor point and the boat). Please kindly make the calibration again when the boat is out off sailing or position.
Note: Please kindly press the “B “key to exit the run back automatically.

Cruise Control
1. The left and right handle is pushed to the top.
2. Press the button B to the cruise mode.
3. The left and right handle can be adjusted the direction

Note: Press the button B and exist from the cruise.

The Battery Showing
1. LCD display the boat power. There is four grades for the power.When the battery icon is at 1 case,please kindly make the charging or battery replacement.
2. when the battery icon flashes means for the low power state,the boat will return to the origin (1 point) automatically.

Wireless Signal
1.The remote controller will be "Di"for reminding if the boat signal is poor.
2.the boat is in the poor signal for long time, the boat will return to the origin point 1 automatically.

Lost and Return Automatically
when the remote controller is low battery /automatic shutdown/shut down the remote control manually, the boat will be returned to the original site 1 point automatically after a minute.

Battery
7.4V* high capacity battery

“FISH” IS A LIFE OF MY LIFE

Battery Usage and Charging

◆ Boat body charging (standard level)
◆battery charging interface (standard level: 1 set battery)
◆battery charging

Maintenance

Controller
Please kindly take out the battery if there is a long time for leaving unused.

Motor
Please kindly take out the battery if there a long time for leaving unused.

Boat Body
1.please keep dry and clean for the boat after using the boat.
2.please take out the battery and keep well if do not use the boat.
3.please do not put the boat with the corrosive liquid.
4.Do not close to the high temperature target.
5.please put the boat into the bag to keep the boat from the dusty if do not use the boat.

The Solutions to the Malfunctions of the Fishing Boat

	Malfunctions	Solutions
1	can not switch	1.Check whether the battery connection of the boat and the remote controller is correct. 2.Check whether the switch of the remote controller of the boat is turned on. 3.Recharge or replace the battery.
2	short remoting distance	1.Check whether the boat antenna is twisted in place. 2.If the indicator light on the remote controller flashes, please kindly replace the battery of the remote controller. 3.Replace the antenna.
3	Unilateral propeller does not turn	It is the normal that one of the motors does not turn when the boat on the land, because the gyroscope of the boat does not work on the land and it must work on the water surface.
4	The boat runs yaw	1. Check whether the propeller is entangled by the sundries. 2. Put the boat on the land which must be flat, and then re-match the remote controller and the boat.
5	The boat and remote controller can be switched but not be controlled	Re-match the remote controller and the boat.
6	Control the boat automatically function after switching the boat	1. Check whether the buttons of the remote controller are stuck. 2. If the buttons of the remote controller are not stuck, most of the remote controller are with water, so the remote controller should be replaced.
7	GPS boat without the positioning	1.Firstly, the boat will be with the positioning information under the open outdoors, there is no satellite positioning in the house. 2.It is about 60s from the switching boat to the displaying time for the GPS positioning time,it will be within 30s under good weather.
8	GPS remote controller displays "999"	This situation appears the last usage of the fixed location distance generally, press the OK key of the remote controller, which can clean up all the positioning information of the last time.
9	GPS boat propeller switch automatically, and the boat sail or return automatically	1. This situation occurs when the positioning original point is set, and the boat system detects the low battery and fails to detect the signal of the remote controller,then return course automatically. 2.GPS signal is lost. There are two conditions for this situation: one is the surrounding magnetic interference, the other is too thick clouds in the sky.
10	The automatic return course of the GPS boat deviates greatly	1. It is normal for the GPS ship to deviate 10-30 degrees from the course of automatic return by positioning. If it exceeds this range, please kindly re-calibrate the boat according to the instructions. 2. It should be re-calibrate under the new environment.
11	GPS boat is turning in a circle	Place the boat on the flat ground and re-match the boat and the remote controller.The boat will restore the gyroscope automatically when matching
12	The hoppers can not be opened	1.When press the button of the remote controller and there is with sound.In this case, the steering gear should be replaced or the plug of the steering gear falls off. 2. When press the button of the remote controller and there is without sound.In this case, the remote controller is with the some problems and should be replaced.
13	GPS boat can not be calibrated on the water	1. Re-match the remote controller and the boat on the ground again. 2. The main board of the boat should be replaced if the problem can not be solved after the code matching.
14	Remote controller display of the GPS boat flashes	Replace the battery of the remote controller.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.