产品说明书 尺寸:50x100mm 材质:80g书写纸 双面印刷 风琴折

ERAZER
Invested By Lenovo

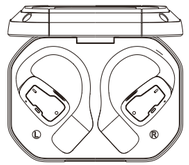

ERAZER Wireless Earbud XP6 Product Manual

Specification of Product

Model of Product: XP6
Version: V5.4
Effective Distance: Approx. 10m
Speaker Diameter: ϕ13mm
Impedance: 16Ω
Frequency Respinse: 20Hz-20KHz
Microphone Sensitivity: -42dB±3dB
Earphone Input: 5V⎓40mA
Charging Case Input: 5V⎓600mA
Charging Case Output: 5V⎓80mA
Earphone Battery Capacity: 40mAh
Charging Case Battery Capacity: 600mAh
Duration: Approx. 4.5 H (Earphone)
Earphone Charging Time: Approx. 1.5 H
Charging Time of the Charging Case: Approx. 2 H

Item list

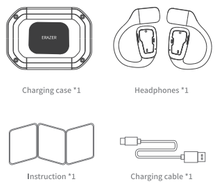

Charging case *1
Headphones *1
Instruction *1
Charging cable *1

Welcome to ERAZER Open Wearable Stereo

Take out and pair it

When you use it for the first time, remove both the left and right side headphones at the same time.The headset white light and ice blue light will flash alternately and the headset will be paired automatically.

How to wear headphones correctly

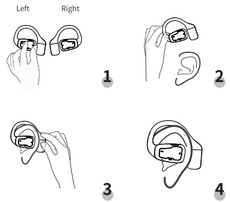

Product Description

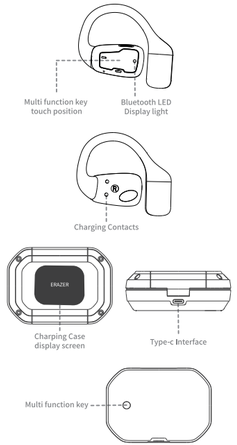

Touch Operation

Connect with Bluetooth device

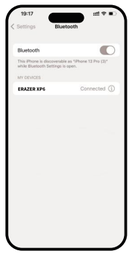

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "ERAZER XP6". Click the pairing name to pair.



Power On

Auto Power On: The headset will turn on automatically when the charging compartment is opened and a "Du" sound will be emitted. Manual power on: Long press the headset touch position for 3 seconds, the headset will turn on automatically and emit a "Du" sound.

Power Off

Auto shutdown: Put the headset into the charging compartment and close the cover under power-on condition, the headset will shut down and accompanied by "Du" sound. Manual power off: Long press the headset touch position for 5 seconds, the headset will be automatically turned off, and accompanied by "Du" sound.

Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.

Once Press

Music mode: Play/Pause
Phone mode: Call Answer/End

Double Press

Music mode
Double press the right ear: Volume up
Double press the left ear: Volume decreases

Long Press

Wake up voice assistant

When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant.
When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Triple Press

Music mode
Triple press on the left ear: Previous song
Triple press on the right ear: next song

Switch between game mode and music mode

Game mode: Press and hold the multi-function button on the right ear for 2 seconds
Music mode: Press and hold again for 2 seconds

Note 1: When using one earphone, you cannot switch between game mode and music mode.
Note 2: The factory setting defaults to music mode

Clear Bluetooth pairing history

When both ears cannot be paired, you need to clear all connected devices and click the left and right earphones 5 times at the same time.

Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep".

Indicator Light Description

- The headset is turned on: white lights and ice blue lights flashed alternately.
- Headphone shutdown: The white lights on the left and right headphones flash three times and then turn off.
- Pairing successful: The white light and ice blue light of the host flash alternately.
- Connection successful: no light

- Charging of earphones: When the earphones are put into the charging compartment and the cover is closed, the white light is on. When the earphones are fully charged, the white light goes out.
- Charging dock charging: Insert the Type-C charging cable, and the charging compartment display screen will show the "lightning" icon. After being fully charged, the charging compartment display screen will show 100% battery level

Charging Case operation

Lighting up the display screen
Method 1: When the screen is off, click on the display screen to turn it on.
Method 2: Press the multifunctional button of the Charging Case once to light up the screen.

Turn off display screen
Automatic shutdown: After turning on the screen for 30 seconds without operation, the display screen will automatically turn off.
Manual closing: Press the Charging Case multifunctional button once to turn off the display screen.

Note 1: First time use,please activate power on
Method 1.Charge and activate the charging case through the TYPE-C interface.
Method 2.Long press the multifunctional button on the charging case for 8 seconds to turn on the device
Tip: This product defaults to shutdown mode when it leaves the factory, First use requires activation and startup.

Icon Introduction

Bluetooth status
Red status: The Charging Case is not connected to the headphones.
White status: The Charging Case is connected to the earphones, but the earphones are not connected to the phone.
Blue status: The Charging Case is connected to the headphones, and the headphones are connected to the phone.

Battery status

Charging status for the Charging Case
Blue: Charging in progress
White: Normal battery level, not charging

Headphone charging status
Flicker: The earphones are charging in the Charging Case
Chang Liang: Normal battery level, not charging

Lock screen interface

Unlock: Slide to the right to unlock the screen

Music interface

Previous Song
Play/Pause
Next Song

Volume adjustment interface

Reduce volume, minimum music is 0
Increase volume, maximum volume is 16

Spatial sound interface

Music Mode
Movie Mode
Game Mode

Equalizer interface

Switch between different EQ sound effects: normal, rock, pop, classic, jazz

Alarm clock interface

Switching requires setting the alarm time: 5 minutes, 10 minutes, 30 minutes, 60 minutes

Light Level interface

Click the left button to decrease the screen brightness;
Click the button on the right to increase screen brightness;

Language switch interface

Click to switch languages from different countries

Screen lock interface

Click to switch between different lock screen wallpapers, the current screen is the selected lock screen wallpaper

Flash Light interface

Click the button to turn on the flashlight, the entire screen turns white and the brightness of the screen increases

Find My Earphone interface

Click the L/R button, and the number ③ screen will appear

Click to cancel and exit this function,
Click to start, the number ④ screen will appear,
and the headphone speaker will start emitting sound

Click the stop button to stop sounding

Time setting interface

Automatic update: When the charging case, headphones, and phone are connected, the time on the phone will be automatically updated to the charging case
Manual update: Click the button to enter manual settings

TIKTOK Page flipping and like function

Needs to be connected to a Bluetooth device such as a cell phone
1.This function is only available for use with TIKTOK software, and other software may not be able to use it.
2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
3.If there are situations where it cannot be used, please ignore this feature.

Click this icon, the current short video will be liked
Clicking on this icon will switch to the previous short video
Clicking on this icon will switch to the next short video

Camera function

Needs to be connected to a Bluetooth device such as a cell phone
1.This function is only available for taking photos with the built-in camera of the phone. Other shooting software may not be able to use it.
2.This feature may have compatibility issues with some phones, and some phones may not be able to use it.
3.If there are situations where it cannot be used, please ignore this feature.

Open the phone camera, click the button, and the phone will start taking photos

Definition of multifunctional button functions



Multi function key

Click once: On/Off screen.
Three clicks: when the compartment is open, click three times to pair the headset with the compartment.
Press and hold for 3 seconds: In power-on mode, press and hold for 3 seconds, the Shutdown, Reboot and Recovery Reset icons will pop up on the screen, click the icons to realize Shutdown, Reboot and Recovery Reset.
Clicking on the icon can achieve shutdown or restart.
Long press for 8 seconds: In shutdown mode, long press for 8 seconds to turn on the device.
Long press for 10 seconds: Restart the system (display the startup screen). This operation can be performed when the system crashes and cannot be operated.

FCC ID: 2BHJR-XP6

FCC Warning:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

US REP	Company Name: MIRAMONT SOLUTIONS LLC Address: 34218 HOURGLASS ST, TEMECULA, CA 92592, United States Contact Name: Wenyi Wang Telephone No: (951) 401-3633 Email: scotttv6688@gmail.com

ERAZER