AR PRINTER
USER MUNUAL

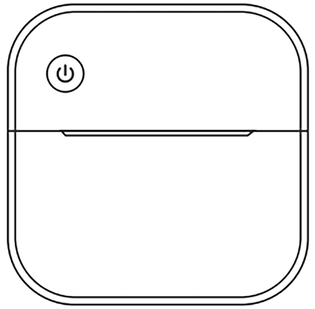

Please read the instruction manual carefully before using this product

Thank you for choosing our printer!
For a better user experience,we strongly recommend that you read our user manua before using the product!

Product Appearance

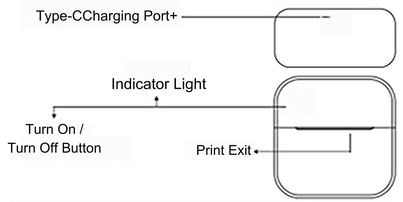

Indicator Light Description

1.If you turn on the printer without wireless connection,the button light will constantly changing from dark tobright.
2.If you turn on the printer normally,the light button will steady on green.
3.If the printer is lacking of paper,the green light willflash.
4.If the printer head is overheating,the light button wil steady on red,please wait 5 minutes before the next printing.
5.If the bettery is too lowhe red light will flash,please charge the printer in time.

Usage Guidelines

①Download the ”Magic Print”APP

Method 1
Open"APP Store", search "Magic Print" APP and downoad t.

Method 2
Open the "Google Pay"directly and search "Magic Print"APP and download it.

Method 3
The "Magic Print"APP QR code will be printed automatcally when you double-click the button after tuned on the printer, you also can download it by scan the QR code on the paper.

②Usage Steps

Tips:
Please fully charge the printer for the frst time, then unplug the charger before use!

❶ Please press the button and hold on for 3 seconds to tum on the printer!

❷ Open the "Magic Print" APP and Log in

❸ Please tum on the Bluetooth of your phone

❹ Open the "Magic Print"APP and Click the "+ Add device" in the upper left corner to looking for the printer device and connect it.

❺ After successfu connection, you can start using this printer

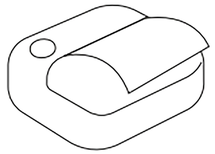

③How to Replace The Printing Paper

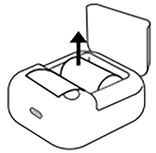

❶ Open the cover of the print pod, remove the old printer paper

❷ Confrming the direction of paper roll placement(NOTE:The paper should be exposed to the bin 2cm inleng so that the macine can automatically absorb paper when closing the bin box)

❸ Put the printer cover on then the machine can be used normally.

Warning ⚠

1.Input Parameter: 5V=--1A, Fast charger is strictly prohibited.
2.Prohibited from disassembling, assembling, compressing,or throwing into fre.
3.If the battery is severe inflation, do not continue to use it.
4.Do not place the product in a high-temperature environment
5.It is strictly prohibited to use it,if the printer is immersed in water
6.Replacing batteries with the wrong type poses a risk ofexplosion, be sure to dispose of used batteries according to the instructions.

Precaution

1. Unplug the charging cable promptly after charging is completed.
2. Improper charging may cause damage to the print head.
3. Do not touch the print head to avoid burns due to overheating.
4.Insert or remove the charging cable gently to prevent damage to the port due to excessive force.
5. Continuous printing may cause the print head to overheat and stop working. This is not a machine malfunction, and the printer can be used again after the print head cools down.
6.To avoid danger do not use or charge in high-temperature, high-humidity, excessive smoke and dust environments such as in the bathroom, sauna room,near open flames,etc

Question & Answer

How to deal with Bluetooth connection failure?
1.To re-enable Buetooth on your phone
2.To restart your min printer
3.To reinstal the app and agree to allpermission prompts
4.Try using another phone.
5.The machine cannot be connected to two phones at the same time, so do not be connected to other phones.
6.If the app cannot connect to the machine, you can double-click the power button to print a test page,which has a QR code. Scan the QR code, follow the prompts to redownload the app,and reconnect it again.

FCC Caution.

This device complies with pat 15 of the FCC Rules. Operation is subject to the folowing two conditons:(1)This device may not cause harmful interference and (2) this device must accept any interference received,including interference that may cause undesired operation.

Any Changes or modifcations not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmfu interference in a residential installation. This equipment generates uses and can radiate rado frequency energy and, if not installed and used in accordance with the instructions,may cause harmfu interference to radio communications However,there is no guarantee that interference willnot occur in a particular installation. If this equipment does cause harmful interference to adio or television reception which can be determined by tuming the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circut different from that to which the receiver is connected,
-Consult the dealer or an experienced radio/TV technician for help

RF warning for Portable device The device has been evaluated to meet genera RF exposure requirement. The device can be used in portable exposure condition without restriction

Scan the OR code to download the ”Magic Print”APP

If you stil have any questions, please feel free to contact us,we will reply you promptly within 24 hours!