封面

50 mm

70 mm

中版
（正面）

使用手册

使用产品的请仔细阅读使用手册,并妥善保管

01 产品参数

产品名称：小恶魔蓝牙音箱
产品型号：JF102
接口类型：Type-C
充电输入：5V~1A
标称电压：3.7V
电池容量：800mAh
蓝牙版本：V5.2
传输距离：8M(无遮挡物，无干扰源场景)
喇叭规格：40mm全频扬声器
产品尺寸：79.3*61.9*61.5mm
产品材质：ABS
执行标准：GB 4943. 1-2022
证书类型：质检

02 装箱清单

整机.....1台
数据线.....1根
说明书.....1份

03 产品结构示意图

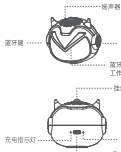

04 机身按键说明

开/关机键：长按2秒开/关机。
工作状态短按一下暂停/播放。
来电时短按接通/挂断。

蓝牙按键：长按2秒断开蓝牙连接。
长按5秒进入TWS组网模式（适用于两台音响组网配对时）。
播放状态短按一下定位RGB灯光颜色，再短按RGB灯光恢复循环变色。

05 蓝牙连接操作指引

一：手机等电子设备与音响连接

1）音响开机后蓝牙默认打开可被搜索连接状态，音响发出2次"滴滴嘟"提示音，蓝色灯光慢闪提示（也可以长按"蓝牙按键"2秒进行重置，会断开最后之前设备的连接）。
2）打开手机等主控设备蓝牙，进入蓝牙搜索界面，直到搜索出"JF102"的蓝牙名称，然后点击进行连接。
3）连接成功后音响会发出"加速声"提示音，并且音响蓝色灯光将停止闪烁转为常亮状态。
注：如需要更换手机等主控设备与音响连接时，请长按"蓝牙键"2秒进行重置即可重新进行搜索配对。

二：组网配对（适用于两台音响TWS互联）

1）任意选择其中一台音响作为"主机"，另外一台音响作为"副机"。
2）主音响开机并且长按"蓝牙键"5秒（期间主音响会先进行重置），音响发出3次"机械声"提示音，并且主音响蓝色灯光会"转闪"提示，此时主音响已经打开了组网模式（3分钟未组网成功将自动退出TWS模式）。
3）副音响开机，副音响蓝牙可被搜索状态后会自动与主音响组网互联（如果副音响被其它设备连接占用请长按2秒"蓝牙键"进行重置）。
4）组网互联成功后，主音响和副音响发出"加速声"提示音，此时主音响蓝色灯光由"转闪"转回"常闪"，副音响蓝色灯光停止闪烁且常亮（副音响已经连接上了主音响）。
5）打开手机等电子设备蓝牙，进入蓝牙搜索界面，直到搜索出"JF102"的蓝牙名称点击主音响进行连接即可。
注：如需要退出"组网模式"请重置即可（长按"蓝牙键"2秒）。

06 其它状态说明

灯光：蓝牙未连接时蓝色灯光慢闪
蓝牙连接成功后蓝色灯光常亮
工作时灯光循环变换不同颜色
TWS组网时"主机"蓝色灯光快闪
定时：音响开机未与手机等设备连接成功情况下达新开30分钟后自动关机。
低电提示：工作状态低电量时红色灯会快闪2次，并且音响会发出低电提示音。
充电指示灯：充电时红色指示灯常亮，充满电红色指示灯熄灭并转绿色指示灯常亮。

07 注意事项 ▲ 警告

·请勿将音响置放在阳光下或在高温、潮湿的环境下使用，以避免电器损坏。
请在不使用时将音响放置在干燥通风的地方。
·请勿在使用过程中拆卸、改装，代替或修理音响，以免发生安全事故。
·音响有内置电池，不宜受到剧烈振动、碰撞或摔落等危险场合下使用。
·每次使用完毕后，为避免耗电，长按音响上的电源键进行关机，并定期对产品进行充电来保护电池。
请定期清洁音响，切勿用有导电、腐蚀性物质的清洁剂和其他酒白剂等。
请采用安全防伪棉球擦拭清洁，以免刮花镜面。
请适当的调整好音量，人耳应与音响保持相应的距离，以免损伤听力等。
·本产品不是玩具产品，购买者及其使用者请监督并指引好相关小孩或残疾玩具，不要以4岁以下儿童单独使用。
请并远离强热、高温等导致电子垃圾回收规定，切勿随意丢弃电池以免对环境造成影响。
产品仅用于室内使用。

08 三包凭证

1.发票保管保修卡，以作维修时的凭证
2.保修期为产品购买之日起半年内。
3.保修期内，本产品在正常使用的情况下发生故障，经本公司查验属实，将免费提供 维修。

以下情况恕不提供免费维修
本公司产品实行保修年限之内的有限保修。属于下列情况的设备故障或损坏，不在有限保修之列，本公司不承担免费的保修义务：
1、设备或部件已经超出了有效的保修期。
2、客户未按照说明书的要求，错误地安装、保管以及使用而造成的设备故障或损坏。
3、由非本公司授权机构或人员拆卸而造成的设备故障或损坏。
4、因意外因素或人为原因(包括但不限于操作失误、刮伤、撞损、磕碰、输入不合适的电压电流等)导致的设备故障或损坏。
5、因自然灾害等不可抗力(如地震、大灾等)原因造成的设备故障或损坏。

电池废弃说明
1.在废弃器具前，必须将电池从器具中取出(用螺丝刀拆掉产品上下盖)
2.在取出电池时，器具必须要断电(将电池安全的从产品中取出)
3.电池应安全的处置(按国家环保要求处置电池，避免污染)

09 保修卡

用户名字：
购买时间：
联系方式：
用户地址：
故障：

合格证
QUALITY
检验员
CHECKER

中版
（反面）

MANUAL

Please read the user manual carefully before using the product and keep it properly

01 PRODUCT PARAMETERS

Product name: Devil Speaker
Product model: JF102
Interface type: Type-C
Charging input: 5V~1A
Nominal voltage: 3.7V
Battery capacity: 800mAh
Bluetooth version: V5.2
Transmission distance: 8M (none-obstruction and no interference source)
Speaker specifications: 40mm full-range speaker
Product size: 79.3*61.9*61.5mm
Product material: ABS
Implementation standard: GB 4943. 1-2022
Certificate Type: Quality Inspection

02 PACKING LIST

The whole machine.....1 item
Data cable.....1 item
Manual.....1 item

03 PRODUCT STRUCTURE DIAGRAM

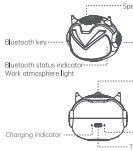

04 BODY BUTTON DESCRIPTION

On/off button: Press and hold for 2 seconds to turn on/off.
Short press to pause/play in working state.
When a call comes in, press briefly to answer/hang up.

Bluetooth button: Press and hold for 2 seconds to disconnect the Bluetooth button.
Press and hold for 5 seconds to enter TWS networking mode (applicable to two speakers networking when paired).
In the playback state, short press to fix the RGB light color, and then press the RGB The lights resume cycling and change color.

05 BLUETOOTH CONNECTION OPERATION GUIDE

1. Connect mobile phones and other electronic devices to audio
1) After the speaker is turned on, Bluetooth is turned on by default and can be searched for connection status. The speaker emits 2 "Dab beep" prompt tones, and the light flashes slowly (you can also press and hold "Bluetooth Press" button for 2 seconds to reset, which will disconnect the previous device connection).
2) Turn on the Bluetooth of the main control device such as the mobile phone, enter the Bluetooth search interface, and wait until the search Enter the Bluetooth name of "JF102" and click to connect.
3) After the connection is successful, the speaker will emit an "accelerating sound" prompt and the speaker will light up. The light will stop flashing and turn to steady light.
Note: If you need to change the main control device such as a mobile phone to connect to the audio, please press and hold the "Bluetooth" button for 2 seconds to disconnect the reset and then search and pair again.

2. Network pairing (applicable to TWS interconnection of two speakers)
1) Select one of the speakers as the "host" and the other speaker as the "sub-unit"machine"
2) Turn on the main speaker and press and hold the "Bluetooth button" for 5 seconds (during this period, the main speaker will not Reset), the speaker emits 3 "mechanical sound" prompts, and the main speaker light is "rotating flashing", the main speaker (3 minutes if the network speaker has turned on the networking mode (3 minutes if the network is not successfully established via automatic) exit TWS mode)
3) When the auxiliary speaker is turned on, the auxiliary speaker's Bluetooth will automatically communicate with the main speaker after its Bluetooth can be searched. Networking and interconnection (If the sub-speaker is occupied by other devices, please press and hold the "Blue" button for 2 seconds, "Bashkiny" to reset).
4) After successful networking and interconnection, the main speaker blue light changes from "rotating flashing" to "always on", at the same time, the blue light of the main speaker turns from "fast flash" to "slow flash", and the blue light of the secondary speaker changes from "fast flash" to "slow flash" (The light stops flashing and stays on (the secondary speaker is connected to the main speaker).
5) Turn on the Bluetooth of mobile phones and other electronic devices, enter the Bluetooth search interface, and wait until the search Click on the Bluetooth name of "JF102" to connect to the main speaker.
Note: If you need to exit the "networking model", please reset it (press and hold the "Bluetooth button" for 2 seconds).

06 OTHER STATUS DESCRIPTIONS

Light: blue light flashes slowly when Bluetooth is not connected.
After the Bluetooth connection is successful, the blue light is always on The light cycles through different colors while working The "host" blue light flashes quickly during TWS networking
Timing: The speaker will automatically shut down after 30 minutes when it is turned on and is not connected to a mobile phone or other devices or is disconnected midway. Power off.
Low battery reminder: When the battery is low in the working state, the red light will flash twice quickly and the speaker will emit a low battery prompt tone.
Charging indicator light: The red indicator light is always on when charging, and turns off when fully charged. goes off and turns to green indicator light.

07 PRECAUTIONS ▲ WARNING

Do not expose the speaker to sunlight or use it in a high temperature or humid environment. Avoid circuit damage.
Clean the speaker regularly to keep it dry and ventilated place when not in use. Do not disassemble, modify, replace or repair the speaker during use to avoid accidents or safety incidents.
The speaker has a built-in battery and should not be exposed to dangerous places such as severe vibration, collision or falling.Use together.
After each use, to avoid power consumption, press and hold the power button on the speaker to turn it off machine, and charge the product in time to prolong the battery life.
Please clean the speaker regularly. If there is foreign matter on the diaphragm, please use a fine brush or dust-free cloth Wipe clean gently, and avoid using chemical detergents and other bleaching agents Agents, etc.
Please avoid touching the speaker diaphragm with sharp objects by mistake to avoid puncturing the diaphragm.
When listening to music, please comply and keep a corresponding distance between your ears and the speaker to avoid Damage to hearing, etc.
This product is not a toy product. Buyers and their users are advised to supervise and guide them accordingly. It is not recommended for children under 14 years old to use alone as it may be mistaken for a toy by a child.
Be cautious when discarding: Please comply with local electronic waste recycling regulations and do not dispose of batteries casually to avoid environmental impact.
The product is only for indoor use.

08 San Bao certificate

1. Keep the warranty card as proof of maintenance
2. The warranty period is six months from the date of purchase.
3. During the warranty period, if the product fails under normal use, it will be repaired free of charge if verified by the company.

The following conditions do not provide free repair
The company's products carry out limited warranty within the warranty period. Equipment failure or damage under the following circumstances is not included in the limited warranty, and the company does not undertake free warranty obligations:
1. The equipment or parts have exceeded the valid warranty period.
2. the customer does not in accordance with the requirements of the manual, the wrong installation, storage and use caused by equipment failure or damage.
3. Equipment failure or damage caused by disassembly by institutions or personnel not authorized by the Company.
4. due to accidental factors or human reasons (including but not limited to operation errors, scratches, handling, bump, input inappropriate electricity Voltage current, etc.) caused by equipment failure or damage.
5. due to natural disasters and other force majeure (such as earthquake, fire, etc.) caused by equipment failure or damage.

Battery waste instructions
1. Before discarding the appliance, the battery must be removed from the appliance (remove the upper and lower covers of the product with a screwdriver).
2. The appliance must be powered off when removing the battery (remove the battery safely from the product)
3. The battery should be disposed of safely (dispose the battery according to the national environmental protection requirements to avoid pollution)

09 WARRANTY CARD

User Name:
Purchase time:
Contact information:
User address:
Breakdown:

合格证
QUALITY
检验员
CHECKER

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction