LIMITED LIFETIME WARRANTY

To obtain Service, please contact or call PATRIOT LIGHTING® Service Department:
1-800-887-6326, 9 a.m.- 5 p.m. central time.

Model No.: # 355-0788

The limited lifetime warranty covers this ceiling fan, for residential use by the original purchaser, against defects in material or workmanship as follows:

If your PATRIOT LIGHTING® Ceiling Fan motor fails at any time during the lifetime of the original purchaser due to defects in material or workmanship, we will provide a replacement part free of charge.

If your Fan motor fails at any time within one year after the original date of sale to the original purchaser due to defects in material or workmanship, we will provide labor to repair the defect, with the exception of take down/reinstallation, free of charge. The original purchaser will be responsible for all labor costs after this one year period.

If no replacement parts are provided for any part of your Fan motor that fails at any time during your lifetime due to defects in material or workmanship, we will refund the original purchase price of your Fan.

If your Fan blades, remote controller / pull chain switch, reverse switch, or any accessory, except glass globes and light bulbs, fails at any time within one year after the original date of purchase due to a defect in material and workmanship, we will repair or, if we choose, replace the defective blades, switch, or accessory free of charge, with the exception of take down/reinstallation services.

If the original purchaser ceases to own the Fan, this warranty and any implied warranty, including but not limited to any implied warranty of merchantability or fitness for a particular purpose, become void. This warranty and any implied warranty, including but not limited to any implied warranty of merchantability or fitness for a particular purpose, do not cover glass globes, light bulbs, or finish on any metal portions of the Fan.

This warranty is in lieu of express warranties. The duration of any implied warranty of merchantability or fitness for a particular purpose, with respect to any PATRIOT LIGHTING® Ceiling Fan motor, blades, switch, or accessories, is expressly limited to the period of the express warranty set forth above for such motor, blades, switch, or accessories.

This warranty excludes defects, malfunctions, or failures of any PATRIOT LIGHTING® Fan that are caused by repairs by persons not authorized by us, use of parts or accessories not authorized by us, mishandling, improper installation, modifications or damage to the Fan while in your possession, or unreasonable use, including failure to provide necessary maintenance.

To obtain service, contact PATRIOT LIGHTING® Service Department at 1-800-887-6326, 9AM-5PM CST. You will be responsible for all insurance and freight or other transportation charges to our factory or service center. A copy of sales receipt is required in order to obtain service. We will return your Fan freight prepaid. Your Fan should be properly packed to avoid damage in transit, for we will not be responsible for any such damages.

In no event shall PATRIOT LIGHTING® Fan be liable for consequential or incidental damages.

Some states do not allow the exclusion or limitation of consequential or incidental damages, in which case the above limitation or exclusion may not apply.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Package Contents:

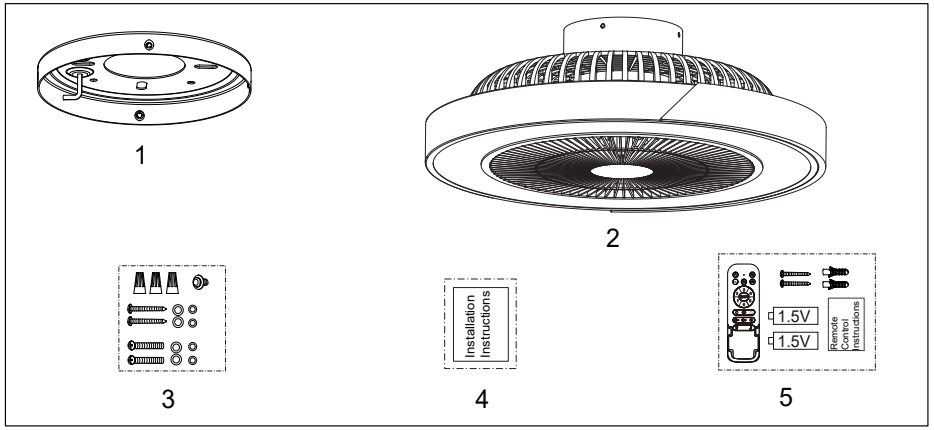

Unpack your fan and check the contents. You should have the following items.

1.) Mounting Plate
2.) Fan Assemblly
3.) Assembly Kit
4.) Installation Instructions
5.) Remote Control Set (Includes Transmitter & Batteries & Screws & Remote Control Instructions)

Dimension Reference:

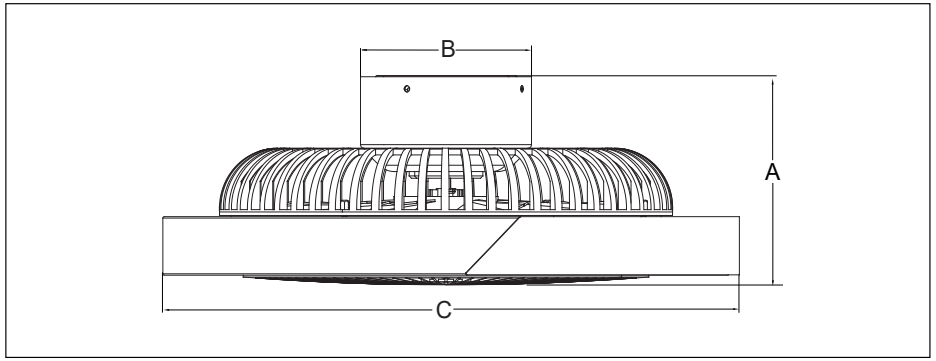

A. 6-3/4" B. 6" C. 20"

Exploded View Detail

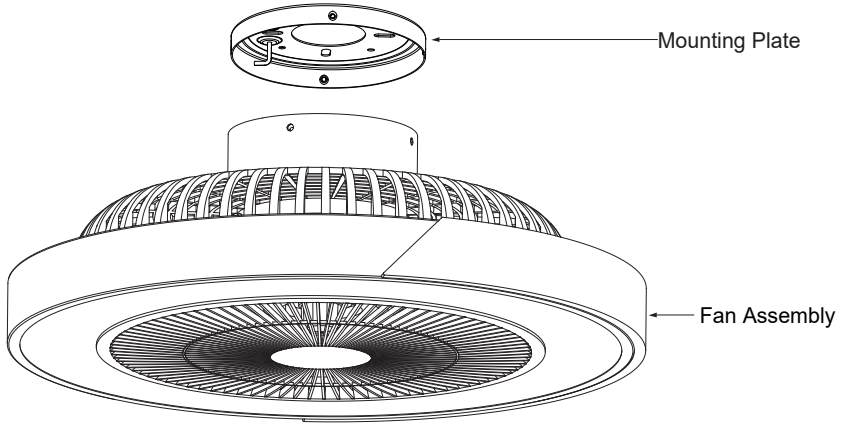

Safety Instructions

READ ALL SAFETY INFORMATION AND INSTALLATION INSTRUCTIONS BEFORE YOU BEGIN TO INSTALL THE FAN AND SAVE INSTRUCTIONS.

- All screws of the fan must be checked and retightened where necessary before installation.
- Do not insert foreign objects between rotating fan blades.
- Before changing the fan direction, turn off the fan and wait for the fan blades to stop completely.
- The safeguards provided by these safety instructions and by the separate installation instructions are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which can not be built into this product. These factors must be supplied by the person(s) installing, caring for and operating the fan.

WARNING

- TO AVOID RISK OF ELECTRIC SHOCK, BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE. TURNING OFF THE ELECTRICAL POWER BY USING THE LIGHT SWITCH IS NOT SUFFICIENT TO PREVENT ELECTRICAL SHOCK.
- TO REDUCE THE RISK OF INJURY, INSTALL THE FAN SO THAT THE BLADES ARE AT LEAST 10 FEET (3.05 METERS) ABOVE THE FLOOR AND AT LEAST 18 INCHES (0.5 METERS) FROM THE TIP OF THE BLADES TO THE WALL.
- TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, MOUNT TO OUTLET BOX MARKED "ACCEPTABLE FOR FAN SUPPORT" AND USE MOUNTING SCREWS PROVIDED WITH THE OUTLET BOX.
- THE INSTALLATION HAS TO BE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, ANSI/NFPA 70-1999 AND LOCAL CODES. IF YOU ARE UNFAMILIAR WITH THE METHODS OF INSTALLING ELECTRICAL WIRING, SEEK THE SERVICES OF A QUALIFIED LICENSED ELECTRICIAN.

INSTALLATION INSTRUCTIONS

IMPORTANT:

- BEFORE YOU BEGIN INSTALLING THE FAN, CAREFULLY READ ALL INFORMATION IN THE SEPARATE SHEET "SAFETY INSTRUCTIONS" AS WELL AS THE FOLLOWING "INSTALLATION INSTRUCTIONS". IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN.
- SAVE ALL INSTRUCTIONS.

NOTE: The fan weight is 7.05lbs (3.2kg). Be sure the outlet box you are using is securely attached to the building structure and can support the full weight of the fan. Failure to do so can result in serious injury.

Installation Steps :

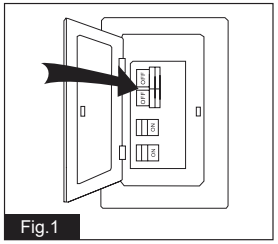

Fig.1

Turn OFF the electric power at the main fuse or circuit breaker box.

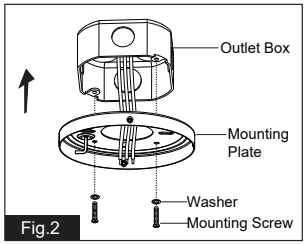

Fig.2

Pull the wires from outlet box through the center hole of mounting plate. Attach the mounting plate to the outlet box, then align and engage the bottom holes from outlet box to the holes of mounting plate then fix them together with washers and mounting screws from outlet box or assembly kit bag. **WARNING: MOUNT ONLY TO AN OUTLET BOX MARKED "ACCEPTABLE FOR FAN SUPPORT"!**

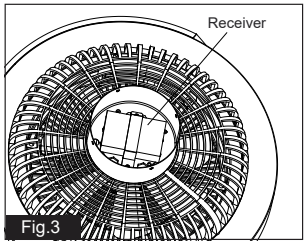

Fig.3

The receiver is already fixed in the housing.

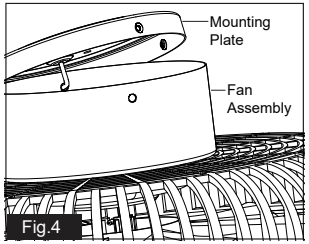

Fig.4

Carefully lift the fan assembly and hang the fan assembly on the hook of the mounting plate by utilizing one of the holes at the outer rim of the motor housing so that it is securely suspended. Then connect the wiring to your fan according to step 5 "Making the Electrical Connections".

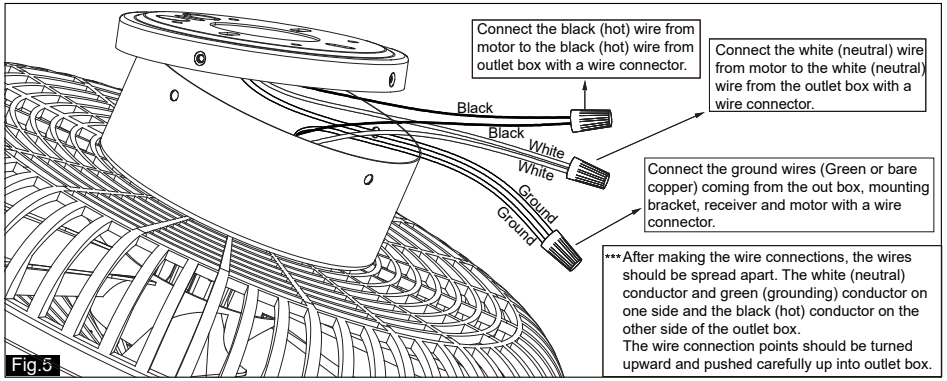

Fig.5

Connect the black (hot) wire from motor to the black (hot) wire from outlet box with a wire connector.

Connect the white (neutral) wire from motor to the white (neutral) wire from the outlet box with a wire connector.

Connect the ground wires (Green or bare copper) coming from the out box, mounting bracket, receiver and motor with a wire connector.

***After making the wire connections, the wires should be spread apart. The white (neutral) conductor and green (grounding) conductor on one side and the black (hot) conductor on the other side of the outlet box.
The wire connection points should be turned upward and pushed carefully up into outlet box.

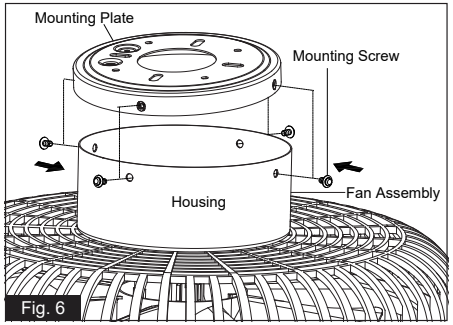

Fig. 6

Remove four mounting screws from mounting plate for later use. Then remove the fan assembly from the hook of the mounting plate, and attach it to the mounting plate, align the four holes of fan assembly and tighten the mounting screws.

Fig. 7

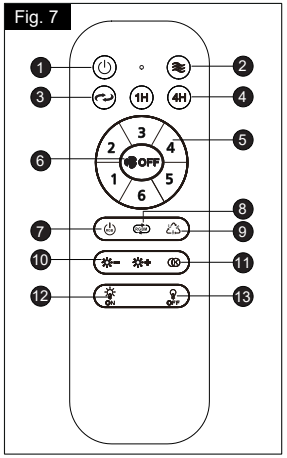

Remote controller

Install two 1.5 volt batteries (type AAA, included) into the remote controller.

The remote buttons instruct as below:

1. "⏻" Button:
   Press this button to turn the fan and the light off.
2. "≋" Breese button:
   Press breese button to control the fan speeds automatic cycle between 1 to 6 speeds with a 20-second frequency. And any other fan speed button can be stop this function.
3. "↻" Reverse button:
   Press this button to control fan direction.
   The lateness of reverse function is normal, please wait for a moment.
4. Timer Control:
   Press "1H","4H" button to stop the fan speed and light after that period.
   Press any other button, or turn off the electric circuit at the main fuse or circuit breaker box can be stop this function.
5. Fan speed:
   1 = minimum speed
   2 = low speed
   3 = medium low speed
   4 = medium speed
   5 = medium high speed
   6 = high speed
6. "OFF" Button:
   Press this button to turn the fan off.
7. "⏻RGB" Button:
   Press this button to turn RGB mode off.
8. "RGBM" Button:
   Press this button to change RGB party mode, there are a total 11 RGB party modes to choose from.
9. "GBR" Button:
   Press this button to change the single RGB color, there are a total 7 colors to choose from.
10. Dimmer Function:
    Press and hold the "☼+" button to increase light to the desired level.
    Press and hold the "☼−" button to decrease light to the desired level.
11. "K" button:
    Press this button to change color temperature of fan light, there are a total of 5 levels of color changing from 2700K, 3000K, 3500K, 4000K to 5000K.
12. "ON" Button:
    Press this button to turn the CCT (Correlated Color Temperature) light on.
13. "OFF" Button:
    Press this button to turn the CCT (Correlated Color Temperature) light off.

Note:
This remote controller has a memory function setting. The fan will operate at the same speed and the fan light will stay at the same brightness-level as the last time the power supply was turned off.

Set the code:
Within the 10 second time frame after the main power is turned on, press and hold FAN OFF button for more than 3 seconds. The LED light will begin to flash. Once the code is set successfully, the fan will turn off and the light will turn on.
Note: The included transmitter was paired with the receiver at the factory with default settings, so no need to set the code again. Go through these setup steps if you found your transmitter can't communicate with the receiver.

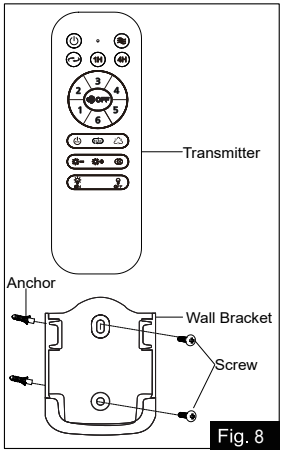

Fig. 8

Model No.: GS0788-VN

Install the transmitter wall bracket on the wall with two anchors and two screws and place transmitter in it carefully.

Troubleshooting Guide

If you have difficulty operating your new ceiling fan, it may be the result of incorrect assembly, installation or wiring. In some cases, these installation errors may be mistaken for defects. If you experience any faults, please check this Troubleshooting Guide. If a problem cannot be remedied or you are experiencing difficulty in installation, please call our Customer Service Department (1-800-887-6326).

PROBLEM	SUGGESTED REMEDY
1. If fan does not start:	1. Check main and branch circuit fuses or circuit breakers. 2. Check line wire connections to fan and switch wire connections in switch housing. **CAUTION: Make sure main power is turned off.** 3. Make sure that the wall control is turned "ON".
2. If fan sounds noisy:	1. Make sure all screws in motor housing are snug. (not too tight) 2. Make sure the screws which attach the fan blade bracket to the motor are tight. 3. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. **CAUTION: Make sure main power is turned off before accessing switch housing.** 4. Some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control. 5. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.
3. If light does not work:	1. Check blue wire from fan to make sure it is connected to hot wire from house. 2. Check for loose or disconnected wires in fan switch housing. 3. Check for loose or disconnected wires in light kit. 4. Check for faulty the LED module. **CAUTION: Make sure main power is turned off before accessing switch housing.**
4. If fan and light kit do not work:	1. Replace the battery of transmitter. 2. Re-pair the transmitter and receiver by holding the "FAN OFF" button on the transmitter according to the manual.

FCC Statement

1.This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note:This equipment has been tested and found to comply with the limits for a class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a particular installation.if this equipmemt does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.