7. HANDS-FREE CALLING FUNCTION

Hands-free calling is only available for Bluetooth-enabled smartphones.
• Answer/End a call: Short press ▷II to answer an incoming call. Short press ▷II again to end the call.
• Reject a call: Long press ▷II to reject a call.
Note: In multi-sync mode, the call will only be transmitted to the primary speaker.

8 . CONNECTING VIA THE 3.5MM AUX-IN JACK

Make sure your speaker has sufficient power.
1. Turn on the Bluetooth speaker.
2. Connect to an external audio device through a 3.5mm audio cable. Plug one end of the AUX cable into your device's 3.5mm audio jack, then plug the other end into the 3.5mm AUX-IN jack of the TMECTO BOOM.

Note:
ⓘ When the audio cable is plugged into the speaker, the Bluetooth function will not be available.
ⓘ Adjust the audio volume using the portable audio device or audio unit.

9 . 2 CELLPHONES CONNECT THE SAME SPEAKER

Sept 1: Long press ⏻ to power on the speaker first.
Step 2: Turn on the Bluetooth on your cellphone, tap"TMECTO BOOM" and pair. Once successfully paired, the Bluetooth indicator will be solid blue ᛒ and you will hear a prompt tone.
Step 3: Turn on the Bluetooth on your another cellphone, repeat step 2 to connect the same Bluetooth name. After successfully paired, you will see your 2 phones' Bluetooth show "Connected"

ⓘPause playing of first cellphone (no need to disconnect Bluetooth) before being played by the other one cellphone.

FCC Warning
15.19 Labeling requirements.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
15.21 Information to user.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
15.105 Information to the user.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

SAFETY PRECAUTIONS

Please follow the instructions for all operations and use.
1. Do not charge near a water source or in the rain to prevent electric shock.
2. Do not damage the cable, especially the connectors.
3. Unplug the Type-C charging cable when it is not in use or during a thunderstorm.
4. Please keep the speaker away from heat sources (including all equipment that generates heat), such as stoves.
5. Do not expose the speaker to extreme temperatures for a long time. Excessive heat or extreme cold temperatures may damage the battery.
6. Do not attempt to disassemble the speaker.

ONE YEAR WARRANTY

1. Our products are covered by a 12-month warranty, starting from the date of purchase.
2. For quality-related issues, we will, at its sole option, either repair or replace the defective product or part. We are not liable to the buyer for any operational loss or other indirect or consequential losses whatsoever.

Not Covered Under Warranty:

- Damage from outside sources
- Damage from misuse of products (including, but not limited to: falls, extreme temperatures, water, operating devices improperly, incorrect connections, incorrect battery use)
- Damage caused by accident, improper care, negligence, excessive wear and tear, or improper installation or assembly contrary to any written installation instruction
- Items that have expired their warranty period
- Non quality-related issues (after 30 days of purchase)
- Repairs through 3rd parties

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
FCC RF Radiation Exposure Statement:
3.This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
4.This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 5mm between the radiator and your body.

QUICK START GUIDE

TMECTO BOOM

WHAT'S IN THE BOX

Bluetooth Speaker x 1
Type-C Charging Cable x 1
AUX Cable x 1

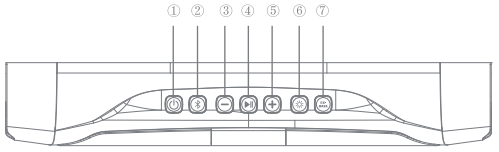

1. Power Button/Charging indicator
2. Bluetooth Button/BT&TWS indicator
3. Previous Track/Volume –
4. Play/Pause/Call Button
5. Next Track/Volume +
6. Light Button/Light indicator
7. EX-BASS Button/EX-BASS indicator

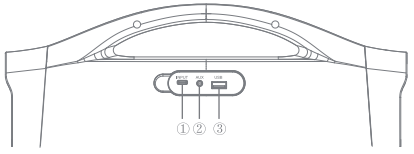

1. Type-C Charging Port (for charging the speaker)
2. 3.5mm AUX-IN Jack
3. USB Charging Port (for charging phones/tablets)

SPECIFICATIONS

Product Name	TMECTO BOOM	SNR	85dB
Bluetooth Version	Bluetooth 5.3	Lighting	Mode 1 ~ Mode 8 /Light Off
Working Range	100ft (Up to 33ft in Multi-sync mode)	Charging Input	DC 5V/3A
Output Power	70W	Battery	10000mAh Battery

CONTROL BUTTONS

				Long press	Long press to disconnect a Bluetooth device; Long press again to reconnect to the Bluetooth device
	Long press	Power on/off			
	Short press	Check the battery level		Short press	Answer/End a call
	Short press	Play/Pause		Long press	Reject a call
–	Short press /Long press	Volume –/ Previous track			
+	Short press /Long press	Volume +/ Next track		Short press	Mode 1 ~ Mode 8 /Light Off
EX-BASS	Short press	Enable/Disable Enhanced Bass	Others		
	Double-click	Open/Close TWS		Press twice in quick succession	Enable/Disable prompts of power on and power off

LED INDICATORS

Bluetooth & TWS Indicator

Mode	LED Status	Description
Bluetooth	Flash blue Slowly	Bluetooth pairing
Bluetooth	Solid blue	One Bluetooth speaker connected
TWS	Flash blue quickly	Enters TWS mode
TWS	Solid blue or Solid green	When two speakers are connected , the Bluetooth indicator of the primary speaker will be solid blue , and another speaker will be solid green

Other Indicators

LED Indicator	LED Status	Description
EX-BASS	Solid white	Enhanced Bass enabled
EX-BASS	Off	Enhanced Bass disabled
	Solid white	Mode 1 ~ Mode 8
	Off	Light Off

GETTING STARTED

1. CHARGING YOUR SPEAKER

- Fully charge the built-in battery via the Type-C port before using it for the first time, which will prolong the battery lifespan.
- When charging, The charging indicator will glow solid red, Charging indicator glow solid white when fully charged.
- Please recharge the speaker at least once every 3 months.

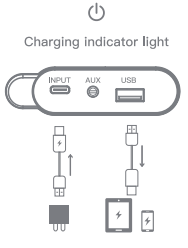

2. POWERING ON/OFF

- To power on, long press for 2 seconds until the power indicator turns solid white. You will hear a prompt tone and the Bluetooth indicator will flash blue indicating the speaker is in pairing mode.
- To power off, long press for 2 seconds until all indicators turn off.

3. CONTROLLING LIGHT

Press to toggle between **eight** different light modes or turn the lights on or off.

4. CONNECTING A BLUETOOTH DEVICE

Please make sure your TMECTO BOOM has sufficient battery power.Otherwise, it may fail to be connected when the battery is too low.

① Long press for 2 seconds to power on the speaker and enter pairing mode.

② On your Bluetooth device, turn on Bluetooth, tap"TMECTO BOOM" and pair. Once successfully paired, the Bluetooth indicator will be solid blue and you will hear a prompt tone.

To reconnect the Bluetooth-enabled device:

- When you turn on this speaker next time, it tries to reconnect the last connected device automatically.
- If not, manually select "TMECTO BOOM" on your Bluetooth device to connect.

● If you want to connect to a new Bluetooth device, please disconnect the existing Bluetooth device..

5. DISCONNECTING BLUETOOTH CONNECTION

Long press on the speaker to disconnect a Bluetooth device. The Bluetooth indicator will flash blue and you will hear a prompt tone.
Long press again to reconnect to the Bluetooth device.

6. TWS (True Wireless Stereo) Mode

Two identical TMECTO BOOM speakers can pair up with each other for true wireless stereo sound. In TWS mode, connect either one of the two speakers with your mobile device so that both speakers play the same audio (one as L channel and the other as R channel).

On both TMECTO BOOM speakers, Double-click the Bluetooth button to enter TWS pairing mode.

- The speakers start searching for each other to establish the TWS connection. The TWS LED indicator on both speakers will flash blue.
- Once successfully connected, the TWS LED indicator on primary speaker will be steady blue while on secondary speaker will be steady green.

TWS	Double click	Enter TWS pairing mode
	Flashing blue quickly	TWS pairing
	Steady blue (Primary speaker)	TWS connected
	Steady Green (Secondary speaker)	

To exit the TWS mode, Double-click the Bluetooth button.

成品尺寸：285×180mm
材质：105克铜板纸正反面印刷
工艺：三折页风琴折

285mm

180mm

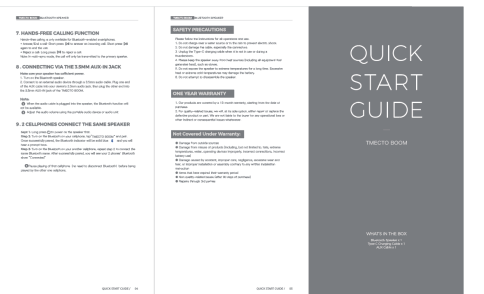

正面

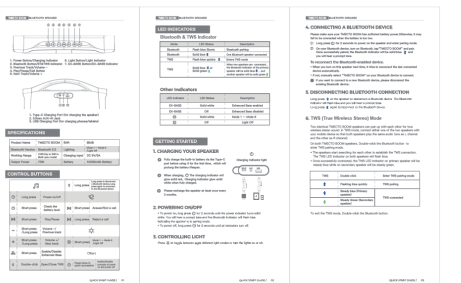

反面