Touch Lamp portable Speaker

User Manual

Thank you for choosing us. Please read this user manual before using the speaker.

Operation Image:

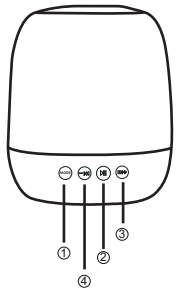

① Press and hold for about 3 seconds to turn on/off

② Short press to pause play

③ Short press the previous song/long press the volume up

④ Short press one song/long press to decrease volume

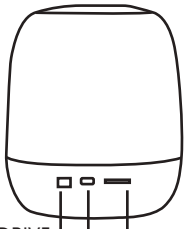

USB FLASH DRIVE PLAYBACK MODE

TF\micro SD Card slo

TYPE-C port(for recharging)

Metal Handle

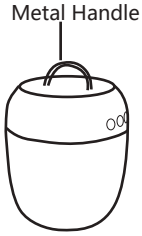

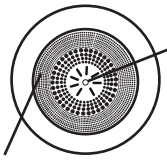

1. Touch variable light
2. Short touch switchable light brightness and color
3. Long touch for 3 seconds to switch between warm light and rainbow light

Speaker mesh

Material	ABS + Metal
Lamp Power	1.6W
Lumen	160LM
Color	White/Black
LED Size	2835
Battery	Li-ion 3.7V
Speaker output power	3W
Driver Unit	℄ 52mm, 4Ohm,3w
Frequency Response	50HZ---20KHZ
Transmission Range	10 meters/32.8ft
Product dimension	℄ 110mm * 130mm
Frequency	2.402GHZ---2.48GHZ
Input power	DC5V

POWER SWITCH:

Long press "MODE " to turn it on or off. The speaker will first enter Bluetooth Mode; after the boot, light will be on by soft touch. Bluetooth Mode will instantly switch when click the Mode button icon (TF Card Music Playing will automatically switch when inserted TF card). Voice Prompts will sound before Bluetooth pairs and TF card music playing.

CONTROL PANEL:

1, Mode icon:

Device on/off switching function.

Bluetooth playback mode, USB flash drive playback mode and TF card music playback mode switching function.

2, Play and Pause icon

Short press the" ▶II " button for music play or pause function.

3, Next song/ Volume up icon

Short press " ⏭+ " to play the next song and long press to volume up.

4, Previous song/Volume down icon

Short press " – ⏮ " to play the previous song and long press to volume down.

PLAYBACK MODE

1, BLUETOOTH PLAYBACK MODE

A, Bluetooth connection:

This speaker supports Bluetooth devices with A2DP function. First turn on the power switch, and then enter the Bluetooth mode, the Bluetooth indicator light blinks blue alternately, accompanied by voice prompts, this time the speaker is in a waiting state to connect, only in this state Bluetooth can be connected successfully.

B, Mobile phone connection:

Step 1: Open the Bluetooth setting on your phone or tablet and click "search device".

Step 2: When the screen displays the "F68" character, you have found your Bluetooth speaker, tap "F68" on your device to pair and connect.

Step 3: Enter"0000" and click OK if there's a prompt that requires you to enter a password.

Step 4: The phone or tablet will be alerted when the pairing is successful. The speaker indicator stops flashing blue.

C, Computer connection:

Activate the Bluetooth function first if the computer has Bluetooth device. It's necessary to install the Bluetooth driver and plug in the Bluetooth adapter when there is no Bluetooth available.

Step 1: Click the Bluetooth icon at the lower right the computer by mouse right button, choose "device adding".

Step 2: Bluetooth adapter will search for the speaker automatically, and the screen displays the character "F68".

Step 3: The computer will install the driver automatically after double click the character "F68" and display driver install successfully.

Step 4: Double click the Bluetooth icon, the speaker connects the computer successfully and be in use. Please check the computer audio device has switched to Bluetooth mode or connected well if the speaker still cannot play music successfully.

Note

1, If the speaker has ever been connected to a Bluetooth device, it will automatically connect to the last Bluetooth device when you turn it on.

2, If the speaker has not been connected to a Bluetooth device before, it will enter the wait for connection status, click to connect.

3, When the speaker is connected to a Bluetooth device, other Bluetooth devices can not be connected to the speaker.

2, USB FLASH DRIVE PLAYBACK MODE:

When you insert a USB flash drive, the speakers will automatically switch to USB flash drive playback mode.

3, TF CARD MUSIC PLAYING:

When you insert a TF card, the speakers will automatically switch to TF card playback mode.

INDICATOR LIGHT:

1, Bluetooth indicator:

Indicator light will flash blue light rapidly while waiting for the Bluetooth connection state, and the blue light stops flashing to indicate that the speaker enters the Bluetooth music playback state.

2, Charging:

Please make sure the speaker is fully charged when you use it for the first time. Charge the speaker using the supplied USB cable, which is compatible with any computer or cell phone charger with a 5 V output. While charging, the charging indicator will light up red and will turn off when the battery is fully charged. The length of a full charge is 4 hours.

LAMP FUNCTION

1, Warm Sleeping Light Mode

Touch the lamp to turn on the default warm light lighting mode, touch the top grill of the lamp to adjust the brightness of the light, a total of 5 levels of brightness can be adjusted.

2, Colorful Mood Lighting Mode

Long press touch the top grid of the fixture will open the colorful mood light mode, the default first mode is red light. In this mode, touch the grid, the light color will switch between red, blue, green, purple, cyan, yellow, breathing light, and colorful flashing lights that dance with the music. Long press and touch the grid at the top of the fixture again to switch back to the warm sleeping light.

Frequently Asked Questions

Questions /Solutions

Unsuccessful pairing and connection repeatedly

1. Check the speaker and make sure it is in the searching state or reboot the speaker.
2. Connection is difficult when there are too many Bluetooth devices nearby. Turn off other Bluetooth devices.
3. Turn off the Bluetooth device that was connected with the Bluetooth speaker last time, and reconnect the speaker.

Muted or distorted sound

1. Check the volume of your phone or the speaker, and adjust the volume.
2. The battery is low. Please charge it.

Choppy music play

1. Check if the device is beyond the effective connection distance.
2. Check if there is any obstacle between the speaker and your device.

The indicator not shining in Bluetooth mode

1. The battery is low. Please charge it.
2. Please reboot the speaker.

FCC Caution：

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.