编码：SMS25-00018
铜版纸90克 彩色
280*140mm/*5 正反印刷 打钉

ES8085 User Manual

Contents

1 Riding Safety ---- 02
2 Packing List ---- 04
3 Diagram ---- 05
4 Assembling Your KickScooter ---- 06
5 First Ride ---- 07
6 Charging ---- 08
7 Learning to Ride ---- 08
8 Warnings ---- 10
9 Folding and Carrying ---- 14
10 Maintenance ---- 15
11 Specifications ---- 16
12 Certifications ---- 17
13 Trademark and Legal Statement ---- 20
14 Contact ---- 21

Thanks for choosing the KickScooter ES8085!

Thanks for choosing the KickScooter ES8085(hereinafter referred to as KickScooter)!

Your KickScooter is a recreational product with mobile app, allowing you to connect with other riders.

Enjoy your ride and connect with riders worldwide!

1 Riding Safety

1. The KickScooter is a recreational product. Before mastering riding skills, you need to practice. Neither is responsible for any injuries or damage caused by a rider's inexperience or failure to follow the instructions in this document.
2. Please understand that you can reduce the risk by following all the instructions and warnings in this manual, but you cannot eliminate all the risks. Remember that wherever you ride the KickScooter you risk injury from loss of control, collisions, and falls. When entering into public spaces always comply with the local laws and regulations. As with other vehicles, faster speeds require longer braking distance. Sudden braking on low traction surfaces could lead to wheel slip, or falls. Be cautious and always keep a safe distance between you and other people or vehicles when riding. Be alert and slow down when entering unfamiliar areas.
3. Always wear a helmet when riding. Use an approved bicycle or skateboard helmet that fits properly with the chin strap in place, and provides protection for the back of your head.
4. Do not attempt your first ride in any area where you might encounter children, pedestrians, pets, vehicles, bicycles, or other obstacles and potential hazards.
5. Respect pedestrians by always yielding the right of way. Pass on the left whenever possible. When approaching a pedestrian from the front, stay to the right and slow down. Avoid startling pedestrians. When approaching from behind, announce yourself and slow down to wishing speed when passing. Please obey local traffic laws and regulations if situation is different.
6. In places without laws comply with the safety guidelines outlined in this manual. is responsible for any property damage, personal injury/death, accidents, or legal disputes caused by violations of the safety instructions.
7. Do not allow anyone to ride your KickScooter on his/her own unless they have carefully read this manual and followed the New Rider Tutorial in the App. The safety of new riders is your responsibility. Assist new riders until they are comfortable with the basic operation of the KickScooter. Make sure each new rider wears a helmet and other protective gear.
8. Before each ride check for loose fasteners and damaged components. If the KickScooter makes abnormal sounds or signals an alarm, immediately stop riding.
9. Be alert! Scan both far ahead and in front of your KickScooter — your eyes are your best tool for safety avoiding obstacles and low traction surfaces (including, but not limited to, wet ground, loose sand, loose gravel, and ice).
10. To reduce risk of injury, you must read and follow all "CAUTION" and "WARNING" notices in this document. Do not ride at an unsafe speed. Under no circumstance should you ride on roads with motor vehicles. The manufacturer recommends riders be 14+ years old. Always follow these safety instructions:
    A. People who should not ride the KickScooter include:
    i. Anyone under the influence of alcohol or drugs
    ii. Anyone who suffers from disease that puts them at risk if they engage in strenuous physical activity.
    iii. Anyone who has problems with balance or with motor skills that would interfere with their ability to maintain balance.
    iv. Anyone whose weight is outside the stated limits (see Specifications).
    v. Pregnant women.
    B. Riders under the age of 18 years old should ride under adult supervision.
    C. Comply with local laws and regulations when riding this product. Do not ride where prohibited by local laws.
    D. To ride safely, you must be able to clearly see what is in front of you and you must be clearly visible to others.
    E. Do not ride in the snow, in the rain, or on roads which are wet, muddy, icy, or that are slippery for any reason. Do not ride over obstacles (sand, loose gravel, or sticks). Doing so could result in a loss of balance or traction and could cause a fall.
11. Do not attempt to change your KickScooter if, the charger, or the power cord is wet.
12. As with any electronic device, use a surge protector when charging to help protect your KickScooter from damage due to power surges and voltage spikes. Only use the Segway supplied charger. Do not use a charger from any other different product model.
13. Use only approved parts and accessories. Do not modify your KickScooter. Modifications to your KickScooter could interfere with the operation of the KickScooter, could result in serious injury and/or damage and could void the Limited Warranty.

2 Packing List

Assembled KickScooter

User Materials

Accessories



When unpacking your KickScooter, please verify that the above items are included in the package. If you are missing any components, please contact your dealer/distributor or nearest service center (see Contact in the user manual). After verifying that all components are present and in good condition, you can assemble your new KickScooter.

Please retain the box and packaging materials in case you need to ship your KickScooter in the future.

Remember to power off your KickScooter and unplug the power cord before assembling, mounting accessories, or cleaning the mainframe.

3 Diagram

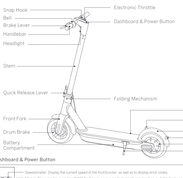

Dashboard & Power Button

- Speedometer: Display the current speed of the KickScooter, as well as to display error codes.
- Mode: Three modes available: Eco (Energy saving mode/low speed mode/cruise, suitable for beginners), "D" for Standard mode and "S" for Sport mode (powerful, only recommended for skilled riders).
- Headlight: Turn on/off headlight when in power on status.
- Battery Level: The icon indicates that the KickScooter has been successfully connected to the mobile device.
- Error: The wrench icon indicates that the KickScooter has detected an error.
- Battery Level: The battery power is indicated by 5 bars, each representing approximately 20% of a full battery.
- Power Button: Press the button to turn the KickScooter on, and press and hold the button for 2 seconds to turn the KickScooter off. When the KickScooter is on, press the button to turn the headlight on/off, and double press to switch between modes.

4 Assembling Your KickScooter

1. Unfold the handlebar stem and fasten it. Then unfold the kickstand to support the KickScooter.

2. Firmly connect the wires inside the handle and the stem. Slide the handle onto the stem. Be aware of the correct orientation.

3. Install six screws (two on each side) with the included hex wrench.

4. Verify that your KickScooter can be powered on and off.

5 First Ride

LinkScooter

⚠ There are safety rules when learning to ride the KickScooter. You must read the Riding Safety via the App before your first ride.

For your safety, your new KickScooter is not activated and will beep occasionally after Power ON.

Until activated, the KickScooter maintains very low riding speed, and cannot be ridden with full function. Install the App on your mobile device (with Bluetooth 4.0 or above), connect to the KickScooter with Bluetooth, and follow the App instructions to activate your KickScooter and enjoy the full performance.

Scan the QR code to download the App.

1. Install the App and register/login.
2. Power on the KickScooter. A blinking Bluetooth icon indicates the KickScooter is waiting for a connection.

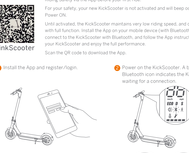

3. Click "Vehicle"→ "Scan for Vehicle" to connect to your KickScooter.
   The KickScooter will beep when the connection is successful. The Bluetooth icon will stop blinking and remain illuminated.
4. Follow the App instructions to active the KickScooter and learn how to ride safely.
   You can now start to use your KickScooter, check the status with App, and interact with other users. Have fun!

6 Charging

⚠ WARNING
Do not charge if the charge port or power cord is wet.
Do not charge or use your battery if it is damaged or see trace of water.
Close the charge port cover when not charging.

7 Learning to Ride

Wear an approved helmet and other protective gear to minimize any possible injury.

1. Power on the KickScooter and check the power level indicator. Charge the KickScooter if the battery level is low.

2. Stand on the footrest.
3. Put your other foot on the footrest to keep both feet stable. Press the throttle on the handle bar to speed up when you are balanced.
   Note: for your safety, the motor will not engage until the KickScooter reaches 1.86 mph (3 km/h).
4. Slow down by releasing the throttle, and brake by squeezing the brake lever.
5. To turn, shift your body weight and turn the handle slightly.

⚠ WARNING
When hard braking, you risk serious injury due to loss of traction and falls.
Maintain a moderate speed and look out for potential hazards.

8 Warnings

⚠ WARNING
Failure to follow these instructions could lead to serious injury.

⚠ DO NOT ride the KickScooter in the rain.
DO NOT get wet.

⚠ DO NOT ride over speed bumps, thresholds, or other bumps at HIGH SPEED.

⚠ DO NOT press the throttle when walking with the KickScooter.

⚠ Avoid contacting obstacles with the tire/wheel.

⚠ Watch your head when passing through doorways.

⚠ Do not keep your feet on the rear fender.



⚠ DO NOT carry heavy objects on the handlebar.

⚠ DO NOT ride the KickScooter with only one foot.

⚠ DO NOT ride on public roads, motorways, or highways.

⚠ DO NOT rotate the handle violently while driving at high speed.

⚠ DO NOT touch the hub motor after riding because it can get hot.

⚠ DO NOT take your hands off the handlebar while riding. Do not ride with one hand only.

⚠ DO NOT ride through puddles or other bodies of water.

⚠ The KickScooter is for one rider only. Do not carry any passengers. Do not carry a child. Do not ride when pregnant.

⚠ DO NOT ride up and down stairs or jump over obstacles.

⚠ Do not use mobile phone or wear earphones when operating the KickScooter.

⚠ WARNING
Always keep both hands on the handlebar or you risk serious injury due to loss of balance and falls.

9 Folding and Carrying



Folding

Turn off your KickScooter. Turn the safety hook counterclockwise and open the quick release lever.

Align the snap hook and the buckle and hook them.

Disengage the snap hook from the buckle. Fold the handlebar stem up, close the quick release lever and turn the safety hook clockwise.

Carrying

When your KickScooter is folded up, lift it by the stem to carry.

10 Maintenance

Cleaning and Storage

Use a soft, wet cloth to wipe the mainframe clean. Dirt hard to remove can be scrubbed with a toothbrush and detergent, then cleaned with a soft, wet cloth.

NOTE

Do not wash your KickScooter with alcohol, gasoline, acetone, or other corrosive/volatile solvents. These substances may damage the appearance and internal structure of your KickScooter. Do not wash your KickScooter with a power washer or hose.

⚠ WARNING

Make sure the KickScooter is powered OFF, the power cord is unplugged, and the rubber cap on the charge port is tightly sealed before cleaning. otherwise you may damage the electronic components.

Store your KickScooter in a cool, dry place. Do not store it outdoors for extended periods of time. Exposure to sunlight and extreme temperatures (both hot and cold) will accelerate the aging process of the plastic components and may reduce battery life.

Tire Pressure

Inflate tires to 32~37 psi. Inflate both tires equally.

Battery Pack Maintenance

Do not store or charge the battery at temperatures outside the stated limits (see Specifications). Do not puncture the battery. Refer to your local laws and regulations regarding battery recycling and/or disposal.

A well-maintained battery can perform well even after many miles of riding. Charge the battery after each ride and avoid draining the battery completely. When used at room temperature (70°F (22°C)) the battery range and performance will gradually decrease after approximately 300 charge cycles. The battery can be charged between 32°F (0°C) and 113°F (45°C). Charge can be half that of the same battery at 50°F (10°C). Battery range will recover when temperature rises. More details are available in the App.

NOTE

Typically, a fully charged battery should retain power for (20-30) days. If low power battery should retain power for (20-30) days, it indicates that the battery is aging. Long-term storage of a discharged battery may cause irreversible damage to the battery. Electronics inside the battery record the charge/discharge condition of the battery; damage caused by over-charging or under-charging will not be covered by the Limited Warranty.

⚠ WARNING

Do not attempt to disassemble the battery. Do not touch battery contacts. Do not dismantle or puncture the casing. Do not short the battery. Do not expose the battery to water or fire. Do not place the battery in electric shock. No user serviceable parts. Do not charge or use your battery if it is damaged or see trace of water.

⚠ WARNING

Do not ride when the ambient temperature is outside the machine operation temperature (see Specifications) because low/high temperature will limit the maximum power/torque. Doing so could cause personal injury or property damage due to injury or falls.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.