AISOMEX 艾硕美

K18
原声迷你扩音器
使用手册

在使用本产品前请仔细阅读此使用说明书并按照说明正确指引操作本产品
请妥善保管好此说明书以备查阅

一 温馨提示

为确保安全，请先详细阅读及遵守以下的安全指示

* 本公司不断致力提高产品质量和功能，产品设计如有更新恕不另行通知
* 说明书已仔细核对，若有误差，本公司不承担任何后果
* 请勿自行打开或任意拆解，维修产品组件
* 购买时以实物规格为准，示意图仅供参考，本公司保留对此资料有关内容的解释权

二 充电说明

* 请使用5V-2A的电源适配器！
* 请勿在高温，潮湿的环境下使用本机器
* 长时间不使用时，建议每个月给机器充一次电,以保证在需要使用时电池电量充足及机器能正常使用!
* 请勿自行进行任何维修，如果产品发生质量问题，请联系经销商或制造商

(温馨提示:超过2小时不使用时请关机,以保证电量充足)

三 功能说明

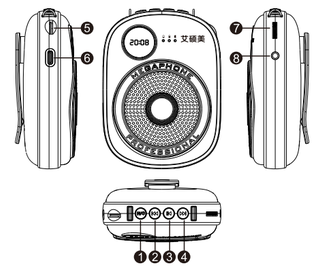

1.长按开/关机，短按摸式切换
2.短按上曲，长按快退
3.播放/暂停
4.短按下曲，长按快进
5.TF卡播放
6.Type-C：5V-2A充电
7.拔轮音量大小调节
8.MIC：唛克风接口

四 技术指标

蓝牙版本	5.0
充电输入	5V-2A
输出功率	10W
信噪比	≥75dB
失真度	2-5%
频率响应	150Hz-20KHz
电池	18650可充电锂电池
蓝牙连接距离	10米(无障碍情况)
⚠ 安全要求	请在使用前仔细阅读本说明书
	请在常温环境下使用本产品
	请不要在相对温度大于85%的环境下使用本产品
	请不要将本产品在太阳下暴晒或靠近火炉等温度过高，灰尘多，腐蚀性气体多的地方
	请不要撞击或掉落本产品，若有损坏请勿拆卸
	外部脏污时，用干净的软布擦拭，但请留意软布水渍，以免流入产品内部造成损害

五 故障排除

问题点	原因及解决方法
不开机	* 请给主机充电，满电后再尝试开机
蓝牙配对不成功	* 请检查手机蓝牙是否打开 * 重新开机配对 * 周边蓝牙设备太多,造成搜索困难，关掉其它蓝牙设备，重新搜索并连接
声时小或失真	* 主机电量不足 * 机器调节音量到合适大小 * 检查手机音量，调节到合适声音大小
蓝牙音乐播放出现断音	* 是否超出音箱有效连接距离（10m距离） * 音箱和手机间有障碍物
扩音时有啸叫	* 麦克风与扩音器距离太近 * 麦克风不能正对着扩音器喇叭扩音

* 注意: 如以上方法未能排除故障,请联系商家,
不可自行拆修机器,否则不予保修

AISOMEX

K18
Instruction Manual

Before using the product, please read the manual carefully and operate the product according to the instructions Please keep the manual properly for reference

Reminder

* The company is constantly committed to improving product quality and function. If the product design is updated Without notice
* The instructions have been carefully checked. If there is any error, the company will not bear any consequences
* Do not open or disassemble or repair the product components by yourself
* The purchase shall be subject to the physical specifications The schematic diagram is for reference only. The company reserves the right to The right to interpret the relevant contents of this information

Charging instructions

* Please use a 5V-2A power adapter!
* Do not use the machine under high temperature humidity
* When it is not used for a long time, it is recommended to charge the machine once a month to ensure that the When it needs to be used, the battery is sufficient and the machine can be used normally!
* Do not carry out any maintenance by yourself. If the product has quality problems, please contact Distributor or manufacturer

Function Introduction

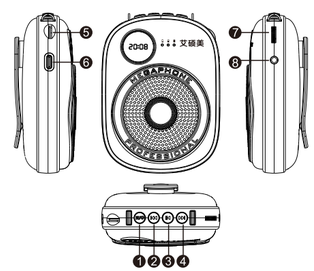

1. Long press on / off, short press touch switch
2. Short press the previous song and long press fast back
3. Play / pause
4. Short press one song, long press fast forward
5. TF Card playback
6. Type-C: 5V-2A charging
7. Dial volume adjustment
8. Mic: Mark Kefeng interface

Technical parameter

Bluetooth version	5.0
Charging input	5V-2A
Peak power	10W
S/N Ratio	≥75dB
Degree of distortion	2-5%
Frequency response	150Hz-20KHz
Bluetooth connection distance	10M barrier-free
⚠ Safety requirements	Please read this manual carefully before use
	Please use this product under normal temperature
	Please do not use this product in an environment where the relative temperature is higher than 85%
	Please do not expose this product to the sun or near a stove where the temperature is too high, dusty, and corrosive gas
	Please do not hit or drop the product, if it is damaged, do not disassemble
	When the exterior is dirty, wipe the dirty area with a clean soft cloth, but please pay attention to water stains on the soft cloth to prevent it from flowing into the product and causing damage

Troubleshooting

Problem points	Causes and Solutions
Bluetooth pairing failed	* Reboot pairing * There are too many Bluetooth devices around, which makes it difficult to search. Turn off other Bluetooth devices and search again
Low or distorted sound	* Low battery * Adjust the volume to a suitable level
Interruption of Bluetooth music	* Whether it exceeds the effective connection distance of the speaker (10 meters effective distance) * There are obstacles between speaker and mobile phone
There is a whistling sound when amplifying	* The microphone is too close to the loudspeaker * The microphone cannot be amplified directly against the loudspeaker

Note: If the above method fails to eliminate the fault, please contact the dealer, do not disassemble and repair the machine by yourself, otherwise the warranty will not be provided

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.