95.00 mm

# COHYAN

Instruction Manual

K30

Important: Please read this manual carefully before use and follow all instructions. Keep it for future reference.

## Charging Instructions

* Power Adapter: Use only with a 5V/2A power adapter.
* Environment: Avoid using or storing the device in hot or damp places.
* Long-Term Storage: If you're not going to use the device for a while, give it a full charge every month. This keeps the battery healthy and ready to go when you need it.
* Repairs: Don't try to fix it yourself. If you run into any problems, get in touch with your dealer or the manufacturer for help.
* (Quick Tip: To save battery, just turn it off if you won't be using it for over 2 hours.

## Technical Specifications

Bluetooth Name: K30

Charging Input: 5V/2A

Input Sensitivity: 600mV

Output Power: 10W

Total Harmonic Distortion (THD): 2–5%

Frequency Response: 150Hz – 20kHz

Bluetooth Range: Up to 10m (33 ft) / Open space

## Product Features

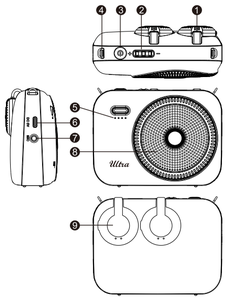


(1) Wireless Mic
(2) Volume Control Wheel
(3) Power/Mode Button
(4) Belt Clip
(5) Status Light
(6) USB Type-C Charging Port
(7) Mic Input Jack
(8) Speaker
(9) Wireless Mic Charging Case

## How to Use

**• Power On/Off**

To turn on: Press and hold Button ⏻ You'll hear a "ding-dong" tone, and the device will start up in PA Mode (default).
To turn off: Press and hold the same button again.

**• Adjust Volume**

Swipe left or right to adjust the device and speaker volume up or down.

**• Switch Modes**

Press Button ⏻ to switch modes. You will hear a "ding-dong" tone to indicate the current mode
(PA Mode or Bluetooth Mode).

**• PA Mode**

The device starts in PA Mode by default. To use it with a wired microphone, plug into the 3.5mm mic jack, speak into the mic, and your voice will be amplified.

**• Bluetooth Mode**

Switch to Bluetooth Mode: Press Button ⏻ You'll hear a "ding-dong" tone to confirm.
Pair Your Device: Turn on Bluetooth on your phone or tablet, then find and select "K30" in the list of available devices.
Play Music: Once connected, open any music app and start playing. The audio will come through the speaker.

**• Low Battery Alert**

Low Battery Alert: When the battery is running low, you'll hear a repeating "beep-beep" sound from the device.
Charging Indicator: While charging, the indicator lights will light up in sequence. All lights will turn off once the battery is fully charged.

70.00 mm

## Wireless Microphone Features

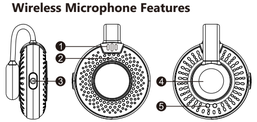


(1) Microphone
(2) Status Light
(3) Power Button
(4) Magnetic Connector
(5) Charging Contacts

**• Indicator Light Status**

Not Connected / Searching: Blue light flashes slowly.
Connected: Blue light stays on steadily.
Charging: Red light stays on steadily.
Fully Charged: Red light turns off.
Mic Muted: Blue light flashes rapidly.

## Wireless Microphone Instructions

**Power On/Off & Manual Pairing**

To Set Up and Use Your Wireless Microphone
Turn on your speaker.
Start by turning on your K30 amplifier.
Power on and pair the microphone.
Press and hold Button ⏻ on the wireless mic to turn it on.
Then, quickly press Button ⏻ again to enter pairing mode.
→ The status light will flash blue while pairing.
Confirm connection.
Once paired, the blue light will stay on steadily.
Mute or unmute while speaking.
To turn your microphone sound on or off during use, just quickly press Button ⏻ .
**Good to know:**
First time Follow step 2 to pair manually.
Next time Just turn the mic on—it will reconnect to your K30 automatically.

**Auto-Reconnect**

Auto-Reconnect Feature
This product features auto-reconnect. If the wireless microphone and speaker briefly disconnect due to distance or interference, they will typically reconnect automatically within moments.

If they don't reconnect within 5 seconds, simply bring the microphone and speaker within 1 meter (3 feet) of each other to re-pair.

**Charging**

Low Battery Warning & Charging
If you see the blue light flash three times, pause for three seconds, and repeat this cycle, it means the battery is low. Please charge the device.
To charge: Use the included 5V/2A power adapter.
While charging: The red light will stay on.
When fully charged: The red light will turn off.

**Important Notes**

The wireless microphone will automatically turn off under these conditions:
When charging – It powers off automatically once placed in the charger.
After 10 minutes of inactivity – If it hasn't connected to the main speaker for 10 minutes, it will shut down to save battery.

To use: Simply clip the wireless microphone to your collar or clothing.

Pro Tip: For best sound quality, keep the wireless microphone 10–15 cm (4–6 inches) from your mouth.

## Troubleshooting

**Problem: Device won't turn on.**
Solution: Charge the main unit fully, then try turning it on again.

**Problem: Bluetooth won't pair.**
Solution: Make sure Bluetooth is turned on on your phone. Then, restart both the speaker and the microphone and try pairing again.

**Problem: Speaker feedback (high-pitched squeal or howling).**
Cause: The microphone is too close to or pointed directly at the speaker.

**Problem: Sound is weak or distorted.**
Solution: Make sure the main unit is fully charged. Also, try adjusting the volume to a comfortable level.

**Note:** If the issue persists after trying the steps above, please contact the seller for support.

## AFTER-SALE SERVICE

Manufacture Name:
Shenzhen AISOMEX Electronic Technology Co.,Ltd
Manufacture Address:
Room 903,Block A,Ruziniu Building,Bantian Street, Longgang District,Shenzhen,Guangdong,China

Customer Support:
For any product issues,please email us at:
Email:18025479038@163.com
Include your:
Order number
Brief issue description
We'll respond within 24 hours.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

•Reorient or relocate the receiving antenna.
•Increase the separation between the equipment and receiver.
•Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
•Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.