A19 USER'S MANUAL

# MOTORBIKE HELMET HEADPHONES

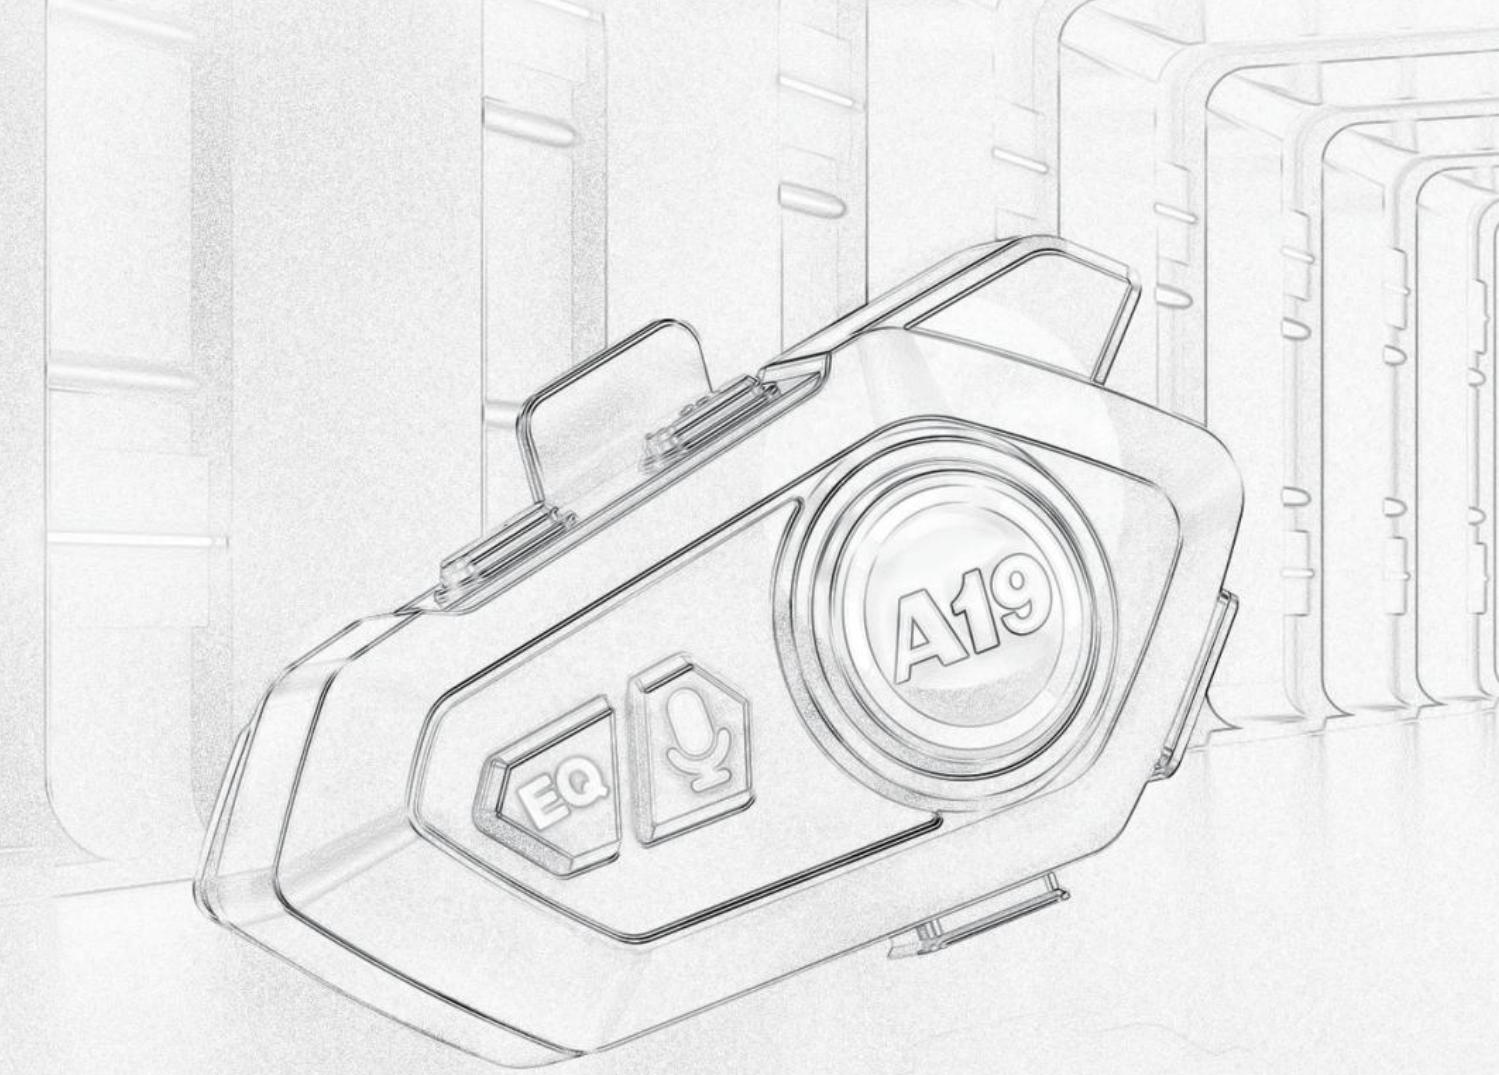

# CONTENTS


English 3-6

日本語 19-21

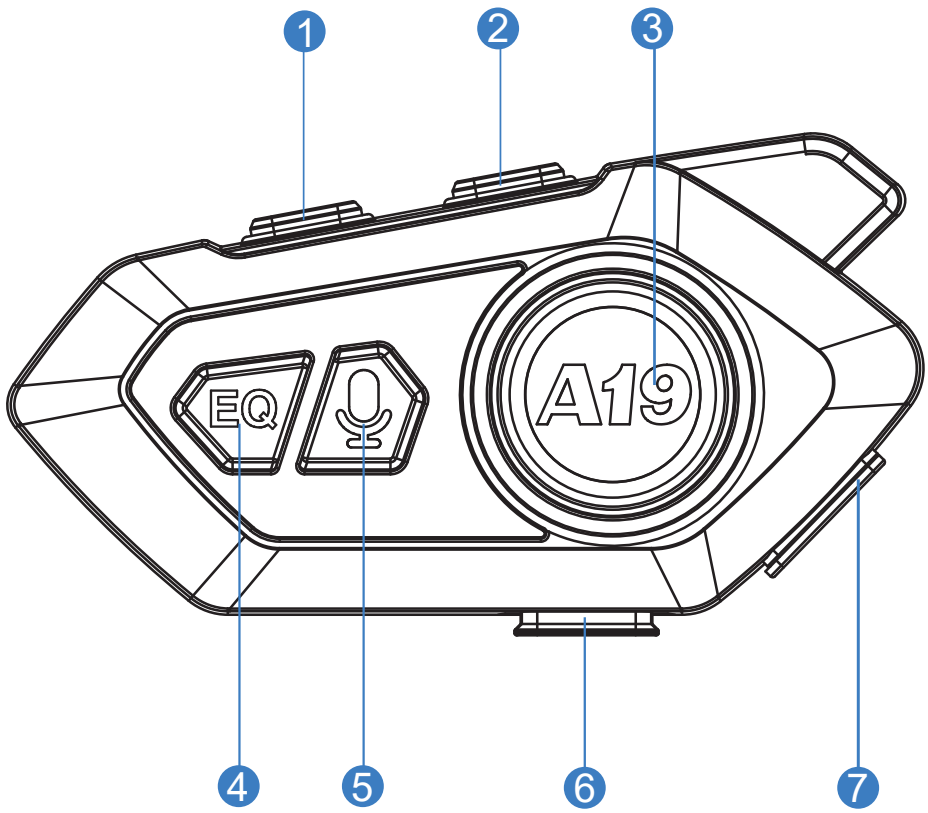


1.Volume down / Previous song

2.Volume up / Next song

3.Power on or off / Play or pause / Answer or hang up / Wireless indicator (Red/green/blue/yellow) / Charging Indicator Light (Red)

4.EQ button/ EQ light (Blue)

5.Voice assistant button / Voice assistant light (Blue)

6.Speaker/Microphone interface

7.Charging port

Important Notice:
Before installing the headphones, follow the Quick Manual instructions to connect your phone and listen to the sound and volume.
If there is a large difference in sound effect and volume after installing it on the helmet, please adjust the position of the speaker in the helmet.

# Power on/off

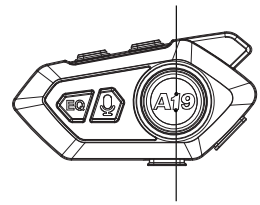


**Power on:** Long press【Power on/off button】for 3 seconds, hear the switch on tone, LED light flashes fast
**Power off:** Long press 【Power on/off button】for 3 seconds, you will hear the switch off tone and the LED light off.
**Switching voice broadcasting:** When the power is on without wireless connection, double-click the【Power on/off button】to switch the voice broadcasting

# Wireless connection

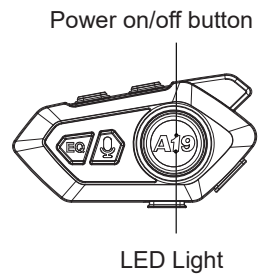


**Wireless connection:** long press【Power on/off button】3 seconds to switch on the mobile phone to open the wireless, search and connect the Wireless name 'A19'.
**Wireless indicator status:** Before Wireless is not connected, the LED light flashes fast; after Wireless is connected, the LED light flashes slowly; when the music is paused, the LED light flashes slowly; when the music is playing, the LED light is on for a long time.
**Clear Wireless pairing record:** When the device is switched on without Wireless connection, press【Volume up and down button】for 5S to clear the Wireless pairing record.

# Telephone function

**Switch automatic/manual answer:** when not connected to the wireless, double-click【Volume up button】to switch manual answer/automatic answer
**Auto answer:** wait 15 seconds for an incoming call and then answer it automatically.
**Manual answer:** short press【Power on/off button】to answer the call
**Refuse to answer:** Long press【Power on/off button】for 2 seconds to refuse to answer during an incoming call;
**End call:** Short press【Power on/off button】 to end the call while on a call
**Redial the last number:**double press【Power on/off button】to redial the last numbe;
**Cancel call:** Short press on the 【Power on/off button】 during a call to cancel the call

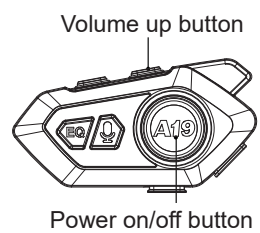


# Music function

**Music play and pause:** When music is paused, short press 【Power on/off button】to play music; when music is playing, short press【Power on/off button】to pause music
**Previous song/Volume down:** short press【Volume down button】to switch to the previous song while music is playing, long press【Volume down button】to reduce the volume.
**Next song/Volume Up:** Short press【Volume up button】to switch to the next song while music is playing, long press【Volume up button】to increase the volume.

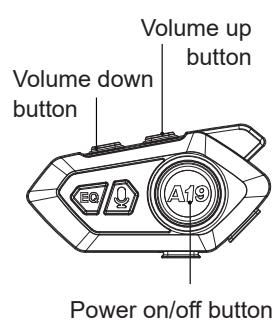

# EQ Sound Function

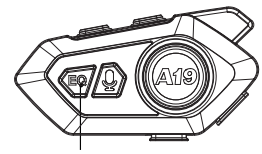


EQ button/
Blue Light

**EQ sound mode:** the machine defaults to music mode, short press 【EQ button】 to enter cycling mode, the blue LED light is on; short press again to exit cycling mode, the blue LED light is off
**Mode switching:** Short press【EQ button】to switch between cycling mode and music mode.

# Charging function/voice assistant

Charging indicator (red)

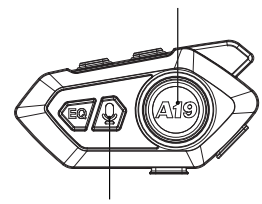


Voice assistant button/
Blue light

**Charging indicator status:** the red light is long lit when charging, the light goes out when full (under the boot state, insert the charger, the machine will automatically shut down)
**AI voice assistant:** under the case of Wireless connection, short press【voice assistant button】to wake up the voice assistant, the blue LED light is long lit; short press again to exit the voice assistant, the blue LED light goes out

# Product List

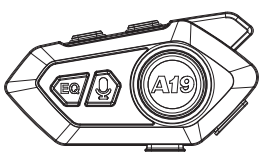


A19 Device*1

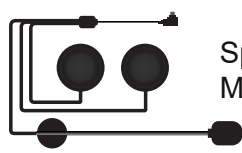

Speakers & Microphone*1

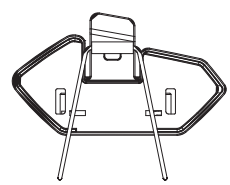

Clip on Base*1

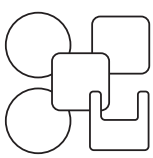

Velcro Package*1

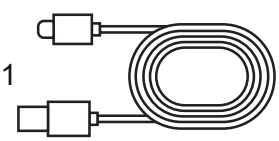

Type-C Charging Cable*1

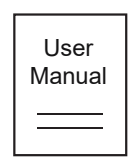


User Manual *1

# Caveat

1. Do not put the product into open flame to avoid explosion;
2. Do not disassemble the product to avoid damage to the product's electronic components;
3. Please do not close to sharp objects to cause damage to the product;
4. Please place it in a dry place if it is not used for a long time;
5. Before using the wireless device, please fully charge it first;
6. If the red light does not come on when charging, the voltage may be too low;
7. In order to extend the life of the built-in polymer battery, please charge the device at least once a month.

# Instruction warning

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference wil not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be detemined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions.

(1)This device may not cause harmful interference.

(2) This device must accept any interference received,
including interference that may cause undesired operation.

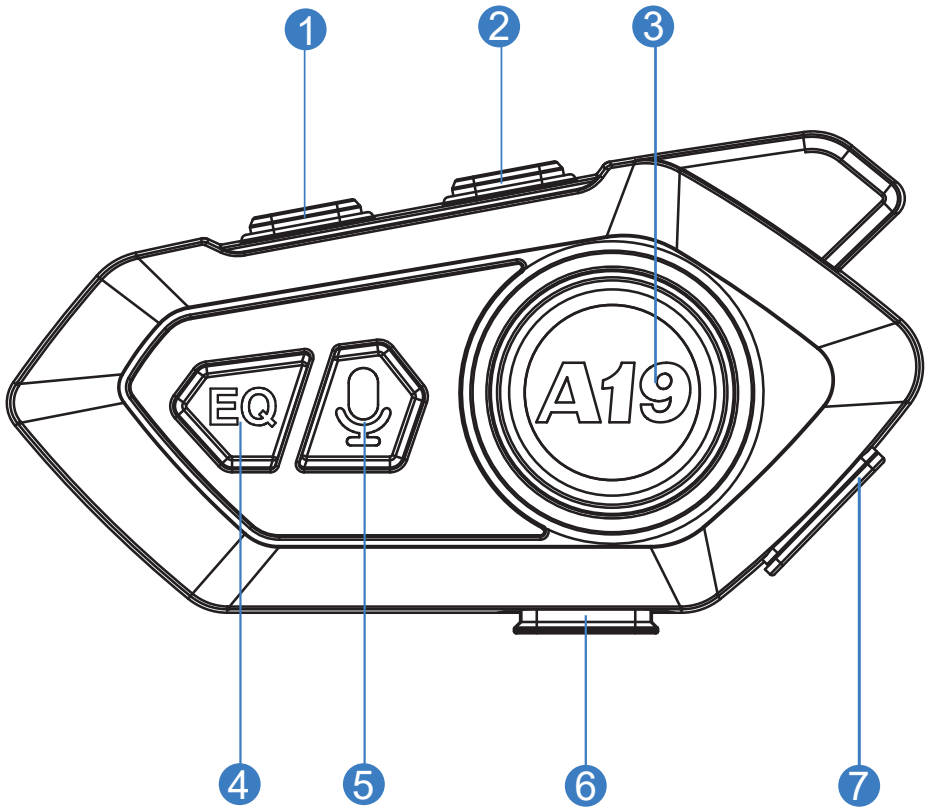


1.ボリュームダウン / 前の曲

2.ボリュームアップ / 次の曲

3.スイッチオン/オフボタン / 再生一時停止 / 応答ハングアップ
ブルートゥースインジケータ（赤/緑/青/黄）/ 充電インジケーター（赤）

4.EQボタン / EQライト（青）

5.音声アシスタントキー
音声アシスタントライト（青）

6.ホーンマーカーコネクター

7.充電ポート

重要な注意事項

ヘッドセットを装着する前に、クイックマニュアルガイドに従って携帯電話を接続し、サウンド効果と音量をテストしてください。

ヘルメットに取り付けた後、サウンド効果と音量に大きな違いがある場合は、ヘルメット内のスピーカーの位置を調整してください。

## スイッチのオン/オフ

**スイッチオン:**【オン/オフスイッチ】を3秒間長押しすると、スイッチオンの音が聞こえ、LEDライトが点滅します。
**スイッチオフ:**【オン/オフスイッチ】を3秒間長押しすると、スイッチオフ音が聞こえ、LEDライトが消灯します。
**音声放送の切り替え:**ブルートゥースの状態を接続せずに電源をオンにし、【オン/オフスイッチ】をダブルクリックし、音声放送に切り替えます。

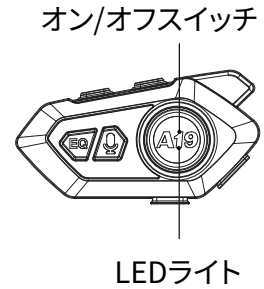


## ブルートゥース接続

**ブルートゥース接続:**長押し【スイッチボタン】3秒ブルートゥースを開くには、携帯電話のスイッチに、検索し、ブルートゥースの名前 “A19”を接続します。
**ブルートゥースインジケータの状態:**ブルートゥースが接続されていない前に、LEDのインジケータランプが速く点滅している;ブルートゥースが接続された後、LEDの光がゆっくりと点滅している;音楽が一時停止されている場合、LEDの光がゆっくりと点滅している;音楽が再生されている場合、LEDの光が長時間点灯している。
**ブルートゥースのペアリング記録をクリアする:**デバイスがブルートゥース接続されていない状態でオンにすると、【ボリュームアップ/ダウンボタン】を5秒間押して、ブルートゥースのペアリング記録をクリアします。

## 電話機能

**自動応答/手動応答の切り替え:**ブルートゥースに接続されていない状態で、【音量+キー】をダブルクリックすると、手動応答/自動応答が切り替わります;
**自動応答:**着信を15秒間待ち、自動的に応答します;
**手動応答:**【スイッチボタン】を短く押し、着信に応答します;
**応答拒否:**【スイッチボタン】を2秒間長押しし、着信中の応答を拒否する;
**通話終了:**【スイッチボタン】を短く押し、通話を終了します;
**ラストコードリダイヤル:**【スイッチボタン】を2回押してラストコードをリダイヤルします;
**通話キャンセル:**【スイッチボタン】キーを短く押すと通話がキャンセルされます

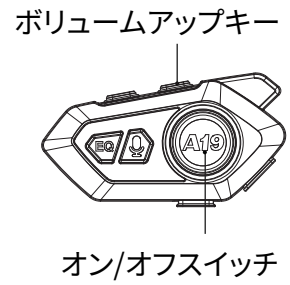


## 音楽機能

**音楽再生と一時停止:**音楽が一時停止しているときに【スイッチボタン】を短く押すと音楽が再生され、音楽が再生されているときに【スイッチボタン】を短く押すと音楽が一時停止されます。
**前の曲/ボリュームダウン:**音楽再生中に【音量が減ります】を短く押すと前の曲に切り替わり、【音量が減ります】を長く押すとボリュームダウンします。
**次の曲/ボリュームアップ:**音楽再生中に【Volume+キー】を短く押すと次の曲に切り替わり、【Volume+キー】を長く押すとボリュームアップします。

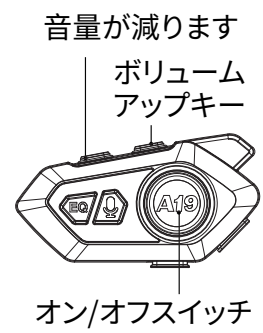

# EQサウンド機能

**EQサウンドモード：**本機はデフォルトで音楽モードに切り替わり、【EQボタン】を短く押すとサイクリングモードに入り、青いLEDライトが点灯し、もう一度短く押すとサイクリングモードを終了し、青いLEDライトが消灯します。
**モード切り替え：**【EQキー】を短く押すと、サイクリングモードと音楽モードが切り替わります。

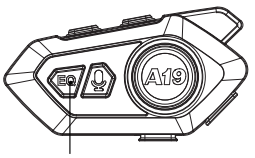


EQボタン
ブルーライト

# 充電機能／音声アシスタント

**充電インジケーターの状態：**充電中は赤いランプが長く点灯し、完全に充電されるとランプが消灯します（ブート状態で、充電器を差し込むと、マシンが自動的にシャットダウンされます）。
**AI音声アシスタント：**ブルートゥース接続の場合、【音声アシスタントボタン】を短く押すと、音声アシスタントが起動し、青色LEDライトが点灯している、音声アシスタントを終了するには、もう一度短く押すと、青色LEDライトが消灯している。

充電インジ
ケーター（赤）

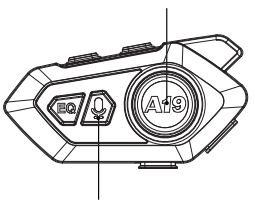


音声アシスタントキー
ブルーライト

# 商品一覧

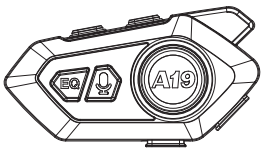


A19メイン
フレーム*1

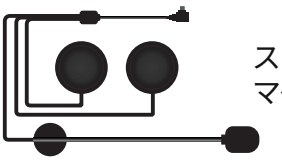

スピーカー
マイク*1

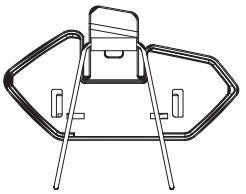

クリップオ
ンベース*1

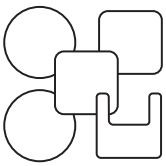

ベルクロ取り
付けキット*1

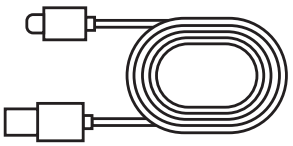

TYPE-C充電
ケーブル*1

取扱説明書*1

# ほら

1.爆発を避けるために、製品を直火に入れないでください;
2.製品の電子機器への損傷を避けるために、製品を分解しないでください;
3.製品に損傷を与えるために鋭利な物体に近づけないでください;
5.ブルートゥースデバイスを使用する前に、まずそれを完全に充電してください;
6.充電時に赤いランプが点灯しない場合、それは電圧が低すぎる可能性があります;
7.内蔵ポリマー電池の寿命を延ばすために、少なくとも月に一度はデバイスを充電してください。