中文

使用说明书

M106

真无线耳机

包装清单

耳机x2pcs
充电仓x1pcs
Type-C充电线 x1pcs
说明书x1pcs

产品结构图







像氟素耳夹一样分开式耳机夹在耳朵上，根据舒适调整耳机的位置直至得整耳夹在耳朵最舒适位置。

产品操作介绍

功能	操作	指示灯	提示音
型号	M106		
开机	将耳机与充电仓内取出下，等待耳机自动进行开机连接状态，进行连接对象，长按“M106”进入连接状态	红蓝灯闪烁	Power on/开机
关机	将耳机与充电仓内或者自动关闭，同时开机状态下，长按触摸键进行关闭状态	红灯长亮3s后熄灭	Power off/关机
充电/开机/配对	充电时耳机开启可以自动入仓内充电	充电时蓝灯闪烁，充满后红蓝灯3s熄灭	Connected/连接成功 Disconnected/断开连接
切换中英文播报，进行语音设置	本设置模式仅使用在下，连接开启后与耳机触摸长按3s，进行语音设置，长按3s退出	/	English/中文
智能语音设置	当双耳配对成功后，自动进入开启语音状态，进行下步骤设置连接开启时有效果状态“M106”进行连接，将与连接设备连接成功后，将提示音：已开启语音设置状态	/	Connected /连接成功
切换音乐/通话模式	连接设备状态下为连云石耳机模式，进行通话状态，长按3s进行切换。	/	音乐/游戏模式 MUSIC/GAME MODE
播放/暂停	音乐播放状态时，双击左耳为暂停播放	/	/
上一首	音乐播放模式状态，连续左耳时长触摸键2次	/	/
下一首	音乐播放模式状态，连续左耳时长触摸键2次	/	/
接听来电	音乐播放模式状态，来电左耳时长触摸键	/	来电来接听/挂断
减小音量	音乐播放模式状态，连续左耳时长触摸键2次	/	/
音量加多	连接状态下，长按左耳时长触摸键2秒钟开，进行音量加多调节	/	灯闪
触控来电	来电状态下，双击打开左耳时长触摸键	/	录机来接听来电
拒接来电	来电状态下，长按打开左耳时长触摸键2秒	/	/
结束电话	通话状态下，双击结束左耳时长触摸键	/	/

耳机参数

1.产品名称：M106
2.蓝牙版本:Bluetooth 6.0
3.支持格式:AAC/SBC
4.蓝牙传输距离:10m
5.超高频率:2.402MHz-2.480GHz
6.超频范围:20Hz-20KHz
7.喇叭尺寸:φ 10mm
8.喇叭阻抗:16Ω±8 3dB
9.喇叭THD:1%±15%
10.喇叭频段:90Hz-8mW
11.耳机电池容量:3.7V/30mAh (聚合物电池)
12.充电仓电池容量：3.7V/300mAh (聚合物电池)
13.充电仓入口:USB Type-C
14.耳机通话时间:>4.5小时
15.耳机单次待机时间:>1.5小时
16.充电仓充电时间:<1.5小时
17.充电仓总耗时长可充电次数 约500左右
18.支持待机时间:>3000小时

简单故障排查

故障	原因	解决方法
不开机	耳机电量不足	放耳机进行充电
耳机与双打	耳机电量不足	放耳机进行充电
充电无指示	耳机电量不足	耳机不在仓指示位置
自动关机	自动电量不足	放耳机进行充电
耳机间连接	设置上次成功连接记录	进行连接记录清除
耳机间连接	外界干扰严重或距离不长太远	请距离或者避免干扰
对方声音小	耳机音量不足够或者量太小	调节耳机音量增强音量大小
对方听不到	外界干扰严重或距离不长太远	选择关于对方或者距离更近平台

安全指引

1.初次使用充电产品，请先充满电再使用。
2.产品不是成员，12岁以下儿童须在成年人监护下使用。
3.请使用通过正规厂家安全认证的5V/1A充电器，避免无指南电压损快充充电电器对产品造成损坏。
4.请在安全的环境下充电，在远离电仓充电时，电量充满后请及时拔掉充电线插拔，避免长时间充电对电池造成损坏。充电仓的充电方式为5V-CB口。
5.本产品内置不可拆卸型可重复充电电池，重复对耳机进行充电和设备电将会翻时间推断导致电池性能下降，这对于所有可以重复充电类电池来说均是不正常现象。
6.本产品所有的锂电池，如长时间未使用，请至少一个月充电一次。
7.若个体有异感，如佩戴时感到皮肤不适，请停止佩戴并咨询医生。
8.在放下连接本产品使用时，请将耳机外盒放置在合适容量大小，以免长期在大容量状态下对仍力度损伤。
9.如果您在头暴露量集中注意力的还动时使用本产品，应注意您自身和他人的安全，例如驾车或骑自行车时，在道路、施工现场，铁路上或是步行去时，您应权下耳机或调整音量以保证以环境和道路的声音，也能够及时警告他号。
10.请遵守所在地区或国家的声音，也能够及时警告他号。
11.本产品含有锂电材料，使用完全部产品时，请注意将其包装或成电电池的电源，如废这部分，电池除。

Simple troubleshooting

Fault	Cause	Resolution
Doesn't turn on	The headphones are low on battery	Charge the headphones
Headphones flash blue	The headphones are low on battery	Charge the headphones
Charging is abnormal	The headphones were not put away	Adjust the position where the headphones are placed
Automatic power off	Automatic low battery	Charge the headphones
The headphones have a delay	The volume is too loud or the distance is too long	Adjust the volume or change the environment
There is a murmur	Serious external interference or too far away from the phone	Change the location or be close to your phone
The other party's voice is quiet	The headphones are not incorrectly or the volume is too low	Adjust the headset mode or volume
The signal is interrupted	Serious external interference or too far away from the phone	Choose a distraction-free environment or be close to your phone

Safety guidelines

1. Before using this product for the first time, please fully charge it before using it.
2. This product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to avoid damage to the product caused by a fast charging charger that supports high voltage.
4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable in time after the battery is fully charged to avoid damage to the battery caused by long-term charging. The charging method of the charging case is the Type-C interface.
5. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the earbuds will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
6. This product comes with a healthy battery, if it has not been used for a long time, please charge it at least once a month.
7. If you feel unwell in any way when wearing it due to individual differences, please stop wearing it and consult a doctor.
8. When using this product with Bluetooth connection, please adjust the sound of the earphones to an appropriate volume to avoid hearing damage caused by long-term loud volume.
9. If you are exposed to loud noise for a concentrated period of time, such as when you should pay attention to your own safety and the safety of others, such as when driving or cycling, on roads, construction sites, railways, or walking, You should remove your headphones or adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.
10. Please follow the relevant regulations of your region or country and use this product as required when driving.
11. This product contains magnetic materials, please keep away from electrical appliances with strong magnetic fields, such as electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
12. It is recommended to use this product in an environment with a temperature of -0°C-45°C. When the ambient temperature is below -0°C, battery performance is limited.
13. Do not use this product in places where it is expressly prohibited to use wireless equipment, such as in hospitals, airplanes, or in areas with flammable gases or explosive hazards.
14. Before approaching medical or industrial equipment or boarding a plane, please ask the local staff if they can use it.
15. If you feel that you are not maintaining this product, stop using this product, turn off all applications, and disconnect all connections or cables to other equipment.
16. Please dispose of waste electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and other household waste.

Warn

1. Please follow the content of this manual to avoid damage to the product due to incorrect operation.
2. Keep the product away from children, fire, heat, refrigeration, water and chemicals.
3. Do not listen at a loud volume for a long time to avoid adverse effects on hearing.
4. Do not immerse the product and accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
5. Do not place the product in the sun or in a place with high temperature. High temperatures can shorten the life of electronic components, damage batteries, and deform certain plastic parts.
6. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
7. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, as the magnetic field in it may cause the magnetic stripe card to be damaged by the magnetic field.
8. Do not apply greater pressure to this product, or disassemble, beat, or shake this product violently to avoid damaging the battery.
9. Do not use this product near heat sources, such as radiators, hot air regulators, stoves, or other instruments that generate heat.
10. Do not block the openings of this product, such as charging ports, indicator lights, microphones, etc.
11. If you feel that the device in rainsteamy weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
12. Please avoid using this product when this product and its accessories are exposed to rain or moisture, and do not allow liquids to enter the openings, or vomit a lot, to prevent liquid from entering the product and causing a short circuit or malfunction.
13. The product belongs to the built-in polymer battery, which cannot be replaced, please do not discard or put it in the fire to avoid explosion, fire and other dangers.
14. If the consumer violates the above warning and inappropriate use, the personal and property losses caused by the user will be borne by the company, and the company will not incur any legal responsibility.

产地：中国•广东

英语

INSTRUCTION MANUAL


M106

True Wireless Earphones

Packing list

Headphones x2pcs
Charging case x1pcs
Type-C charging cable x1pcs
Instruction manual x1pcs

Product structure diagram



Place the clip-on earbuds on the ear pinch as if you were wearing ear clips.After putting it on, adjust the position of the earbuds until they adjust to the sound effect.The clearest position.

Introduction to product operation

function	operate	Light	Tone
Pair name	M106		
Boot	Headphones in the case of charging lid, take out the headphones and the earbuds, boot/headphones off state, Long Touch Key 3 seconds to boot	Boot and blue lights flashing	Power on/开机
Shutdown	Put the earphone into the charging bin, the earphone is in the boot state, long touch button for 5 seconds to shut down the earphone	The red light stays on for 3 seconds before turning off	Power off/关机
Pair the left and right earphones	The left and right earphones will automatically enter pairing mode after powering on	Red and blue lights flash alternately	Connecting/Pairing successfully
Toggle the Chinese and English broadcast tone	Without connecting the smart device, double-click any left/right ear touch button to switch between the factory default English	The lights in the left and right ears are turned off	English/中文
Smart device connection	When the two ears are in the charging box, the charging box is powered on, and the headphones are in the boot state at the same time, open the Bluetooth list of the device to search and click "M106" to connect, after the connection is successful, the voice will prompt the device, then wait for a moment for the left headset to connect	/	/
Toggle Music/ Game mode	Connect the device to the state of the left and right ear touch keys 3 times, mode switching, the factory default music mode	/	音乐/游戏模式 MUSIC/GAME MODE
Play/Pause	After the music player starts, double-click any left/right headphone touch button	/	/
Previous song	After the music player starts, click the left ear touch button 2 times	/	/
Next song	After the music player starts, double-click the right earphone touch button 2 times	/	/
Increase the volume	After the music player starts, click the touch button on the right headset	/	Maximum volume 最大音量
Reduce the volume	After the music player starts, click the touch button on the left headset	/	/
Voice assistant	Connect the state, long press the left touch button for 2 seconds, you can wake up the voice assistant	/	Ding Dong
Answer an incoming call	When the call is incoming, double-click any left or right earphone function key	/	Ringtone of your phone

Reject an incoming call	When the call is incoming, press and hold the function button of any left or right earphone for 2 seconds	/	/
Hang up	While on the phone, double click the touch button on any headset	/	/
Clear the pairing history	Open the charging box, put the two headphones in the charging box, and press the touch button on the left and right headphones at the same time for 5 seconds. The indicator light will flash red and blue alternately. After the pairing history is cleared, the headphones will enter the pairing mode automatically.	power off/关机	
Low battery alarm	When the voltage of the earbuds is lower than 3.3V, there will be a prompt up to the Powered off	The red light flashes every 5 seconds	Ding Dong
Disconnect	Outside the effective connection range, or manually disconnect the Bluetooth connection of the smart device	The main headphone's red and blue lights are flashing, while the auxiliary headphone's light is off	Disconnected/断开连接
Automatic reconnection	After powering on or disconnecting, the earbuds will automatically reconnect to the last connected smart device within the effective distance	The lights go out	connected /连接成功
Charge the Headphones	The earphones will automatically shut down and start charging when placed back in the charging compartment. The white light of the earphones will remain on, and the light will last out when fully charged		
The charging box charges the headphones	When the earphones are being charged, the charging compartment immediately charges the earphones. The red light in the compartment stays on and the charging status of the earphones. When the earphones are fully charged, the charging compartment stops charging the earphones, and the white light remains on for 15 seconds before turning off		
Charging bin charging	When the battery level of the charging compartment is too low, connect a standard Type-C power adapter to the charging compartment for charging, and the white light of the charging compartment will flash to indicate the charging status		
Play charging box power display	After the charging compartment is fully charged, the white light stays on as a reminder		

Note: When the Bluetooth headset is connected to a smart device and the game mode is switched, the usage time and connection distance of the headset will be shortened.

Headset parameters


1. Product name: M106
2. Bluetooth version : Bluetooth 6.0
3. Support mode: AAC/SBC
4. Bluetooth transmission distance: 10m
5. Super high frequency: 2.402MHz-2.480GHz
6. Frequency response range: 20Hz-20KHz
7. Horn size: φ 10mm
8. Horn sensitivity: 32Ω±8Ω 3dB
9. Horn impedance: 16Ω±8Ω 3%
10. Horn-rated power: 8mW
11. Headphone battery capacity: 3.7V/30mAh (polymer battery)
12. Charging bin battery capacity: 3.7V/300mAh (polymer battery)
13. Charging interface: USB Type-C
14. Headset talk time: >4.5 hours
15. Single-use standby time: >1.5 hours
16. Charging time: ≤1.5 hours
17. Charge the headset, about 2 times
18. Standby time: >3000 hours

Safety guidelines

1. Before using this product for the first time, please fully charge it before using it.
2. This product is not a toy, and children under the age of 12 must be used under the supervision of an adult.
3. Please use a 5V/1A charger that has passed the safety certification of a regular manufacturer to avoid damage to the product caused by a fast charging charger that supports high voltage.
4. Please charge in a safe environment, when charging the charging case, please pull out the charging cable in time after the battery is fully charged to avoid damage to the battery caused by long-term charging. The charging method of the charging case is the Type-C interface.
5. This product has a built-in non-removable rechargeable battery, and repeated charging and discharging of the earbuds will lead to a decrease in battery performance over time, which is normal for all rechargeable batteries.
6. This product comes with a healthy battery, if it has not been used for a long time, please charge it at least once a month.
7. If you feel unwell in any way when wearing it due to individual differences, please stop wearing it and consult a doctor.
8. When using this product with Bluetooth connection, please adjust the sound of the earphones to an appropriate volume to avoid hearing damage caused by long-term loud volume.
9. If you are exposed to loud noise for a concentrated period of time, such as when you should pay attention to your own safety and the safety of others, such as when driving or cycling, on roads, construction sites, railways, or walking, You should remove your headphones or adjust the volume to ensure that you can hear the sounds around you, including alarms and warning signals.
10. Please follow the relevant regulations of your region or country and use this product as required when driving.
11. This product contains magnetic materials, please keep away from electrical appliances with strong magnetic fields, such as electric fields, such as microwave ovens, refrigerators, etc., when using or placing the product.
12. It is recommended to use this product in an environment with a temperature of -0°C-45°C. When the ambient temperature is below -0°C, battery performance is limited.
13. Do not use this product in places where it is expressly prohibited to use wireless equipment, such as in hospitals, airplanes, or in areas with flammable gases or explosive hazards.
14. Before approaching medical or industrial equipment or boarding a plane, please ask the local staff if they can use it.
15. If you feel that you are not maintaining this product, stop using this product, turn off all applications, and disconnect all connections or cables to other equipment.
16. Please dispose of waste electronic products properly in accordance with local laws and regulations, and do not dispose of electrical and electronic equipment, parts, batteries and other household waste.

Warn

1. Please follow the content of this manual to avoid damage to the product due to incorrect operation.
2. Keep the product away from children, fire, heat, refrigeration, water and chemicals.
3. Do not listen at a loud volume for a long time to avoid adverse effects on hearing.
4. Do not immerse the product and accessories in any liquid or rinse the product with water, otherwise it will cause fire or electric shock hazard.
5. Do not place the product in the sun or in a place with high temperature. High temperatures can shorten the life of electronic components, damage batteries, and deform certain plastic parts.
6. Do not store this product in a place with a lot of dust, too high or too low temperature and humidity.
7. Do not contact the magnetic stripe card (such as bank card, bus card, etc.) with this product for a long time, as the magnetic field in it may cause the magnetic stripe card to be damaged by the magnetic field.
8. Do not apply greater pressure to this product, or disassemble, beat, or shake this product violently to avoid damaging the battery.
9. Do not use this product near heat sources, such as radiators, hot air regulators, stoves, or other instruments that generate heat.
10. Do not block the openings of this product, such as charging ports, indicator lights, microphones, etc.
11. If you feel that the device in rainsteamy weather, thunderstorms may cause the device to malfunction and increase the risk of electric shock.
12. Please avoid using this product when this product and its accessories are exposed to rain or moisture, and do not allow liquids to enter the openings, or vomit a lot, to prevent liquid from entering the product and causing a short circuit or malfunction.
13. The product belongs to the built-in polymer battery, which cannot be replaced, please do not discard or put it in the fire to avoid explosion, fire and other dangers.
14. If the consumer violates the above warning and inappropriate use, the personal and property losses caused by the user will be borne by the company, and the company will not incur any legal responsibility.

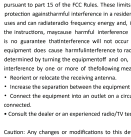

产地：中国•广东

FCC Warning:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.