尺寸：200*140mm　材质：100g铜版纸
装订方式: 骑马钉　　印刷：4C印刷

封面

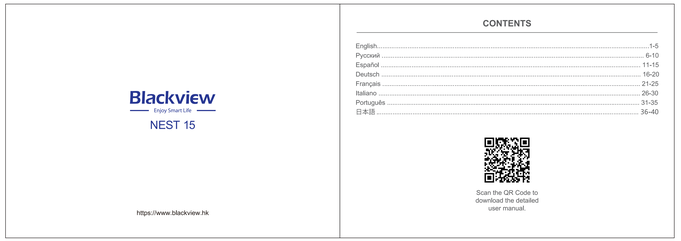

Blackview
Enjoy Smart Life
NEST 15

https://www.blackview.hk

CONTENTS

English 1-5
Русский 6-10
Español 11-15
Deutsch 16-20
Français 21-25
Italiano 26-30
Português 31-35
日本語 36-40

Scan the QR Code to download the detailed user manual.

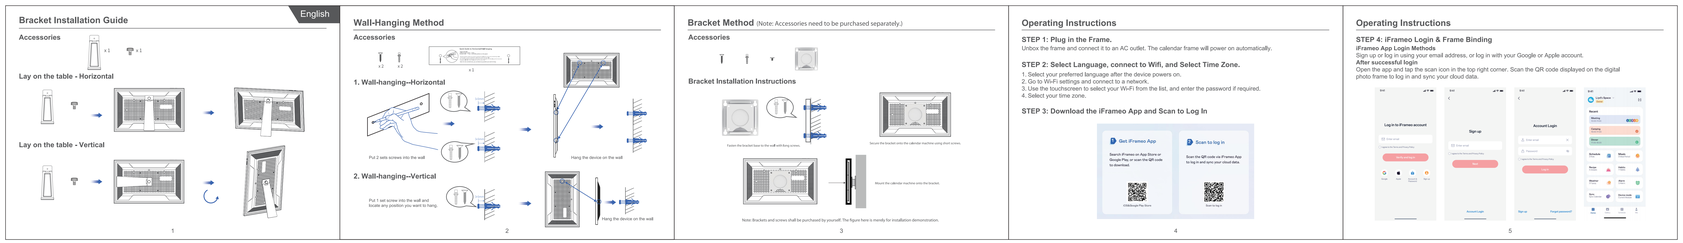

Bracket Installation Guide
English
Accessories
Lay on the table - Horizontal
Lay on the table - Vertical
1

Wall-Hanging Method
Accessories
1. Wall-hanging--Horizontal
Put 2 sets screws into the wall
Hang the device on the wall
2. Wall-hanging--Vertical
Put 1 set screw into the wall and locate any position you want to hang.
Hang the device on the wall
2

Bracket Method (Note: Accessories need to be purchased separately.)
Accessories
Bracket Installation Instructions
Fasten the bracket base to the wall with long screws.
Secure the bracket onto the calendar machine using short screws.
Mount the calendar machine onto the bracket.
Note: Brackets and screws shall be purchased by yourself. The figure here is merely for installation demonstration.
3

Operating Instructions
STEP 1: Plug in the Frame.
Unbox the frame and connect it to an AC outlet. The calendar frame will power on automatically.
STEP 2: Select Language, connect to Wifi, and Select Time Zone.
1. Select your preferred language after the device powers on.
2. Go to Wi-Fi settings and connect to a network.
3. Use the touchscreen to select your Wi-Fi from the list, and enter the password if required.
4. Select your time zone.
STEP 3: Download the iFrameo App and Scan to Log In
Get iFrameo App
Search iFrameo on App Store or Google Play, or scan the QR code to download.
iOS/Android App Store
Scan to log in
Scan the QR code via iFrameo App to log in and sync your cloud data.
Scan to log in
4

Operating Instructions
STEP 4: iFrameo Login & Frame Binding
iFrameo App Login Methods
Sign up or log in using your email address, or log in with your Google or Apple account.
After successful login
Open the app and tap the scan icon in the top right corner. Scan the QR code displayed on the digital photo frame to log in and sync your cloud data.
Log In to iFrameo account
Sign up
Account Login
5

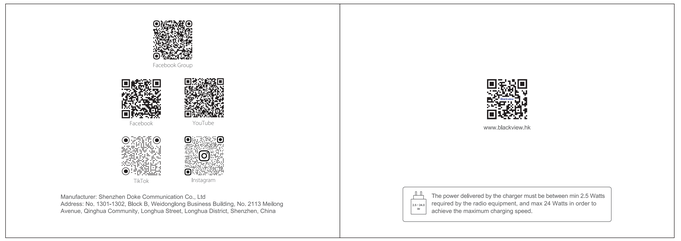

Facebook Group
Facebook
YouTube
TikTok
Instagram

Manufacturer: Shenzhen Doke Communication Co., Ltd
Address: No. 1301-1302, Block B, Weidongfang Business Building, No. 2113 Meilong Avenue, Qinghua Community, Longhua Street, Longhua District, Shenzhen, China

www.blackview.hk

The power delivered by the charger must be between min 2.5 Watts required by the radio equipment, and max 24 Watts in order to achieve the maximum charging speed.

封底

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.