User Manual

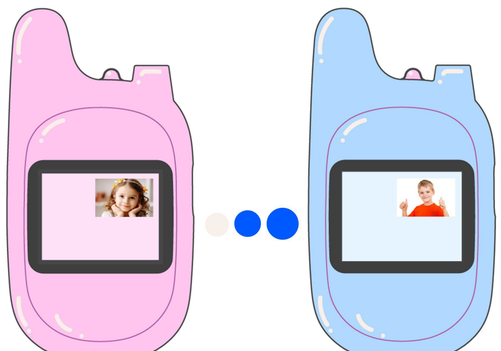

Children walkie-talkies

Product Structure

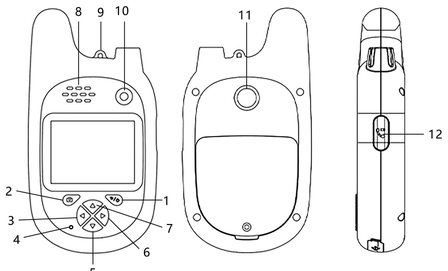

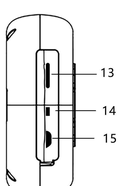

1.Power Button/Back Button
2.OK Button
3.Left Button / Volume Down
4.Microphone
5.Down Button
6.Right Button / Volume Up
7.Up Button
8.Speaker
9.Lanyard Hole
10.Front Camera
11.Rear Camera
12.Talk Button
13.TF Card Slot
14.Reset Hole
15.Charging Port

Operating Instructions

● Power On/Off

Press and hold the power button for 3 seconds to turn on the device.
The display will light up, and the device will enter connection mode.
When the connection icon disappears, the connection is successful.
Press and hold the power button for 3 seconds to turn off the device.

● Real-time Voice Communication

Select the voice icon, press and hold the OK button to start a conversation ,and release the button to send the message.

● Emojis

Select the emoji icon, use the Up, Down, Left, and Right directional buttons to choose an emoji, and press the OK button to send it.

● Images

Select the image icon, use the Up, Down, Left, or Right arrow keys to select an image, and then press the OK button to send it.

● Real-time Photography

Select the photography icon, press the OK button to take a photo and send it in real time.
In the real-time photo mode, short press the Right button to switch frame stickers.

● Real-time Video

Select the video icon, press the OK button to start real-time video . Once the real-time video feed appears, the other party can press the OK button to initiate a real-time video call. Press the intercom button on the side panel to enable two-way real-time conversation.

● Front/Rear Camera Switching

In real-time photo mode , use the Up button to switch to the front camera and the down key for the rear camera.
In real-time video mode, use the Up button to switch to the front/ rear camera.

● Volume Adjustment

Press the Left button to decrease the volume, and press the Right button to increase the volume.

● Voice Change

During a real-time video call, short press the Down button to switch between different voice effects.

Product Parameters

Model	DJ01
Screen	2.0 inch
Video Format	VGA
Video Resolution	480*640
Memory Card	TF Card
Intercom Distance	Open distance: 50~130m Obstructed distance:150~300m
Charge Voltage	DC-5V
Wireless Property	2.4GHz wireless
Battery Capacity	3.7V/1000mAh

FCC Warning

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

WARNING:
CHOKING HAZARD-
Small Parts. Not for children under 3 years. Retain for future reference.