Bluetooth Fouble Spray Fragrance Machine

Operation Instructions



Please read this instruction manual carefully and keep it properly before using the product.
(The pictures are for reference only, and the products are subject to the real thing.)

Product Parts

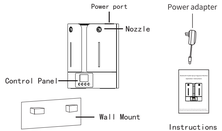

Basic Parameter

Name	Intelligent fragrance machine	Power	8W
Model	C800A/C800B	Voltage	DC 12V
Usable area	800m³	Noise	<40dba
Weight	adapter: 0.9kg	Net weight	1.4kg
Size	220*95*240mm	Operative norm	GB4706.1-2005

Operating Procedure

1.Clean the location to paste.
(Paste as the same flat.)

2.Uncover the protective film on the back plate.

Operating Procedure



3. Stick to the wall and press it tightly.



4. Rotate the bottle filled with essential oil to the atomizing module according to the figure.



5. Put the atomizing module into the whole machine and cover the door on the right.



6. Hang up the whole machine and turn on the power, select the mode or use the mobile phone to set custom settings.

⚠ Warning item

No tilting or inversion.

① When installing essential oil and after installing essential oil, do not tilt/invert/put the fumigator sideways! Keep the machine straight at all times, otherwise the leakage of essential oil will cause the machine to be damaged to varying degrees.
② During the transportation of the machine, the essential oil in the bottle must be emptied to avoid the leakage of essential oil and the damage of the machine.
③ The machine must be kept upright when loading essential oil, and cannot be turned upside down or tilted, otherwise it may damage the internal accessories of the machine.

Schema Specification



【Button Description】
●MODE: Machine operating time parameters can be set, along with machine working/pausing time periods.
●SET: Enter the setting state, such as time setting, week setting, etc.
●UP/DOWN: Fine-tuning up/down, adjustable time data, date and fragrance concentration.

【Custom reset】
●Press and hold the MODE button for 5S to restore the factory settings, and the buzzer will ring twice.
Default custom spray 50S interval 120S s.

【Name and password reset】
●Press and hold the SET button for 5S to restore the name and password, and the buzzer will ring for 3 times.
Password reset is restored to the original password 9999.

【Time adjustment】
●Press SET three times to enter the time adjustment interface, the hour flashes, and the UP key and DOWN key are adjustable;
Press the SET key for the second time, the minute flashes, and the UP key and the DOWN key are adjustable;
Press SET for the third time, the week light flashes, and the UP key and the DOWN key are adjustable;
Press the SET key for the fourth time to return to the clock interface;

Set the running time period

●Press the MODE key for the first time: enter the start time setting of the first running time period, the mode display 1 and, the fogging icon is on, press the SET key at this time, and the UP key DOWN key can set the starting hour, minute, and week respectively (initially 8:00 A total of seven days are working every day. If you need to not work on that day, you need to press UP to select one of the days, and then press the DOWN key to cancel the date that does not need to work, and vice versa. On the day of work, the week light is on, and if the week light is not on, it means that it does not work that day).
●Press the MODE key for the second time: enter the first running period end time setting mode to display 1 and, the atomization icon is not on, at this time press the SET key UP key DOWN key to set the end of the hour and minute (initial 23:59).
●Press the MODE key for the third time: It shows the working time of the machine, press the UP key DOWN key to set.
● Press the MODE key for the fourth time: You can set the machine pause time, and press the UP key DOWN key to set.
● Press the MODE key 5: Set the time period settings for the second, third, fourth, and fifth cycles (the operation method is the same as the first cycle steps). In the absence of any operation, return to the time interface for 10 seconds. Precautions:
1. When setting the running time period, the shutdown time cannot precede the start time;
2. If the running time period needs to span 00:00, it needs to be separated into two time periods to be set separately

APP Setup Steps

1: the whole machine is connected to the power supply;
2: Open the machine to scan the dimension code;
3: The picture below shows downloading the APP dimension code.

4: Enter the APP, click the bluetooth mode,click ◌ the refresh icon, and click the Best Core BLE.
As shown in Figure 1, Figure 2 and Figure 3 below.



Figure 1



Figure 2



Figure 3

APP Setup Steps

5: After the input password is confirmed, go to the page as shown in Figure 4, click+to increase the working time period, as shown in Figure 5, up to 5 time periods can be added.

Figure 4

Figure 5

6. Click on any time slot, as shown in Figure 6
① In week mode, you can choose whether the week icon is lit or not. For example, if the icon is on Thursday and Saturday are not lit, they will not work on Thursday and Saturday (if they are lit, they will work; if they are not lit, they will not work);
② Time period setting, sliding up and down into the time setting, starting at 06:00 and ending at 20: 30 in Table 6;
③ Spray frequency setting, sliding up and down into the frequency setting, the spray time is 5S-300S, and the interval time is 5 s-900 s. Click OK to complete the setting. (The spray time and interval time increase or decrease in 5S).

Figure 6

FCCaution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party r esponsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Daily Maintenance And Maintenance

1. Be sure to unplug the power plug before cleaning the product. Product appearance stains can be wiped clean with a soft and clean rag. When it is necessary to remove stubborn stains, be sure to use a mild and neutral cleaner.
2. Do not immerse the main unit in water, and keep the outside of the main unit dry.
3. When the product is not used for a long time, it is recommended to clean the internal atomizing head. The specific operation is as follows: add alcohol to the empty bottle, run for 5 minutes, then turn off the equipment and clean the alcohol in the bottle.
4. Clean and maintain the atomizing head with alcohol every 1-2 months.

The Method Of Dealing With Anomalies

Breakdown 1	No display
Possibility Reason	Is the power adapter plugged in?
	Power adapter damaged.
Solution	Self-checking.
	Replace the power supply or send it for maintenance.

Breakdown 2	oil leak
Possibility Reason	The essential oil bottle is not rotated in place, or the machine is tilted.
Solution	Self-checking.

Breakdown 3	No atomization
Possibility Reason	Power supply is not connected, sealing ring is missing, The current time is not within the set time
Solution	Send it to maintenance after self-inspection.

The Method Of Dealing With Anomalies

Breakdown 4	Small atomization amount
Possibility Reason	Atomizer blocked or air pump damaged.
Solution	Replace parts or send them for repair.

Breakdown 5	Abnormal sound of equipment.
Possibility Reason	Atomizer blocked or air pump damaged.
Solution	Send it to maintenance after self-inspection.

After-sales Service

1. If you have a non-human fault or can't work normally when using this product, please contact the sales point of this product to replace the qualified products. Because of different fault situations, sometimes it is not a product quality problem. Please read this manual carefully before returning this product to the point of sale.
2. We hereby declare that this product has passed the inspection and attach the product manual. If you operate this product normally according to this manual and the product itself fails, this product enjoys a one-year free warranty.
3. If this product breaks down during the quality guarantee period, please bring the product manual and accessories to the sales department for maintenance. However, if any of the following situations occur, even during the warranty period, we can't repair it for free:
① It has been more than one year since the product was purchased when the product failed and requested maintenance.
② Product failure caused by war, earthquake, fire, typhoon, flood and other irresistible natural disasters.
③ This product is scratched, stained and damaged in appearance during use.
④ Failure due to unauthorized disassembly, assembly and maintenance.
⑤ Failure caused by falling, improper operation or illegal use.
⑥ Failure caused by using this product as other products.