USER MANUAL

RELOD OC PRO

Wear • Tap • Go Guide

For any support, please contact:
hello@relodin.com

RELOD

FCC ID: 2BVRT-OCPRO

For exclusive events, follow us at:
@relodhub

OVERVIEW

Inside the Box

Ear Clip Earbuds *1	Relod OC Case *1
Charging Cable *1	User Guide *1

Diagram Details

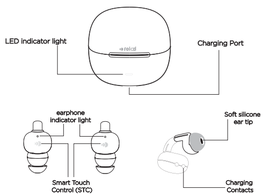

DETAILS

Charge the Relod OC case

Connect the Relod OC charging case to a 5V power adapter using the included Type-C charging cable.



LED & Sound Prompt Description

Connect the Relod OC charging case to a 5V power adapter using the included Type-C charging cable.

Mode	Indicator Description	Sound Prompt
Power On	Red indicator light on the earbuds blinks once.	"Power on"
Power Off	Red indicator light on the earbuds flashes three times.	"Power off"
Pairing Mode	Red and white lights on the main ear flash alternately, auxiliary ear light is off.	"Pairing"
Connected	Earbud indicator light turns off.	"Relod Connected"
Disconnected	Red and white lights on the main ear flash alternately, auxiliary ear light is off.	"Relod Disconnected"
Low Battery	Red indicator light flashes three times within 10 seconds.	"Battery low"
Earbuds in Charging Case	White indicator light on the earbuds stays on.	—
Charging Case Low Battery	Charging case indicator light flashes white.	—
Charging Case Charging	Red indicator light on the charging case flashes.	—
Charging Case Fully Charged	Red indicator light on the charging case remains on.	—

OPERATION

Product Operating Instructions

1. Power On

- *Method 1:* Open the Charging Case and take out the earbuds; they will automatically Power On.
- *Method 2:* Press the Smart Touch Control on the earbuds for 2 seconds to turn them on manually.

2. Power Off

- *Method 1:* Place the earbuds back in the Charging Case and close the lid; they will automatically Power Off.
- *Method 2:* If disconnected from a Bluetooth device, the earbuds will automatically Power Off after 3 minutes.

3. Pairing

- *First-Time Use:* On your device, go to Bluetooth settings and select "Relod OC PRO" from the list of available devices. You will hear "Relod Connected" when pairing is successful.
- *Subsequent Use:* Open the Charging Case and take out the earbuds; they will automatically turn on and enter pairing mode.

Tip: **If the connection is lost, the earbuds will automatically attempt to reconnect within 3 minutes.**

4. Additional Notes

- Charge the earbuds fully before storing or leaving unused for an extended period.
- Disconnect the charging cable once charging is complete.
- Ensure the Ear Clip fits securely for optimal comfort and stability.
- The Soft Silicone Ear Tip delivers clear sound while reducing external noise.

Touch Operating Instructions

Product Parameters

- Wireless protocol: Bluetooth 6.0 (BT 6.0)
- Transmission Distance: 10 meters
- Impedance: 16Ω ±15%
- Sensitivity: 115 dB ±3 dB
- Input: DC 5V⎓400mA
- Charging Port: type-c
- Battery Capacity (Charging Case): 3.7 V, 400 mAh
- Battery Capacity (Earbuds): 3.7 V, 40 mAh
- Charging Time (Charging Case): ~1.5 hours
- Standby time: 120 H
- Dimensions (mm): 56 x 54

WARNING

Precautions

1. Opening the Charging Case automatically powers on, pairs, and connects the earbuds. Placing the earbuds back into the case and closing the lid will automatically charge and power them off.

2. If the earbuds are unused for an extended period, charge them at least once every 15 days to maintain battery health. Keep the Charging Contacts clean for proper charging.

3. Keep the earbuds and charging case away from fire, flammable materials, excessive heat, and direct sunlight. Do not disassemble, crush, puncture, deform, or expose the product to fire or water. Discontinue use immediately if any abnormal operation occurs, including battery swelling.

4. Wireless signal interruptions may occur due to environmental interference, device compatibility, or user operation and do not indicate a product defect.

Warnings

1. Prolonged use at high volume may cause permanent hearing damage. Avoid extended use at high volume.

2. Keep the product away from water, moisture, dust, and corrosive environments.

3. Unauthorized disassembly, modification, or repair will void the warranty.

4. Avoid dropping or exposing the product to strong impacts, pressure, or vibration.

5. Do not clean any part of the product with chemicals, solvents, or liquids.

6. Users are fully responsible for any damage, injury, or loss resulting from misuse, neglect, or failure to follow these instructions

Care & Safety

Care Instructions

1. Cleaning the Earbuds:
If your earbuds get exposed to dust, sweat, or other debris, wipe them gently with a soft cloth.

2. Avoid Harsh Cleaning Agents:
Never use chemicals or solvents to clean the earbuds as they can cause skin irritation and damage the product.

3. Regular Cleaning:
Use a soft, lint-free cloth for regular cleaning. Avoid paper towels or cloths with wood fibers that could scratch the surface.

4. Ensure Dry and Clean Before Charging:
Always check that the earbuds are dry and clean before placing them back in the charging case.

5. Charging Problems:
If the earbuds aren't charging, check the charging contacts for dirt or debris. Clean them gently with a cloth or cotton swab, then try charging again.

Please read more about our warranty policies at
https://relodin.com/warranty-policy/
or email us at hello@relodin.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

RELOD

Thank You for Supporting Us &
Welcome to the Relod family

Scan & Follow Us for exclusive offers!

RELODHUB

www.relodin.com