尺寸:80mm*100mm

封面

Moiame Couples Rose App Remote Control Wearable Vibrator

User Manual

封底

Product Introduction

Thank you for choosing our product! This app-controlled couples' wearable vibrator set is designed for adults who want a more playful and connected intimate experience. The set includes a wearable rose vibrator, 6 fit cock rings, 2 game dice, a remote control, and a storage pouch. With 9 vibration modes, app control, remote control, rechargeable power, soft silicone material, and an IPX7 waterproof design, it offers a comfortable, easy-to-use, and easy-to-clean experience for private couple moments.

Important Safety Information:

Please read this manual carefully before use and keep it for future reference.
This product is intended for adult use only. Keep it out of reach of children.
Do not use this product on broken, irritated, inflamed, or sensitive skin.
Stop using immediately if you experience pain, numbness, tingling, excessive pressure, redness, or any discomfort.
Do not wear ring accessories too tightly or for an extended period. Remove immediately if you feel tightness, numbness, or poor circulation.
This is a personal intimate product and is not recommended for shared use. If shared, clean thoroughly before and after use and use proper protection.
Do not use the product while charging. Make sure the product and magnetic charging contacts are completely dry before charging.
The IPX7 waterproof rating applies only to the main device. The remote control, charging cable, manual, packaging, and storage pouch are not waterproof and should not be washed or immersed in water.
Do not disassemble, modify, puncture, drop, crush, or expose the product to fire.

Package Contents

1. Main Device × 1
2. Magnetic Charging Cable × 1
3. Remote Control × 1
4. Wearable Harness / Panty Attachment × 1
5. Fit Cock Rings × 6
6. Dice Game × 2
7. Storage Pouch × 1
8. User Manual × 1

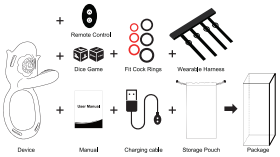

Product Specifications

Model	MS-08
Product Weight	58.4 g
Product Size	4.8*2.2 inches
Material	Liquid Silicone
Vibration Modes	9 Vibration Modes
Battery Capacity	120 mAh
Input	5V=1A
Charging Method	Magnetic Charging
Charging Time	30 minutes
Working Time	50 minutes
Noise Level	50 dB / 30 cm, tested in a quiet room
Waterproof Rating	IPX7
Certifications	RoHS, CE
Operating Temperature	0–40°C
Storage Conditions	Store in a cool, dry place at room temperature

Charging Instructions

1. Connect the magnetic charging cable to the charging contacts on the device.
2. Plug the USB end into a 5V=1A adapter, computer USB port, or other safe USB power source.
3. The indicator light will flash while charging.
4. The indicator light will stay on when fully charged.
5. A full charge takes approximately 30 minutes.
6. After charging, unplug the cable and keep the charging contacts dry.

Notes:
Do not charge the device when it is wet.
Do not use the device while charging.
Do not use a fast charger that exceeds the recommended input.
If the device is not used for a long time, recharge it every 1–2 months to help maintain battery life.

Button Operation

Power On: Press and hold the power button on the main device for about 1.5 seconds to turn it on.
Power Off: When the device is on, press and hold the power button for about 1.5 seconds to turn it off.
Switch Modes: When the device is on, short press the power button to cycle through the 9 vibration modes.
Stop Vibration: Press and hold the power button to turn off the device, or stop the vibration through the app or remote control.

Remote Control Operation

The remote control is designed for short-range operation and allows quick control when using the app is not convenient.
Before use, make sure the main device is turned on and the remote control has sufficient battery power.
1. Stop Button: Stops the current vibration mode.
2. Mode Button: Switches to the next vibration mode and starts vibration.

APP Connection & Remote Control

Download the App

1. Scan the QR code and install the app.
2. Open the app and allow Bluetooth access when prompted.
3. Tap "Add Device" on the homepage.

Connect Your Device

Choose one of the following methods:
• Enter Device Code: 885281
• Search Bluetooth Name: VG_MST-0829

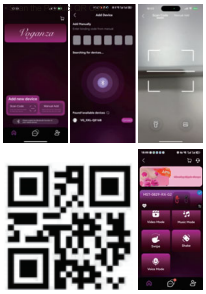

App Control Modes

1. Classic Mode
In Classic Mode, tap different buttons to select the corresponding vibration mode. The device will start vibrating in the selected mode. Tap again to stop or switch modes.
2. Video Mode
In Video Mode, you can select and play local videos. The device can sync its vibration with the sound or rhythm of the video. Some Android devices also support online video sync through supported websites in the app.
3. Music Mode
In Music Mode, the app detects the rhythm of the music and adjusts the vibration intensity accordingly.
4. Shake Mode
In Shake Mode, you can control the vibration by shaking your phone. Stronger movements create stronger feedback.
5. Sound Mode
In Sound Mode, the app uses your phone's microphone to detect ambient sound and adjust the vibration intensity. Please allow microphone permission when prompted.
6. Swipe Mode
In Swipe Mode, drag the heart button on the screen to control the vibration intensity. You can also record your swipe pattern and play it back later from the history page.
7. Alarm Clock Mode
In Alarm Clock Mode, tap "Add Alarm" to set a countdown timer. When the

countdown ends, the device will start vibrating according to the setting.
8. Interaction Mode
In Interaction Mode, you can add friends for remote interaction. After both users are connected as friends, you can send messages, start voice or video calls, and enter the remote control page once the invitation is accepted. This allows one partner to control the other partner's device remotely.

Wearing and Use Instructions

Before use, make sure the product is clean, fully charged, and working properly.
Fit Ring Use:
Choose the appropriate Fit Ring or wearable attachment. The ring should feel comfortable when worn and should not cause tightness, pressure, numbness, or pain. Remove it immediately if any discomfort occurs.
Wearable Rose Vibrator Use:
Adjust the rose vibrator to a comfortable position and secure it with the wearable attachment. You can switch modes using the device button, remote control, or app.



Couple Play:
One partner can use the app or remote control to change vibration modes, while the other partner gives feedback based on comfort. Start with a gentle mode and gradually find the rhythm that works best for both partners.
Dice Game:
The included game dice can add more fun to couple interaction. Use only when both partners feel comfortable and agree. Any activity that feels uncomfortable may be skipped.

Troubleshooting

Issue 1: The device does not turn on.
Possible Cause: Low battery.
Solution: Charge the device for 30 minutes, then try turning it on again.
Issue 2: The device does not charge.
Possible Cause: The magnetic contacts are not aligned, the contacts are wet, or the adapter is not compatible.
Solution: Dry the charging contacts, reconnect the magnetic charging cable, and use a 5V⎓1A power source.
Issue 3: The app cannot find the device.
Possible Cause: Bluetooth is off, the device is not turned on, the device is too far from the phone, or the device is already bound.
Solution: Turn on Bluetooth, restart the device and the app, keep the phone close to the device, and add the device again.

Issue 4: The app is connected but cannot control the device.
Possible Cause: Bluetooth connection error or insufficient app permissions.
Solution: Close and reopen the app, then check Bluetooth, microphone, and media access permissions.
Issue 5: The vibration becomes weak.
Possible Cause: Low battery or a gentle vibration mode is selected.
Solution: Fully charge the device and test again. Switch between different modes to check performance.
Issue 6: The device becomes louder than usual.
Possible Cause: The device is touching a hard surface, placed at an improper angle, or has water on the surface.
Solution: Test the device by holding it in your hand and avoid direct contact with hard surfaces.
Issue 7: The remote control does not respond.
Possible Cause: Low remote control battery, excessive distance, or the main device is not turned on.
Solution: Make sure the main device is turned on, operate the remote control close to the device, and check the remote control battery.

Need Help?
Missing Accessories?
Charging Issues?
Product Not Working Properly?
Questions About Use?
Our support team is ready to help.

Please CONTACT US when you encounter the following situations:
1. The received product is not brand new.
2. Received product has functional issues.
3. Regarding how to use.

1.Contact us by email:
support@moiame.com

Or Scan the QR code to send an email directly.

2.Contact US on Amazon:
• Step 1: Click "seller name"

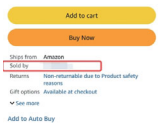

• Step 2: Click "Ask a question"

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.