This document is watermarked because certain important information in the document has not yet been verified.
This document has been sent to you as a draft and for informational purposes only.
The document should only be used for internal purposes and may not be distributed outside of the company.
Distributing the document outside of the company could result in legal exposure to the company if the preliminary, unverified information in the draft turns out to be inaccurate.

SAMSUNG

SMARTPHONE

SM-J727R4

User Manual

Please read this manual before operating your device and keep it for future reference.

Galaxy J7

DRAFT–FOR INTERNAL USE ONLY

Table of Contents

Special Features 1

Side Speaker 2

Getting Started 3

Set Up Your Device 4

Assemble Your Device 5

Start Using Your Device 10

Set Up Your Device 11

Learn About Your Device 15

Front View 16

Back View 18

Home Screen 19

Navigation 28

Entering Text 30

Multi Window 33

Emergency Mode 35

Apps 37

Using Apps 38

Applications Settings 41

Calculator 43

Calendar 44

Camera and Video 47

Clock 52

USC_J727R4_EN_UM_TN_XXX_030817_R0

DRAFT–FOR INTERNAL USE ONLY

Contacts 55
Email 62
Galaxy Apps 65
Gallery 66
Google Apps 70
Internet 73
Messages 77
My Files 82
Phone 84
Samsung Gear 94
Samsung Notes 95
Samsung+ 97
Secure Folder 97
Settings 98
How to Use Settings 99
Connections 100
Wi-Fi 101
Bluetooth 104
Data Usage 107
Airplane Mode 109
Mobile Hotspot 110
Tethering 113
Mobile Networks 113
Location 113
Nearby Device Scanning 115
Printing 116
Virtual Private Networks (VPN) 116
Reset Network Settings 117
Sounds and Vibration 118
Sound Mode 119

DRAFT–FOR INTERNAL USE ONLY

Easy Mute 119
Vibrations 119
Volume 120
Ringtone 121
Notification Sounds 122
Do Not Disturb 122
System Sounds 123
Key-Tap Feedback 123
Sound Quality and Effects 124
Notifications 125
Block App Notifications 126
Customize App Notifications 126
Smart Alert 127
Display 128
Screen Brightness 129
Screen Zoom and Font 129
Home Screen 130
Easy Mode 130
Icon Frames 131
Status Bar 131
Screen Timeout 131
Screen Saver 132
Wallpapers and Themes 133
Wallpapers 134
Themes 134
Icons 134
Device Maintenance 135
Quick Optimization 136
Battery 136
Storage 137

DRAFT–FOR INTERNAL USE ONLY

Memory 139
Language and Input 139
Date and Time 141
Reset 142
Factory Data Reset 142
Software Update 144
Lock Screen and Security 145
Set a Screen Lock 146
Find My Mobile 147
Unknown Sources 147
Secure Folder 148
Secure Startup 148
Encrypt SD Card 148
Set Up SIM Card Lock 149
View Passwords 149
Security Update Service 149
Device Administration 150
Credential Storage 150
Knox Active Protection 151
Advanced Security Settings 151
Accounts 152
Samsung Cloud 153
Add an Account 154
Backup and Restore 156
Google Settings 157
Accessibility 159
Vision 160
Hearing 161
Dexterity and interaction 161
More Accessibility Settings 162

DRAFT–FOR INTERNAL USE ONLY

Accessibility Services 163
Other Settings 164
About Device 165
Help 165
Getting Help 166
Videos 167
Simulators 167
Tips 167
Samsung Support 167
Legal 168
Legal Information 169

DRAFT–FOR INTERNAL USE ONLY

Special Features

Learn about your mobile device's special features.

DRAFT–FOR INTERNAL USE ONLY

Side Speaker

This device features the speaker on the side of the device.

DRAFT–FOR INTERNAL USE ONLY

Getting Started

Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

DRAFT–FOR INTERNAL USE ONLY

Set Up Your Device

Learn how to set up your device for the first time.

DRAFT–FOR INTERNAL USE ONLY

Assemble Your Device

This section helps you to assemble your device.

Remove the Back Cover

1. Remove the back cover.

2. Lift the cover up and to the left of the device.

Caution: When removing the back cover, use the slot next to the Volume key to gently lift the cover off. Pulling on the Speaker (located next to the Power button) may cause damage.

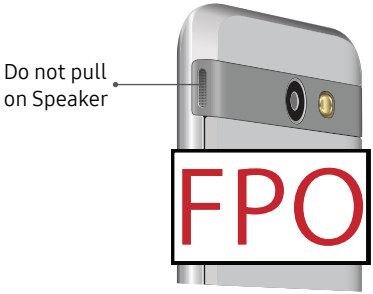

Warning: Do not bend or twist the back cover excessively. Using excessive force on the cover during removal or installation of an internal component can cause the material to break.

DRAFT–FOR INTERNAL USE ONLY

Install the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card. During activation, your SIM card is loaded with your subscription details, such as your Personal Identification Number (PIN), available optional services, and other features.

Warning: Please be careful when handling the SIM card to avoid damaging it. Keep all SIM cards out of reach of small children.

► Carefully slide the SIM card into the SIM card slot.

- Make sure that the card's gold contacts face down into the device and that the card is positioned as shown.

Install an Optional Memory Card

You can install a microSD™ or microSDHC™ memory card (not included) to add more memory space to your device.

A memory card can be installed at any time. It is not necessary to install it prior to using the device.

DRAFT–FOR INTERNAL USE ONLY

► Slide the memory card into the slot with the gold contacts facing down.

Install the Battery

The battery is installed in the back of the device.

1. Insert the battery into the opening on the back of the device, making sure the connectors align.

2. Gently press down to secure the battery.

DRAFT–FOR INTERNAL USE ONLY

Replace the Back Cover

The back cover should be replaced before using the device.

1. Place the back cover onto the back of the device and press down.

2. Press along the edge of the back cover until you have a secure seal.

Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A USB charger (charging head and USB cable) is included with the device for charging the battery from any standard outlet.

The battery comes partially charged. You can use the device while charging.

1. Insert the USB cable into the USB charger/ Accessory port.

DRAFT–FOR INTERNAL USE ONLY

Caution: Use only charging devices and batteries approved by Samsung. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.
3. Unplug the charging head from the outlet and remove the USB cable from the device when charging is complete.

When to Charge the Battery

When the battery is low and only a few minutes of operation remain, the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

For a quick check of your battery level:

► View the battery charge indicator located in the top right corner of your device's display. A solid color ( ) indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery. For more information, see "Battery" on page 136.

While charging, the device and the charger may become hot when using wireless charging or fast charging. This does not affect the device's lifespan or performance and is in the device's normal range of operation.

The charger may stop charging if the battery becomes too hot.

DRAFT–FOR INTERNAL USE ONLY

If the device heats up while charging the battery:

1. Disconnect the charger from the device and close any running apps.
2. Wait for the device to cool down, and then begin charging the device again.
   - If the lower part of the device overheats, check for damage to the connected USB cable. Replace the damaged USB cable with a new Samsung-approved cable.
   - If using a wireless charger, do not place foreign materials between the device and the wireless charger.

Start Using Your Device

Turn Your Device On or Off

The instructions below explain how to turn your device on or off.

To turn the device on:

► Press and hold the **Power** key until the device turns on.

To turn the device off:

1. Press and hold the **Power** key until the Device options menu is displayed.
2. Tap **Power off**, and confirm if prompted.

DRAFT–FOR INTERNAL USE ONLY

Lock or Unlock Your Device

Use your device's screen lock features to secure your device.

By default, the device locks automatically when the screen times out.

To lock the device:

► Press the **Power** key.

The default Screen lock on your device is Swipe. To choose a more secure screen lock, see "Set a Screen Lock" on page 146.

To unlock the device:

► Press the **Power** key or **Home** key, and then drag your finger across the screen.

Restart the Device

If your device stops responding to taps or finger gestures and you are unable to turn it off, you can restart your device.

► Press and hold the **Power** key and the **Volume down** key at the same time for more than seven seconds.

Set Up Your Device

Use the Set Up Wizard

The first time you turn your device on, a Welcome screen is displayed. It guides you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi® network, set up accounts, choose location services, learn about your device's features, and more.

DRAFT–FOR INTERNAL USE ONLY

Voice Assistant provides voice prompts and descriptions of items on the screen to improve accessibility. During setup, you can enable or disable Voice Assistant by pressing the **Home** key quickly three times.

Google Account

Your new device uses your Google™ Account to fully utilize its Android™ features, including Gmail™, Google Duo, and the Google Play™ store.

When you turn on your device for the first time, set up your existing Google Account or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts**.
3. Tap **Add account** > **Google**.

Factory Reset Protection

When you sign in to a Google Account on your device, Factory Reset Protection is turned on. Factory Reset Protection (FRP) prevents other people from using your device if it is reset to factory settings without your permission. For example, if your device is lost or stolen and a factory data reset is performed, only someone with your Google Account username and password can use the device.

You will not be able to access the device after a factory data reset if you do not have your Google Account username and password. For more information, see "Factory Data Reset" on page 142.

DRAFT–FOR INTERNAL USE ONLY

Caution: Before shipping your device back to Samsung or taking it to your nearest Samsung-authorized service center, you should remove your Google Account before resetting the device back to factory settings. For more information, visit: samsung.com/us/support/frp.

Enable Factory Reset Protection

Adding a Google Account to your device automatically turns on the Factory Reset Protection (FRP) security feature. For more information, visit: google.com.

Disable Factory Reset Protection

To disable FRP, remove all Google Accounts from the device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **Google**.
   - If you have more than one Google Account set up on your device, tap the Google Account you want to remove.
3. Tap **More options** > **Remove account**.

Samsung Account

Create a Samsung account for access to Samsung content and apps on your device. When you turn on your device for the first time, set up your existing Samsung account or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts**.
3. Tap **Add account** > **Samsung account**.

DRAFT–FOR INTERNAL USE ONLY

Add an Email Account

Use the Email app to view and manage all your email accounts in one app.

When you turn on your device for the first time, set up your existing email account or create a new email account.

– or –

To create a new email account or set up your email account on your device at any time, use Accounts settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts**.
3. Tap **Add account** > **Email**.

Transfer Data from Your Old Device

Easily transfer your photos, videos, music, apps and more with Samsung Smart Switch™.

Get started today at samsungsmartswitch.com.

Set Up Your Voicemail

You can access your voicemail from a Home screen.

1. From the Home screen, tap **Phone**, and then tap **Voicemail**.
2. Follow the tutorial to create a password, record a greeting, and record your name.

For more information on voicemail, see "Voicemail" on page 91.

DRAFT–FOR INTERNAL USE ONLY

Learn About Your Device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

DRAFT–FOR INTERNAL USE ONLY

Front View

DRAFT–FOR INTERNAL USE ONLY

- **Proximity sensor**
  - Turns off the screen and disables touch functionality when the device is in close proximity to the human body.
  - Turns the screen back on and enables touch functionality when the device is outside a specific range to the human body.
- **Power key**
  - Briefly press to turn on or off the screen.
  - Press and hold to select a power control option.
- **Home key**
  - Press and hold to launch Google.
  - Press twice to launch the camera.
- **Volume keys**
  - Adjust the volume for ringtones, calls, or notifications.
  - In the camera app, press a volume key to take a photo.

DRAFT–FOR INTERNAL USE ONLY

Back View

DRAFT–FOR INTERNAL USE ONLY

Home Screen

Status bar

App shortcuts

Home screen indicator

DRAFT–FOR INTERNAL USE ONLY

Status Bar

The Status bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.

Status Icons

	Battery full
	Battery low
	Battery charging
	Vibrate mode
	Mute mode

	4G LTE™ active
	Signal strength
	Network not available
	Wi-Fi active
	Wi-Fi available

DRAFT–FOR INTERNAL USE ONLY

Notification Icons

Missed call	New message
Call in progress	File download in progress
Call on hold	File upload in progress
New email	GPS active
New Gmail	App updates available
New voicemail	App updates complete

DRAFT–FOR INTERNAL USE ONLY

Notifications

DRAFT–FOR INTERNAL USE ONLY

View the Notification Panel

You can access the Notification panel from any Home screen.

1. Drag the Status bar down to display the Notification panel.
2. Swipe down the list to see notification details.
   - To open an item, tap it.
   - To clear a single notification, drag the notification left or right.
   - To clear all notifications, tap **Clear all**.
3. Drag upward from the bottom of the screen or tap **Back** to close the Notification panel.

Quick Settings

In addition to notifications, the Notification panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

To view additional Quick settings and customize the Quick settings that display:

1. Drag the Status bar down to display the Notification panel.
2. Drag **View all** downward.
   - Tap a setting to turn it on or off.
   - Tap **More options** to edit Quick settings or to change the button layout.
3. Drag **View all** upward to close the Quick settings.

DRAFT–FOR INTERNAL USE ONLY

Customize Your Home Screen

Screens

Your device comes with multiple Home screens to hold app shortcuts and widgets. You can add, remove, change the order of screens, as well as choose a different main Home screen.

1. From a Home screen, pinch the screen.
2. Use these options to manage screens:
   - **Remove a screen**: Touch and hold a screen, and then drag it to **Remove**.
   - **Set a screen as the main Home screen**: Tap **Main Home screen** at the top of a screen. This screen is displayed when you press the **Home** key.
   - **Change the order of screens**: Touch and hold a screen, and then drag it to a new position.
   - **Add a screen**: Swipe to the end of the screens, and then tap **Add**.

Wallpapers and Themes

Set visual themes for all system screens and icons on your device. Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
2. Tap **Wallpapers and themes** to customize.

For more information, see "Wallpapers and Themes" on page 133.

Widgets

Widgets are simple application extensions that run on a Home screen. There are many kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

DRAFT–FOR INTERNAL USE ONLY

To add a widget to a Home screen:

1. From a Home screen, pinch the screen.
2. Tap **Widgets**.
3. Touch and hold a widget, drag it to a Home screen, and release it.

To remove a widget:

1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to **Remove shortcut** and release it.
   - Removing a widget does not delete the widget, it just removes the widget from the Home screen.

Screen Grid

Change the number of icons that can be placed on each Home screen by changing the Screen grid dimensions.

1. From a Home screen, pinch the screen.
2. Tap **Screen grid**.
3. Tap a dimension option (**4 x 4**, **4 x 5**, or **5 x 5**) to preview its appearance. The numbers indicate how many icons can be placed horizontally by how many icons can be placed vertically.
4. Tap **Apply** to apply the selected dimensions.

DRAFT–FOR INTERNAL USE ONLY

App Shortcuts

You can use app shortcuts to launch an app from any Home screen.

To add a shortcut:

1. From a Home screen, tap **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen, and then release it.

To remove a shortcut:

1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to **Remove shortcut** and release it.
   - Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.

To move a shortcut from one Home screen to another:

1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to **Move apps** and release it.
3. Swipe to a new Home screen.
4. Tap the shortcut to place it in the next available location, or drag it to a specific location and release it.

DRAFT–FOR INTERNAL USE ONLY

Folders

Place folders on a Home screen to organize items.

Create a Folder

You can create an app folder on a Home screen.

1. From a Home screen, touch and hold an app shortcut and drag it on top of another app shortcut until a highlighted box appears.
2. Release the app shortcut to create the folder.
   - **Enter folder name**: Enter a name for the folder.
   - **Palette**: Change the color.
   - **Add apps**: Place more apps in the folder. Tap apps to select them, and then tap **Add**.
3. Tap anywhere outside of the folder to close it.
   - To add more apps, touch and hold an app shortcut and drag it to the folder.

Remove a Folder from a Home Screen

You can remove a folder that you added to a Home screen.

1. Touch and hold the folder until it detaches.
2. Drag the folder to **Delete** and release it. Confirm when prompted.

DRAFT–FOR INTERNAL USE ONLY

Navigation

Learn the basics for how to navigate through your device.

Touchscreen Navigation

Please note that a touch screen responds best to a light touch from the pad of your finger or a capacitive stylus. Using excessive force or a metallic object on the touch screen may damage the tempered glass surface and void the warranty.

Use the following motions and gestures on your touchscreen to navigate the device.

Tap

Lightly tap items to select or launch them.

- Tap the keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app shortcut to launch the application.

Double-Tap

Lightly tap items twice to select or launch them.

- Double-tap an image to zoom in or out.

Touch and Hold

Touch and hold items on the screen to activate them.

- Touch and hold a widget on a Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

Swipe

Lightly drag your finger vertically or horizontally across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.

DRAFT–FOR INTERNAL USE ONLY

Drag

Touch and hold an item, and then move it to a new location.

- Drag an app shortcut to add it to a Home screen.
- Drag a widget to place it in a new location on a Home screen.

Pinch and Spread

Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

- Pinch the screen to zoom out while viewing a picture or a web page.
- Spread your fingers on the screen to zoom in while viewing a picture or a web page.

Common Options

The device uses basic command options to perform common actions.

- **More options**: Tap to view more menu options for a screen. This often allows you to select items to delete or share.
- **Delete**: Tap to select items to delete.
- **Share**: Tap to select items to share, and then choose a sharing method.
- **Edit**: Tap to customize the screen.
- **On/Off**: Tap to turn the option on ( ) or off ( ).
- **Checkbox**: Tap to enable or select. When enabled, a checkmark is displayed. You can often tap a checkbox at the top of the screen to select all.
- **Menu**: Tap to view available options for the field.

DRAFT–FOR INTERNAL USE ONLY

Entering Text

Text can be entered using a keyboard or by speaking.

Use the Samsung Keyboard

Enter text using a QWERTY keyboard.

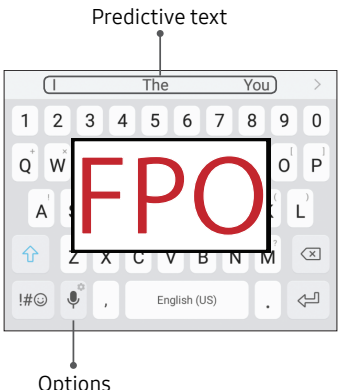

Special Keys

!#☺	**Symbol**: Tap to insert symbols.

Touch and hold **Options** for the following:

	Voice input: Enter text using Google Voice™ typing.
	Clipboard: Access the clipboard.
	Emoticon: Insert an emoticon at the cursor position.
	One-handed keyboard: Change the keyboard layout to accommodate use with one hand.
	Keyboard settings: Access keyboard settings.

DRAFT–FOR INTERNAL USE ONLY

Configure the Samsung Keyboard

To customize the Samsung keyboard:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Language and input** > **Virtual keyboard** > **Samsung keyboard** for options.
   - **Languages and types**: Set the keyboard type and choose which languages are available on the keyboard. To switch between languages, slide the Space bar sideways.
   - **Predictive text**: Predictive text suggests words that match your text entries, and can automatically complete common words. Predictive text can learn your personal writing style from your contacts, messages, Gmail, and social networking sites — improving its accuracy of predicting your text entries.
   - Additional keyboard settings provide assistance with capitalization, punctuation, and much more.

Use Google Voice Typing

Instead of typing, enter text by speaking.

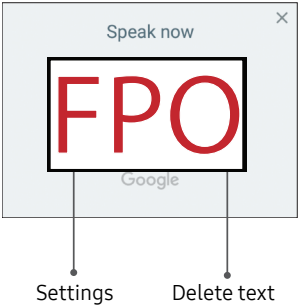

To enable Google voice typing:

1. Tap **Voice input** on the Samsung keyboard.
   - You may need to touch and hold **Options** (left of the Space bar) to find it.
2. Speak your text.

DRAFT–FOR INTERNAL USE ONLY

Configure Google Voice Typing

To customize Google voice typing:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Language and input** > **Virtual keyboard** > **Google voice typing** for options.
   - **Languages**: Select languages for Google voice typing.
   - **"Ok Google" detection**: Launch a Google search whenever you say "OK Google".
   - **Hands-free**: Allow requests with the device locked.
   - **Speech output**: Select options for spoken feedback.
   - **Offline speech recognition**: Download and install speech recognition engines, allowing you to use voice input while not connected to the network.
   - **Block offensive words**: Hide search results that contain offensive words.
   - **Bluetooth headset**: Use audio input from a Bluetooth® headset (not included) if one is connected.

DRAFT–FOR INTERNAL USE ONLY

Multi Window

Multitask by using multiple applications at the same time.

Window Controls

Tap — **Window controls** in the middle of the window border for options.

	Switch windows: Switch locations between Multi window™ apps.
	Close app: Close the selected app.

DRAFT–FOR INTERNAL USE ONLY

Enable Multi Window

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Advanced features** > **Multi window**.
3. Tap **Split screen view action** to enable this feature.

Use Multi Window

Apps that support Multi window display together on a split screen. You can switch between the apps and adjust the size of their display on the screen. Multi window is not available for all apps.

1. From any screen, touch and hold **Recent apps**.
2. Tap two apps that support Multi window to open them in split screen view.

   - or -

   If you are currently using an app that supports Multi window, tap another app to add it in split screen view.

You can also launch recently used apps directly into Multi window view. Only applications that support Multi window have the Multi window icon.

1. Tap **Recent apps**.
   - Recently used apps that support Multi window have a **Multi window** icon in their title bar.
2. Tap **Multi window** in the title bar to launch an application in split screen view.
   - Other recently used apps that support Multi window display below the launched app.
3. Tap an app icon to add it to the split screen view.

DRAFT–FOR INTERNAL USE ONLY

Emergency Mode

Emergency mode conserves your device's remaining power when you are in an emergency situation.

Emergency mode saves battery power by:

- Restricting application usage to only essential applications and those you select.
- Turning off Mobile data when the screen is off.
- Turning off connectivity features such as Wi-Fi and Bluetooth.

Activate Emergency Mode

To activate Emergency mode:

1. Press and hold the **Power** key to display the Device options window.
2. Tap **Emergency mode**.
   - When accessing for the first time, read the Terms and conditions. If you accept them, tap the **Checkbox**, and then tap **Agree**. Confirm when prompted.
3. Tap **Turn on**.

Turn Off Emergency Mode

After Emergency mode is turned off, the Location settings may stay the same as they were in Emergency mode.

► From the Emergency mode Home screen, tap **More options** › **Turn off Emergency mode**.

DRAFT–FOR INTERNAL USE ONLY

Use Emergency Mode Features

While in Emergency mode, your device conserves power. The following apps and features are available on the Home screen:

- **Flashlight**: Use the device's flash as a steady source of light.
- **Emergency alarm**: Sound an audible siren.
- **Share my location**: Send your location information to your emergency contacts.
- **Phone**: Launch the call screen.
- **Internet**: Launch the Web browser.
- **Add**: Add other available apps.
  - **Email**: Launch the Email app.
  - **Facebook**: Launch Facebook™.
  - **Maps**: Launch Google Maps™.
- **Battery charge**: Display estimated battery charge remaining.
- **Estimated usage time remaining**: Display estimated standby time that can be reached based on current battery charge and usage.
- **Emergency call**: Dial the emergency telephone number (for example, 911). This kind of call can be made even without activated cellular service.
- **More options**:
  - **Turn off Emergency mode**: Disable Emergency mode and return to standard mode.
  - **Remove**: Choose apps to remove from the screen.
  - **Manage emergency contacts**: Manage your medical profile and ICE (In Case of Emergency) group contacts.
  - **Settings**: Configure the available settings. Only a limited number of settings are enabled in Emergency mode.

DRAFT–FOR INTERNAL USE ONLY

Apps

Learn how to change the way apps are displayed, organize apps into folders, and uninstall or disable apps.

DRAFT–FOR INTERNAL USE ONLY

Using Apps

The Apps list displays all preloaded apps and apps that you downloaded. You can uninstall, disable, or hide apps from view.

Access Apps

You can access and launch all applications from the Apps list.

1. From a Home screen, tap **Apps**.
2. Tap an app's shortcut to launch it.
   - To return to the main Home screen, press the **Home** key.

Download and Install New Apps

Find new apps to download and install on your device.

- **Play Store**: Download new apps from the Google Play store. Visit play.google.com/store/apps to learn more.
- **Galaxy Apps**: View and download Samsung apps that are optimized for use with Galaxy devices. Visit samsung.com/levant/apps/mobile/galaxyapps to learn more.

Uninstall Apps

You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
- Apps that are disabled are turned off and hidden from view.

DRAFT–FOR INTERNAL USE ONLY

To uninstall or disable an app:

1. From a Home screen, tap **Apps**.
2. Tap **More options** > **Edit**. Apps that can be uninstalled or disabled display **Uninstall/disable** on their shortcut.
3. Tap **Uninstall/disable** and follow the prompts to either uninstall or disable the app.
4. Tap **Done** when finished.

Organize Apps

Arrange the Order

App shortcuts can be listed alphabetically or in your own custom order.

To change the order apps are listed:

1. From a Home screen, tap **Apps** > **More options** > **Edit**.
2. Touch and hold an app shortcut or folder, and then drag it to a new location.
3. Tap **Done** when finished.

To alphabetize your apps:

1. From a Home screen, tap **Apps** > **More options** > **Sort**.
2. Tap **Alphabetical order**.

DRAFT–FOR INTERNAL USE ONLY

Use Folders

You can organize App shortcuts in a folder on an Apps list screen.

1. From a Home screen, tap **Apps** › **More options** › **Edit**.
2. Touch and hold an app shortcut, and then drag it on top of another app shortcut until a highlighted box is displayed.
3. Release the app shortcut to create the folder.
   - **Enter folder name**: Name the folder.
   - **Palette**: Change the folder color.
   - **Add apps**: Place more apps in the folder. Tap apps to select them, and then tap **Add**.
4. Tap anywhere outside of the folder to close it.
   - To add more apps, touch and hold an app shortcut and drag it to the folder.
5. Tap **Done** when finished.

To launch apps in a folder:

► Tap a folder, and then tap an app shortcut to launch it.

To delete a folder:

1. From a Home screen, tap **Apps** › **More options** › **Edit**.
2. Tap the folder to delete, and then tap **Remove folder**. Confirm when prompted.
3. Tap **Done** when finished.

To add a folder to a Home screen:

1. From a Home screen, tap **Apps**.
2. Touch and hold a folder, drag it to a Home screen, and then release it.

DRAFT–FOR INTERNAL USE ONLY

Applications Settings

You can download and install new applications on your device. Use Application manager settings to manage your downloaded and preloaded applications.

Warning: Because this device can be configured with system software not provided by or supported by Google or any other company, you operate this software at your own risk.

If you have disabled apps, you can choose whether to display them.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Apps**.
3. If you have disabled applications:
   - Tap **Menu** at the top left of the screen.
   - Tap **All apps**, **Enabled**, or **Disabled**.
4. Tap **More options** for the following options:
   - **Sort by size/name**: Sort the apps by size or name.
   - **Default apps**: Choose or change apps that are used by default for certain features, like email or browsing the Internet.
   - **App permissions**: Control which apps have permissions to use certain features of your device.
   - **Show/Hide system apps**: Show or hide system (background) apps.
   - **Special access**: Optimize battery usage for individual apps, enable device administrator apps, choose apps that can appear over other running apps, select which apps can change system settings, and more.
   - **Reset app preferences**: Reset options that have been changed. Existing app data is not deleted.

DRAFT–FOR INTERNAL USE ONLY

5. Tap an application to view and update information about the application. The following options are displayed:
   - **Uninstall/Disable**: Uninstall or disable the application. Preloaded apps can only be disabled.
   - **Force stop**: Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
   - **Mobile data**: View mobile data usage.
   - **Battery**: View battery usage since the last full charge.
   - **Storage**: Manage the app's storage usage.
   - **Memory**: View memory usage.
   - **Notifications**: Configure notifications from the app.
   - **Permissions**: View permissions granted to the app for access to your device's information.
   - **Set as default**: Set the app as a default for a certain category of apps.
   - **Apps that can appear on top**: Choose apps that can run on top of other running apps.
   - **Apps that can change system settings**: Choose which apps can change system settings.

DRAFT–FOR INTERNAL USE ONLY

Calculator

The Calculator provides basic and advanced arithmetic functions.

Basic Operation

You can use your calculator to perform basic operations.

1. From a Home screen, tap **Apps** > **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key, and enter the next number.
4. Tap **Equals** to view the result.
5. Tap C **Clear** to clear the results.

View Calculator History

You can view and clear your Calculator history.

1. From a Home screen, tap **Apps** > **Calculator**.
2. Tap **History**.
   - To return to the calculator, tap **Keypad**.
   - To clear the calculator history, tap **Clear history**.

Scientific Calculator

The Calculator app also provides advanced arithmetic functions.

To use the Scientific calculator:

1. From a Home screen, tap **Apps** > **Calculator**.
2. Turn the device to landscape view.
   - If Auto rotate is not enabled, tap **Rotate screen**.

DRAFT–FOR INTERNAL USE ONLY

Calendar

Manage your events and tasks.

Add Calendars

Add existing calendars to the Calendar app.

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap **More options** > **Manage calendars**.
3. Tap **Add account**, and select an account type.
4. Enter your account information and follow the prompts.

Calendar View

To choose a calendar view:

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap **View**, and then tap an option:
   - **Year**: Display all twelve months of this year. Swipe across the screen to display another year.
   - **Month and agenda**: Display the current month. Swipe across the screen to display another month. Events and tasks are also displayed.
   - **Week**: Display the current week. Swipe across the screen to display another week.
   - **Day**: Display today's schedule by hour. Swipe across the screen to display another day.
   - **Tasks**: Display all tasks.
3. Tap **Today** to return to the current date.

DRAFT–FOR INTERNAL USE ONLY

Create an Event

You can use your Calendar to create events.

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap **Add** to add an event.
3. Enter details for the event, and then tap **Save**.

Share an Event

You can share events you create from your Calendar.

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap an event to view it, and then tap again to edit it.
3. Tap **Share**, choose a sharing method, and follow the prompts.

Delete an Event

You can delete events you create from your Calendar.

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap an event to view it, and then tap again to edit it.
3. Tap **Delete**. Confirm when prompted.

Create a Task

You can use your Calendar to create tasks. Tasks are items you add to the calendar to be accomplished on a certain day. A task appears as a checklist item and is removed once you mark the task as complete.

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap **View** > **Tasks**.
3. Tap **Add** to add a task.
4. Enter details for the task, and then tap **Save**.

DRAFT–FOR INTERNAL USE ONLY

Delete a Task

You can delete tasks you create from your Calendar.

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap a day on the calendar to view the tasks for the day, or tap **View** > **Tasks**.
3. Tap the **Checkbox** by the task to mark it as complete and remove it from the calendar.
   - To delete an individual task, tap the task to open it, and then tap **Delete**. Confirm when prompted.
   - To delete all tasks, tap **Delete all**.

Calendar Settings

These settings allow you to modify settings associated with using the Calendar.

1. From a Home screen, tap **Apps** > **Calendar**.
2. Tap **More options** > **Settings**.
3. Tap an option and follow the prompts.

DRAFT–FOR INTERNAL USE ONLY

Camera and Video

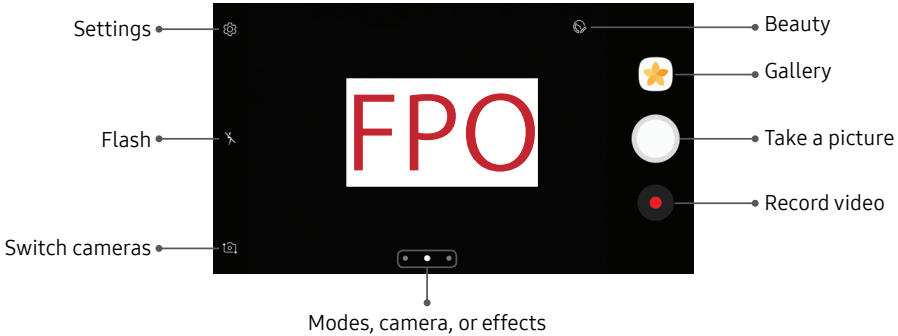

DRAFT–FOR INTERNAL USE ONLY

Camera Shortcut

Open the Camera by quickly pressing the **Home** key twice.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Advanced features**, and tap **On/Off** next to **Quick launch camera** to enable.

Take Pictures

Take pictures with your device's front or rear camera.

If you have an SD card installed, pictures and videos are stored to the SD card. If no card is installed, pictures and videos are saved to your phone's memory.

1. From a Home screen, tap **Apps** > **Camera**.
2. Use the display screen as a viewfinder by aiming the camera at the subject. While composing your picture, use the available options or these gestures:
   - To focus the shot, tap the screen. When you tap the screen, a brightness scale is displayed. Slide the light bulb up or down to adjust the brightness.
   - To add an effects filter, swipe to the left and tap a preview filter to apply it to the screen.
   - To add a shooting mode, swipe to the right and select a mode.
   - To quickly switch between the front and rear cameras, swipe the screen up or down.
   - To add a camera setting, tap a Quick settings icon or **Settings**.
3. Tap **Take a picture** to take the picture.

DRAFT–FOR INTERNAL USE ONLY

Record Videos

Record high-quality videos using your phone.

1. From a Home screen, tap **Apps** > **Camera**.
2. Aim the camera at your subject, and then tap **Record**. The following actions are available:
   - Tap **Capture** to take a picture while recording.
   - Tap **Pause** to pause recording.
   - Tap **Resume** to resume recording.
   - Tap **Stop** to stop recording.

Configure Shooting Mode

Several visual effects are available. Some modes are not available when taking self-portraits.

1. From a Home screen, tap **Apps** > **Camera**.
2. Swipe to the right for the Mode options. Each section indicates which camera (front or rear) the modes are available for.

Rear camera

- **Auto**: Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
- **Pro**: Manually adjust the ISO sensitivity, exposure value, white balance, and color tone while taking pictures.
- **Panorama**: Create a linear image by taking pictures in either a horizontal or vertical direction.
- **Continuous shot**: Touch and hold the Camera button to take pictures continuously.
- **Sports**: Take clearer pictures of fast moving subjects.

Front camera

- **Selfie**: Take selfie shots and apply various effects, such as an airbrushed effect.

DRAFT–FOR INTERNAL USE ONLY

Common

- **Sound & shot**: Enrich your pictures by adding a few seconds of background sound.
- **More options**: See more options for the camera modes.

Camera Settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

1. From a Home screen, tap **Apps** > **Camera**.
2. Tap **Settings** to configure settings for the Camera. Available options vary depending on the camera or recording mode used.

Rear camera

- **Picture size**: Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Video size**: Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.

Front camera

- **Picture size**: Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Video size**: Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Save pictures as previewed**: Save the self-portrait or self-recording as viewed on the camera screen, not as flipped images.
- **Ways to take pictures**:
  - **Tap to take pictures**: Tap the screen to take selfies.
  - **Gesture control**: Detect your palm and automatically take a picture two seconds later.

DRAFT–FOR INTERNAL USE ONLY

Common

- **Timer**: Take time-delayed pictures or videos.
- **Grid lines**: Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags**: Attach a GPS location tag to the picture.
- **Review pictures**: Set to show pictures after taking them.
- **Quick launch**: Open camera by pressing the **Home** key twice in quick succession.
- **Storage location**: Select the memory location for storage. This option only appears if an optional memory card (not included) is installed.
- **Volume key function**: Use the Volume key as the camera key, the record key, or for system volume.
- **Shutter sound**: Enable or disable a shutter sound when pictures are taken.
- **Reset settings**: Reset the camera settings.

DRAFT–FOR INTERNAL USE ONLY

Clock

The Clock app offers features for keeping track of time and setting alarms.

1. From a Home screen, tap **Apps** > **Clock**.
2. Tap a tab to use a feature:
   - **Alarm**: Set an alarm to ring at a specific time.
   - **World clock**: View the time of day or night in other parts of the world. World clock displays time in hundreds of different cities, within all 24 time zones around the world.
   - **Stopwatch**: Measure intervals of time.
   - **Timer**: Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

Alarm

Set an alarm to ring at a specific time.

Create an Alarm

Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap **Apps** > **Clock**.
2. Tap **Add alarm**.
3. Tap the following items to configure an alarm:
   - **Date**: Choose the day for this alarm.
   - **Time**: Set a time for the alarm.
   - **Repeat**: Choose when to repeat the alarm.
   - **Alarm name**: Enter a name for the alarm.
   - **Snooze**: Allow snoozing. Set interval and repeat values for the alarm while snoozing.

DRAFT–FOR INTERNAL USE ONLY

- **Alarm tone and volume**: Choose a sound to play for the alarm, and drag the slider to set the volume of the alarm.
- **Vibration**: Choose whether the alarm uses vibration alert.
- **Read time aloud**: Set the device to read the time aloud when the alarm rings.

4. Tap **Save** to save the alarm.

Delete an Alarm

You can delete an alarm that you created.

1. From a Home screen, tap **Apps** > **Clock**.
2. Find the alarm in the alarm list (under **Alarm**), and then touch and hold it to select it.
3. Tap **Delete**.

World Clock

The World clock lets you keep track of the current time in multiple cities around the globe.

To list a city on the main World clock screen:

1. From a Home screen, tap **Apps** > **Clock**.
2. Tap **World clock**.
3. Tap **Add city**.
4. Swipe through the list or tap **Search** to find a specific city.
5. Tap the city to add it to the World clock list.
6. Repeat to add more cities.

DRAFT–FOR INTERNAL USE ONLY

To remove a city from the main World clock screen:

1. From a Home screen, tap **Apps** > **Clock**.
2. Tap **World clock**.
3. Find the city to remove, and then touch and hold it to select it.
4. Tap **Delete**.

Stopwatch

The Stopwatch lets you time events down to a hundredth of a second.

1. From a Home screen, tap **Apps** > **Clock**.
2. Tap **Stopwatch** and use the following options:
   - **Start**: Begin timing.
   - **Stop**: Stop timing.
   - **Lap**: Keep track of lap times.
   - **Resume**: Continue timing after stopping the clock.
   - **Reset**: Reset the Stopwatch to zero.

Timer

The Timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From a Home screen, tap **Apps** > **Clock**.
2. Tap **Timer**.
3. Use the keypad and tap **Hours**, **Minutes**, and **Seconds** to set the length of the Timer. The following options are available:
   - **Start**: Begin the Timer.
   - **Pause**: Pause the Timer.
   - **Resume**: Resume the Timer.
   - **Cancel**: Stop the Timer.

DRAFT–FOR INTERNAL USE ONLY

Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts.

For more information on connecting with and managing your accounts through your device, see "Add an Account" on page 154.

Note: The Contacts app is different from the Contacts tab in the Phone app. Although both list the contacts in your phone and accounts, the available options and functions are different.

Add a Contact

Use the following procedure to add a new contact.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **Create contact**, and then tap contact fields to enter information.
   - Choose a storage account for the contact. You can store the contact on the device or sync it with an account.
   - Tap **Contact photo** to assign a picture to the new contact.
   - Enter a name and other contact information.
     - Tap **Add field** to enter additional entries.
     - Tap **Remove field** to remove an entry.
     - Tap **View more** for additional fields.
     - Tap the label to the right of an entry to choose a label for the field (for example, Home or Work).
   - Tap **Scan business card** to import contact information from a business card through the device's camera.
3. Tap **Save**.

DRAFT–FOR INTERNAL USE ONLY

Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add more fields to the contact's list of information.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap the contact to select it, and then tap **Details** > **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.

Share, Import, or Export Contacts

When you share a contact, the contact's information is sent as a vCard file (VCF) or as a text file. You can share a vCard using Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.

Share a Contact

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap the contact to select it, and then tap **Details** > **Share**.
3. Choose whether to send the contact as a **vCard file (VCF)** or as a **Text**.
4. Choose a sharing method and follow the prompts.

Import Contacts

Your phone can import contacts from an installed memory card (not included).

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Settings** > **Import/export contacts**.
3. Tap **Import** and follow the prompts.

DRAFT–FOR INTERNAL USE ONLY

Export Contacts

If you are saving contacts to an account that does not automatically back them up to the Cloud, you can manually back them up to an optional installed SD card for re-import if needed.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Settings** > **Import/Export contacts**.
3. Tap **Export** and follow the prompts.

Link or Unlink Contacts

When you have contacts from various accounts, you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.

To link contacts:

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap the contact to select it, and then tap **Details**.
3. Tap **More options** > **Link contacts**.
4. Tap contacts to choose them.
5. Tap **Link**.

To unlink contacts:

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap the contact to select it, and then tap **Details**.
3. Tap **More options** > **Manage linked contacts**.
4. Tap **Disconnect** beside contacts to unlink them from the main contact.

DRAFT–FOR INTERNAL USE ONLY

Mark Contacts as Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites display together on the Favorites tab in the Phone app.

To mark contacts as Favorites:

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap the contact to select it, and then tap **Details**.
3. Tap **Add to Favorites** (the star brightens).

To remove contacts from Favorites:

1. From a Home screen, tap Apps > Contacts.
2. Tap the contact to select it, and then tap **Details**.
3. Tap **Remove from Favorites** (the star dims).

Delete Contacts

You can delete a single contact or choose multiple contacts to delete.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Touch and hold a contact to select it.
   - You can also tap other contacts or tap the **All** checkbox at the top of the screen to select all contacts.
3. Tap **Delete**, and then confirm when prompted.

DRAFT–FOR INTERNAL USE ONLY

Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.

Create a Group

You can create your own contact groups.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Groups**.
3. Tap **Create**, and then tap fields to enter information about the group:
   - **Group name**: Enter a name for the new group.
   - **Group ringtone**: Customize the sounds for the group.
   - **Add member**: Select contacts to add to the new group, and then tap **Done**.
4. Tap **Save**.

Add to or Remove Contacts from a Group

You can add more contacts to a group, or remove contacts.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Groups**, and then tap a group.
3. Tap **Edit**.
   - To add a contact, tap **Add member**, and then tap the contacts you want to add. When finished, tap **Done**.
   - To remove a contact, tap **Delete** next to a contact.
4. Tap **Save**.

DRAFT–FOR INTERNAL USE ONLY

Edit a Group

You can rename a contact group.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Groups**, and then tap a group.
3. Tap **Edit** and enter a new name.
4. Tap **Save**.

Send a Message to a Group

You can send a text message to members of a group.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Groups**, and then tap a group.
3. Tap **More options** > **Send message**.

Send an Email to a Group

You can send an email to members of a group.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Groups**, and then tap a group.
3. Tap **More options** > **Send email**.
4. Tap contacts to select them, or tap the **All** checkbox at the top of the screen to select all, and then tap **Done**.
   - Only group members that have an email address in their records are displayed.
5. Choose an email account and follow the prompts.

DRAFT–FOR INTERNAL USE ONLY

Delete a Group

Preset groups cannot be deleted.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Groups**, and then tap the group to delete.
3. Tap **More options** > **Delete**.
4. Tap **Group only** to only delete the group or tap **Group and members** to delete the group and the contacts in the groups.

Contacts Settings

These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Tap **More options** > **Settings**.
3. Tap an option and follow the prompts.

DRAFT–FOR INTERNAL USE ONLY

Email

Use the Email app to view and manage all your email accounts in one app. To add an email account, see "Add an Email Account" on page 14.

To access Email:

► From a Home screen, tap **Apps** > **Email**.

Create and Send an Email

This section describes how to create and send an email using the Email app.

1. From a Home screen, tap **Apps** > **Email** > **Compose new email**.
2. Tap the **To** field to manually add an email address or tap **Add from Contacts** to select a recipient from Contacts or Groups.
   - If manually entering recipients, enter additional recipients by separating each entry with a semicolon (;). More recipients can be added at any time before the message is sent.
   - If adding a recipient from your Contacts, tap the contact to place a checkmark, and then tap **Done**. The contact is displayed in the recipients field.
   - Tap **Show additional fields** to add Cc and Bcc fields.
3. Tap the **Subject** and **Message** fields to enter text.
   - Tap **Attach** to add files, images, audio, and more to your email.
   - Tap **More options** for additional email options.
4. Review your message and tap **Send**.

DRAFT–FOR INTERNAL USE ONLY

Manage the Inbox

There are several tools available from the Inbox screen.

► From a Home screen, tap **Apps** > **Email**.

- Tap a message to read and reply or forward it.
- Tap **Search** to search for key words in your email inbox.
- Tap **Edit** for additional message options like sorting, deleting, sharing and more.
- Tap **Sort by** to customize how messages display.

View Multiple Email Accounts

You can view email you receive for multiple accounts on the Combined inbox screen or you can view email accounts individually.

1. From a Home screen, tap **Apps** > **Email**.
2. Tap **Mailbox** at the top left of the screen to view the current account mailbox.
3. Tap the account name to view:
   - **All accounts**: View all email in a combined inbox.
   - **[Account Name]**: View email for only one email account.

DRAFT–FOR INTERNAL USE ONLY

Remove Email Accounts

To remove an email account:

1. From a Home screen, tap **Apps** > **Email**.
2. Tap **Mailbox** > **Settings**.
3. Tap the account you want to remove.
4. Tap **Remove**. Confirm when prompted.

Email Settings

These settings allow you to modify settings associated with using the Email app.

1. From a Home screen, tap **Apps** > **Email**.
2. Tap **Mailbox** > **Settings**.
3. Under **General**, tap an option, and then follow the prompts.
4. Tap an account to configure specific settings for only that account.

DRAFT–FOR INTERNAL USE ONLY

Galaxy Apps

Samsung Galaxy Apps provides a quick and easy way to find and download free premium apps that are compatible with your Galaxy device.

A Samsung account is required to purchase and download apps.

To access the Samsung Galaxy Apps website:

► From a Home screen, tap **Apps** › **Galaxy Apps**.

DRAFT–FOR INTERNAL USE ONLY

Gallery

View, edit, and manage pictures and videos.

View Pictures

Launching Gallery displays available folders. When another app, such as Email, saves a picture, a Download folder is automatically created to contain the picture. Likewise, capturing a screenshot automatically creates a Screenshots folder.

1. From a Home screen, tap **Apps** > **Gallery**.
2. Tap **Pictures**, **Albums**, or **Stories** to choose the way items are displayed.
3. Tap a picture to view it, or first tap an album or folder, and then tap a picture.
4. When viewing a picture:
   - Swipe left or right to view the next or previous picture.
   - Tap **Favorite** to mark the picture as a favorite, and then access it from the Favorites album.
   - To start a slideshow with pictures and videos in the current folder, tap **More options** > **Slideshow**.
   - To set the picture as the photo for a contact, tap **More options** > **Set as contact picture**.
   - To send the picture to your connected printer, tap **More options** > **Print**.

DRAFT–FOR INTERNAL USE ONLY

Edit Pictures

You can edit pictures stored on your device.

1. From a Home screen, tap **Apps** > **Gallery**.
2. Tap a picture to view it.
   - **Edit**: View and use the editing tools.
   - **More options** > **Details**: View and edit information about the picture, including the date created, location, and properties.
   - **More options** > **Rotate left** or **Rotate right** to rotate the picture.

Play Video

You can play videos stored on your device.

1. From a Home screen, tap **Apps** > **Gallery**.
2. Tap a folder or category to open it.
3. Tap a video to view it.
4. Tap **Play video** to play the video.

Edit Video

You can trim segments of a video.

1. From a Home screen, tap **Apps** > **Gallery**.
2. Tap a video to view it.
3. Tap **Edit** and tap an option.
4. Use the sliders at the bottom of the screen to trim the video. Move the left bracket to the desired starting point, and then move the right bracket to the desired ending point.
5. Tap **Save** to save your new video.

DRAFT–FOR INTERNAL USE ONLY

Share Pictures and Videos

You can share pictures and videos from your Gallery.

1. From a Home screen, tap **Apps** > **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap **More options** > **Share**, select pictures and videos, and then tap **Share** to send them to others or share them with social network services.

   – or –

   While viewing a single picture or video, tap **Share** to send it to others or share it with social network services.

Direct Share

Share content with specific people directly using the sharing panel from within any app.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Advanced features** > **Direct share**, and tap **On/Off** to enable.

Once enabled, contacts you have shared with in the past will appear as an option in the Share window for each app.

DRAFT–FOR INTERNAL USE ONLY

Delete Pictures and Videos

You can delete pictures and videos stored on your device.

1. From a Home screen, tap **Apps** > **Gallery**.
2. Tap a folder to open it.
3. Tap **More options** > **Edit**.
4. Tap pictures and videos to select them, or tap the **All** checkbox at the top of the screen to select all pictures and videos.
5. Tap **Delete**, and confirm when prompted.

   – or –

   When viewing a single picture or video, tap **Delete**.

Take a Screenshot

Capture an image of your screen. It will automatically create a Screenshots album in the Gallery app.

► From any screen, press and hold the **Power** and **Home** keys.

DRAFT–FOR INTERNAL USE ONLY

Google Apps

Enjoy these apps from Google.

Certain apps require a Google Account. Visit google.com to learn more.

Chrome

Browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your mobile device.

► From a Home screen, tap **Apps** > **Google** folder > **Chrome**.

Visit google.com/chrome/browser/mobile to learn more about Chrome™.

Drive

Open, view, rename, and share your Google Docs™ and files.

► From a Home screen, tap **Apps** > **Google** folder > **Drive**.

Visit drive.google.com to learn more about Google Drive™.

Duo

Make one-to-one video calls.

► From a Home screen, tap **Apps** > **Google** folder > **Duo**.

Visit duo.google.com to learn more about Google Duo.

DRAFT–FOR INTERNAL USE ONLY

Gmail

Send and receive email with Gmail, Google's web-based email service.

► From a Home screen, tap **Apps** > **Google** folder > **Gmail**.

Visit gmail.com to learn more.

Google

Search not only the Internet, but also the apps and contents of your device.

► From a Home screen, tap **Apps** > **Google** folder > **Google**.

Maps

Find your current location and get directions and other location-based information.

► From a Home screen, tap **Apps** > **Google** folder > **Maps**.

Visit google.com/maps to learn more.

You must enable location services to use Google Maps. For more information, see "Location" on page 113.

Photos

Automatically backs up your photos and videos to your Google Account.

► From a Home screen, tap **Apps** > **Google** folder > **Photos**.

Visit photos.google.com to learn more about Google Photos™.

DRAFT–FOR INTERNAL USE ONLY

Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly or download them for viewing when you are not connected to the Internet. You can also view videos saved on your device.

► From a Home screen, tap **Apps** > **Google** folder > **Play Movies & TV**.

Visit play.google.com/store/movies to learn more.

Play Music

Play music and audio files on your device.

► From a Home screen, tap **Apps** > **Play Music**.

Visit play.google.com/music to learn more.

Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in Google Play store.

► From a Home screen, tap **Apps** > **Play Store**.

Visit play.google.com/store to learn more.

YouTube

View and upload YouTube™ videos right from your device.

► From a Home screen, tap **Apps** > **Google** folder > **YouTube**.

Visit youtube.com to learn more.

DRAFT–FOR INTERNAL USE ONLY

Internet

Access the Internet with a fully-featured web browser.

Access the Internet

► From a Home screen, tap **Apps** > **Internet**.

Command Keys

The following command keys are available:

- **Add to Bookmarks**: Add the current web page to bookmarks or as a shortcut on the Home screen.
- **Refresh**: Refresh or reload the current web page.
- **Back** or **Back**: Return to the previous page.
- **Forward**: Go forward to a recent page.
- **Home**: Display your Internet Home screen.
- **Bookmarks**: Manage bookmarked pages, saved pages, and history.
- **Tabs**: Manage open tabs. The number on the icon indicates the number of tabs that are currently open.

View a Web Site

To view a web site:

► Tap the address field, enter the web address, and then tap **Go** on the keyboard.

To zoom in or out:

► Tap the screen twice or pinch the screen to zoom out. Stretch the screen to zoom in.

DRAFT–FOR INTERNAL USE ONLY

Browser Tabs

Use tabs to view multiple web pages at the same time.

To open a new tab:

► Tap **Tabs** > **New tab**.

To close a tab:

1. Tap **Tabs**.
2. Tap **Close tab** by the tabs you want to close.

Bookmarks

The Bookmarks page stores Bookmarks, Saved pages, and History.

Save and Open Bookmarks

Bookmarking a web page saves the web address so that you can access it quickly.

To bookmark the current web page:

1. Tap **Add to Bookmarks**.

   – or –

   Tap **More options** > **Add to Bookmarks**.
2. Type a title for the bookmark and tap **Save**.

To open a bookmarked web page:

1. Tap **Bookmarks** > **Bookmarks**.
2. Tap a bookmark entry.

DRAFT–FOR INTERNAL USE ONLY

Saved Pages

Saving a web page stores the web page content on your device so that you can access it offline.

To save the current web page:

► Tap ⋮ **More options** > **Save web page**.

To view saved web pages:

1. Tap **Bookmarks** > **Saved pages**.
2. Tap a saved page to open it in the browser.

View History

To view a list of recently visited web pages:

► Tap **Bookmarks** > **History**.

Share Pages

To share a web page address with others:

► Tap ⋮ **More options** > **Share**, and follow the prompts.

Secret Mode

Pages viewed in Secret mode are not listed in your browser history or search history, and leave no traces (such as cookies) on your device. Secret tabs are a darker shade than the normal tab windows.

Any downloaded files remain on your device after you close the secret tab.

To enable Secret mode:

1. From a Home screen, tap **Apps** > **Internet**.
2. Tap **Tabs**.
3. Tap **Turn on secret mode**.
4. Tap **Set password** to protect your Secret mode data with a password.

   – or –

   Tap **Do not use password**.

DRAFT–FOR INTERNAL USE ONLY

To turn off Secret mode:

1. From a Home screen, tap **Apps** > **Internet**.
2. Tap **Tabs** > **Turn off secret mode**.

Internet Settings

These settings allow you to modify settings associated with using the Internet app.

1. From a Home screen, tap **Apps** > **Internet**.
2. Tap **More options** > **Settings**.
3. Tap an option and follow the prompts.

DRAFT–FOR INTERNAL USE ONLY

Messages

Learn how to send and receive different messages using the Samsung Messages app on your device.

Types of Messages

The Samsung Messages app provides the following message types:

- Text Messages (SMS)
- Multimedia Messages (MMS)

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type.

DRAFT–FOR INTERNAL USE ONLY

Create and Send Messages

This section describes how to create and send a message using the Messages app.

1. From a Home screen, tap **Apps** > **Messages**.
2. Tap **Compose**.
3. Tap contacts, if desired, and then tap **Compose**.
   - Tap the **Recipient** field to manually enter a recipient. You can also select the recipient based on Groups or recent calls.
   - Enter additional recipients by separating each entry with a semicolon (;) and then using the previous procedure. More recipients can be added at any time before the message is sent.
4. Tap the **Enter message** field to enter a message.
   - **Attach**: Add images, audio, and more to your message.
   - **Emoticon**: Choose an available emoticon from the list and add it into your message at the cursor location.
5. Review the message and tap SEND **Send**.

Note: If you exit a message before you send it, the message is automatically saved as a draft.

DRAFT–FOR INTERNAL USE ONLY

Send SOS Messages

Send a message with your location to designated contacts when you are in an emergency situation.

To enable SOS messages:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Advanced features** > **Send SOS messages**, and tap **On/Off** to enable this feature.
3. Tap **Send messages to** > **Add** and add recipients by creating new contacts or selecting from Contacts.
   - To include a picture from your front and rear camera in your SOS messages, tap **Attach pictures**.
   - To include a 5 second audio recording in your SOS message, tap **Attach audio recording**.

To send an SOS message:

► Press the **Power** key quickly three times.

View New Messages

When you receive a new message, **New message** appears on the Status bar.

To view the message:

► Open the Notification panel and tap the message. For more information, see "Notifications" on page 22.

– or –

From a Home screen, tap **Apps** > **Messages**, and then tap the new message to view it.

- To play a multimedia message attachment (audio or video), tap **Play**.
- To scroll through the list of messages, swipe up or down the page.

DRAFT–FOR INTERNAL USE ONLY

Delete Messages

To delete messages, follow these steps:

1. From a Home screen, tap **Apps** > **Messages**.
2. Tap **More options** > **Edit**.
3. Tap each message you want to delete or tap the **All** checkbox at the top of the screen to select all messages.
4. Tap **Delete** and confirm when prompted.

Message Search

You can search through your messages by using the Message Search feature.

1. From a Home screen, tap **Apps** > **Messages**.
2. Tap **Search**.
3. Enter a word or phrase to search for, and then tap **Search** on the keyboard.

Messages Settings

Configure the settings for text messages, multimedia messages, push messages, and more.

1. From a Home screen, tap **Apps** > **Messages**.
2. Tap **More options** > **Settings**.

Emergency Alerts

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS), which may also be known as the Personal Localized Alerting Network (PLAN). For more information, contact your wireless provider.

Emergency alerts allows customers to receive geographically-targeted messages. Alert messages notify customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency alert message.

DRAFT–FOR INTERNAL USE ONLY

There are three types of Emergency alerts:

- Alerts issued by the President
- Alerts involving imminent threats to safety of life (extreme and severe)
- AMBER alerts (missing child alert)

Users may choose not to receive Imminent alerts (extreme and severe) and AMBER alerts.

Note: Alerts issued by the President cannot be disabled.

To disable Imminent and AMBER alerts:

1. From a Home screen, tap **Apps** > **Messages**.
2. Tap **More options** > **Settings** > **Emergency alert settings**.
3. Tap **Emergency alerts**.
   - All alerts are enabled (on) by default.
4. Tap an alert option to disable it.

DRAFT–FOR INTERNAL USE ONLY

My Files

Access files stored on your device, including images, videos, music, and sound clips.

To view files in My Files:

1. From a Home screen, tap **Apps** > **My Files**.
2. Tap a category to view the relevant files or folders.
3. Tap a file or folder to open it.

File Groups

Files stored in the device are organized into the following groups:

- **Recent files**: View recently saved files.
  - This option appears if one or more files have been accessed recently.
- **Categories**
  - **Images**: View image files.
  - **Audio**: View audio files.
  - **Videos**: View video files.
  - **Documents**: View document files.
  - **Downloads**: View all apps and files that have been downloaded to the device.
  - **Installation files**: View all APK files.
- **Phone**
  - **Internal storage**: View folders and files located on the device.
  - **SD card**: View folders and files located on the optional SD card (not included).

DRAFT–FOR INTERNAL USE ONLY

My Files Options

Use My File options to search, edit, clear file history, and more.

► From a Home screen, tap **Apps** > **My Files**. The following options are available:

- **Search**: Search for a file or folder.
- **More options**: Tap for the following options:
  - **Clear recent file history**: Clear the Recent files category. This option only appears if files have been accessed recently.
  - **Storage usage**: View memory information for your device.
  - **Settings**: View settings for the My Files app.

DRAFT–FOR INTERNAL USE ONLY

Phone

DRAFT–FOR INTERNAL USE ONLY

Make a Call

You can make a call from a Home screen.

Using the Dialer

1. From a Home screen, tap **Phone**.
2. Enter a number on the keypad and tap **Call**.
   - Tap **Keypad** if the keypad is not displayed.

From Contacts

To make a call from Contacts.

1. From a Home screen, tap **Apps** > **Contacts**.
2. Swipe your finger across a contact to the right to call the contact.

From Recents

All incoming, outgoing, and missed calls are recorded in the Call log. If the number or caller is listed in your contacts list, the associated name is also displayed.

1. From a Home screen, tap **Phone**.
2. Tap **Recents**. A list of recent calls is displayed.
3. Tap a contact, and then tap **Call**.

Direct Calls

Call the contact whose call log, message, or contact details are currently on the screen by bringing the device close to your ear.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Advanced features** > **Direct call**, and tap **On/Off** to enable.

DRAFT–FOR INTERNAL USE ONLY

Answer a Call

When a call is received, the phone rings and the caller's phone number or name is displayed, if it is stored in the Contacts list.

► On the incoming call screen, drag **Answer** to the right to answer the call.

If you are using an app, a pop-up screen is displayed for the incoming call.

► On the incoming call pop-up screen, tap **Answer** to answer the call.

Decline a Call

► On the incoming call screen, drag **Decline** to the left to reject the call and send it to your voicemail.

If you are using an app, a pop-up screen is displayed for the incoming call.

► Tap **Decline** to reject the call and send it to your voicemail.

Decline with Message

► On the incoming call screen, drag **Send message** upward and select a message.

If you are using an app, a pop-up screen is displayed for the incoming call.

► Tap **Send message** and select a message.

End a Call

To finish your call:

► Tap **End** when you are ready to end your call.

DRAFT–FOR INTERNAL USE ONLY

While on a Call

Adjust the Call Volume

► Press the **Volume** keys to increase or decrease the volume.

– or –

Tap ⋮ **More options** > **Turn on extra volume** to quickly add more volume to the incoming audio.

Multitasking

If you exit the call screen and return to a Home screen, your active call is indicated by **Call** on the Status bar.

This lets you continue with your current call and do something else, such as access the contacts list, view a recent email, or locate a picture.

To return to the call screen:

► Drag the Status bar down to display the Notification panel, and then tap **Call notification**.

To end a call from any application:

► Drag the Status bar down to display the Notification panel, and then tap **End call**.

Switch to Headset or Speaker

Listen to the call using the speaker or through a Bluetooth headset (not included).

► Tap **Speaker** to hear the caller using the speaker.

– or –

Tap **Bluetooth** to hear the caller using a Bluetooth headset.

DRAFT–FOR INTERNAL USE ONLY

Call Log

The numbers of the calls you have dialed, received, or missed are stored in the Call log.

1. From a Home screen, tap **Phone**.
2. Tap **Recents**. A list of recent calls is displayed. If the caller is in your Contacts list, the caller's name is displayed.

Save a Contact from a Recent Call

Use recent call information to create a contact or update your Contacts list.

1. From a Home screen, tap **Phone**.
2. Tap **Recents**.
3. Tap the call that contains the information that you want to save to your Contacts list.
4. Tap **Details**.
5. Tap **Create contact**.

   – or –

   If you want to replace the number for an existing contact, tap **Update existing**.

Delete Call Records

To delete Call log entries:

1. From a Home screen, tap **Phone**.
2. Tap **Recents**.
3. Touch and hold the call you want to delete from the Call log.
4. Tap **Delete**.

DRAFT–FOR INTERNAL USE ONLY

Block a Number

By adding a caller to your Block list, future calls from this number are sent directly to your voicemail, and messages are not received.

1. From a Home screen, tap **Phone**.
2. Tap **Recents**.
3. Tap the caller you want to add to the Block list.
4. Tap **Details** > **More options** > **Block contact**. Confirm when prompted.

You can also modify the Block list in Settings:

► From a Home screen, tap **Phone** > **More options** > **Settings** > **Block numbers**.

Speed Dial

You can assign a shortcut number to a contact for speed dialing their default number.

Create a Speed Dial

You can assign 999 speed dial numbers.

1. From a Home screen, tap **Phone**.
   - Tap **Keypad** if the keypad is not displayed.
2. Tap **More options** > **Speed dial**. The Speed dial screen displays the reserved speed dial numbers.
3. Tap an unassigned number.
   - Tap **Menu** to select a different Speed dial number than the next one in sequence.
   - Number 1 is reserved for Voicemail.
4. Type in a name or number, or tap **Add from Contacts** to assign a contact to the number.
   - The selected contact is displayed in the Speed dial number box.

DRAFT–FOR INTERNAL USE ONLY

Make a Call with Speed Dial

You can make a call using Speed dial.

1. From a Home screen, tap **Phone**.
   - Tap **Keypad** if the keypad is not displayed.
2. Touch and hold the Speed dial number.
   - If the Speed dial number is more than one digit long, enter the first digits, and then hold the last digit.

Remove a Speed Dial Number

You can remove an assigned Speed dial number.

1. From a Home screen, tap **Phone**.
2. Tap **More options** > **Speed dial**.
3. Find the contact to remove from Speed dial.
4. Tap **Remove**.

Emergency Calls

You can dial the emergency telephone number in your region regardless of the phone's cellular service status.

Make an Emergency Call

You can dial the emergency telephone number from your phone whether or not cellular service has been activated. If your phone is not activated, you can only make an emergency call.

1. From a Home screen, tap **Phone**.
2. Enter the emergency telephone number (911 in North America) and tap **Call**.
3. Complete your call. During this type of call, you have access to most in-call features.

DRAFT–FOR INTERNAL USE ONLY

Make an Emergency Call from a Locked Screen

The emergency telephone number can be dialed even if the phone is locked, allowing anyone to use your phone to call for help in an emergency. When accessed from a locked screen, only the emergency calling feature is accessible to the caller. The rest of the phone remains secured.

Secure Lock Screens

You can make calls even if your phone has a secure lock screen.

1. Drag **Phone** upward to open the call screen.
2. Tap **Emergency call** to display the Emergency dialer.
3. Enter the emergency telephone number (911 in North America) and tap **Call**.
4. Complete your call. During this type of call, you have access to most in-call features.

Voicemail

Use your phone's voicemail feature.

For information on setting up voicemail, see "Set Up Your Voicemail" on page 14.

Access Voicemail

You can access your voicemail from your device or another phone.

From Your Device

► From the Home screen, tap **Phone**, and then tap **Voicemail**.

DRAFT–FOR INTERNAL USE ONLY

From Another Phone

You can access your voicemail from another phone.

1. From another phone, dial your wireless phone number. Wait until you hear your voicemail greeting.
2. Press the **asterisk** or **star** (*) key on the phone you are using.
3. Enter your password and you are connected to your voicemail.

Optional Calling Services

Place a Multi-Party Call

If your service plan supports this feature, you can make another call while a call is in progress.

1. From the active call, tap **Add call** to dial the second call.
2. Dial the new number and tap **Call**. When the call is answered:
   - Tap **Swap** to switch between the two calls.
   - Tap **Merge** to hear both callers at once (multi-conferencing).

Video Calls

To make Video calls:

1. From a Home screen, tap **Phone**.
2. Enter a number and tap **Video call**.

Note: Not all devices support video calling. The receiver has the option to accept the video call or answer the call as a regular voice call.

DRAFT–FOR INTERNAL USE ONLY

Wi-Fi Calling

You can make calls over Wi-Fi when you are connected to a Wi-Fi network. Wi-Fi Calling is a service provided by your wireless service provider. Please contact your wireless service provider for details on cost and functionality.

To configure Wi-Fi Calling:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Wi-Fi Calling**.
3. Tap **OK** to enable this feature for the first time.
4. Tap **On/Off** to enable or disable the feature.

Emergency Address

Your address is required in case you need to call emergency services using Wi-Fi Calling. To modify your emergency address:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Wi-Fi Calling** > **Emergency address**.
3. Follow the prompts to set up or modify your emergency address information.

Phone Settings

To access settings:

► From a Home screen, tap **Phone** > **More options** > **Settings**.

DRAFT–FOR INTERNAL USE ONLY

Samsung Gear

Connect your device to your Samsung Gear using this application.

1. From a Home screen, tap **Apps**.
2. Tap **Samsung** folder › **Samsung Gear**.

DRAFT–FOR INTERNAL USE ONLY

Samsung Notes

Use Samsung Notes to write and save notes.

Compose a Note

You can create notes using the Samsung Notes app.

1. From a Home screen, tap **Apps** › **Samsung Notes**.
2. Tap **Create** and type a note. Available options include:
   - **Text**: Use the keyboard to type text.
   - **Pen**: Use your finger or a stylus (not included) to write text.
   - **Brush**: Create a drawing.
   - **Image**: Insert an image into the note.
   - **Voice**: Use your voice to insert text into the note.
3. Tap **Save** when finished.

Edit Notes

You can make edits to notes you create.

1. From a Home screen, tap **Apps** › **Samsung Notes**.
2. Tap a note to view it.
3. Tap the content and make edits.
4. When you are finished, tap **Save**.

Browse Notes

You can browse notes you create.

► From a Home screen, tap **Apps** › **Samsung Notes**.

- Browse note entries by swiping up or down.
- To search for a note, tap **Search**.

DRAFT–FOR INTERNAL USE ONLY

Notes Options

You can edit, share, or manage notes.

1. From a Home screen, tap **Apps** > **Samsung Notes**.
2. While browsing notes, tap **More options** for the following options:
   - **Edit**: Select notes to share, delete, or move.
   - **Sort by**: Change the way notes are organized.
   - **List/Grid view**: Switch between List view and Grid view.
   - **Settings**: View settings for the Samsung Notes app.

DRAFT–FOR INTERNAL USE ONLY

Samsung+

Get live help, discover new features, and unlock promotions for your Samsung device.

► From a Home screen, tap **Apps** > **Samsung** folder > **Samsung+**.

Visit samsung.com/us/samsung-plus to learn more.

Secure Folder

Lock your private content and apps to enhance security.

► From a Home screen, tap **Apps** > **Samsung** folder > **Secure Folder**.

For more information, see "Secure Folder" on page 148.

DRAFT–FOR INTERNAL USE ONLY

Settings

Configure your device's connections and settings, add accounts, and customize Home screens, apps, and features.

DRAFT–FOR INTERNAL USE ONLY

How to Use Settings

Access Settings

There are a couple of ways to access your device settings.

► From a Home screen, tap **Apps** > **Settings**.

– or –

Drag down from the Status bar to display the Notification panel, and then tap **Settings**.

Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Search feature.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Search**.
   - Enter a word or words in the **Search** field. As you type, settings that match display on the screen.
   - Tap an entry to go to that setting.

DRAFT–FOR INTERNAL USE ONLY

Connections

Manage connections between your device and a variety of networks and other devices.

DRAFT–FOR INTERNAL USE ONLY

Wi-Fi

Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a wireless Access Point (AP).

Connect to a Wi-Fi Network

To scan for a Wi-Fi network and connect to it:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
   - When Wi-Fi is turned on, your device automatically scans for available networks and displays them.
3. Tap the network you want to connect to.
   - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.

Manually Connect to a Wi-Fi Network

You can connect your device to a Wi-Fi network manually.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
3. Swipe to the bottom of the screen and tap **Add network**.
4. Enter information about the Wi-Fi network:
   - **Network name**: Enter the name of the Wi-Fi network.
   - **Security**: Select a security option and enter your password.
   - **Show advanced options**: Add advanced options such as IP settings and Proxy settings.

DRAFT–FOR INTERNAL USE ONLY

5. Tap **Connect** to store the new information and connect to your target wireless Access Point.

Wi-Fi Options

The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
3. Tap **Advanced** for options:
   - **Smart network switch**: Connect automatically to a mobile network connection when the Wi-Fi connection is unstable.
   - **Network notification**: Receive notifications when open networks in range are detected.
   - **Hotspot 2.0**: Connect automatically to Wi-Fi access points that support Hotspot 2.0.
   - **Manage networks**: Manage your saved Wi-Fi networks.
   - **WPS push button**: Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
   - **WPS PIN entry**: View the PIN used by your device to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
   - **Keep Wi-Fi on during sleep**: Specify when to disconnect from Wi-Fi.
   - **Auto connect to AT&T Wi-Fi**: Automatically connect to AT&T Wi-Fi Hotspot when detected.
   - **Install network certificates**: Install authentication certificates.
   - **Wi-Fi control history**: View apps that have turned Wi-Fi on or off most recently.
   - **MAC address**: View your device's MAC address, which is required when connecting to some secured networks (not configurable).

DRAFT–FOR INTERNAL USE ONLY

- **IP address**: View your device's IP address (not configurable).

Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections using Wi-Fi, without having to connect to a Wi-Fi network.

Connect to a Device with Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Wi-Fi**, and then tap **On/Off** to turn on Wi-Fi.
   - Wi-Fi must be on to configure settings.
3. Tap **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices.
4. Select a device, and then follow the prompts to complete the connection.

Send and Receive Data with Wi-Fi Direct

Share data with another device using Wi-Fi Direct.

1. Connect your phone to the device using Wi-Fi Direct.
2. From an app, tap **Share** or **More options** > **Share**.
   - Sharing options may vary.
3. Tap **Wi-Fi Direct** and follow the prompts.

Disconnect from Wi-Fi Direct

Disconnect your phone from a Wi-Fi Direct device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Wi-Fi** > **Wi-Fi Direct**.
3. Tap a device to disconnect it.

DRAFT–FOR INTERNAL USE ONLY

Bluetooth

Bluetooth is a short-range communications technology that connects your device wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.

The Bluetooth communication range is approximately 30 feet.

Pair with a Bluetooth Device

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.

Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices continue to recognize their partnership and exchange information without having to re-enter a passcode.

Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
   - Make sure that the target device is discoverable so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
   - When Bluetooth is first turned on, it scans for nearby Bluetooth devices and displays them.
   - To manually perform a new scan, tap **Scan**.

DRAFT–FOR INTERNAL USE ONLY

3. Tap the name of the target device when you see it displayed in the Bluetooth devices section.
   - Your device automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

Rename a Paired Device

Once you have paired your device to another device, you can rename the paired device to make it easier to recognize.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap **Settings** next to the previously paired device, and then tap **Rename**.
4. Enter a new name, and tap **Rename**.

Send and Receive Data with Bluetooth

Use Bluetooth to transfer information between your phone and another Bluetooth-enabled device.

Send Data Using Bluetooth

Share data with another device using Bluetooth.

1. From an app, tap **Share** or **More options** > **Share**.
   - Sharing options may vary.
2. Tap **Bluetooth** and follow the prompts.

DRAFT–FOR INTERNAL USE ONLY

Receive Data Using Bluetooth

Share data with another device using Bluetooth.

1. When another device attempts to send a file to your phone using Bluetooth, you will see a request to accept the file.
2. Tap **Accept**.
3. To open the file, drag down the Notification panel and tap **File received**.

Connect with a Bluetooth Device

Listen to music using a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap a device from the "Paired devices" list.
   - When the device is connected to your phone, **Bluetooth connected** is displayed in the status bar.

Disconnect from a Bluetooth Device

Disconnect a Bluetooth device from your phone.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn off Bluetooth.

DRAFT–FOR INTERNAL USE ONLY

Unpair from a Bluetooth Device

When you unpair from a Bluetooth device, the two devices no longer recognize each other. To connect again, you have to pair the devices.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap **Settings** next to the paired device, and then tap **Unpair** to delete the paired device.

Data Usage

Monitor how your data is being used, and set limits and restrictions to conserve it.

Your service provider may account for data usage differently.

Turn Data Saver On or Off

Data saver prevents some apps from sending or receiving data in the background, as well as reduce the frequency of data use.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Data usage** > **Data saver**.
3. Tap **On/Off** to turn Data saver on or off.

You can also permit certain apps to have unrestricted data usage.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Data usage** > **Data saver**.
3. Tap **Allow unrestricted data usage**.
4. Tap **On/Off** next to each app that you want to permit to have unrestricted data usage.

DRAFT–FOR INTERNAL USE ONLY

Turn Mobile Data On or Off

Enable or disable mobile data use on your phone.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Data usage** > **Mobile data**.
3. Tap the checkbox to turn mobile data on or off.

Set or Remove Limits to Mobile Data Usage

Limit mobile data use on your phone.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Data usage** > **Bill cycle**.
3. Tap **On/Off** next to **Data limit** to enable the feature.
4. Tap **Data limit** to set the data usage limit.

Create an Alert for Mobile Data Usage

Receive alerts when mobile data use reaches a warning amount you set.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Data usage** > **Bill cycle**.
3. Tap **Data warning** to set the data usage warning amount.

Check Mobile Data Usage by Apps

Monitor your apps' mobile data usage.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Data usage** > **Mobile data usage**.
3. At the bottom of the screen, view data usage by application.
   - Tap an app to view details.

DRAFT–FOR INTERNAL USE ONLY

Additional Mobile Data Usage Options

Configure more options for mobile data usage.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Data usage**. The following options are available:
   - **International Data Roaming**: Enable data roaming on your device.
   - **Bill cycle**: Configure your billing cycle.
   - **Wi-Fi data usage**: Monitor your apps' Wi-Fi data usage.
   - **Restrict networks**: Select networks to prevent apps that are running in the background from using them.

Airplane Mode

Airplane mode disconnects your device from all networks and turns off connectivity features, such as phone calls and Wi-Fi.

While in Airplane mode, you can use other features such as playing music, watching videos, and other offline applications.

Turn Airplane Mode On or Off

To enable or disable Airplane mode:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Airplane mode**, and then tap **On/Off** to enable or disable the option.

DRAFT–FOR INTERNAL USE ONLY

Mobile Hotspot

Activate Mobile hotspot to allow other devices to use your device's Internet connection.

Note: You must have a tethering plan on your service account in order to use Mobile hotspot.

Warning: Mobile hotspot consumes battery power and uses data service.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap **On/Off** to turn Mobile hotspot on or off.

Connect a Device to Your Mobile Hotspot

Use the other device's Wi-Fi control to connect to Mobile hotspot.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap **On/Off** to turn on Mobile hotspot.
4. Activate Wi-Fi on the target device.
   - Scan for Wi-Fi hotspots and select your device's Mobile hotspot from the list.
   - Enter your device's Mobile hotspot password on the target device.

DRAFT–FOR INTERNAL USE ONLY

Change the Mobile Hotspot Password

You can change your Mobile hotspot password.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap **On/Off** to turn on Mobile hotspot.
4. Tap the password and enter a new password.
5. Tap **Save**.

Allowed Devices List

Control whether devices connect to your Mobile hotspot with the Allowed devices list. After you add devices to the list, they can scan for your device and connect using your device's Mobile hotspot name and password.

Note: Using your device as a Mobile hotspot consumes battery power and uses data service. While Mobile hotspot is active, your device's applications use the Mobile hotspot data service. Roaming while using your device as a Mobile hotspot incurs extra data charges.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap **On/Off** to turn on Mobile hotspot.
4. Tap **More options** > **Allowed devices**, and then tap **Add** to enter the other device's Device name and MAC address.
5. Tap **Add** to add the device.
   - Tap **Allowed devices only** to enable Allowed devices only.

DRAFT–FOR INTERNAL USE ONLY

Configure Mobile Hotspot Settings

Manage your Mobile hotspot security and connecting settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap **More options** > **Configure mobile hotspot** for the following settings:
   - **Network name**: View and change the name of your Mobile hotspot.
   - **Hide my device**: Make your device invisible to others.
   - **Security**: Choose the security level for your Mobile hotspot.
   - **Password**: If you choose a security level that uses a password, enter the password. A default password is displayed on the Mobile hotspot screen.
   - **Show advanced options**: Access advanced options, including Broadcast channel, and to specify the channel your device uses for Mobile hotspot.

Timeout Settings

Automatically turn off Mobile hotspot if there are no connected devices.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile hotspot and tethering** > **Mobile hotspot**.
3. Tap **More options** > **Timeout settings**, and then select an interval.

DRAFT–FOR INTERNAL USE ONLY

Tethering

You can use USB tethering to share your device's Internet connection with a computer.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile hotspot and tethering**.
3. Connect the computer to the device using the USB cable, and then tap **USB tethering** to turn on tethering.

Mobile Networks

Control your device's access to networks and mobile data service.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Mobile networks** for options:
   - **Mobile data**: Enable or disable mobile data features, such as email, web browsing, video calling, and push notifications over the cellular network.
   - **Enhanced LTE services**: Enable HD Voice and advanced communication services where available.
   - **International data roaming**: Allow your device to connect to International data and Enhanced LTE services while roaming. Significantly higher charges may result.
   - **Disable 2G**: Disable 2G service on the device.
   - **Access Point Names**: Choose or add APNs.
   - **Network operators**: Choose available and preferred networks.

Location

Some apps, such as Google Maps, may require one or more location services be turned on for full functionality.

DRAFT–FOR INTERNAL USE ONLY

Locating Method

Before using any features that require location assistance, you must enable your device's location services.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap **Locating method** to select how your location is determined:
   - **High accuracy**: Uses GPS, Wi-Fi, and mobile networks.
   - **Battery saving**: Uses Wi-Fi and mobile networks (no GPS).
   - **Device only**: Uses GPS only.
5. Tap **Improve accuracy** to use other connections for determining your location:
   - **Wi-Fi scanning**: Allow apps and services to scan for Wi-Fi networks automatically, even when Wi-Fi is turned off.
   - **Bluetooth scanning**: Allow apps to scan for and connect to nearby devices automatically through Bluetooth, even when Bluetooth is turned off.

Recent Location Requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap an entry under **Recent location requests** to view the app's settings.

DRAFT–FOR INTERNAL USE ONLY

Location Services

Google Location History™ stores and uses your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap **Google Location History** and sign in to your Google Account for more options.

Nearby Device Scanning

Scan for nearby devices to connect to and set them up easily. You receive a notification when there are available devices to connect to. This function uses Bluetooth Low Energy scanning even if Bluetooth is turned off on your device.

To enable nearby device scanning:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **More connection settings** > **Nearby device scanning**.
3. Tap **On/Off** to enable the feature.

DRAFT–FOR INTERNAL USE ONLY

Printing

Print images and documents to Samsung printers and other compatible printers (not included).

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **More connection settings** > **Printing**.
3. Tap **Download plug-in**, and follow the prompts to add a print service.

Virtual Private Networks (VPN)

Set up and manage your Virtual Private Networks (VPNs). You must set a secured screen lock before setting up a VPN. For more information, see "Set a Screen Lock" on page 146.

Set Up and Manage a VPN

Use the VPN settings menu to add, edit, or delete a VPN connection to your device.

To add a VPN:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap **Add VPN** and follow the prompts to set up your VPN.

To edit or delete a VPN:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap **Settings** next to the VPN that you want to edit or delete.

DRAFT–FOR INTERNAL USE ONLY

4. Edit the VPN and tap **Save**.

   – or –

   Tap **Delete** to delete the VPN.

Connect to or Disconnect from Your VPN

Once you have set up a VPN connection, connecting to and disconnecting from the VPN is easy.

To connect to a VPN:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap the VPN, enter your log in information, and tap **Connect**.

To disconnect from a VPN:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **More connection settings** > **VPN**.
3. Tap the VPN, and then tap **Disconnect**.

Reset Network Settings

You can reset Wi-Fi, Mobile data, and Bluetooth settings with Reset network settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Connections** > **More connection settings** > **Reset network settings**.
3. Tap **Reset settings**, and confirm when prompted.

DRAFT–FOR INTERNAL USE ONLY

Sounds and Vibration

Configure the sounds and vibrations used to indicate notifications, screen touches, and other interactions.

DRAFT–FOR INTERNAL USE ONLY

Sound Mode

You can switch between sound modes, while preserving the individual sound settings you have made.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Sound mode**, and then choose a mode:
   - **Sound**: Use the sounds, vibrations, and volume levels you have chosen in Sound settings for notifications and alerts.
   - **Vibrate**: Vibrate for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
   - **Mute**: Mute all sounds and notifications.

Easy Mute

Mute sounds and video by covering the screen or turning over the device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Advanced features** > **Easy mute**, and tap **On/Off** to enable.

Vibrations

Configure your device's vibrations.

Vibrate While Ringing

Your device can vibrate in addition to ringing when you receive a call.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Vibrate while ringing** to enable this option.

DRAFT–FOR INTERNAL USE ONLY

Vibration Pattern

Choose from preset vibration patterns or create your own pattern.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Vibration pattern**.
3. Tap a pattern to preview and select it.

Volume

Set the system volume level and default volume for call ringtones, notifications, and other audio.

Set the Volume

Set the Ringtone volume from a Home screen by pressing the **Volume** key.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Volume** and drag the sliders to set the default volume for:
   - Ringtone
   - Media
   - Notifications
   - System

DRAFT–FOR INTERNAL USE ONLY

Media Volume Limiter

Limit the maximum output of the device's volume. You can also set a PIN to prevent unauthorized users from changing this setting.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Volume**.
3. Tap **More options** > **Media volume limiter**.
   - Tap **On/Off** to enable this feature.
     - When enabled, drag the **Custom volume limit** slider to set the maximum output volume.
   - Tap **Set volume limit PIN** to prevent changes to the volume setting.

Ringtone

Choose from preset ringtones or add your own.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Ringtone**.
3. Tap a ringtone to hear a preview and select it.

   – or –

   Tap **Add from device storage** to use an audio file as a ringtone.

DRAFT–FOR INTERNAL USE ONLY

Notification Sounds

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Notification sounds** and configure the following options:
   - **Default notification sound**: Choose a default sound for all notifications.
   - **Messages notifications**: Choose a sound for message notifications, and enable or disable vibration alert.
   - **Calendar notifications**: Choose a sound for calendar notifications, and enable or disable vibration alert.
   - **Email notifications**: Configure email account notifications. An email account must be configured for this option to be available.

Do Not Disturb

This setting allows you to block all notifications and alerts. The options below determine what notifications can make sounds, and during what time periods you want to enter this mode.

To activate Do not disturb mode:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Do not disturb**.
3. Tap **Turn on now** to enable this option.
4. Tap **Turn on as scheduled**, and then tap **Days**, **Start time**, and **End time** to set up a do not disturb schedule.
   - Tap **Allow exceptions** to customize which notifications are allowed while your device is in Do not disturb mode.
   - Tap **Hide visual notifications** to prevent notifications silenced by Do not disturb from appearing on the screen.

DRAFT–FOR INTERNAL USE ONLY

System Sounds

Set various other system sound options.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration**, and tap to enable each option:
   - **Touch sounds**: Play tones when you touch or tap the screen to make selections.
   - **Screen lock sounds**: Play a sound when you unlock the screen.
   - **Charging sound**: Play a sound when a charger is connected.

Key-Tap Feedback

Play tones when the dialing keypad or the keyboard is tapped.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration**, and then tap to enable each option:
   - **Dialing keypad tones**: Play a tone when the dialing keypad is tapped.
   - **Keyboard sound**: Play a sound when the Samsung keyboard is tapped.

DRAFT–FOR INTERNAL USE ONLY

Sound Quality and Effects

You can enable sound effects when connected to a headset. Sound effects are only available when headphones or a compatible Bluetooth headset (not included) is connected.

Choose from advanced sound options to customize your audio experience.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Sounds and vibration** > **Sound quality and effects**.
3. Tap **Equalizer** and choose a setting, or tap **Advanced** or **Basic** to customize your sound settings.
4. Tap **On/Off** to enable each option:
   - **Surround**: Recreate the effects of rich surround sound.
   - **Tube Amp Pro**: Simulate the soft timbre of a tube amplifier.
   - **Concert hall**: Simulate the reverb of a concert hall.
5. Tap **Adapt sound** and follow the prompts to customize your sound settings.

DRAFT–FOR INTERNAL USE ONLY

Notifications

Select which apps you want to receive alerts from. Alerts include notifications, sounds, and vibrations.

DRAFT–FOR INTERNAL USE ONLY

Block App Notifications

Block notifications for apps.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Notifications**.
3. Tap **On/Off** next to an app or All apps to enable or disable notifications.
   - Tap **Advanced** to configure more notification options for individual apps.

Customize App Notifications

Customize notification settings for each application individually.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Notifications**.
3. Tap an app, and select an option:
   - **Allow notifications**: Receive notifications from this app.
   - **Show silently**: Do not make a sound or vibrate, and block previews in pop-ups.
   - **Set as priority**: Allow notifications from this app to sound and turn on the screen while Do not disturb is turned on.

DRAFT–FOR INTERNAL USE ONLY

Smart Alert

Set the device to vibrate when you pick it up to notify you about missed calls and messages.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Advanced features** > **Smart alert**, and tap **On/Off** to enable.

DRAFT–FOR INTERNAL USE ONLY

Display

Configure your display's brightness, screen timeout delay, and other display settings.

DRAFT–FOR INTERNAL USE ONLY

Screen Brightness

Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display**.
3. Customize options under Brightness:
   - Drag the **Brightness** slider to set a custom brightness level.
   - Tap **Outdoor mode** to increase the screen brightness for 15 minutes for greater visibility when outdoors.

Screen Zoom and Font

You can set the screen zoom level and font size and style.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Screen zoom and font** for the following options:
   - Drag the **Screen zoom** slider to scale content to appear larger or smaller on the screen.
   - Drag the **Font size** slider to adjust the font size.
   - Tap a Font style to select a font, or tap **Download fonts** to find new fonts from Galaxy Apps.
3. Tap **Apply** to set the screen zoom and font.

DRAFT–FOR INTERNAL USE ONLY

Home Screen

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.

To customize Home screen:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Home screen**.

– or –

► From a Home screen, either touch and hold an empty space on a screen or pinch the screen.

For more information, see "Home Screen" on page 19.

Easy Mode

Switch between the default screen layout and a simpler layout. The Easy mode layout has larger text and icons, making for a more straightforward visual experience.

To enable Easy mode:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Easy mode**.
3. Tap **Easy mode** to enable this feature.
   - When Easy mode is enabled, you can swipe down the page and select which apps you want to display on the Home screens.
4. Tap the apps you want to add or remove.
5. Tap **Done** to save your settings.

To disable Easy mode:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Easy mode** > **Standard mode**.
3. Tap **Done** to exit Easy mode.

DRAFT–FOR INTERNAL USE ONLY

Icon Frames

You can show icons with shaded frames to make them stand out on the Home screen and Apps list screen.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Icon frames** and choose one of the following options:
   - **Icons only**: Show icons only.
   - **Icons with frames**: Show icons with shaded frames.
3. Tap **Done**.

Status Bar

Configure display options for the Status bar.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Status bar**.
   - Tap **Show recent notifications only** to display only the three most recent notification icons on the Status bar.
   - Tap **Show battery percentage** to display the battery charge percentage next to the battery icon on the Status bar.

Screen Timeout

Turn the screen off after a set amount of time.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Screen timeout** and choose a time period.

DRAFT–FOR INTERNAL USE ONLY

Screen Saver

Screen saver controls what is displayed on the screen when the device is docked (dock not included) or while charging. You can choose to display colors or photos.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Display** > **Screen saver**.
3. Tap **On/Off** to enable Screen saver.
4. Configure options:
   - **Colors**: Tap the selector to display a changing screen of colors.
   - **Photo table**: Display pictures in a photo table. Tap **Settings** for options.
   - **Photo frame**: Display pictures in a photo frame. Tap **Settings** for options.
   - **Photos**: Display pictures from your Google Photos account. Tap **Settings** for options.
5. Tap **More options** for additional options:
   - **Preview**: See a demonstration of Screen saver.
   - **Select when to use**: Select when your device can go into Screen saver mode.

DRAFT–FOR INTERNAL USE ONLY

Wallpapers and Themes

You can change the appearance of your device with custom wallpapers, themes, and icons.

DRAFT–FOR INTERNAL USE ONLY

Wallpapers

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

To change wallpaper:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Wallpapers and themes** > **Wallpapers**.
3. Tap **View all** to see all available wallpaper images.
   - Tap **From Gallery** for additional wallpapers.
4. Tap an image to choose it, and then choose which screen you want to use it for:
   - Home screen
   - Lock screen
   - Home and lock screens
5. Tap **Set as wallpaper**.

Themes

Set the theme to be applied to your Home and Lock screens, wallpapers, and app icons.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Wallpapers and themes** > **Themes**.
3. Tap a theme to view a preview of the theme.
   - Tap **View all** to see all available themes.
4. Tap **Apply** to apply the selected theme.

Icons

Apply custom icons to replace built-in app icons.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Wallpapers and themes** > **Icons**.
3. Tap an icon set to view a preview the icons.
   - Tap **View all** to see all available icon sets.
4. Tap **Apply** to apply the selected icon set.

DRAFT–FOR INTERNAL USE ONLY

Device Maintenance

Device maintenance provides an overview of the status of your device's battery, storage, RAM, and device security. You can also automatically optimize your device's system resources.

DRAFT–FOR INTERNAL USE ONLY

Quick Optimization

The quick optimization feature improves device performance through the following actions:

- Identifying apps that use excessive battery power and clearing unneeded items from memory.
- Deleting unnecessary files and closing apps running in the background.
- Scanning for malware.

To use the quick optimization feature:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance**.
3. Tap **Optimize now**.

Battery

View how battery power is used for device activities.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance** > **Battery** for options:
   - **Battery usage**: View details of battery usage by item.
   - **Power saving mode**: Extend battery life by selecting a power saving mode level. Choose **Off**, **Mid**, or **Max**. Estimated remaining battery life for each mode is provided.
   - **App power monitor**: Put apps to sleep so that they do not use battery power when not in use. Tap **Save power** to enable.
   - **Unmonitored apps**: Select apps to exclude from being put to sleep by the App power monitor.
   - **More options** > **Advanced settings**: Configure advanced battery settings and notifications, such as showing a battery percentage in the Status bar option.

DRAFT–FOR INTERNAL USE ONLY

Storage

View the device memory and usage. Mount, unmount, or format an optional memory card (not included).

Device Memory

View and manage the memory used by the device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance** > **Storage**. Used memory is divided into:
   - Documents
   - Images
   - Audio
   - Videos
   - Apps

To increase available memory:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap **Clean now** and follow the prompts.

Memory Card (SD Card)

Once an optional memory card (not included) has been installed in your device, the card memory is displayed in the Storage setting.

For more information, see "Install an Optional Memory Card" on page 6.

DRAFT–FOR INTERNAL USE ONLY

Mount a Memory Card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you need to mount it before it can be accessed.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, and then tap **Mount**.

Remove a Memory Card

Warning: To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, and then tap **Unmount**.
5. Remove your memory card from the device.

Format a Memory Card

Warning: When formatting an SD card, you should back up your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance** > **Storage**.
3. Tap **More options** > **Storage settings**.
4. Under **Portable storage**, tap your SD card, tap **Format**, and then follow the prompts.

DRAFT–FOR INTERNAL USE ONLY

Memory

Check the amount of available memory. You can close background apps and reduce the amount of memory you are using to speed up your device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Device maintenance** > **Memory**.
   - The used and available memory are shown.
3. To free up as much RAM as possible, tap **Clean now** and follow the prompts.
   - The selected apps and services in the list will be closed.

Language and Input

Configure your device's language and input settings.

Change the Device Language

You can add languages to your list and organize them according to preference. If an app does not support your default language then it will move to the next supported language in your list.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Language and input** > **Language**.
3. Tap **Add language**, and select a language from the list.
   - To change the default language, or remove a language from your list, tap **Edit**.

DRAFT–FOR INTERNAL USE ONLY

Manage Virtual Keyboards

Enable or disable virtual keyboards.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Language and input** > **Virtual keyboard** > **Manage keyboards**.
3. Tap each keyboard to enable or disable.

Physical Keyboard

Customize options when you have a physical keyboard connected to your device (sold separately).

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Language and input**.
3. Tap **Physical keyboard**, and select an option:
   - **Show virtual keyboard**: Show the virtual keyboard while a physical keyboard is also being used.
   - **Keyboard shortcuts**: Show explanations of the keyboard shortcuts on the screen.

Text-to-Speech Options

Configure your Text-to-Speech (TTS) options. TTS is used for various accessibility features, such as Voice Assistant. For more information, see "Accessibility" on page 159.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Language and input** > **Text-to-speech** for options:
   - **Preferred TTS engine**: Choose either the Samsung or Google Text-to-speech engine. Tap **Settings** next to each TTS engine for options.
   - **Speech rate**: Set the speed at which the text is spoken.
   - **Pitch**: Set the pitch at which the text is spoken.

DRAFT–FOR INTERNAL USE ONLY

- **Reset speech rate**: Reset the speed at which the text is spoken to the default setting.
- **Reset pitch**: Reset the pitch at which the text is spoken to the default setting.
- **Listen to an example**: Play a short demonstration of speech synthesis.
- **Default language status**: Display the default language in use.

Pointer Speed

Configure pointer speed for an optional mouse or trackpad (not included).

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Language and input**.
3. Under **Pointer speed**, drag the slider to the right to go faster or to the left to go slower.

Date and Time

By default, your device receives date and time information from the wireless network. When you are outside network coverage, you may want to set date and time information manually using the date and time settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Date and time**. The following options are available:
   - **Automatic date and time**: Receive date and time updates from the wireless network. When Automatic date and time is disabled, the following options are available:
     - **Set date**: Enter the current date.
     - **Set time**: Enter the current time.
     - **Select time zone**: Choose your local time zone.

DRAFT–FOR INTERNAL USE ONLY

- **Use 24-hour format**: Set the format for displaying time.

Reset

Reset device and network settings. You can also reset your device to its factory defaults.

Reset Settings

You can reset your device to its factory default settings, which resets everything except the security, language, and account settings. Personal data is not affected.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Reset** > **Reset settings**.
3. Tap **Reset settings**, and confirm when prompted.

Reset Network Settings

You can reset Wi-Fi, Mobile data, and Bluetooth settings with Reset network settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Reset** > **Reset network settings**.
3. Tap **Reset settings**, and confirm when prompted.

Factory Data Reset

You can reset your device to factory defaults, erasing all data from your device.

This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files. Any data stored on an external SD card is not affected.

DRAFT–FOR INTERNAL USE ONLY

Note: When you sign in to a Google Account on your device, Factory Reset Protection is activated. This protects your device in the event it is lost or stolen. For more information, see "Factory Reset Protection" on page 12.

If you reset your device to factory default settings with the Factory Reset Protection (FRP) feature turned on, you must enter the user name and password for a registered Google Account to regain access to the device. You will not be able to access the device without the correct credentials.

Warning: If you reset your Google Account password, it can take 24 hours for the password reset to sync with all devices registered to the account.

Before resetting your device:

1. Verify that the information you want to keep has transferred to your storage area.
2. Log in to your Google Account and confirm your user name and password.

To reset your device:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Reset** > **Factory data reset**.
3. Tap **Reset** and follow the prompts to perform the reset.
4. When the device restarts, follow the prompts to set up your device.

DRAFT–FOR INTERNAL USE ONLY

Auto Restart

Optimize your device by restarting it automatically at set times. Any unsaved data will be lost when the device restarts.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **General management** > **Reset** > **Auto restart**.
3. Tap **On/Off** to activate Auto restart, and then set the following parameters:
   - **Time**: Set the time of day to restart your device.
   - **Days**: Select the day of the week to automatically restart your device.

Software Update

Check for and install available software updates for your device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Software update** for the following options:
   - **Check for updates**: Check for software updates.
   - **Continue update**: Install available software updates at the time of your choosing.

DRAFT–FOR INTERNAL USE ONLY

Lock Screen and Security

Secure your device and protect your data with Lock Screen and Security settings.

DRAFT–FOR INTERNAL USE ONLY

Set a Screen Lock

It is recommended that you secure your device using a Screen lock. Options vary based on the screen lock type.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Screen lock type** to select a screen lock and level of security:
   - **Swipe**: Swipe the screen to unlock it. This option provides no security.
   - **Pattern**: Create a pattern that you draw on the screen to unlock your device. This option provides medium security.
   - **PIN**: Select a PIN to use for unlocking the screen. This option provides medium to high security.
   - **Password**: Create a password for unlocking the screen. This option provides high security.
   - **None**: Do not lock the screen.
3. Select your notification preferences, if you choose a secured lock screen option:
   - Show content
   - Hide content
   - Do not show notifications
4. Choose a screen lock option:
   - **Info and app shortcuts**: Display a dual clock, owner information, or app shortcuts on the Lock screen.
   - **Notifications**: Show notifications on the Lock screen.
   - **Secure lock settings**: Set your secure lock functions such as Secured lock time and Smart lock. This option is not available with Swipe.

DRAFT–FOR INTERNAL USE ONLY

Find My Mobile

Protect your device from loss or theft allowing your device to be locked, tracked, and for your data to be deleted remotely. You must sign up for a Samsung account and enable Google location service to use Find My Mobile.

► To access your device remotely, visit findmymobile.samsung.com.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Find My Mobile**.
3. Enter your Samsung account password or, if you are not logged in to your Samsung account, tap **Add account** and follow the prompts. The following options are available:
   - **Remote controls**: Activate or deactivate Remote controls, which allows you to access your device remotely.
   - **Google location service**: Activate or deactivate Google location service. This service must be on in order to find your device.
   - **Send last location**: Allow your phone to send its last location to the Find My Mobile server before it is turned off.

Unknown Sources

Enable installation of non-Google Play applications.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Unknown sources** to enable this option.

Warning: Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.

DRAFT–FOR INTERNAL USE ONLY

Secure Folder

Lock your private content and apps to enhance security. You must sign in to your Samsung account in order to use Secure Folder. You must also set a secure lock for your device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Secure Folder** and follow the prompts to secure content on your device.

Secure Startup

Protect your device by requiring a numeric PIN or password to be entered before it starts up.

Note: You must have a secured screen lock for this option to be available.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Secure startup** and select an option.

Encrypt SD Card

Require a numeric PIN or password to decrypt your optional memory card (not included) when you first access it after powering on your device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Encrypt SD card**.
3. Tap **Encrypt SD card** and follow the prompts to encrypt all data on your memory card.

Factory Date Reset Password

Require a password to reset your device to factory default settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Set up/change password** and enter a password.

DRAFT–FOR INTERNAL USE ONLY

Set Up SIM Card Lock

Require your SIM card PIN to unlock and use your SIM card.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Set up SIM card lock** and follow the prompts.
3. Tap **Lock SIM card** to enable the feature.
4. Tap **Change SIM card PIN** to create a new PIN.

View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Make passwords visible** to turn the feature on.

Security Update Service

Automatically receive security updates.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following Security update service options:
   - **Security policy updates**: Automatically or manually check for security policy updates.
     - Automatic updates can also be limited to only when your device is connected to a Wi-Fi network.
   - **Send security reports**: Use Wi-Fi to send security reports to Samsung for threat analysis.

DRAFT–FOR INTERNAL USE ONLY

Device Administration

Manage your device administrators and application installation privileges.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Device administrators**.
   - Tap **Android Device Manager** to allow it to lock or erase a lost device.
   - Tap **Secure Folder** to allow it to perform various operations such as erase all data and more.

Credential Storage

Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following Credential storage options:
   - **Storage type**: Select a storage location for credential contents.
   - **View security certificates**: Display certificates in your device's ROM and other certificates you have installed.
   - **User certificates**: View user certificates.
   - **Install from device storage**: Install a new certificate from storage.
   - **Clear credentials**: Erase the credential contents from the device and reset the password.

DRAFT–FOR INTERNAL USE ONLY

Knox Active Protection

Get extra protection against malicious attacks.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings**.
3. Tap **On/Off** next to **Knox active protection** to activate Knox.

Advanced Security Settings

Use these options to configure advanced security settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following advanced options:

- **Trust agents**: Perform selected actions when trusted devices are connected.
  - To view Trust agents, set up a secured screen lock (Password, PIN, or Pattern). For more information, see "Set a Screen Lock" on page 146.
- **Pin windows**: Pin an app on your device screen, preventing access to other features of your device.
- **Usage data access**: View the applications that can access your device's usage history.
- **Notification access**: View the applications that can access notifications you receive on your device.
- **Do not disturb permission**: View which apps have permission to change the Do not disturb settings.

DRAFT–FOR INTERNAL USE ONLY

Accounts

Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

DRAFT–FOR INTERNAL USE ONLY

Samsung Cloud

Keep your data safe by backing up and restoring your device. You can also sync your data from multiple devices.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Samsung Cloud**.
   - If a Samsung account has not been added, tap **Start** and follow the prompts.
3. Once a Samsung account is configured, the following options are available:
   - **Manage cloud storage**: View how much cloud storage your data is using.
   - **Backup settings**: Configure backup for supported apps using your Samsung Cloud account.
   - **Restore**: Download any stored backup information to your device.
   - **Data to sync**: Tap the following items to enable or disable syncing:
     - **Contacts (Samsung account)**: Sync contact info.
     - **Calendar (Samsung account)**: Sync your events and tasks.
     - **Samsung Notes**: Sync your notes and categories.
     - **Internet**: Sync bookmarks, saved pages, and opened tabs from your browser.
     - **Keyboard data**: Sync predictive text data.
     - **Gallery**: Sync your images and videos.

DRAFT–FOR INTERNAL USE ONLY

- **More options**:
  - **Sync now**: Sync all selected settings for your Samsung account.
  - **Sync information**: View a list of Samsung Cloud sync items.
  - **Settings**: Limit syncing data from your Samsung account to only when the device is connected to a Wi-Fi network.
  - **FAQ**: Launch the Samsung help web site to view additional information based on frequently asked questions.
  - **Contact us**: Contact Samsung.

Add an Account

You can add and manage all your email, social networking, and picture and video sharing accounts.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.

DRAFT–FOR INTERNAL USE ONLY

Synchronize Accounts

You can synchronize your calendar, contacts, and other types of accounts.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap an account to view the sync settings for that account.
4. Tap individual data items to sync.
5. Tap **More options** > **Sync now** to synchronize the account.

Account Settings

Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap an account to configure that account's sync settings.
4. Tap other available options for the account type.

DRAFT–FOR INTERNAL USE ONLY

Remove an Account

You can remove accounts from your device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Accounts** > **[Account type]**.
3. Tap the account and then tap **More options** > **Remove account**.

Backup and Restore

Back up your data to your Samsung or Google accounts.

Samsung Account

Enable backup of your information to your Samsung account.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Backup and restore** for options:
   - **Backup settings**: Enable back up of your phone log, messages, and more through your Samsung account.
   - **Restore**: Use your Samsung account to restore your backup data.

DRAFT–FOR INTERNAL USE ONLY

Google Account

Enable backup of your information to your Google account.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Cloud and accounts** > **Backup and restore** for options:
   - **Back up my data**: Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
   - **Backup account**: Select a Google Account to be used as your backup account.
   - **Automatic restore**: Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

Google Settings

Configure your device's Google settings.

Customize Google

To customize your Google settings:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Google**, and select an option to customize:
   - **Location**: Configure your Google location settings.
   - **Security**: Configure the Android Device Manager and apps security settings.
   - **Ads**: Configure your Google advertising profile.
   - **App preview messages**: Receive and reply to messages sent from messaging apps that are not installed on your device.

DRAFT–FOR INTERNAL USE ONLY

- **Nearby**: Use your device's sensors to connect with nearby devices.
- **Search & now**: Configure your Google search settings and Google Now™ settings.
- **Set up nearby device**: Set up another device using Wi-Fi and Bluetooth.

DRAFT–FOR INTERNAL USE ONLY

Accessibility

Accessibility services are special features that make using the device easier for those with certain physical disabilities.

For more information about Accessibility for Samsung products, please contact us at accessibility@sea.samsung.com.

DRAFT–FOR INTERNAL USE ONLY

Vision

You can turn on Accessibility features to assist with visual aspects of the device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Accessibility** > **Vision**, and tap an option:
   - **Dark screen**: Keep the screen turned off at all times for privacy.
   - **Rapid key input**: Release your finger to enter selection instead of double tapping.
   - **Speak passwords**: Read the characters aloud as you enter your passwords.
   - **Accessibility shortcut**: Quickly enable accessibility features in two quick steps.
   - **Screen zoom and font**: Configure the screen zoom level and font size and style.
   - **High contrast fonts**: Adjust the color and outline of fonts to increase the contrast with the background.
   - **High contrast keyboard**: Adjust the size of the Samsung keyboard and change its colors to increase the contrast between the keys and the background.
   - **Show button shapes**: Show buttons with shaded backgrounds to make them stand out.
   - **Magnifier window**: Magnify content shown on the screen.
   - **Magnification gestures**: Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
   - **Large mouse/touchpad pointer**: Enable to display a large mouse or touchpad pointer.

DRAFT–FOR INTERNAL USE ONLY

- **Color inversion**: Reverse the display of colors from white text on a black background to black text on a white background.
- **Color correction**: Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color.

Hearing

To set accessibility settings related to hearing:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Accessibility** > **Hearing**.
   - **Flash notification**: Set your camera light to blink whenever you receive a notification.
   - **Turn off all sounds**: Turn off all notifications and audio for privacy.
   - **Hearing aids**: Improve the sound quality for use with hearing aids.
   - **Samsung subtitles (CC)**: Use Samsung subtitles with multimedia files when available.
   - **Google subtitles (CC)**: Use Google subtitles with multimedia files when available.
   - **Left/right sound balance**: Use the slider to set the left and right balance when using a stereo device.
   - **Mono audio**: Switch audio from stereo to mono for use with one earphone.

Dexterity and interaction

To set accessibility settings related to dexterity and interaction:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Accessibility** > **Dexterity and interaction**.
   - **Assistant menu**: Improve the device accessibility for users with reduced dexterity.

DRAFT–FOR INTERNAL USE ONLY

- **Press and hold delay**: Select a time interval for this action.
- **Auto click after pointer stops**: If you use a mouse with your device, tap **On/Off** to enable this option, which causes your device to automatically click when the mouse cursor stops moving. Drag the **Delay before click** slider to set the amount of time to delay the click once the mouse cursor stops moving.
- **Interaction control**: Block areas of the screen from touch interaction. Disable auto screen rotation and hard key functions. Only show application notifications in the Notification panel and the Status bar.

More Accessibility Settings

To set more accessibility settings:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Accessibility**.
   - **Text-to-speech**: Set your preferred TTS engine and options. For more information, see "Text-to-Speech Options" on page 140.
   - **Direct access**: Open your accessibility settings by pressing the **Home** key quickly three times in succession.
   - **Notification reminder**: Beep at set intervals to remind you of any unread notifications.

DRAFT–FOR INTERNAL USE ONLY

- **Answering and ending calls**: Select shortcuts for answering and ending calls.
- **Single tap mode**: Dismiss or snooze alarms, calendar events, and timer alerts, and answer or reject incoming calls with a single tap.

Accessibility Services

Certain accessibility services you install may be listed and configured under Services.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Accessibility**.
   - **TalkBack**: Your device provides spoken feedback to help blind and low-vision users.
   - **Switch Access**: Lets you scan and select items using one or more switches.
   - **Lookout**: Tap **On/Off** to enable Lookout Safe Browsing.

DRAFT–FOR INTERNAL USE ONLY

Other Settings

Configure features on your device that make it easier to use.

DRAFT–FOR INTERNAL USE ONLY

About Device

View information about your device, including current status, legal information, hardware and software versions, and more.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **About device**, and then tap items for more details:
   - **My phone number**: View your phone number.
   - **Status**: View the status of the battery, network, and other information about your device.
   - **Legal information**: View legal notices and other legal information, including your embedded Samsung legal information.
   - **Device name**: View and change your device's name.
   - Additional device information includes the Model number, Android version, Build number, and more.

Help

View tips and guidelines for using your device.

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Help** to access your user manual from the Internet.

DRAFT–FOR INTERNAL USE ONLY

Getting Help

Additional resources for your device.

DRAFT–FOR INTERNAL USE ONLY

Videos

samsung.com/spsn

Simulators

samsungsimulator.com/

Tips

samsung.com/us/support/tips/galaxy/

Samsung Support

samsung.com/us/support

DRAFT–FOR INTERNAL USE ONLY

Legal

View legal information for your device.

DRAFT–FOR INTERNAL USE ONLY

Legal Information

Important legal information can be accessed in writing, on the mobile device, or at: samsung.com

READ THIS INFORMATION BEFORE USING YOUR MOBILE DEVICE.

Samsung Limited Warranty - This product is covered under the applicable Samsung Limited Warranty **INCLUDING THE DISPUTE RESOLUTION PROCEDURE FOR WARRANTY AND OTHER CLAIMS, and your right to opt out of arbitration within 30 calendar days of the first consumer purchase. You may opt out by either sending an email to** optout@sea.samsung.com **with the subject line "Arbitration Opt Out" or by calling 1-800-SAMSUNG (726-7864)**. For more detailed procedures, please refer to the "Dispute Resolution Procedures and Arbitration and Opt Out" section of the Limited Warranty.

Health & Safety and Warranty

Full written terms and detailed information about the warranty and obtaining service are available on the device at: **Settings > About device > Legal information > Samsung legal.**

You may also access the online version for your device at:

PHONE

English: samsung.com/us/Legal/Phone-HSGuide

Spanish: samsung.com/us/Legal/Phone-HSGuide-SP

TABLET

English: samsung.com/us/Legal/Tablet-HSGuide

Spanish: samsung.com/us/Legal/Tablet-HSGuide-SP

DRAFT–FOR INTERNAL USE ONLY

End User License Agreement for Software (EULA)

The online version of the End User License Agreement (EULA) for your device can be found online at: samsung.com/us/Legal/SamsungLegal-EULA4

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating thereto (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship.

You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product, including but not limited to 'PowerTOP' and 'e2fsprogs', incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: opensource.samsung.com

DRAFT–FOR INTERNAL USE ONLY

Disclaimer of Warranties; Exclusion of Liability

The information below explains that a user accepts this device as sold, including the hardware and software components as created and packaged for sale. If the user changes these parameters through a unique modification, Samsung will not be held responsible for damages or issues that result from these end-user changes.

Except as set forth in the express warranty contained on the warranty page enclosed with the product, the purchaser takes the product “as is”, and Samsung makes no express or implied warranty of any kind whatsoever with respect to the product, including but not limited to the:

- merchantability of the product or its fitness for any particular purpose or use;
- design, condition or quality of the product;
- performance of the product;
- workmanship of the product or the components contained therein; or
- compliance of the product with the requirements of any law, rule, specification or contract pertaining thereto.

Nothing contained in the instruction manual shall be construed to create an express or implied warranty of any kind whatsoever with respect to the product. In addition, Samsung shall not be liable for any damages of any kind resulting from the purchase or use of the product or arising from the breach of the express warranty, including incidental, special or consequential damages, or loss of anticipated profits or benefits.

DRAFT–FOR INTERNAL USE ONLY

Modification of Software

Samsung is not liable for performance issues or incompatibilities caused by your editing of registry settings, or your modification of Operating System (OS) software.

Using custom OS software may cause your device and applications to work improperly. Your carrier may not permit users to download certain software, such as custom OS.

Samsung Knox

Samsung Knox is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to: samsung.com/us/knox

Restricting Children's Access to Your Mobile Device

Your device is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the device, or make calls that increase your device bill. Keep the device and all its parts and accessories out of the reach of small children.

Samsung Electronics America, Inc.

Address:
85 Challenger Road
Ridgefield Park,
New Jersey 07660

Phone: 1-800-SAMSUNG (726-7864)

Internet: samsung.com

©2017 Samsung Electronics America, Inc.
Samsung, Samsung Galaxy, Multi Window,
Smart Switch, and Samsung Gear are all trademarks of Samsung Electronics Co., Ltd.

DRAFT–FOR INTERNAL USE ONLY

Other marks are the property of their respective owners.

Some multimedia (audio/video) files contain Digital Rights Management (DRM) technology to verify you have the right to use the files. Preloaded apps on your device may not be compatible with DRM-protected files.

Screen images are simulated. Appearance of device may vary.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

DRAFT–FOR INTERNAL USE ONLY