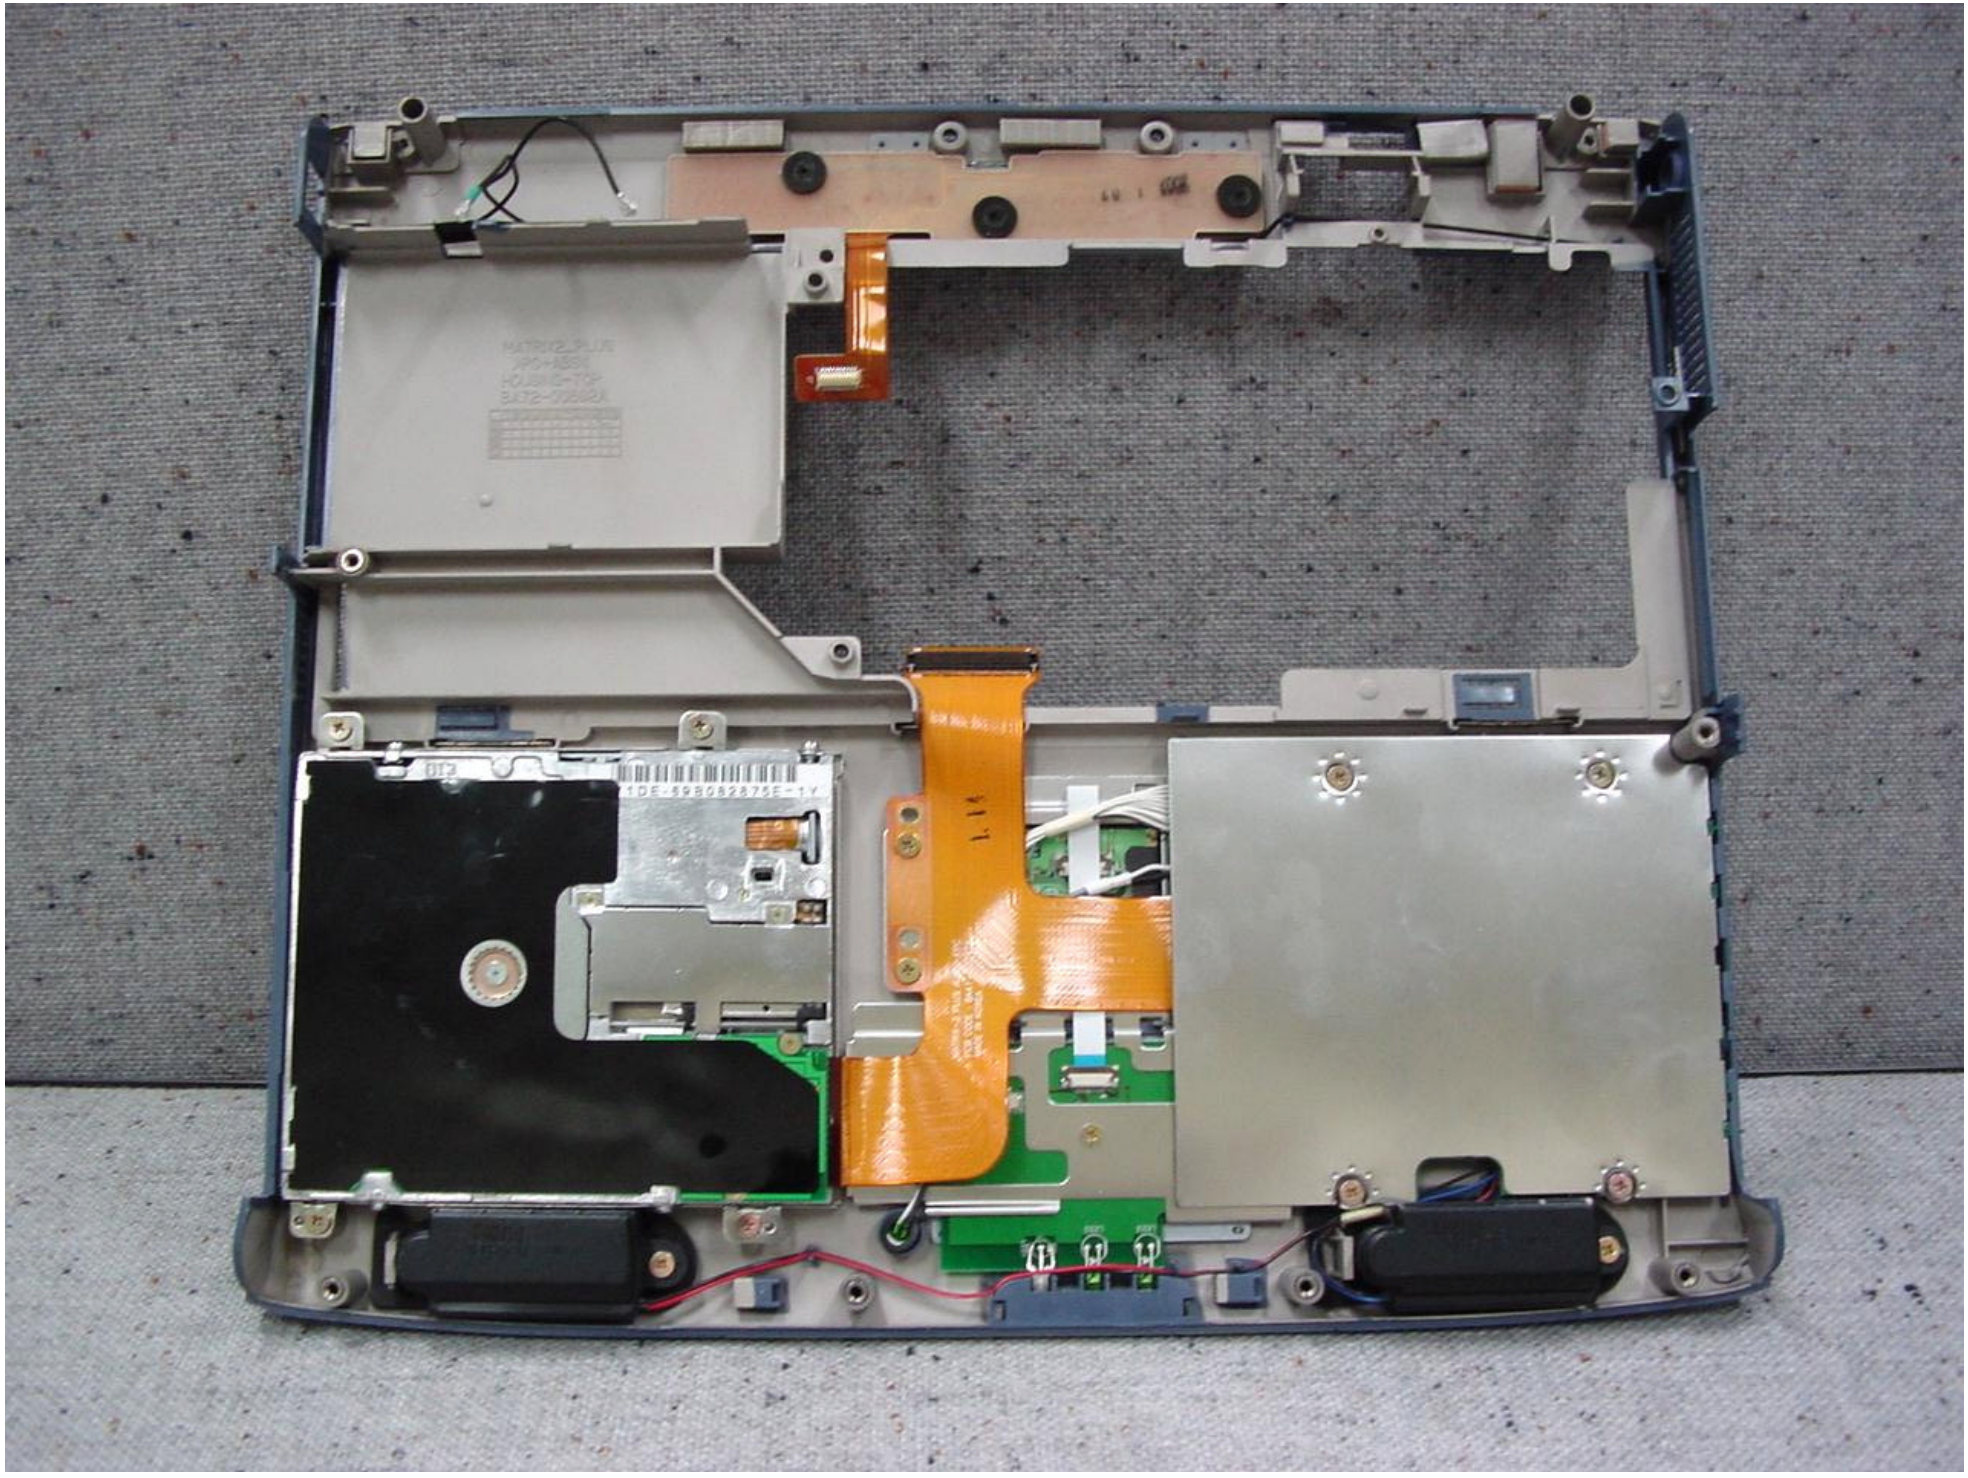[TO REMOVE HEAT SINK]
1. REMOVE SCREWS ON HEAT SINK.
2. TURN ON THE SYSTEM AND SEAT FOR 10 SECONDS.
3. TURN OFF THE SYSTEM, AND THEN REMOVE THE HEAT SINK IMMEDIATELY.
* LIFTING THE HEAT SINK WHILE THE CPU IS COLD CAN DAMAGE THE CPU.
USE A NEW THERMAL PAD WHEN RE-INSTALLING THE HEAT SINK.
Travelstar
CD-RW/DVD-ROM DRIVE
MODEL NO. SD-R2102
MADE IN JAPAN
RECHARGEABLE LiIon SMART BATTERY
CAUTION
ATTENTION
ACHTUNG
Matrix III PV1 SAMPLE No12