成品尺寸：77x110mm
材质：书写纸，正反面四色印刷，7页14P

maxpower

# MPD5202

**MPD5202**
**USER MANUAL**

## SPECIFICATION

| | |
|---|---|
| Product Name | Bluetooth speaker |
| Bluetooth Version | 5.4 |
| Battery Capacity | 4000mAh |
| Playing Time | 2-3 hours(50% volume, LED light off) |
| SPEAKERS | 5" x 2 + 1.5" Tweeter x 2 |
| Charging Time | 4-5 hours |
| Charging Current | DC 5V |
| Speaker Unit | 30W |
| Product Size | 17.13"H x 8.86"W x 9.06"D |
| Product Weight | 7.57 lbs ± 0.35 lbs |



## ACCESSORIES

1.Speaker.....1pc
2.User manual.....1pc
3.Type C charging cable.....1pc
4.Wireless microphone .....1pc






## OPERATIONS




1. Power On/Off
Press and hold the power button to turn the device on or off. After powering on, a prompt tone will play, and the colorful lights will illuminate.
2. Previous Track
While playing music from a USB drive, TF card, or Bluetooth device, a single click skips to the previous track. Press and hold the "Previous Track" button for fast rewind. In FM mode, it switches to the previous radio station.
3. Pause/Play
While playing music from a USB drive, TF card, or AUX input, press the "Pause/Play" button to stop or resume playback. In FM mode, press and hold the "Pause/Play" button to automatically search for radio stations.

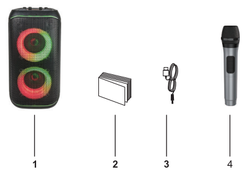

## OPERATIONS

4. Next Track
While playing music from a USB drive, TF card, or BT device, a single click skips to the next track. Press and hold the "Next Track" button for fast forward. In FM mode, it switches to the next radio station.
5. MODE Button
When the device is on, press the "M" button to switch between different modes.
6. LED Button
After powering on, press the "LED" button to select a lighting mode.
7. Vocal.R
Click "Vocal.R" to remove original vocals with one click
8. MIC PRI (Microphone Priority)
Press the MIC PRI button to enable microphone priority mode, which automatically reduces or mutes the playing music volume when speaking into the microphone.
9. Volume Adjustment (VOLUME)
While playing music, rotate the volume knob to adjust the volume.
10. MIC VOL (Microphone Volume Knob)
Turn on the microphone and rotate the microphone volume knob to adjust the microphone volume.
11.TREBLE Knob
During music playback, rotate the "TREBLE" knob to adjust the treble (high frequency) effect.
12.BASS Knob
During music playback, rotate the "BASS" knob to adjust the bass effect
13.MIC ECHO Knob
Insert a microphone. Rotate the ECHO knob to adjust the microphone's echo/reverb intensity.
14.MIC/Treble/Bass Knob
Please insert the microphone. Turning the 'MIC/T/B' knob to the left adjusts the microphone more treble, while turning it to the right adjusts the microphone more bass.

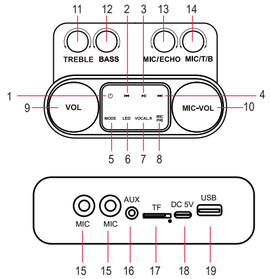

## OPERATIONS

15. Wired Microphone Port
When the device is on, insert a wired microphone and turn on the microphone switch to use it.
18. DC 5V
When the device is off, insert the charging cable to charge it.
16. AUX
When the device is on, insert an audio cable into the AUX port to automatically enter AUX mode, allowing playback of audio from external devices.
19. USB
When the device is on, insert a USB drive to play music stored on it.
17. TF Card
When the device is on, insert a T card to play music stored on it.

FEATURES
1.Product dimensions:17.13"H x 8.86"W x 9.06"D
2.Bluetooth,wireless stream music from any Bluetooth-enabled devices such as mobile phone and notebook.
3.Built-in MP3 digital decoder for decoding and playing MP3 files.It brings you perfect sound quality
4.External TF card and USB socket to enjoy music.
5.Type-C DC 5V charging,supply with charging cable.
6.4000 mAh rechargeable battery.
7.Bass Control
8.Mic ECHO control
9.FM digital radio(87MHZ-108MHZ),listen to the latest news and music.
10.Able to connect to any audio output equipment,such as mobile phones/MP3/MP4/laptops,etc.
11.Microphone input to enjoy outdoor KTV.
12.With a wireless mic to enjoy singing.

## HOW TO CONNECT TO BT & USE OTHER FUNCTIONS

1.How to connect to BT:
When you turn on the speaker, it should already be on the Bluetooth mode.
Please go on your smart device or cell phone and search for the BT connections.
You should seem, MPD5202. Please select it and you will be connected and ready to enjoy the tunes.
Short pressing the |◀◀ button to play last music.
Short pressing the ▶▶| button to play next music.
Short pressing the ▶|| button to play/pause music.
Rotate the VOL knob to adjust the volume.

2..How to use radio function:
Shortly pressing the MODE button and switch to Radio mode.
Long pressing the ▶|| button for station automatic searching.(Automatic searching will be finished in 2-5 minutes.)
Short pressing the |◀◀ button to play last station.
Short pressing the ▶▶| button to play next station.

3.How to control BASS effects:
Rotate the BASS knob to adjust bass effect under music modes.

4.How to control TREBLE effects:
Rotate the TREBLE knob to adjust treble effect under music modes.

4.How to control the mic`s ECHO/Treble/Bass:
Rotate the MIC/ECHO knob to adjust echo level.
Rotate the MIC/T/B knob to adjust microphone`s treble or bass effect.(The left is more treble and the right is more bass.)

5.How to control the LED light effect:
Click the LED button once to change LED lights effects in music modes.(FM mode no led light)



## HOW TO CONNECT TO BT & USE OTHER FUNCTIONS

6.How to use VOCAL.R function:
When you`re in music modes,click "Vocal.R" to remove original vocals with one click.With this function,you can sing songs without the original vocals and make the party more enjoyable.

7.How to use MIC PRIORITY function:
Press the MIC PRI button to enable microphone priority mode, which automatically reduces or mutes the playing music volume when speaking into the microphone. This mode is very effective when you are in a speech context.

8.How to control the main volumn:
When in music modes,twist the VOL knob to the left side to decrease the volume.Twist the knob to the right side to increase the volumn.

9.How to control the MIC volumn:
When you connect a wireless mic or a wired mic,twist the MIC VOL knob to the left side to decrease the volume.Twist the knob to the right side to increase the volumn.



## HOW TO CONNECT TO BT & USE OTHER FUNCTIONS



## WARM REMINDER

Notes:
1. Please read this manual carefully before use and keep it properly.
2. For the first use, please fully charge the product.
3. Pls use certificated adapter that has passed national safety certification.
4. If you do not use the product for a long time, be sure to charge it once within a month at least to maintain its performance.
5. Do not use this product in an extremely cold or hot environment.Use in a correct enviroument such as temperature range of 5℃-35℃. If use it beyond the above range, the product may stop automatically to protect the internal circuit.
6. When charging it in a high temperature environment, the product may automatically stop charging to protect the battery.
7. Storage environment temperature: -5～35℃ RH＜70% (recommended 25℃±5).

Important safety instructions:
1. Do not disassemble or repair this speaker personally, otherwise it may cause product damage or personal injury.
2. Do not use it in dusty, humid, dry, and high-temperature environment.
3. Do not place this product near a heat source, or place with direct sunlight, a lot of dust, or mechanical vibration.
4. In order to reduce the risk of fire, please do not cover this product with newspapers, tablecloths, curtains etc., during use.
5. If the product has a waterproof feature, please do not exceed the nominal parameter range when using it.
6. When the product is damaged (such as the power cord or plug is damaged, liquid enters or objects fall into the device, unable to operate normally or falls), it must be repaired.
7. When the product is fully charged, do not connect it to the charger for further long time charging.(The indicator in the back should be turn darker or turn off when product is fully charged.)
8.The maximum ambient temperature should not exceed 40°C.
9.FM only receives, not transmits.



## Federal Communications Commission (FCC) Statement.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Universal Electronics, Inc. may void the FCC authorization to operate this device.Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
RF exposure statement:
This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

FCC ID：A5CMPD5202

maxpower

RoHS CE FC

MADE IN CHINA