Home Screen

Button	Description
15	Turns display off.
16	Adjusts brightness.
	Adjusts the display mode.
17	Displays the Home screen.
18	• Moves to the previous screen. • Hides keyboard. (when keyboard is displayed)
19	Adjusts volume.
20	• Sets the speaker mode. • The speaker icon changes for each speaker mode.
21	Bluetooth Audio Sync - Syncs the audio and video upon Bluetooth connection.

Kids Theme

Press → Press **Kids Theme**

Note

- If the system is turned off and on with Kids Theme applied, the system starts with Kids Theme.

Basic Screen

Name and Icon	Details
1 Baby Shark Songs & Games	Goes to the Baby Shark Songs & Games screen.
2 USB kids	Goes to the USB kids screen.
3 YouTube Kids	Goes to the YouTube Kids screen.
4 Default Theme	Returns to the default theme.

Note

- In Kids Theme, the Pinkfong contents and USB, YouTube Kids feature are only available.

Baby Shark Songs & Games Screen

Name and Icon	Details
1	Goes to Kids Theme home screen.
2	Choose the language.
3	Goes to Baby Shark Songs & Games screen.

Note

- Slide left or right to select the content you want to see.

USB kids Screen

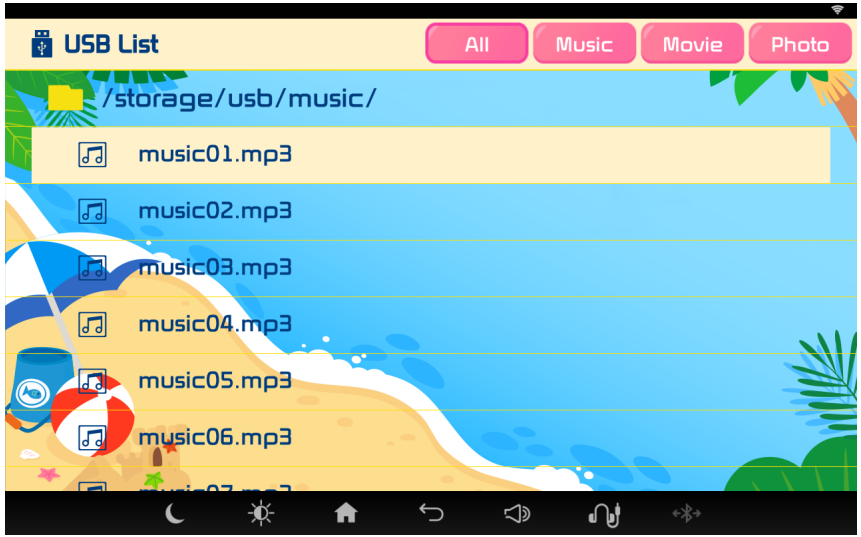

Note

- For details about USB, refer to page 28.

YouTube Kids Screen

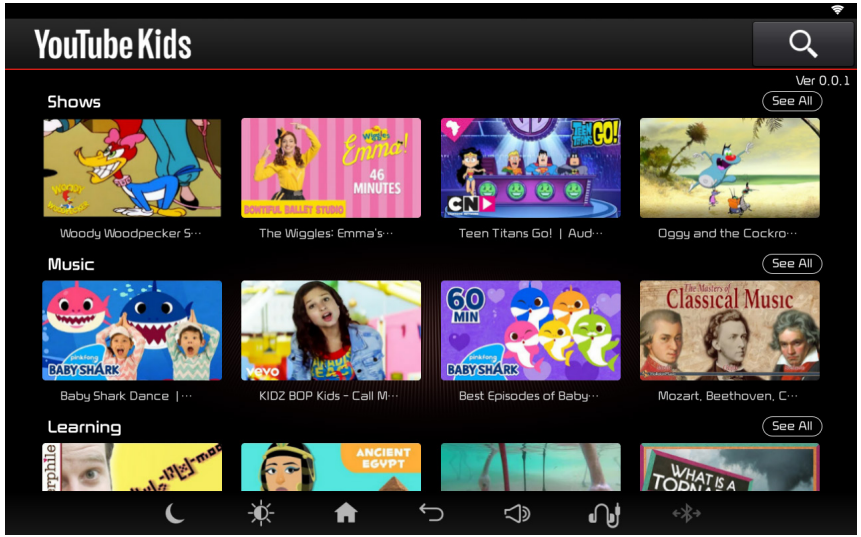

Note

- For details about YouTube, refer to page 59.

USB List Screen

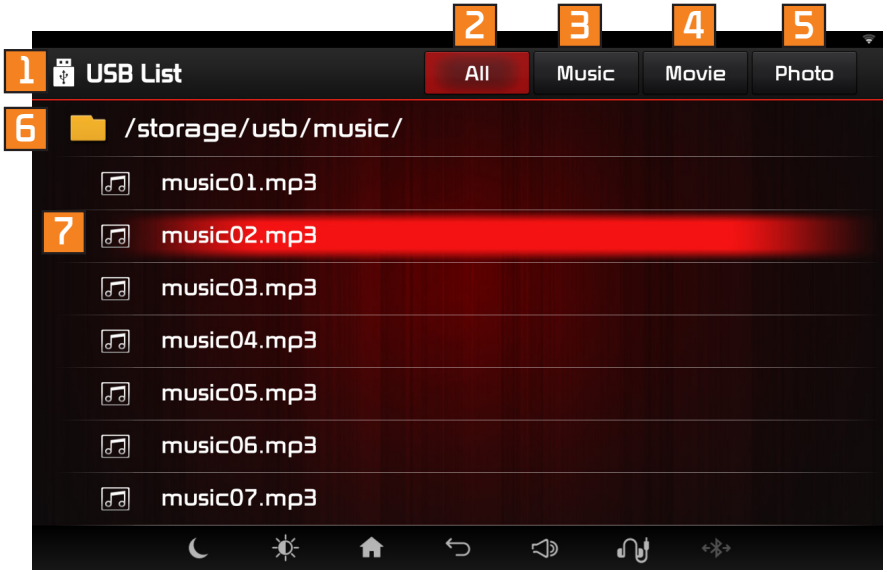

Name and Icon	Details
1 Mode	Displays current mode.
2 All	Displays all folders and music/ movie/photo files.
3 Music	Displays folders and music files.
4 Movie	Displays folders and movie files.
5 Photo	Displays folders and image files.
6 Directory Name	Current list directory. Touch to move to previous directory.
7 Current Song	Displays current song name.

Playing USB Music
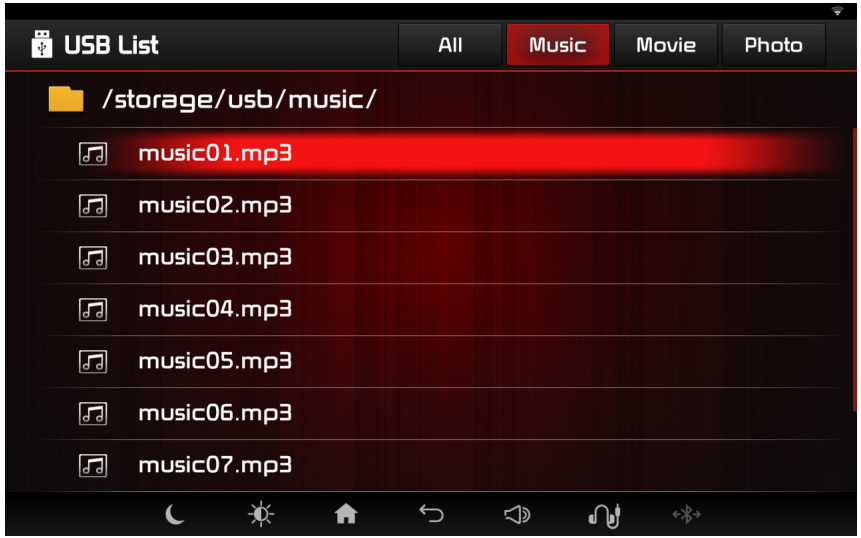
Press the button → Press **USB** → Press **Music** → Select the desired file.