vtech®

InnoTV™

Quick Start Guide

Follow these instructions to set up your InnoTV™.

The full **InnoTV™** User's Manual can be found online at
http://www.vtech.co.uk/innotv

Dear Parent,

At **VTech®**, we know you love providing your children with the latest advancements in learning education, technology and fun. For this reason, we have developed the **InnoTV™**, our educational video gaming system for children aged 3-9. The **InnoTV™** features a child friendly, wireless controller that not only switches for left or right handed use, it is also a joystick, motion control and a smart wheel for a unique and varied gaming experience. Children can use their **InnoTV™** to engage in fun-filled learning experiences built just for them!

The Wi-Fi connection enables access to VTech's Learning Lodge™ to download games, videos and music. All the games for **InnoTV™** are curriculum-based offering a progressive learning experience that's age appropriate and full of fun. Bundled with the **InnoTV™** are single player games and multi-player challenges for all the family to enjoy together. Licensed software cartridges featuring all the favourite characters are available that work across both the **InnoTV™** and the **InnoTab® Max** so the fun can continue on the go. Entertaining games teach your child reading, maths, social studies, science and much, much more.

We are dedicated to helping your children uncover their talents and are proud to partner with you to open up a world of learning fun! We thank you for your trust in our products to encourage active minds through imaginative play.

Sincerely,

Your friends at **VTech®**

To learn more about the **InnoTV™** and other VTech toys, visit
www.vtech.co.uk

Product Features

InnoTV™ Console

Cartridge Slot
Cartridge Eject Button
Power Button
microSD Card Slot
(microSD card not included)
Microphone Jack
(Microphone not included)

Back View

HDMI Port
Micro-USB Port
Adaptor Jack

Backup Battery Slot & Cover

InnoTV™ Controller

Power Button
Red Button
Status Light
Joystick
Green Button
Exit Button
Enter Button
Smart Wheel
Help Button

Battery Door
Player Selector
Wrist Strap Hole
Left/Right Hand Switch

Connecting the InnoTV™ Console to a TV

1. Turn off your television set.
2. Plug one end (near the ferrite core) of the HDMI cable into the HDMI Out port located on the back of the console, and then connect the other end to the HDMI port on the television.
3. Insert the Power Adaptor plug into the **InnoTV™**, and then plug the Power Adaptor into a power outlet.
4. Turn on your television set and select the proper HDMI input.

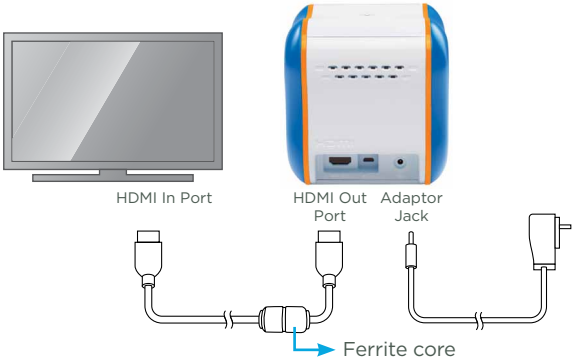

Turning on the Console

Turn on the TV, and then set the TV input to HDMI.

Press the ⏻ (Power) button on the **InnoTV™** console to turn it on. A green light will be shown around the button.

Setting up the Controller

Insert two AA batteries into the back of the controller.

Attach the wrist strap to the controller.

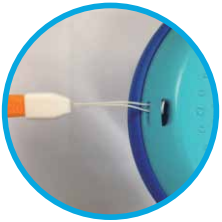

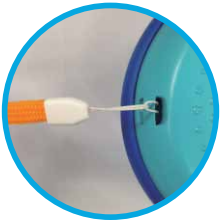

Press the (Power) button on the **InnoTV**™ controller to turn the controller on. A green light will come on.

Make sure the player selector on the bottom of the controller is on player 1.

HIGH-DEFINITION MULTIMEDIA INTERFACE
The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Setting up the InnoTV™

Follow these steps to set up your **InnoTV**™:

1. Set up an Internet connection.
2. Your **InnoTV**™ console may require a firmware update before use. If this is the case, follow the instructions on-screen to download and install the firmware update.
3. Once installation is completed the console will restart, and you will be prompted to register your **InnoTV**™. Complete the necessary steps to register your console.
4. Don't forget to set a Parental Controls passcode when you've finished to prevent your child from accessing the console settings.

Inserting/Removing Cartridges

Insert a cartridge into the cartridge slot on the top of the console. The cartridge should lock into place.

Press the (Eject) button to remove the cartridge.

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years

4-10 years

To learn more about this and other VTech® products, visit www.vtech.co.uk

PRODUCT WARRANTY

ONE YEAR PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
   Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtech.co.uk

2015 © VTech Printed in China 91-003129-001 UK