6. The functions of the 4th and 5th mouse buttons must be enable and set through the Mouse Setting application. Please do not select the function "System Default" for the 4th and 5th buttons.
7. Introduction of the Office Application Software: You can simply apply the Office application functions through the hot key on the top of the Office mouse.

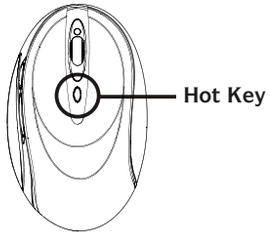

Notice:
The mouse shape may be different due to various mouse models.

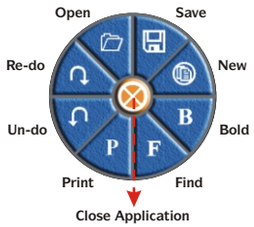

Optional Charging Modes

Notice:

- ***There are three charge modes. Some mice may have only one or two charge modes.***
- ***Please use rechargeable batteries for the chargeable mouse.***

1. Charge from PC
   Connect the mouse to the USB port of the computer with the USB to DC cable.
2. Charge from Adapter
   Connect the mouse with the AC to DC adapter.
3. Charge from Cradle
   The cradle must be connected with the required AC to DC adapter in advance and then place the mouse on the cradle precisely.

Charging Notice

At the first time of usage, please charge the AAA batteries at least 6 to 8 hours or 10 to 12 hours for the AA batteries.
The LED indicator or the scroll wheel on the mouse will light while the mouse is low battery. Please recharge or change the batteries immediately.
Press any button to wake up the mouse while the mouse is in the sleeping mode.

ALL OTHER PRODUCT NAMES AND TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS.
PMU-MRF00042 / MADE IN CHINA

OfficeMouse®

Office Wireless Optical Mouse

User's Quick Guide