NEC_e132_EN.book Page i Thursday, June 29, 2006 2:01 PM

Table of Contents

General information 1
Battery care 1
Disposing of the battery 2
Access codes 2
Care and Maintenance 3
Disposing of the product 4
Important Safety Information 4
Emergency calls 9
Your phone 11
Keys and connectors 11
Standby mode 12
Getting started 13
Installing the SIM card and the battery 13
Charging the battery 14
Switching the phone on and off 15
Call functions 16
Making a call 16
Answering or rejecting an incoming call 16
Call waiting 17
Handling more than one call 17
Input method 18
Key 19
Character 19
Menu Structure 20
Phone book 20
Modify 20

NEC_e132_EN.book Page ii Thursday, June 29, 2006 2:01 PM

Add 20
Groups 21
Group edits 21
Speed dial 22
Memory status 22
Owner Information 22
Send by Bluetooth 23
Copy all 23
Delete 23
CLI (Calling Line Identification) 24
Message 24
SMS 24
Read messages 24
To write a message 25
To send a message 26
Unsent and Outbox Messages 26
Message settings 26
MMS (Multimedia message) 27
To write a MMS 28
To send multimedia messages 28
Unsent and Outbox multimedia messages 29
MMS memory full 29
MMS setting 29
Template 30
Voice mail 30
Call Record 30
Missed calls/Received calls/Outgoing calls 31
Call duration 31
Call cost 31
Data counter 32
Settings 33

NEC_e132_EN.book Page iii Thursday, June 29, 2006 2:0 M

Time & Date....33
Melody....33
Ring volume....34
Ring or Vibrate....34
Key tone....34
Display settings....34
Call settings....36
Security....38
Reset all....40
Camera....41
Camera indications....41
Photo....41
Multi-shot....42
Video....42
Profile....43
Accessories....44
Bluetooth....44
Bluetooth on/off....44
My device....44
Search and add a Bluetooth device to your phone....44
Accept a file from the other device....45
Handsfree....45
My Phone....46
Calendar....46
Calculator....47
Stopwatch....47
Time count down....48
Alarm....48
Game....48
My data....49

NEC_e132_EN.book Page iv Thursday, June 29, 2006 2:0 M

Picture gallery 49
Video gallery 50
Melody gallery 50
Memory Status 51
WAP service 51
WAP setting 52
Key in the service settings manually 52
Activate WAP settings 52
Homepage 52
Bookmark 53
Go to 53
Edit bookmark 53
Push inbox 53
Clear cache 54
STK 54
SIM toolkit 54
GPRS 55
PC sync 55

NEC_e132_EN.book Page 1 Thursday, June 29, 2006 2:01 PM

General information

Battery care

Your phone is powered by a rechargeable battery.

- The battery can be charged and discharged hundreds of times but it will eventually wear out. When the operating time (talk-time and standby time) is noticeably shorter than normal, you should buy a new battery.
- Unplug the charger when not in use. Do not leave the battery connected to a charger for longer than a week, since overcharging may shorten its lifetime.
- If left unused, a fully charged battery may discharge itself over time.
- Temperature extremes can affect the ability of your battery to charge.
- Do not use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter.
- Do not short-circuit the battery. Short-circuiting the terminals may damage the battery or the connecting object.
- Dispose of batteries according to local regulations. Always recycle.
- In addition to the rechargable battery your phone is fitted with an internal battery that can only be replaced by a qualified service engineer. There is a risk of explosion if the battery is replaced with an incorrect type of battery. Dispose of the used battery in accordance with the manufacturer's instructions.

NEC_e132_EN.book Page 2 Thursday, June 29, 2006 2:01 PM

Disposing of the battery

Used phone batteries must be disposed of in compliance with current environment protection regulations. You should return your batteries to your reseller or dispose of them in an approved recycling centre.

Access codes

PIN code (4 to 8 digits):

The PIN (Personal Identification Number) code protects your SIM card against unauthorised access. Your SIM card usually supplies the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code may be supplied with the SIM card. Some functions will require PIN2 support, such as Set tariff.

PUK and PUK2 (8 digits)

The PUK (Personal Unblocking Key) code is required to change a blocked PIN code. The PUK2 code is required to change a blocked PIN2 code.

Phone code (4 to 8 digits)

The phone code protects the phone against unauthorised use. It is not on when you buy the phone. You can change the phone code (0000) to any four to eight-digit personal code.

NEC_e132_EN.book Page 3 Thursday, June 29, 2006 2:01 PM

Care and Maintenance

Read this information before using your mobile phone.

Your mobile phone is a highly sophisticated electronic device. When using your phone, battery, charger or any accessory, please read this information first.

Product care

- Warning: Please check the volume level of your phone before listening to your phone. High volume levels will damage your hearing.
- Keep your mobile phone and all its parts out of young children's reach.
- Keep your mobile phone dry.
- Avoid exposing your mobile phone to extreme hot or cold temperatures.
- Avoid placing your mobile phone close to lit cigarettes, naked flames or any heat source.

  Note: Do not use your product in an area where a potentially explosive atmosphere exists.
- If you set the Vibrator setting to ON, be careful that the phone is not near a source of heat (e.g. a heater) and that it does not fall from a desk due to the vibration.
- Do not store or carry flammable or explosive materials in the same compartment where a mobile phone is placed.
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a mobile phone is used next to them. Observe any warning signs and manufacturer's recommendations.
- If you have a weak heart, you should take extra precautions when setting functions such as the Vibrator and Ringer volume functions for incoming calls.

NEC_e132_EN.book Page 4 Thursday, June 29, 2006 2:01 PM

- Do not attempt to disassemble the phone. Non-expert handling of the device may damage it.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not paint your mobile phone. The paint could obstruct the earphone, microphone or any moveable parts and prevent normal use.
- Treat your mobile phone with care, keep it in a clean and dust free environment.

Disposing of the product

Your Mobile phone should not be placed in municipal waste. Please check local regulations for disposal of electronic products.

Important Safety Information

Radio frequency energy and SAR certification information

Your phone meets the government's requirements for exposure to radio waves.

It is a radio transmitter and receiver. When the phone is turned on, it receives and transmits radio frequency (RF) energy. Depending on the type of mobile phone you possess, it operates on different frequency ranges and employs commonly used modulation techniques.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value. This is because the mobile phone is designed to use the minimum power required to reach the network.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S.

NEC_e132_EN.book Page 5 Thursday, June 29, 2006 2:01 PM

Government and CE certification (CE marking) of European Union (EU) requirements.

The SAR limit recommended by the EU Council is 2.0W/kg. The highest SAR value for this model phone was 0.888 W/kg.

DoC

CS Česky [Czech]	NEC tímto prohlašuje, že tento e132 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
DK Dansk [Danish]	Undertegnede NEC erklærer herved, at følgende udstyr e132 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
DE Deutsch [German]	Hiermit erklärt NEC, dass sich das Gerät e132 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
ET Eesti [Estonian]	Käesolevaga kinnitab NEC seadme e132 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
EN English	Hereby, NEC, declares that this e132 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
ES Español [Spanish]	Por medio de la presente NEC declara que el e132 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
EL Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ NEC ΔΗΛΩΝΕΙ ΟΤΙ e132 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
FR Français [French]	Par la présente NEC déclare que l'appareil e132 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
IT Italiano [Italian]	Con la presente NEC dichiara che questo e132 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

NEC_e132_EN.book Page 6 Thursday, June 29, 2006 2:01 PM

LV Latviski [Latvian]	Ar šo NEC deklarē, ka e132 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
LT Lietuvių [Lithuanian]	Šiuo NEC deklaruoja, kad šis e132 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
NL Nederlands [Dutch]	Hierbij verklaart NEC dat het toestel e132 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
MT Malti [Maltese]	Hawnhekk, NEC, jiddikjara li dan e132 jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
HU Magyar [Hungarian]	Alulírott, NEC nyilatkozom, hogy a e132 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
PL Polski [Polish]	Niniejszym NEC oświadcza, że e132 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
PT Português [Portuguese]	NEC declara que este e132 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
SL Slovensko [Slovenian]	NEC izjavlja, da je ta e132 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
SK Slovensky [Slovak]	NEC týmto vyhlasuje, že e132 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
FI Suomi [Finnish]	NEC vakuuttaa täten että e132 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
SV Svenska [Swedish]	Härmed intygar NEC att denna e132 står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

NEC_e132_EN.book Page 7 Thursday, June 29, 2006 2:01 PM

Islenska [Icelandic]	Hér með lýsir NEC yfir því að e132 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
NO Norsk [Norwegian]	NEC erklærer herved at utstyret e132 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

Electronic devices

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your mobile phone, therefore:

- Do not use your mobile phone near medical equipment without requesting permission.

Pacemaker

Mobile phones may affect the operation of some implanted cardiac pacemakers and other medically implanted equipment. Pacemaker manufacturers recommend that a minimum separation of 20 cm (6 inches) be maintained between a hand-held wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 20 cm (6 inches) from their pacemaker when the phone is switched on;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some hearing aids might be disturbed by mobile phones. In the event of such disturbance, you may want to consult your service provider, or call the customer services line to discuss alternatives.

NEC_e132_EN.book Page 8 Thursday, June 29, 2006 2:01 PM

Aircraft

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

  To prevent interference with communication systems, you must not use your mobile phone while the plane is in the air.

Potentially explosive atmospheres

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. It is rare, but your phone or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fuelling areas, such as petrol stations, below deck on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.; and any other area where you would normally be advised to turn off your vehicle engine.

Driving

Check the laws and regulations on the use of mobile phones in the areas where you drive. If you are going to use your phone while driving, please:

- Give full attention to driving.
- Use handsfree. Law in many countries requires vehicle handsfree.
- Pull off the road and park before making or answering a call if driving conditions so require.

  RF energy may affect some electronic systems in motor vehicles such as car stereo, safety equipment etc. in addition, some vehicle manufacturers do not allow use of mobile phones, unless the installation is supported by a handsfree kit with an external antenna, in their vehicles. Check with your vehicle manufacturer's representative to be sure that your mobile phone will not affect the electronic systems in your vehicle.

NEC_e132_EN.book Page 9 Thursday, June 29, 2006 2:01 PM

Emergency calls

Important:

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user programmed functions. Because of this, connections in all conditions cannot be guaranteed. Therefore, you should never rely solely upon any wireless phone for essential communications (e.g. medical emergencies)

Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service provider.

FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Licenses

T9® Text Input and the T9® logo are registered trademarks of the Tegic Communication.

T9® Text Input is licensed under one or more of the following:

U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; Australian Pat. Nos. 727539, 746674, and 747901; Canadian Pat. Nos. 1,331,057, 2,302,595, and 2,227,904; Japan Pat. No. 3532780, 3492981; United Kingdom Pat. No. 2238414B;

NEC_e132_EN.book Page 10 Thursday, June 29, 2006 2:6 M

HongKong Standard Pat. No. HK1010924; Republic of Singapore Pat. No. 51383, 66959, and 71979; European. Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); Repubilc of Korea Pat. Nos. KR201211B1 and KR226206B1. People's Republic of China Pat. Application Nos. 98802801.8, 98809472.X and 96196739.0; Mexico Pat. No. 208141; Russian Federation Pat. No. 2206118; and additional Parents are pending worldwide.

NEC_e132_EN.book Page 11 Thursday, June 29, 2006 2:6 M

Your phone

Keys and connectors

NEC_e132_EN.book Page 12 Thursday, June 29, 2006 2:6 M

Shortcut Keys

- Adjusts the earpiece volume during a call.
- Adjusts the ring volume in standby mode.
- To reject an incoming call, press the key twice.

Soft key

- The current function of each softkey is displayed on the screen above each key.

Navigation Key

- In standby mode, this key gives quick access to:

Wap
Profile
My data
Message

- In standby mode, long press of this key gives quick access to:

Bluetooth
Compose SMS

- In the menu, use the navigation key to scroll up and down sub-menus.
- Press and hold to activate Silent mode.
- Press and hold to lock the Keypad.

Standby mode

In the main display:

: The signal strength of the cellular network at your current location.
: The battery charge level.
: One or several messages received.
: All calls are diverted to another number.
: Vibrate is on.
: Alarm clock is on.
: Silent mode activated.
: GPRS dial-up connection is on.
: Reject list is on.
: Keypad locked.
: A profile other than 'Normal' is set.
: Bluetooth is on.
: A bluetooth device is connected.

NEC_e132_EN.book Page 13 Thursday, June 29, 2006 2:6 M

Getting started

Installing the SIM card and the battery

Note: Insert the SIM card and charge the battery before using the phone.

- Keep all SIM cards out of the reach of small children.
- Take care when handling the SIM card. Scratches and bending can damage the card.
- Before installing/removing the SIM card, always make sure that the phone is switched off.

1. Slide the cover off the phone (1) and lift the battery away (2).

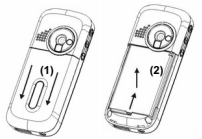

2. Insert the SIM card (3).

NEC_e132_EN.book Page 14 Thursday, June 29, 2006 2:6 M

3. Insert the battery (4) and replace the rear cover of the phone (5). Push the cover up until you hear a click.

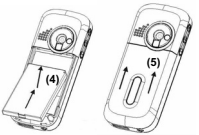

Charging the battery

You must fully charge the battery before using your phone for the first time.

1. Connect the charger plug to the socket on the bottom of your phone (A).
2. Connect the charger to an AC wall outlet.
3. It may take between 5 to 15 minutes before a charging icon is shown on the display.
4. When the charger is plugged into the handset, the orange LED indicator will light up which means the battery is charging.

Note: You can use the phone while the charger is connected but the total time taken to charge will be increased.

Note: When the battery is weak indicated by "▭" n the display,you will hear a warning sound. When the battery becomes too weak indicated by "▭" on the display, it will switch off automatically.

Note: You must connect the charger plug with the correct side up (the side with the caution label). Otherwise, it may cause damage to the charger adaptor.

NEC_e132_EN.book Page 15 Thursday, June 29, 2006 2:6 M

Switching the phone on and off

Press and hold [ ].

Note: If the phone shows "Insert SIM" when the SIM card is properly inserted, contact your network operator or service provider.

If the phone asks for the PIN code, key in the PIN code and press **OK**.

Note: Do not switch the phone on when mobile phone use is prohibited or when it may cause interference or danger.

NEC_e132_EN.book Page 16 Thursday, June 29, 2006 2:6 M

Call functions

Make and receive calls with your phone.

Making a call

- In standby mode, key in the number, including the area code, and press [⌐].

  Note: Use the Right Soft key [—] to delete a character.

Making a call from the phone book

1. In Standby mode, press **Names**.
2. Select the person you wish to call and press [⌐].

Alternatively, to search for a name:

1. In Standby mode, select **Names**.
2. Scroll down to **Search** and press **Select**.
3. Enter the full or partial name of the person you wish to call. Press **Option** and select **Search**.
4. Select the person you wish to call and press [⌐].

Making an international call

1. For international calls, press and hold [0+] for the international prefix (character +).
2. Key in the country code, area code and the phone number. Press [⌐] to call.

Answering or rejecting an incoming call

To answer an incoming call

- Press [⌐] to answer the call.

To reject an incoming call

- Press the ⊖ key twice, press [⌐] or **Reject** to reject the call.

NEC_e132_EN.book Page 17 Thursday, June 29, 2006 2:6 M

Call waiting

You can answer another incoming call while you have a call in progress.

1. Press to answer the incoming call. The first call is put on hold.
2. Press to end the call and return to the call on hold.

Handling more than one call

You can handle up to two lines simultaneously.

Making a second call

1. During a call, press **Hold**.
2. Press **Option**, choose **Phonebook** and select the name you want to call and press .
3. Or key in the number then press to make a second call.

Note: You can only put one call on hold. Please refer to "Making a call from phonebook".

Two calls on line

To swap between the two calls

- Press **Swap**. The first call is put on hold.
- To end the call and return to the call on hold, press .

Making a Conference call

1. During a call, press to receive the second call.Or press **Hold**, key in the number and then press .
2. Select **Join calls**.

NEC_e132_EN.book Page 18 Thursday, June 29, 2006 2:0 PM

Input method

You can key in text character by character, or by predictive input.

To select input method

1. When keying in text, press **Option** and select Input **Select**.
2. Choose an input method, and press **Select**.

Change input method

- Press # and hold to change circularly the input method (123, ABC and T9AB) if English is selected. Press # and hold to change circularly the input method (123, FRAB and T9FR) if French is selected. The rest of the languages may be deduced by analogy.

To change case

- In "ABC" or "abc" input mode, press 1&M to change between capital or lower-case letters.

To insert a space

- Press the key to insert a space.
- In T9Ab, you can also use 0+ to insert a space.

Normal Text input

- Use the number keys to select the desired character.

Note: Your phone provides a Multi-tap function. For example, press 2 twice to display the letter B, and press it three times to display the letter C.

NEC_e132_EN.book Page 19 Thursday, June 29, 2006 2:6 M

Character table

Key	Character
1	? ! , . : ; = 1
2	A B C Å Ä Æ à Ç 2
3	D E F è É 3 Δ Φ
4	G H I ì 4 Γ
5	J K L 5 Λ
6	M N O Ñ Ö Ø Ò 6
7	P Q R S ß 7 Π Σ
8	T U V Ü Ù 8
9	W X Y Z 9
0	Space + & @ / % $ \ 0
*	To change between lower-case and initial case
#	To change the input method circularly (123, Specific language, Specific T9)

Text entry with T9®

T9® uses a built-in dictionary to recognise the most commonly used word for every sequence of key presses.

Keypad information

- Shift the cursor.
- To switch between alternative words.
- Press and hold to change input method.
- Press to switch between upper and lower case.

NEC_e132_EN.book Page 20 Thursday, June 29, 2006 2:6 M

Menu Structure

Phone book

You can save names and numbers in your phone memory and SIM card. In addition, this phone allows you to store up to 300 names and numbers in the phone memory. Records saved in the SIM are indicated by and those in the Phone memory are indicated by .

To save a name and phone number

1. In Standby mode, key in a number and press **Option**.
2. Select **Save**. Choose whether to save the record to the Phone or SIM memory and press **Select**.
3. Enter the name and press **Option**. Select **OK** and then **Save** to save the number.

Modify

Edit a number and name saved in the phone book.

To edit a number and a name:

1. In standby mode, select **Names** to access the phone book.
2. Use to find a name in the phone book, and then press **Select**.
3. Select **Detail**.
4. Choose the item you wish to modify, press **Select** and select **Edit**.
5. Edit the record and press **OK** to save.

Add

Add a new name and number to the phone book.

To add a name and phone number to the phone book:

1. In standby mode, select **Names** to access the phone book.
2. In the **Phone book**, press **Select** and choose **Add**.
3. Choose **Save in SIM** or **Save in phone** and press **Select**.

NEC_e132_EN.book Page 21 Thursday, June 29, 2006 2:6 M

4. Key in the name and press **Option**.
5. Select **OK** and select the type of number you want to save.
6. Key in the number and press **OK**.
7. Select **Save** to save the name and number.

Groups

Send a message to all members of a group at the same time. Before using this function, you need to create a Group list from the phone book.

To add a name in a Group:

1. In standby mode, select **Names** to access the phone book.
2. In the **Phone book**, press **Select** and select **Groups**.
3. Choose a group and press **Select**.
4. Select **Add member**.
5. Enter a name or press **Option** and choose **Phone book** to select a member from phone book. Press **Select**.

Note: For input methods, please refer to 'Input method' on page 18.

Group edits

1. In standby mode, select **Names** to access the phone book.
2. In the **Phone book**, press **Select** and select **Groups**.
3. Choose a group, then press **Select** to begin editing.

Your phone provides the following options:

- **List members**: View the members of the group.
- **Add member**: Add a member to the specified group.
- **Rename**: Change the group name.
- **Ring type**: Set a ring type for the group.
- **Pictures**: Set a picture for the group.

NEC_e132_EN.book Page 22 Thursday, June 29, 2006 2:6 M

Speed dial

If the number is assigned to a speed dial key (2 ... to 8 ...) you can call the number by pressing and holding the relevant key while in Standby mode.

1. In standby mode, select **Names** to access the phone book.
2. In the **Phone book**, press **Select** and select **Speed dial**.
3. Choose a speed dial number and press **Select**.
4. Key in the name and press **Option**.
5. Select **Search**. If necessary, scroll up or down to choose the correct name.
6. Press **Select** to save.

Memory status

This phone allows you to view the phone book data stored in the SIM and the Phone.

- In standby mode, select **Names** to access the phone book
- In the **Phone book** menu, select **Memory status**.

Owner Information

Your phone allows you to add your personal name and number in the phone book.

1. In standby menu, select **Names** to access the phone book.
2. In the **Phone book**, press **Select** and select **Owner info**.
3. Press **Select** to edit your name.
4. Key in your name and press **Option**
5. Select **OK** and select the type of number you want to save.
6. Key in the number and press **OK**.
7. Press **Save** to save the name and number.

Send personal number by Bluetooth

You can also send your name and number via bluetooth.

NEC_e132_EN.book Page 23 Thursday, June 29, 2006 2:6 M

1. In the **Phone book**, choose **Owner info**, press **Select**.
2. Press **Send by bluetooth**.
3. Choose a device, press **Option**.
4. Select **Connect**.

Note: A prompt will show "Sent", when the transmission is finished.

"Access denied" will display if the device reject the access.

Send by Bluetooth

You can send names and phone numbers in your phone book via bluetooth.

1. In standby menu, select **Names** to access the phone book.
2. In the **Phone book**, select a contact from the phone book. Press select.
3. Select Send by bluetooth.
4. Choose a device, press **Option**.
5. Select **Connect**.

Note: A prompt will show "Sent", when the transmission is finished. "Access denied" will display if the device rejects the access.

Copy all

You can copy and transfer your phone data from SIM to phone (or from phone to SIM).

1. In standby mode, select **Names** to access the phone book.
2. In the **Phone book**, press **Select** and select **Copy all**.
3. Choose **Copy to Phone** or **Copy to SIM** and press **Select**.

Delete

Your phone allows you to delete all names and numbers stored in the phone book.

1. In standby mode, select **Names** to access the phone book.
2. In the **Phone book**, press **Select** and select **Delete**.
3. Choose **Delete it** to delete one entry or **Delete all in Phone** to delete all stored names and numbers.

NEC_e132_EN.book Page 24 Thursday, June 29, 2006 2:6 M

4. If **Delete all in Phone** is chosen you will be asked to key in the password at the Delete all screen. See 'Security' on page 38 for details on passwords.
5. At the prompt "Are you sure?" press **Yes**.

CLI (Calling Line Identification)

Your phone allows you to recognize incoming calls by specified ring tones and pictures assigned to numbers in the Phone book.

1. In standby mode, select **Names** to access the phone book.
2. Select the name from the Phone book .
3. Select **Detail** and scroll to (Personal Picture) or (Personal Melody). Press **Select**.
4. Select **Assign**.
5. Choose from the default or saved picture/melodies and press **Select**.
6. Choose a picture/melody from the list. Press **Select** and then **OK** to save.

Message

SMS

Send text messages and receive voicemail notification messages with your phone.

Read messages

When you have received a message, will appear on the display.

: Message in phone that has not been read.

: Message in phone that has been read.

: Message in SIM that has not been read.

: Message in SIM that has been read.

Note: A flashing message icon indicates that the message memory is full. Before you can send or receive new messages, you need to delete some of your older messages.

1. In Standby mode, press **Menu** and select **Message**.
2. Select **SMS** to enter the **Message** menu.

NEC_e132_EN.book Page 25 Thursday, June 29, 2006 2:6 M

3. Select **Inbox**.
4. Choose a message and press **Read**.

Note: To quickly access Messages, press in standby mode.

Note: To scroll through the content of messages, use .

When you have read the message, your phone provides the options:

- **Reply**: Reply by sending a text message.
- **Forward**: Forward a text message.
- **Add number**: Save the number in your phone book.
- **Call**: Call the number shown in the message.
- **Delete**: Delete the message in progress.

To write a message

1. From the **SMS** menu, select **Compose**.
2. Key in the message and press **Option**.
3. Choose from the listed options and press **Select**.

Your phone provides the following selections for your option:

- **Add symbol**: Add one or more symbols in the edit screen.
- **Insert object**: Add pictures or melodies to your message.
- **Input select**: Change the input method.
- **Use templates**: Insert templates. See page 30 for further details.
- **Clear all**: Erase the text composed in the edit screen.

Note: To quickly access Messages, press in standby mode.

Note: For details on keying in content, please refer to 'Input method' on page 18.

Note: Network operator or service provider support is necessary to receive and display picture messages.

NEC_e132_EN.book Page 26 Thursday, June 29, 2006 2:6 PM

Keypad information

	Shift the cursor.
	Press to insert character *, #, or to start a new line. Press and hold to change input method.
	Press to switch between upper and lower case. Press and hold to insert symbol.

To send a message

1. After composing the message, press **Option** and choose **Send single** or **Send group**.
2. Enter the recipient's number or search for it in the phone book.
3. With the number displayed, press **Send**.

Your phone provides the following options:

- **Send single**: Send a text message immediately.
- **Send group**: Send to a group specified in your phone book.
- **Save**: Save a message and send it later.

Unsent and Outbox Messages

After sending the message, the message is saved in the Outbox folder. You can also save the message in the **Unsent** folder to send it later.

Message settings

Your phone allows you to set up default settings.

1. In the **Message** menu, select **SMS**.
2. Select **Settings**.

Your phone provides the following setting selections:

- **SMS center**: Save or change the number of your SMS centre (required when sending text messages).