PX-21B

USER MANUAL

DRAFT VERSION1.0
2001.7.2

TABLE OF CONTENTS

CHAPTER 1 BEFORE USING YOUR PHONE **1**

Package Includes 2
Handset Description 3
Basic Functions 4
The Function Keys 4
Display Indicators **5**
Screen Status, Display and Function 5
Using The Battery..... **6**
Installing the Battery..... 6
Removing the Battery..... 6
Charging the Battery..... 7
Power Connection..... 7
Charging the Battery Only..... 7
Charging the Battery with the Handset..... 8
Charging Completion..... 8
Status of Charger Led..... 9
Battery Life..... 9
Important Battery Information **10**

CHAPTER 2 BASIC OPERATION **11**

Turning the Phone On and Off **12**
Turning the Phone On 12
Turning the Phone Off 12
How to Use the Menu **13**
Menu Summary **14**
Basic Functions..... **16**
Making a Call 16
Pause Feature 17
How to Answer Calls..... 18
Caller ID Function 18
Call Waiting Function 18
Missed Call Display 19
How to Adjust Volume 19
Vibrate..... 19
Functions During a Call **20**
Sending Your Number to a Pager 20
Scratch Pad 20
Mute 20

ABLE OF CONTENTS (CONT'D.)

TER 3 MEMORY FUNCTION 21
w to Store a Phone Number 22
ow to Enter Letters and Characters Using the Keypad..... 23
v to Make a Call Using a Stored Phone Number.... 24
One-Touch/Two-Touch Dialing 24
v To Find Your Call Logs 25
Missed Calls 25
Answered Calls 26
Dialed Calls 26
v to Find Your Phone Book 27
Recalling by Memory Location Number 27
Recalling by Name (Alpha) 28

TER 4 MENU 29
tings 30
uto Retry 30
uto Answer 30
One-Touch Dialing 31
klight 32
ighting Length 32
play 33
CD Contrast 33
anguage 33
nge Banner 34
Guard 35
e..... 36
ing Mode 36
ing Type 36
ey Beep 36
TMF Type 37
Timers 37
ast Call 37
ll Calls 37
Home Calls..... 37
Roam Calls..... 37
ts..... 38
Min Alert 38
Roam Alert 38

TABLE OF CONTENTS (CONT'D.)

Fade Alert 38
Low Signal Alert 39
Connect alert 39
Data Service 40
Receive Mode 40
Flow Control 40
System Info..... 41
System Information..... 41
Version info 41
Phone Info 42
Checking My Number 42

CHAPTER 5 SECURITY FEATURES 43
How to Lock Your Phone 44
Auto Lock..... 44
How to Change Your Code 45
Change Code 45
How to Restrict Your Phone 46
Restricting Functions..... 46
Restricting Incoming Calls..... 46
Restricting Outgoing Calls..... 47
Restricting the Memory..... 47
Restricting Long Distance Calls..... 48
Restricting Calls to 900 Numbers..... 48
How to Reset Your Phone. 49
How to Clear Your Phone Memory..... 50
Clearing Stored Phone Numbers..... 50
Clearing Schedules..... 50
Memory Clearing Function..... 51
Clearing Dialed Number in Call Logs..... 51
Clearing Air Time In Home Service Area..... 51
Clearing Roam Calls..... 51

CHAPTER 6 SUPPLEMENTARY FUNCTIONS..... 53
Schedule 54
View Schedule List..... 54
Input Schedule 54
Pause All Schedules..... 54
Stopwatch 55
Calculator..... 55
Bio-Rhythm..... 56

ABLE OF CONTENTS (CONT'D.)

'TER 7 VOICE MAIL AND TEXT MESSAGES... 57
eiving a Message..... 58
ce Mail..... 58
Checking Received Voice Mail Message..... 58
d New..... 59
Sending Text Message..... 59
ox..... 61
Checking Received Text Message..... 61
tbox..... 63
Checking Sent Text Message..... 63
ting..... 65
Save Sent Message 65
Default Call Back Number 65
Message Alert 65
Delivery Ack 66
Auto Erase 66
Entry Mode 66
d 67
se Messages 68
erence(Wiriting Message) 69
Using Standard Text Input 69
Using T9 Text Input 70
Write with T9 Text Input 72

'TER 8 EMERGENCY CALL 75
king an Emergency Call 76
E911 in Lock Mode 76
E911 Using Any Available System 76

'TER 9 INTERNET BROWSER 77
art Internet Browser 78
Access Wireless Internet 78
owser Menu 79
Reload 79
Home 79
Bookmarks 79
Mark Site 80
About Phone.com 80
Advanced 80

TABLE OF CONTENTS (CONT'D.)

Show URL 81
Homepage 81
Set UP.link 81
Offline Service 82
Outbox 82
Restart Up. Browser 83
Encryption 83

CHAPTER 10 SAFETY 85
Safty Information for Wireless Handheld Phones 86
Driving Safety 87
Electronic Devices 88
Other Safety Guidelines 90
Precautions 91
Safty Information for FCC RF Exposure 92

CHAPTER 11 WARRANTY 93
Protect Your Warranty 94
12 Month Limited Warranty 95

CHAPTER 1

BEFORE USING YOUR PHONE

Please read this chapter before using this product.

❶ Package Includes
❷ Handset Description
❸ Basic Functions
❹ Display Indicators
❺ Using the Battery
❻ Charging the Battery
❼ Important Battery Information

FCC RF EXPOSURE INFORMATION

WARNING! Read this information before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.6 cm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 1.6 cm. separation distance between the user's body and the back of the phone, including the antenna, whether extended or retracted. The use of third-party belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

PACKAGE INCLUDES

you for purchasing this product. Please check the product
ts by comparing them with the following pictures.

Handset

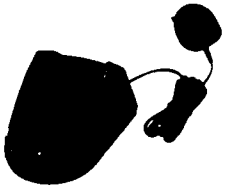

Desktop Charger

Standard Battery

User Manual

Handstrap

In case there are any product defects, please report them to the place of purchase immediately.

HANDSET DESCRIPTION

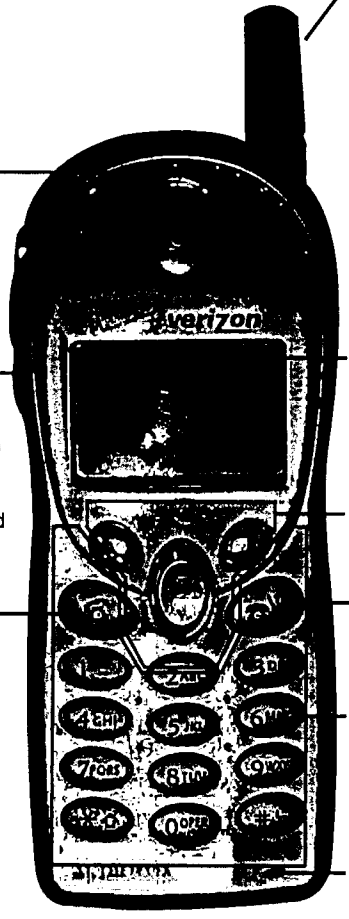

Antenna
For best call quality, extend the antenna during the call.

Earpiece

LCD Screen

Volume Button
Used to adjust the volume of the earpiece and ringer volume.

Function Keys

Send key

END/ POWER KEY

Keypad

Microphone

BASIC FUNCTIONS

FUNCTION KEYS

This key is used to make or receive a call.

This key is used to terminate a call or exit the current menu. This key is used to turn the handset on or off.

This key (also called the Navigation key)is used to scroll through the contents of the menu.

(Soft 1) This key is used to access the Menu.

(Soft 2) This key is used to access voice or text messages and to return to previous directory on the Menu.

This key is used to access the web.

This key is used to clear characters.

Press and hold to set up (vibration) manner mode.

Press and hold to set up key guard mode.

DISPLAY INDICATORS

SCREEN STATUS, DISPLAY AND FUNCTION

Signal Strength

Indicates current signal strength. More lines mean better signal strength.

Roaming

Indicates the phone is outside of its home area.

Service Indicator

When a call is in progress, is displayed.
When is displayed, the phone is in idle mode.
When is displayed, the phone is not receving a signal from the system.

Message

Indicates a text message or voice mail message is waiting.

Digital mode

Indicates the phone is operating in digital mode.

Battery

Indicates battery charge level status. The more black you see, the greater the charge.

Mute

Indicates the phone is mute while on a call

Scratchpad

Displays when scratchpad is in use during a call

Emergency Call

Blinks when an emergency call is in progress.

USING THE BATTERY

STALLING THE BATTERY

❶ Insert the bottom of battery into the groove at the bottom of the handset. Then ❷ press in the top of the battery until it snaps.

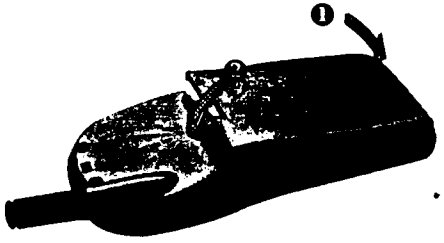

MOVING THE BATTERY

Push the tab ❶ with one hand and lift the top of the battery ❷ to separate.

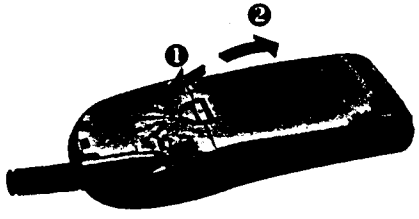

Note

The battery must be correctly placed in the battery compartment. If battery is incorrectly inserted, the handset will not turn on or the battery may slip out during use.

CHARGING THE BATTERY

POWER CONNECTION

1 Connect the charger to a standard 120V AC outlet.
The LED will light green when the power is connected.

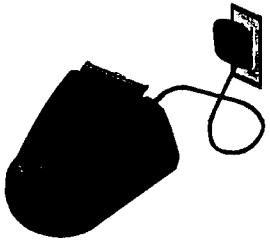

CHARGING THE BATTERY ONLY

1 To charge the battery only, insert the battery pack into the charging slot on the charger.
The LED will indicate the charging status.

- Red indicates charging is in progress
- Green indicates charging is complete

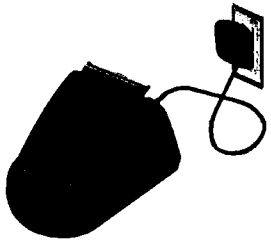

Note

- *Battery is not charged when you purchase the product.*
- *Fully charge the battery before use.*

CHARGING THE BATTERY

ARGING THE BATTERY WITH THE HANDSET

To charge the battery with the handset, insert the handset into the charger.

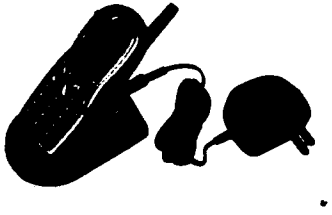

Note

Charging the battery with the handset power on is less efficient than charging it with the handset off.

ARGING COMPLETION

Charging is completed when the green-colored LED stays on.

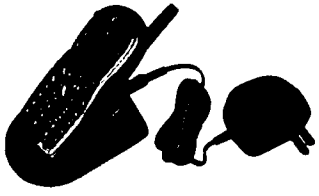

CHARGING THE BATTERY

STATUS OF CHARGER LED

Charging Slot	Charging in Progress (Red Color On)	Charging Completion (Green Color On)
Front Charging slot(charging slot for handset only)	●	○

Note

If the red LED does not come on after the handset or battery has been inserted into the charging slots, re-insert or check power.

BATTERY LIFE (FOR NEW BATTERY)

Type / Status	Standard Battery *(1000 mAh)*
Talk (min)	225
Stand by (hrs)	170

MPORTANT BATTERY INFORMATION

nly batteries and chargers approved by the phone manufacturer.

a charger is not in use, disconnect it from the power source. Do ave the battery connected to a charger for longer than a week; harging may shorten its life.

unused, a fully charged battery may completely drain (discharge) 4 weeks.

r use any charger or battery that is damaged or worn out.

he battery only for its intended purpose.

ot short circuit the battery. Accidental short circuiting can occur a metallic object (e.g. coin, clip or pen) causes direct connection two terminals of the battery (metal strips on the back of the bat- For example, when you carry a spare battery in your pocket or . Short circuiting the terminals may damage the battery or the cting object.

ng the battery in hot or cold places, such as in a closed car in ner or winter conditions, reduces the capacity and lifetime of the y. Always try to keep the battery between 41°F and 95°F (5°C 5°C). A phone with a hot or cold battery may temporarily not work arge) even if the battery is fully charged.

erature extremes affect the ability of your battery to charge; allow ool down or warm up first.

the battery is not in use, store it uncharged in a cool, dark and ace.

attery is a sealed unit with no serviceable parts. Do not attempt en the case.

ecommended that you allow your battery to fully discharge before echarge it.

attery can be charged and discharged hundreds of times but will ually wear out. When the operating time is shorter than normal, me to buy a new battery.

t dispose of a battery in a fire!

se of used batteries in accordance with local regulations.

cle!

CHAPTER 2

BASIC OPERATION

❶ Turning the Phone On and Off

❷ How to Use the Menu

❸ Menu Summary

❹ Basic Functions

❺ Functions During a Call

TURNING THE PHONE ON AND OFF

RNING THE PHONE ON

- Press [ ].
- The phone is locked if **"LOCK"** is displayed on the screen. When **"LOCK"** is displayed, enter the 4-digit lock to unlock the phone.
- The default lock is the last 4 digits of your phone number.

NING THE PHONE OFF

- Press [ ] until "Power off!" is displayed.

Note

- *If the "LOW BATTERY WARNING POWER OFF" is displayed and the power goes off, there is a possibility of damaging the memory. Change or charge the battery immediately.*
- *If the battery is removed while the phone is on, the last call information may be erased.*

HOW TO USE THE MENU

1	In the standby screen, press [ ] to enter the menu.
2	Use the navigation key or the volume keys to scroll through the menu.
3	To return to the previous menu, press [ ] To exit the current menu, press [ ]
4	To enter a submenu, press the corresponding number or select the item using the navigation key or the volume keys.
5	[ ], [ ], volume keys and navigation key can be used while using the menu.

MENU SUMMARY

HONE BOOK

1 : CALL LOGS
- 1 : MISSED CALL
- 2 : ANSWERED CALL
- 3 : DIALED CALL

2 : BY LOCATION
3 : BY NAME

ETTING

1 : AUTO RETRY
- 1 : INTERVAL
- 2 : REPEAT

2 : AUTO ANSWER
3 : ONE-TOUCH
4 : BACKLIGHT
5 : LCD CONTRAST
6 : LANGUAGE
7 : CHANGE BANNER
8 : KEY GUARD

TONE

1 : RING MODE
2 : RING TYPE
3 : KEY BEEP
4 : DTMF TYPE

TIMER

1 : LAST CALL
2 : ALL CALLS
3 : HOME CALLS
4 : ROAM CALLS

MENU SUMMARY

5 : SPECIAL

1 : SCHEDULE
- 1 : LIST ALL
- 2 : INPUT SCHEDULE
- 3 : PAUSE ALL

2 : STOPWATCH
3 : CALCULATOR
4 : BIORHYTHM
- 1 : TODAY
- 2 : SOMEDAY
- 3 : BIRTHDAY

6 : ALERTS

1 : MIN ALERT
2 : ROAM ALERT
3 : FADE ALERT
4 : LOW SIG ALERT
5 : CONNECT ALERT

7 : DATA SERVICE

1 : RECEIVE MODE
2 : FLOW CONTROL

8 : SYSTEM INFO

1 : SYSTEM INFORMATION
2 : VERSION INFO

9 : MY NUMBER

0 : SECURITY

1 : AUTO LOCK
2 : CHANGE CODE
3 : RESTRICT
- 1 : INCOMING
- 2 : OUTGOING
- 3 : MEMORY
- 4 : LONG DISTANCE
- 5 : 900# ' S

4 : RESET
5 : CLEAR
- 1 : CLR PHONEBOOK
- 2 : CLR SCHEDULE
- 3 : CLR CALL LOGS
- 4 : CLR HOME CALLS
- 5 : CLR ROAM CALLS

KING A CALL

Enter the phone number.

To modify the phone number you have entered:

- To erase the last number entered: Press [ ].

Press [ ].

- "CALL FAILED" message is displayed when the call does not connect.
- If the line is busy, press [ ]. Retry by pressing [ ].
- If you select the AUTO RETRY function, the call will be retried automatically for the time you have selected.

- Press [ ] to end the call and hold for more than half a second.

BASIC FUNCTIONS

PAUSE FEATURE

Pauses are used for automated systems (i.e., voice mail and calling cards). To insert Pauses:

1 Enter phone number, then press [ ].

2 Select desired pause.

- When Idling status;
  - 1 : STORE
  - 2 : BY NUMBER
  - 3 : HARD PAUSE
  - 4 : ONE HYPHEN
- When Receiving Call status;
  - 1 : SEND PHONE#
  - 2 : SCRATCH PAD
  - 3 : MUTE
  - 4 : VIEW PHONE#
  - 5 : VOICE PRIVACY

Pause Definitions

- HARD PAUSE: If you enter the pause character (P). the number entered after the pause character will be sent by pressing [ ] key.

3

- Press [ ] to dial or [1] to store.

W TO ANSWER CALLS

When the phone rings or LED blinks, press any key except Volume up or down, or [ ]

To end the call, press [ ].

If you set up the AUTO ANSWER function in advance, the call will be answered after the selected number of rings. (refer to page 30)

LLER ID FUNCTION

en there is an incoming call, the er's phone number is displayed the screen.

The Caller ID number is saved in the call log.

LL WAITING FUNCTION

s function notifies you of an incoming call when you are on another call.

To answer the call, press [ ] when you hear the beep.

To switch back to the first caller, press [ ] again.

BASIC FUNCTIONS

MISSED CALL DISPLAY

1 Displays the number of missed calls and the time the call was missed.

- The message will be cleared when you press the [ ] or [ ] key.

HOW TO ADJUST VOLUME

You can adjust the volume in two ways: by using the volume control keys on the side of the handset or by using the menu.

1 Adjust volume by using the volume control keys during the following operation.

- During a Call : Earpiece volume adjustment.
- Standby Status : Ringer volume adjustment.
- When the Phone Rings : Ringer volume adjustment.
- Call status in hands-free : Hands-free volume adjustment. Press [ ] when the phone rings and it will mute the ringer.

VIBRATE

This function disables the ringer and vibrates the phone to alert you of an incoming call. To enable this function, press [ ], [3],[1] and select VIBRATOR or press [ ] then the "up"and"down" keys at the left side of the phone.

FUNCTIONS DURING A CALL

DING YOUR NUMBER TO A PAGER

function enables the phone number of the handset to be smitted automatically to a pager, depending on pager ser-

- During a call to a pager, when you are asked to enter your number, press [ ], then [1] "SEND PHONE #".
- During a call to a pager, when you are asked to enter your number in editing mode, press [ ], then [2] "SEND PHONE #".

ATCH PAD

While on a call press [ ], then [2] "SCRATCH PAD".

Enter the phone number, then press [ ].

E

Press [ ], then [3] "MUTE".

To unmute, press [ ],then[3] "Mute" again.

CHAPTER 3

MEMORY FUNCTION

1. How to Store a Phone Number
2. How to Make a Call Using a Stored Phone Number
3. How to Find Your Call Logs
4. How to Find Your Phone Book

HOW TO STORE A PHONE NUMBER

an store up to 100 frequently used phone numbers in memory.

Enter the phone number (more than 3 digits) you want to store and press [ ], then[1] "Store"

- The first available initial empty memory location number is displayed. Press [ ] to store.
- If there is a desired memory location number, enter the number.

If the "XX LOCATION IS SAME NUMBER" message appears after entering the memory location number, it means there is another stored phone number in that location already.

Enter the person's name and press [ ].

Select mobile/office/home type, then press [ ].

To make secret, select Yes. If Yes is selected, the stored entry can only be displayed with the lock code.

HOW TO STORE A PHONE NUMBER

HOW TO ENTER LETTERS AND CHARACTERS USING THE KEYPAD

1. Select characters you wish to enter using the keypad.

Key Pad	1 Repetition	2 Repetitions	3 Repetitions	4 Repetitions	5 Repetitions
1	1				
2ABC	A	B	C	2	
3DEF	D	E	F	3	
4GHI	G	H	I	4	
:	:	:	:	:	:
9WXYZ	W	X	Y	Z	9

1. You can change the character mode by pressing [ ].

2. When entering any special characters such as !?@_+-=()*#:;%/, press the numeric key associated with it in special mode where special characters are displayed on the top of the screen.

3. Press the navigation key up or down to display different special characters.

4. Press [#] to make a blank space.
   The cursor moves to the next column automatically in two seconds.

3. Repeat until all the characters you want are entered.
   You can store up to 16 characters.

4. Erasing Entry.

   To erase one letter, press [ ].

   To erase the entire entry, press and hold [ ].

HOW TO MAKE A CALL USING A STORED PHONE NUMBER

E-TOUCH/TWO-TOUCH DIALING

feature allows the phone book entries to be dialed via the key-

-TOUCH DIALING:

Press the corresponding memory number and hold for more 1 second.

-TOUCH DIALING:

0-99 : press the first digit and second digits of the memory num-hort and long respectively.

If no phone number is stored in the location keyed "Empty Location" will appear on the screen.

If a phone number is stored in the secret location, the number is not displayed when making a call.

Note

One-touch dialing must be turned on in the handset.
See page 31.

HOW TO FIND YOUR CALL LOGS

Your phone can display the 10 most recent missed, incoming and outgoing calls. You can call those numbers without dialing their whole number.

MISSED CALLS

1 Press [ ], then [1], then [1], then [1].

2 Press [ ] to check the detail information about the phone number.

- The last missed call, its phone number, time and date are displayed.

3 To check your missed calls, use the navigation key: press it up or down to scroll through the phone numbers.

4 Press [ ] to dial desired missed call number.

HOW TO FIND YOUR CALL LOGS

SWERED CALLS

Press [ ], then [1], then [1], then [2].
(Refer to previous page for instructions on how to view call information.)
Press [ ] to dial the desired answered call number.

- The last answered call, its phone number, time and date are displayed.

LED CALLS

Press [ ] then [1] then [1] then [3].
(Refer to previous page for instructions on how to view call information.)
Press [ ] to dial desired dialed call number.

- The last outgoing call, its phone number, time and date are displayed.

HOW TO FIND YOUR PHONE BOOK

RECALLING BY MEMORY LOCATION NUMBER

1 Press [ ], then [1], then [2].

2 Enter the memory location number.

- If you don't enter a specific memory location number, use the navigation key to search from the first memory location number.

3 Search phone numbers using navigation key.

- [ ] scrolls through the menu
- [ ] Edits the phone#.
- [ ] returns to the previous menu.
- [ ] erases the contents.

4 Press [ ] to dial the desired phone book number.

HOW TO FIND YOUR PHONE BOOK

CALLING BY NAME (ALPHA)

Press [ ], then [1], then [3].

Enter the alpha (or part of the alpha), then press [ ].

To locate the phone number using the scroll key.

- [ ] scrolls through the menu
- [ ] edits the phone#.
- [ ] returns to the previous menu.
- [ ] erases the contents.

Press [ ] to dial.

CHAPTER 4

MENU

Please read this chapter before using this product.

1. Settings
2. BackLight
3. Display
4. Change Banner
5. Key Guard
6. Tone
7. Call Timers
8. Alerts
9. Data Service
10. System Info
11. Phone Info

TO RETRY

a call is not connected, this function retries the call
atically at a set interval or amount of retries.

RVAL

Press [ ], then [2], then [1], then [1].

Select the parameter (OFF, 3, 5, 7, 10 seconds) by using the navigation key.

AT

Press [ ] then [2] then [1] then [2].

Select the parameter
(1 , 3 , RINGS) by using the navigation key.

TO ANSWER

unction answers an incoming call automatically after a
er of rings that the user sets.

Press [ ], then [2] then [2].

Select the parameter (OFF, 1 , 3 RINGS) by using the navigation keys. Press [ ] to set.

- Auto answer function does not work if you select lamp.

SETTINGS

ONE-TOUCH DIALING

This function allows the phone book entries to be dialed via the keypad.

1 Press [ ], then [2], then [3].

2 Select the parameter(NO, YES) by using the navigation keys.

BACKLIGHT

HTING LENGTH

function allows you to adjust the time the screen is lit so can conveniently use the phone, even in dark places.

Press [ ], then [2], then [4].

Select the parameter (OFF, OFF IN DAY, 10 SECS, 20 SECS, 30 SECS) by using the navigation key. Press[ ].

DISPLAY

LCD CONTRAST

This function adjusts the LCD screen contrast.

1 Press [ ], then [2], then [5].

2 Select the contrast level by using the navigation-key. Press[ ].

LANGUAGE

This function changes the language of the phone.

1 Press [, then [2], then [6].

2 Select the parameter (ENGLISH, FRANÇAIS) by using the navigation key. Press [ ].

CHANGE BANNER

ANGE BANNER

unction changes the banner displayed on the LCD.
can enter a banner up to 16 characters long.

Press [ ], then [2], then [7].

Enter a banner using instructions for alphanumaric keys on page 23

Press [ ].

KEY GUARD

KEY GUARD

This function protects the phone from unintentional key presses.

1 Press [ ], then [2], then [8].

2 Select the parameter (ON, OFF, POWER ON) by using the navigation key.

3 Press [ ].

TONE

NG MODE

Press [ ], then [3], then [1].

Select the parameter (RINGER,SLIDE BELL VIBRATE, SILENT, BELL AFTER VIB) by using the navigation key.

Press [ ].

NG TYPE

Press [ ], then [3], then [2].

Select the parameter (1-13) by using the navigation key.

- Different tones (1-6).
- Different melodies (7-13).

Press [ ].

Y BEEP

Press [ ], then [3], then [3] for keypad volume.

- If the warning alarm sounds because of low battery, the sound will not be heard even if the user presses the button.

Select the volume level by using the scroll keys. Press it up to raise the volume and down to lower it.

Press [ ].

TONE

DTMF TYPE

1 Press [ ], then [3], then [4].

2 Select the parameter (CONTINUOUS, BURST) by using the navigation key.

3 Press [ ].

CALL TIMERS

LAST CALL

1 Press [ ], then [4], then [1].

ALL CALLS

1 Press [ ], then [4], then [2].

HOME CALLS

1 Press [ ], then [4], then [3].

ROAM CALLS

1 Press [ ], then [4], then [4].

ALERTS

I ALERT

unction sounds an alert every minute, letting you know the call time.

Press [ ], then [6], then [1].
This function sounds an alert every minute, letting you know the call lapse time.
Select the parameter (ON, OFF) by using the navigation key. Press [ ].

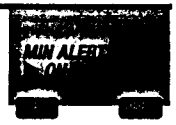

AM ALERT

unction sounds an alert when then handset enters a new ser-rea, when it enters another service area, or when it leaves er's service area.

Press [ ], then [6], then [2].

Select the parameter (ON, OFF) by using the navigation key. Press [ ].

FADE ALERT

unction sounds an alert when the phone cannot make due to poor signal strength while in idle mode.

Press [ ], then [6], then [3].

Select the parameter (ON, OFF) by using the navigation key. Press [ ].

ALERTS

LOW SIGNAL ALERT

This function sounds an alert when the signal of a received call is weak during a call.

1 Press [ ], then[6], then [4].

2 Select the parameter (ON, OFF) by using the navigation key. Press [ ].

CONNECT ALERT

This function sounds an alert when the call is connected.

1 Press [ ], then [6], then [5].

2 Select the parameter (OFF, LOW, MID, HIGH) by using the navigation key. Press [ ].

DATA SERVICE

CEIVE MODE

Press [ ], then [7], then [1].

Select the parameter (INACTIVE, DATA, FAX) by using the navigation key. Press [ ].

INACTIVE : When you use telephone
DATA : When you use data
FAX : When you use fax

OW CONTROL

Press [ ], then[7], then [2].

Select the parameter (HARDWARE, SOFTWARE) by using the navigation key. Press [ ].

HARDWARE : Hardware flow control
SOFTWARE : Software flow control
(Recommendation : HARDWARE flow control)

SYSTEM INFO

SYSTEM INFO

1 Press [ ], then [8], then [1].

2 Select the system (AUTOMATIC, TELUS DIGITAL)
by using the navigation key. Press [ ].

VERSION INFO

1 Press [ ], then [8], then [2].

PHONE INFO

ECKING MY NUMBER

function checks the telephone number of the handset
ntly in use.

Press [ ], then [9].

CHAPTER 5

SECURITY FEATURES

1. How to Lock Your Phone
2. How to Change Your Code
3. How to Restrict Your Phone
4. How to Reset Your Phone
5. How to Clear Your Phone Memory
6. Memory Clearing Function

HOW TO LOCK YOUR PHONE

TO LOCK

unction prevents any other person from using the handset with-
rmission. When it is locked, the handset can not be used to dial
any other function.

Press [ ], then [0], then.
enter [PASSWORD], then [1].

- The default password is the last 4 digits of your phone number.

Select the parameter (OFF, POWER ON, ON) by using the navigation key. Press [ ].

- "POWER ON?" locks the handset upon powering on the handset each time.
- "OFF?" unlocks the handset and leaves it unlocked.

Note

Incoming calls, emergency dialing and alarm functions are enabled when the handset is locked.

HOW TO CHANGE YOUR CODE

CHANGE CODE

This function is used to change the 4-digit lock code.

1. Press [ ], then [0], then enter [PASSWORD], then [2] .

- The default password is the last 4 digits of your phone number.

2 Enter the new 4 digit "PASSWORD". Press [ ].

3 Re-enter the new "PASSWORD". Press [ ].

HOW TO RESTRICT YOUR PHONE

STRICTING FUNCTIONS

an restrict 5 different functions.

Press [ ] then [0], then enter [PASSWORD], then [3].

- The default lock code is the last 4 digits of your phone number.

Using the navigation key, select "YES".
Press [ ].

STRICTING INCOMING CALLS

this function is enabled, the phone does not respond to incom-
lls. However, outgoing calls can still be made.

Press [1] "INCOMING".

Select the parameter by using the navigation key.
RESTRICT: Restricts incoming calls.
ALLOW : Allows incoming calls.

Press [ ].

HOW TO RESTRICT YOUR PHONE

RESTRICTING OUTGOING CALLS

When this function is enabled, incoming calls can be answered, but outgoing calls cannot be made. It is still possible to make emergency calls.

1 Press [2] "OUTGOING".

2 Select the parameter by using the navigation key.
RESTRICT: Restricts outgoing calls.
ALLOW: Allows outgoing calls.

3 Press [ ].

RESTRICTING MEMORY CALLS

This function blocks the storage of phone numbers or the use of stored phone numbers.

1 Press [3] "MEMORY".

2 Select the parameter by using the navigation key.
RESTRICT: Restricts phone book.
ALLOW: Allows phone book use.

3 Press [ ].

HOW TO RESTRICT YOUR PHONE

TRICTING LONG DISTANCE CALLS

Press [4] "LONG DISTANCE".

Select the parameter by using the navigation key.
RESTRICT: Restricts long distance calls.
ALLOW: Allows long distance calls.

Press [ ].

STRICTING CALLS TO 900 NUMBERS

Press [5] "900# s".

Select the parameter by using the navigation key.
RESTRICT: Restricts 900 service
ALLOW: Allows 900 service

Press [ ].

Note

The message "THIS PHONE IS RESTRICTED" is displayed on the screen when a restricted call is placed.

HOW TO RESET YOUR PHONE

This function resets each value set in the memory to its default value.

1 Press [ ], then [0], then [PASSWORD], then [4].

2 Select the parameter by using the navigation key. Press [ ].

- If you select "YES","RESET" is displayed, and then the screen will return to idle mode.

OW TO CLEAR YOUR PHONE MEMORY

ARING STORED PHONE NUMBERS

unction clears all stored numbers.

Press [ ], then [0], then enter [PASSWORD], then [5], then [1].

- The default password is the last 4 digits of your phone number.

Select the parameter (NO, YES) by using the navigation key. Press [ ].

EARING SCHEDULES

unction clears the schedules.

Press [ ], then [0], then enter [PASSWORD], then [5], then [2].

- The default lock code is the last 4 digits of your phone number.

Select the parameter (NO, YES) by using the navigation key. Press [ ].

MEMORY CLEARING FUNCTION

CLEARING DIALED NUMBER IN CALL LOGS

This function clears the dialed number in the call logs.

1 Press [ ], then [0], then enter [PASSWORD], then [5], then [3].

- The default lock code is the last 4 digits of your phone number.

2 Select the parameter (NO, YES) by using the navigation key. Press [ ].

CLEARING AIR TIME IN HOME SERVICE AREA

This function clears air time used in the home service areas.

1 Press [ ], then [0], then enter [PASSWORD], then [5] then [4].

- The default lock code is the last 4 digits of your phone number.

2 Select the parameter (NO, YES) by using the navigation key. Press [ ].

CLEARING ROAM CALLS

This function clears air time used in other service areas.

1 Press [ ], then [0], then enter [PASSWORD], then [5] then [5].

- The default password is the last 4 digits of your phone number.

2 Select the parameter (NO, YES) by using the navigation key. Press [ ].

CHAPTER 6

SUPPLEMENTARY FUNCTIONS

❶ Schedule
❷ Stopwatch
❸ Calculator
❹ Bio-Rhythm

SCHEDULE

W SCHEDULE LIST

Press [ ], then [5], then [1], then [1].
By pressing [ ], you can view more details about each item.

UT SCHEDULE

Press [ ], then [5], then [1], then [2].

Select the date in calendar and press the [ ]
[▲] / [▼] - month input.

[ ] / [ ], numeric key - day input.

Press[1] then select the alarm type parameter (One Time or Daily).
To set the schedule title, press [2] and input the schedule title.
To set reserved call, press [3] and input the phone number.
Then press[ ].

USE ALL SCHEDULE

Press [ ], then [5], then [1], then [3].

Select the parameter(NO, YES) by using the navigation key, then press[ ].

STOPWATCH

1 Press [ ], then [5], then [2].

2 Press [ ] /[ ] to control the stopwatch.
[ ] control Start / Stop.
[ ] Split / Split Release / Initiate / Previous.
The time unit displayed on the LCD in 1/100 of a second.

3 Press [ ] to exit and return to the initial display.

CALCULATOR

1 Press [ ], then [5], then [3].

2 Using the calculator.

- Definitions
  + : [▲], - : [◀], × : [▼], ÷ : [▶]

- Up to 8 integer digits can be displayed.
To express a negative number, use '0-value'.
There are no decimal points to enter. You can only enter integer numbers.

- EXAMPLE
To calculate 128 × 32 =
1. Enter 128
2. Press[▼]
3. Enter 32
4. Press [ ]

BIO-RHYTHM

nction identifies the bio-rhythms of today or a specific day using alendar.

Press [ ], then [5], then [4].

Press [3] "BIRTHDAY?".

- Enter your solar calendar birthday in year/month/date, and then press [ ].

To find out today bio-rhythm, select TODAY
To find out bio-rhythm of a specific day, select SOMEDAY.

- Bio-rhythm function is available only when the phone can register the current time from the network system.
- For Some Day Bio, you cannot enter dates before your birthday.
- For Birthday, you cannot enter the dates later than today's date.

sical, Emotional and Intelligent quotients appear with a number showing many days have passed since your birthdate for the date you want to out. Bio-rhythm is displayed on the top portion of the screen.
t is Bio-rhythm?
rhythm is a life rhythm which is governed by three rhythm curves called sical, emotional, and intelligent and starts from our body from our birth to h.
sical rhythm.
rhythm controls wide-ranging physical elements related to resistance to ases, physical strength, adjustment of muscle exercise, speed, physiolo- nd other basic physical functions with a cycle of 23 days.
tional rhythm.
rhythm adjusts creativity, sensitivity, mental health and recognition t world and humans with a cycle of 28 days.
ligent rhythm.
rhythm affects our memory, susceptibility to fright, acceptance of knowl- e and logical and analytic power with a cycle of 33 days.

CHAPTER 7

VOICE MAIL AND TEXT MESSAGES

This chapter describes convenient functions that allow you to send and receive short messages, such as text and voice, through the handset.

1. Receiving a Message
2. Voice Mail
3. Send New(Sending Message)
4. Inbox(Checking Received Message)
5. Outbox(Checking Sent Message)
6. Settings
7. Filed
8. Erase Messages
9. Reference

*Text Messaging through the handset may not be available.
Please check with telusmobility.com for availability of this service.

RECEIVING A MESSAGE

When a message is received, the following message is displayed.

Press [READ] to display the received message.

VOICE MAIL

CKING RECEIVED VOICE MAIL MESSAGE

Press [ ], then press [1] "Voice Mail".
The number of voice mail messages currently received in your voice mailbox is displayed.
To access your voice mailbox, press [ ].



SEND NEW

SENDING TEXT MESSAGE

This service may not be available. Please contact telusmobility.com for availability of this service.

1 Press [ ], then press [2] "Send New".

2 Input phone number, then press [STO].

3 Input text message, then press [NEXT].

4 4.1 To send the text message, press [1] "Send".

If message sending fails, you can choose the auto retry sending function.
Then press [YES].

4.2 If you want to change recipient, press [2]"Edit Recipient".

Input the new phone number, then press [STO].

Input the new text message(if necessary), then press [NEXT].

Then press [1] "SEND".

SEND NEW

4.3 To change the text message, press [3]"Edit Message".

Input text message, then press [NEXT].

4.4 To send urgent message, press [4] "Priority".
Then select the parameter (Normal/ Urgent) by using the navigation key. Press [SEL].

4.5 To change call back number, press [5],"Call back".

Input call back number, then press [NEXT].

4.6 To save the text message, press [6] "Save".



4.7 To confirm the sending message, press [7] "Delivery Ack".
Then select the parameter (YES/NO) by using the navigation key. Press [SEL].



INBOX

CHECKING RECEIVED TEXT MESSAGE

1 Press [ ], then press [3] "Inbox".

: Urgent New Msg

: New Msg (unread)

: Old Msg (read)

: Lock (read)

2 Select the desired message and press [SEL].
The message is displayed.

Then press [OPTS].

3 3.1 To reply to the text message, press [1] "Reply", then press [SEND]. Write your reply message, then press [NEXT].

3.2 To erase the text message, press[2], then press [YES].

INBOX

3.3 To forward the text message, press [3], then input the phone number and text message.

3.4 To save the text message, press [4].

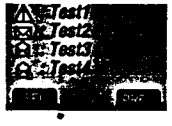

3.5 To save the text message's Call Back NO. into a memory location, press [5].
(phone book storing follows)

3.6 To lock or unlock the text message, press [6].



Then select the parameter(Lock/Unlock) by using the navigation key, then press [SEL].

OUTBOX

CHECKING SENT TEXT MAIL MESSAGE

This service may not be available. Please contact telusmobility.com for availability of this service.

1 Press [ ], then [4] "Outbox".
Select the stored message by using the navigation key, then press [SEL].

: Pending and will be sent later

: Not deliverd

: Sent to BS

: Receives recipient

: Not sent

2 The text message is displayed.

Then press[OPTS].

3 3.1 To resend the text message, press [1].

OUTBOX

3.2 To erase the text message,
press [2], then press [YES].

3.3 To send the text message,
press [3]. Then input the phone number and text message.

3.4 To save the text message,
press [4].

3.5 To display sent message state,
press [5].



SETTINGS

SAVE SENT MESSAGE

1 Press [ ], then [5]
"SETTINGS".

2 Press [1] "Save sent Msg?".
Select the parameter(NO/YES/Prompt)
by using the navigation keys.
Press [SEL].



DEFAULT CALL BACK NUMBER

1 Press [ ], then [5]
"SETTINGS".

2 Press [2] "DEFAULT CB #".
Write Callback number,
then press [NEXT].

MESSAGE ALERT

1 Press [ ], then [5]
"SETTINGS".

2 Then press [3] "MESSAGE ALERT".
Select the parameter
(RINGER/SILENT/VIBRATE)
by using the navigation key.
Press [SEL].

This service may not be available. Please contact telusmobility.com for availability of this service.

SETTINGS

VERY ACK

Press [ ], then [5] "SETTINGS".

Then press [4] "DELIVERY ACK"
Select the parameter (YES/NO)
by using the navigation key.
Press [SEL].

O ERASE

Press [ ], then press [5] "SETTINGS".

Then press [5] "AUTO ERASE".
Select the parameter (DISABLED/OLD
INBOX) by using the navigation key.
Press [SEL].

Setting ➧ *1. inbox* ➧ *Disable/Old Inbox*
2. outbox ➧ *Disable/Old Outbox*

RY MODE

Press [ ], then [5] "SETTINGS".

Then press [6] "ENTRY MODE"
Select the parameter (T9 MODE/ALPHA
MODE) by using the navigation key.
Press [SEL].

FILED

FILED

1 Press [ ], then [6] "FILED".
Select the stored message by using
navigation key, then press [SEL].

2 The text message is displayed.
Press [OPTS].

3 3.1 If the text message is saved from
"Inbox" menu, this screen will be displayed.

3.2 If text message is saved from
"Outbox" menu, this screen will be displayed.

ERASE MESSAGES

ASE MESSAGES

Press [ ], then press [7] "Erase Msgs".

2.1 To erase inbox mail, press [1]. Select the parameters (NO, OLD INBOX, ENTIRE INBOX).

2.2 To erase outbox message, press [2].

2.3 To erase filed message, press [3].

REFERENCE(WRITING MESSAGE)

This service may not be available. Please contact telusmobility.com for availability of this service.

You can enter letters and numbers into your phone for a person's name and phone number, writing a text message, and so on. There are two ways to do this:

1. Using standard text input
2. Using T9 mode text input

USING STANDARD TEXT INPUT

1 Select the Abc mode by pressing [ ].

- When you select this mode, the ABC icon appears as visual confirmation.

  - "Find the key that corresponds to the letter you want to enter."
  - Press it as many times as needed for the letter to appear on the screen.

  - For example, to enter the name John:

Press [5]	J
Press [6] [6] [6]	o
Press [4] [4]	h
Press [6] [6]	n

ING T9 MODE TEXT INPUT

EY	FUNCTION
ode	Press to change mode. [T9Abc][Abc][123][Special characters mode]
[0] ext	Press to view the next matching word if the underlined word is not the word you intended.
[#] pace	Press once to accept a word and add a space.
[*] hift	Press to select standard text input or T9* mode text input. [Abc], [ABC], and [abc] indicate standard text input. [T9Abc], [T9ABC], and [T9abc] indicate predictive text input.
lear	Press once to delete the character to the left of the cursor.
eft, ight	To move cursor.

REFERENCE(WRITING MESSAGE)

USING T9 MODE TEXT INPUT

1 T9 mode is the default mode.

2 Select the T9Abc mode, by using the [ ] keys.

- This method allows you to write using a built-in dictionary.
- With predictive text input, you only need to press each number key once for each letter.

-For example, to write **John** with the English dictionary selected:

-[5] (for J)

-[6] (for o)

-[4] (for h)

-[6] (for n)

<The display shows the above words for each key pressed.>

RITE WITH T9 MODE TEXT INPUT

the T9 Abc mode, by using the [ ] keys.

Press each key once for each letter.

-For example, to write "John" press.
[5] [6] [4] [6]

Press [0] to view the next matching word if the underlined word is not the word you intended.

If the word is correct, then press [#]

If the word is not correct, then press [0]

press [0] until you reach the correct word, the word is correct, then press [#]

Insert number

- To add a number to the message.
  - Press [ ] key until 123 appears.
  - Select the numbers you want.
- Or press numeric key and hold for more than 1 second.

REFERENCE(WRITING MESSAGE)

4 Insert Symbols

- Press [ ] key until symbol screen appears.
  - Use numeric keys to select the character you want.

Press [▲ ▼],

Press [▲ ▼],

Press [▲ ▼],

then press numeric key to select the character you want.

5 Write compound words

- Write the first part of the word and press [▲] key to accept it.
- Write the last part of the compound word and press [#] key to enter the word in memory.

- For example, to write "Whitehouse"

[9] [4] [4] [8][3] [▲]

[4] [6] [8] [7] [3]

Then press [#] key.

CHAPTER 8

MAKING AN EMERGENCY CALL

❶ Making an Emergency call

MAKING AN EMERGENCY CALL

the enhanced 911 feature.

11 IN LOCK MODE

Enter 911 and press[ ].

A call connects.

Reserve Emergency Mode during 5 minutes.

- When a call ends, the phone returns to the Emergency Mode.

USING ANY AVAILABLE SYSTEM

Enter 911 and press[ ].

A call connects.

Reserve Emergency Mode during 5 minutes.

- When a call ends, the phone returns to the Emergency Mode.
- The phone tries to make an emergency call using any available system.

CHAPTER 9

INTERNET BROWSER

This chapter describes convenient functions that allow you to access the Wireless Internet from your phone.

1. Start Internet Browser
2. Browser Menu

START INTERNET BROWSER

at homepage content may change from time to time.

CESS WIRELESS INTERNET

To access Wireless Internet network, press [ ] key.
Then internet browser will start.

BROWSER MENU

The browser menu is a list of actions necessary for full operation of the browser.
To enter the browser menu, press [ ] and hold.

RELOAD

Selecting the reload item from the browser menu reloads the current deck.

1 Press [ ] and hold, then press [1].

HOME

When the home item is selected from the browser menu, the phone displays the home deck.

1 Press [ ] and hold, then press [2].

BOOKMARKS

When the bookmarks item is selected from the browser menu, the browser displays the user's bookmarks.

1 Press [ ], then press [3].

ARK SITE

the mark site item is selected from the browser menu, the
er adds the current deck to the user's bookmark list.

Press [ ] and hold, then press [4].

"No bookmarks service site" is displayed, when the site cannot support bookmarks service.

BOUT PHONE.COM

the about phone.com item is selected from the browser menu,
owser is displayed with the browser version and copyright infor-
. The device layer version is also displayed.

Press [ ] and hold, then press [5].

ANCED

ng the advanced item in the browser menu displays the
ced menu items.

Press [ ] and hold, then press [6].

BROWSER MENU

SHOW URL

Selecting the Show URL item displays the URL of the current deck.

1 Press [ ] and hold, then press [6], then press [1].

HOMEPAGE

Selecting the homepage item from the browser menu, enables the user to change the homepage.

1 Press [ ] and hold, then press [6], then press [2].

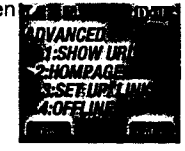

SET UP.LINK

Selecting set UP.link item from the browser menu displays a screen that allows the user to select an alternate UP.Link.

1 Press [ ] and hold, then press [6], then press [3].



FLINE SERVICES

ng the offline services item from the browser menu navigates er to a list of installed channel application. Selecting a particular ation navigates the user to the entry point of the application.

Press [ ] and hold, then press [6], then press [4].

OUTBOX

the outbox item is selected from the browser menu, a status is displayed that shows the user how many items are pending y and the age of the oldest item.

Press [ ] and hold, then press [6], then press [5].

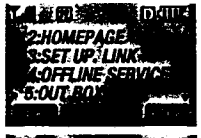

BROWSER MENU

RESTART UP.BROWER

Selecting restart from the browser menu causes the deck history and deck cache to be cleared and a new session with the UP.Link to be started.

1 Press [ ] and hold, then press [6], then press [6].

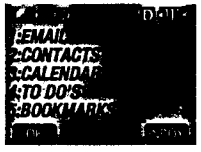

ENCRYPTION

Selecting the encryption item from the browser menu displays a list of security-related items.

1 Press [ ] and hold, then press [6], then press [7].

CHAPTER 10

SAFETY

❶ Safety Information for Wireless Handheld Phones
❷ Safety Information for RF Exposure

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ead This Information Before Using Your Handheld Portable Cellular Telephone

URE TO RADIO FREQUENCY SIGNALS

reless handheld portable telephone is a low power radio trans-
nd receiver. When it is ON, it receives and also sends out radio
cy (RF) signals.

ust 1996, the Federal Communications Commissions (FCC)
l RF exposure guidelines with safety levels for handheld wire-
ones. Those guidelines are consistent with the safety standards
sly set by both U.S. and international standards bodies:

ISI C95.1 (1992) *
CRP Report 86 (1986) *
NIRP (1996) *

standards were based on comprehensive and periodic evalua-
the relevant scientific literature. For example, over 120 scien-
ngineers, and physicians from universities, government health
es, and industry reviewed the available body of research to
the ANSI Standard (C951).

sign of your phone complies with the FCC guidelines (and those
ds).

an National Standards Institute;
al Council on Radiation Protection and Measurements;
tional Commission on Nonionizing Radiation Protection.

INA CARE

nly the supplied or an approved replacement antenna.
orized antennas, modifications, or attachments could damage
one and may violate FCC regulations.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

WARNING: Failure to follow these instructions may lead to serious personal injury and possible property damage.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

CTRONIC DEVICES

modern electronic equipment is shielded from RF energy. er, certain electronic equipment may not be shielded against the nals from your wireless phone.

akers

ealth Industry Manufacturers Association recommends that a m separation of six (6") inches be maintained between a hand- reless phone and a pacemaker to avoid potential interference e pacemaker. These recommendations are consistent with the ndent research by and recommendations of Wireless logy Research.

ave a pacemaker:

LWAYS keep the phone more than six inches from your pace- aker when the phone is turned on.

o not carry the phone in a breast pocket.

se the ear opposite the pacemaker to minimize the potential for terference.

you have any reason to suspect that interference is taking place, m your phone OFF immediately.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Posted Facilities

Turn your phone OFF where posted notices so require.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

ER SAFETY GUIDELINES

t

nd Transport Canada Regulations prohibit using your phone the air. Switch OFF your phone before boarding an aircraft.

g Areas

id interfering with blasting operations, turn your phone OFF a "blasting area" or in areas posted: "Turn off two-way radio." ll signs and instructions.

ally Explosive Atmospheres

ur phone OFF when in any area with a potentially explosive here and obey all signs and instructions. Sparks in such areas ause an explosion or fire resulting in bodily injury or even death.

with a potentially explosive atmosphere are often, but not clearly marked. They include fueling areas such as gas sta- elow deck on boats; fuel or chemical transfer or storage facili- hicles using liquefied petroleum gas (such as propane or ; areas where the air contains chemicals or articles, such as ust, or metal powders; and any other area where you would nor- e advised to turn off your vehicle's engine.

SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

PRECAUTIONS

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals with metal items etc.

SAFETY INFORMATION FOR RF EXPOSURE

Exposure information, please visit the Canadian Wireless
munication Association website at www.cwta.ca.

CHAPTER 11

WARRANTY

❶ Protect Your Warranty

❷ 12 Month Limited Warranty

PROTECT YOUR WARRANTY

d your Warranty carefully, with the special consideration aragraph seven of the Limited Warranty for your unit.

/arranty does not apply to... or to any product or part ereof which has suffered through alteration... mishandling suse, neglect or accident".

ny companies are making look alike accessories and in e cases, promoting that their product is equal to or bet- than the Audiovox product. Be careful. Some of these lucts may not be compatible to use with your Audiovox luct and may damage the unit or cause it to malfunction. rvice is required on your unit and it is determined that a -Audiovox accessory has created the problem with your , the Warranty will not apply. In addition, if the unit has ady suffered irreversible damage by reason of a non- patible accessory, the Warranty will be voided. To pro- your Warranty, use only compatible accessories which not damage or interfere with the functioning of your iovox product.

AUDIOVOX COMMUNICATIONS CORP.

AUDIOVOX COMMUNICATIONS CORP.
55 Wireless Blvd., Hauppauge, New York 11788, 800-229-1235
808 Marquardt Avenue, Cerritos, California 90703, 562-802-5100
Audiovox Canada
5515 Spectrum Way, Unit #5, Mississauga, Ontario
Canada L4W 5A1, 800-465-9672

12 MONTH LIMITED WARRANTY

AUDIOVOX COMMUNICATIONS CORP.(the Company) warrants to the original retail purchaser of this Audiovox Handheld Portable Cellular Telephone, that should this product or any part thereof(except the items listed below), under normal use and conditions, be proven defective in material or workmanship within the first twelve (12)month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts)at the Company's option, without charge for parts or labor directly related to the defect(s).

The keypad and display are similarly warranted for ninety (90) days from date of purchase.

The accessories consisting of the antenna and rechargeable battery pack, desktop charger are similarly warranted for twelve (12) months from original purchase.

This Warranty does not apply to batteries, fuses, or costs incurred for testing or checking, or to any product or part hereof which has suffered through alteration, serial number defacement, improper installation, excessive temperature or humidity, environmental conditions, mishandling misuse, neglect or accident. This Warranty is not assignable or transferable.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of warranty coverage, specification of defect(s), transportation prepaid, to the Company at the address shown below. For TRAVELERS WARRANTY SERVICE.

12 MONTH LIMITED WARRANTY

oll free to (800) 465-9672 for reference to an Authorized anty Station in your area.

EXTENT OF THE COMPANY'S LIABILITY UNDER THIS RANTY IS LIMITED TO THE REPAIR OR REPLACE-T PROVIDED ABOVE AND, IN NO EVENT, SHALL THE PANY'S LIABILITY EXCEED THE PURCHASE PRICE BY PURCHASER FOR THE PRODUCT.

Company disclaims liablity for geographic coverage, inad-es signal to antenna, communications range or operation Cellular System as a whole.

IMPLIED WARRANTIES, INCLUDING ANY IMPLIED RANTY OF MERCHANTABILITY SHALL BE LIMITED TO DURATION OF THIS WRITTEN WARRANTY. ANY ON FOR BREACH OF ANY WARRANTY HEREUNDER UDING ANY IMPLIED WARRANTY OF MER-NTABILITY MUST BE BROUGHT WITHIN A PERIOD OF ONTHS FROM DATE OF ORIGINAL PURCHASE IN NO E SHALL THE COMPANY BE LIABLE FOR ANY CONSE-NTIAL OR INCIDENTAL DAMAGES FOR BREACH OF OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, TSOEVER.

12 MONTH LIMITED WARRANTY

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consaquential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IN U.S.A.: Audiovox Communications Corp.
555 Wireless Blvd.
Hauppauge, NY 11788
(800)229-1235

IN CANADA: Audiovox Canada Ltd.
5515 Spectrum Way, Unit #5
Mississauga, Ontario L4W 5A1
(800)465-9672