Inspiron 11-3148 2-in-1

Quick Start Guide

Translated Text Here
Translated Text Here
Translated Text Here
Translated Text Here

1 Connect the power adapter and press the power button

Connect the power adapter and press the power button
Connect the power adapter and press the power button
Connect the power adapter and press the power button
Connect the power adapter and press the power button

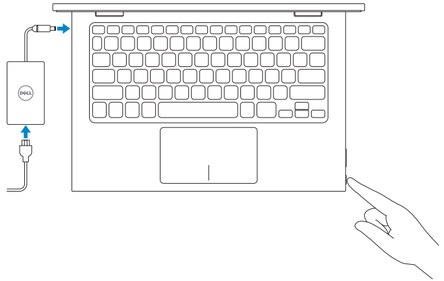

2 Finish Windows setup

Finish Windows setup | Finish Windows setup
Finish Windows setup | Finish Windows setup

Enable security and updates
Enable security and updates
Enable security and updates
Enable security and updates
Enable security and updates

Connect to your network
Connect to your network
Connect to your network
Connect to your network
Connect to your network

Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account
Sign in to your Microsoft account or create a local account

3 Explore resources

Explore resources | Explore resources
Explore resources | Explore resources

Help and Tips
Help and Tips | Help and Tips
Help and Tips | Help and Tips

My Dell
My Dell | My Dell
My Dell | My Dell

Register your computer
Register your computer | Register your computer
Register your computer | Register your computer

Shortcut keys

Shortcut keys | Shortcut keys
Shortcut keys | Shortcut keys

F1 — Mute audio
Mute audio | Mute audio
Mute audio | Mute audio

F2 — Decrease volume
Decrease volume | Decrease volume
Decrease volume | Decrease volume

F3 — Increase volume
Increase volume | Increase volume
Increase volume | Increase volume

F4 — Play/Pause
Play/Pause | Play/Pause
Play/Pause | Play/Pause

F5 — Open Search charm
Open Search charm | Open Search charm
Open Search charm | Open Search charm

F6 — Open Share charm
Open Share charm | Open Share charm
Open Share charm | Open Share charm

F7 — Open Devices charm
Open Devices charm | Open Devices charm
Open Devices charm | Open Devices charm

F8 — Open Settings charm
Open Settings charm | Open Settings charm
Open Settings charm | Open Settings charm

F9 — List recently-used apps
List recently-used apps | List recently-used apps
List recently-used apps | List recently-used apps

F10 — Display active app menu-bar
Display active app menu-bar | Display active app menu-bar
Display active app menu-bar | Display active app menu-bar

F11 — Decrease brightness
Decrease brightness | Decrease brightness
Decrease brightness | Decrease brightness

F12 — Increase brightness
Increase brightness | Increase brightness
Increase brightness | Increase brightness

Fn + PrntScr — Turn off/on wireless
Turn off/on wireless | Turn off/on wireless
Turn off/on wireless | Turn off/on wireless

NOTE: For more information, see *Specifications* at **dell.com/support**.
NOTE: For more information, see *Specifications* at **dell.com/support**.
NOTE: For more information, see *Specifications* at **dell.com/support**.
NOTE: For more information, see *Specifications* at **dell.com/support**.
NOTE: For more information, see *Specifications* at **dell.com/support**.

Product support and manuals
Product support and manuals
Product support and manuals
Product support and manuals
Product support and manuals

dell.com/support
dell.com/support/manuals
dell.com/windows8

Contact Dell
Contact Dell | Contact Dell
Contact Dell | Contact Dell

dell.com/contactdell

Regulatory and safety
Regulatory and safety | Regulatory and safety
Regulatory and safety | Regulatory and safety

dell.com/regulatory_compliance

Regulatory model
Regulatory model | Regulatory model
Regulatory model | Regulatory model

P20T

Regulatory type
Regulatory type | Regulatory type
Regulatory type | Regulatory type

P20T002

Computer model
Computer model | Computer model
Computer model | Computer model

Inspiron 11-3148

Información para NOM, o Norma Oficial Mexicana
La información que se proporciona a continuación se mostrará en los dispositivos que se describen en este documento, en conformidad con los requisitos de la Norma Oficial Mexicana (NOM):
Importador:
Dell Mexico S.A. de C.V.
AV PASEO DE LA REFORMA NO 2620 PISO 11
COL. LOMAS ALTAS
MEXICO DF CP 11950

Modelo	P20T
Voltaje de alimentación	100 VAC–240 VAC
Frecuencia	50 Hz–60 Hz
Consumo de corriente de entrada	1.60 A
Voltaje de salida	19.50 VDC
Consumo de corriente de salida	3.34 A
País de origen	Hecho en China

Features

Features | Features | Features | Features

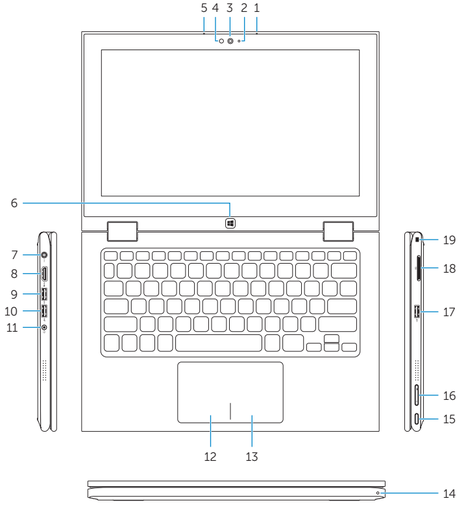

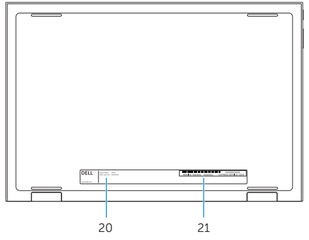

1. Right microphone
2. Camera-status light
3. Camera
4. Ambient-light sensor
5. Left microphone
6. Windows button
7. Power-adapter port
8. HDMI port
9. USB 3.0 port
10. USB 2.0 port
11. Headset port
12. Left-click area
13. Right-click area
14. Power and battery-status light
15. Power button
16. Volume-control buttons (2)
17. USB 2.0 port
18. Media-card reader
19. Security-cable slot
20. Regulatory label
21. Service Tag label

1. Right microphone
2. Camera-status light
3. Camera
4. Ambient-light sensor
5. Left microphone
6. Windows button
7. Power-adapter port
8. HDMI port
9. USB 3.0 port
10. USB 2.0 port
11. Headset port
12. Left-click area
13. Right-click area
14. Power and battery-status light
15. Power button
16. Volume-control buttons (2)
17. USB 2.0 port
18. Media-card reader
19. Security-cable slot
20. Regulatory label
21. Service Tag label

1. Right microphone
2. Camera-status light
3. Camera
4. Ambient-light sensor
5. Left microphone
6. Windows button
7. Power-adapter port
8. HDMI port
9. USB 3.0 port
10. USB 2.0 port
11. Headset port
12. Left-click area
13. Right-click area
14. Power and battery-status light
15. Power button
16. Volume-control buttons (2)
17. USB 2.0 port
18. Media-card reader
19. Security-cable slot
20. Regulatory label
21. Service Tag label

1. Right microphone
2. Camera-status light
3. Camera
4. Ambient-light sensor
5. Left microphone
6. Windows button
7. Power-adapter port
8. HDMI port
9. USB 3.0 port
10. USB 2.0 port
11. Headset port
12. Left-click area
13. Right-click area
14. Power and battery-status light
15. Power button
16. Volume-control buttons (2)
17. USB 2.0 port
18. Media-card reader
19. Security-cable slot
20. Regulatory label
21. Service Tag label

1. Right microphone
2. Camera-status light
3. Camera
4. Ambient-light sensor
5. Left microphone
6. Windows button
7. Power-adapter port
8. HDMI port
9. USB 3.0 port
10. USB 2.0 port
11. Headset port
12. Left-click area
13. Right-click area
14. Power and battery-status light
15. Power button
16. Volume-control buttons (2)
17. USB 2.0 port
18. Media-card reader
19. Security-cable slot
20. Regulatory label
21. Service Tag label

Modes

Modes | Modes | Modes | Modes

Notebook
Notebook | Notebook
Notebook | Notebook

Tablet
Tablet | Tablet
Tablet | Tablet



Tablet Stand
Tablet Stand | Tablet Stand
Tablet Stand | Tablet Stand

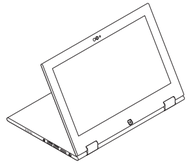
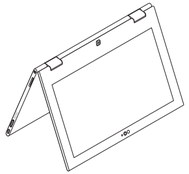
Tent
Tent | Tent
Tent | Tent