size:100X140mm

SYLVANIA

ENCEINTE portable SANS FIL
MODE D'EMPLOI

Model: SP190

*La photo n'estfournieq'àtitreindicatif. Veuillezvousséférer à l'unité actuelle!
SYLVANIA est une marque déposée d'OSRAM Sylvania Inc. utilisée sous licence.

COMMENCER
Pour bienutiliser les fonctionsetconnaître la connexion et l'utilisation du système, **l**isezattentivementcemanuel**l**'utilisationavantd'utiliser le produit, Conservezcemanuel**l**dans un endroitsûr pour unerééférenceultérieure

INTRODUCTION
Ce Bluetooth® Orateurvouspermettrad'écoutervotremusique sans fil à partir de votretéléphone portable, tablettеouautreappareil compatible Bluetooth®,Iloffre un son puissant et clair. Le microphone intégrévouspermet de répondre aux appels du téléphone portable.

CONSIGNES DE SÉCURITÉ
Ce produit avec la tension max 5,25V et le courant électrique 2A pour le chargement, et il sera endommagés la charge esteffectuée au-delà de cette tension et courant maximum N'insérezaucun objet métaliquedans l'appareil.
Pour éviterune charge statique, n'utilisez pas l'appareildansunclimatextrêmement sec.
N'essayez pas d'ouvrirou de réparer l'appareilvous-même.Evitez les groschocs du produitet ne le déposez pas.
Les piles (batterieou piles installées) ne doivent pas étreexposées à unechaleur excessive, comme le soleil, le feu oud'autre.
Ne pas exposer ce produit à la lumière directe du soleil. Sinon, le produit peut être endommagé.

INTRODUCTION DU PANNEAU DE PRODUITS ET DES FONCTIONS

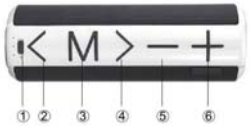

1. Bouton On/Off 2. PREV
3. Bouton de multifunction: Play/Arrêt/Mode(Bouton entre Bluetooth et Carte TF)
4. ENSUIT5. Vol- 6. Vol+
7. Port de recharge de Micro USB
8. Micro SD carte
9. Entrée d'AUX

Contenu de la boîte
Orateur
Câble de recharge de Micro USB
Câble d'entrée d'AUX
Mode d'emploi

RECHARGER LE BLUETOOTH® ORATEUR
Connectez le port de micro USB du câble de chargement d'USB au port d'USBsitué sur le côté du haut-parleur.Connectez l'autreextrémité du câble USB au port USB de votreordinateurou à unchargeur mural USB (non inclus)
L'indicateur LED devient ROUGE, indiquant que la batterieestencours de chargement.
L'indicateur LED s'éteintlorsque le haut-parleurestcomplètement chargé. (Environ 3 heures).

ENTRETIEN DE L'ORATEUR AVEC UN DISPOSITIF HABILETÉ BLUETOOTH®
Gardezvotre haut-parleur Bluetooth® etvotrepériphérique compatible Bluetooth® à moins de 1 mètre pendant le processusd'appariement.
Allumezvotre haut-parleur Bluetooth®,Les voyants LED bleus et rouges clignotent alternativement, et auront une tonalité Ding-dong. Cela signifie en mode couplage
Le voyant LED à l'avant du haut-parleurclignote, Votre haut-parleurestmaintenanten mode couplage.
Configurezvotrepériphérique compatible Bluetooth® pour rechercher des périphériques Bluetooth®.
Lorsque le périphériquetrouve le **SYLVANIA SP190**, sélectionnez-le,Sélectionnez "Paire" pour connecter le haut-parleur Bluetooth® à votreappareil compatible Bluetooth.Il aura une double tonalitéDoduolors de la connexion avec succès
Selon le périphérique sur lequelvousessayez de connecter le haut-parleur, ilpeutêtrenécessaired'entrer un code d'accès, Entrez le mot de passe "0000" si le périphérique le demande.
Votreappareil compatible Bluetooth® confirmera que l'association a étécompléteetvous invite à accepter la connexion, Répondez OUI pour connecter le haut-parleur Bluetooth® à votreappareil compatible Bluetooth®.

Remarque: Unefois que le haut-parleurestapparié et connecté à votreappareil Bluetooth®, il se connecteautomatiquement la prochainefoistant que Bluetooth® sur votreappareilestallumé.
Lors de la lecture de musique par Bluetooth, la LED bleueclignotelentement

UTILISER VOTRE BLUETOOTH® ORATEURJOUER DE LA MUSIQUE
Pour profiter de la musique sans fil sur votre Bluetooth® orateur, assurez-vous d'être connecté à unpériphérique compatible Bluetooth®. Unefoisconnecté, vouspouvezappuyer sur PLAY sur votreappareil Bluetooth® ouvouspouvezappuyer sur la touche M de l'orateur YM-C06. Unefois la musiquejouée, vouspouvez la contrôler à partir des boutons de commande de l'orateur.

Contrôle du volume
Appuyez sur le bouton "+" ou "-" pour régler le volume au niveaudésiré.
Remarque: Vouspouvezégalementrégler le volume du contrôle de volume de votrepériphérique Bluetooth®.

Play/Arrêt
Appuyez sur le bouton M pour mettre la musiqueen pause. Pour reprendre la musique, appuyez de nouveau sur ce bouton.

Changer de la musique(Avec des périphériques avec profil AVRCP Bluetooth®)
Appuyez sur le bouton ">" pour accéder à la prochaine chanson.
Appuyez sur le bouton "<" pour accéder à la chanson précédente.

FONCTIONS DU BOUTON TÉLÉPHONIQUE
Remarque: Vouspouvezrépondreetfinir l'appelénécoutant de la musique, La musiquearrêtequandunappelestrépondu et redémarrelorsque l'appelesterminé

Répondre / Terminerunappel:
Pour répondre à unappel: Appuyezbrièvement sur le bouton M.
Pour terminerunappel: Appuyez à nouveau sur la touche M.
Pour refuser unappel: Maintenez la touche M enfoncée pendant environ 2 secondes.
Pour appeler: Composez le numéroetappuyez sur le bouton ENVOYER sur votretéléphone portable, l'appelestautomatiquementtransféréversl'orateur.

Pour recomposer le dernier numéroappelé: Appuyez sur le bouton M deuxfoisrapidement.

Comment jouer à la carte Micro SD
Insérez la carte Micro SD au produit, **el**eentreraen mode carte SD etjouera la musiqueautomatiquement. La LED bleueclignotelentement.
Appuyez sur le bouton ">" et "<" pour la prochaine chanson ou la chanson précédente.
Appuyez sur le bouton "+" ou "-" pour régler le volume au niveaudésiré.
Tenez le bouton "M" peut changer en mode Bluetooth ouen mode AUX
lorsquevousinstallez un câble de 3,5 mm.

Comment jouer au mode AUX
Insérez le câble de 3,5 mm sur le produit. Ilentreraen mode AUX et le voyant rouge clignoterafentement. Vouspouvezprofiter de la musique à partir du téléphone portable oumultimédia.
Appuyez sur le bouton "+" ou "-" pour régler le volume au niveaudésiré.
Maintenir le bouton "M" peut passer en mode Bluetooth ouen mode Carte Micro SD
lorsque le Micro SD estinséré.

Le dernier numéroappelé sera redessiné.
SPÉCIFICATIONS TECHNIQUES
Bluetooth® version: 4.1
Distance du travail:Jusqu'à 10 mètresenespaceouvert
Profils de soutien: AVRCP, A2DP, Profil de mains libres (HFP)
Et Profil de casque (HSP)
Gamme de fréquences: 2,4-2,48Ghz
Puissance de sortie:2x3Watts
Distortion: ≤ 1.0%
Fréquence de réponse: 180Hz – 20Khz
Fonction de mains libres pour répondre aux appelsdepuis le mobile
Sensibilité du microphone: -40dB
Temps de lecture: Temps de musique 6 heures, temps de conversation 10 heures
Puissanced'entrée derecharge : DC 5V(micro USB)
Temps de recharger: Presque 3 heures
Dimension d'unité: 196x76x79mm
Poidsd'unité: Presque 332g.

Remarque: La durée de vie de la batterieet le temps de charge peuventvarierenfonction de l'utilisation et des types de périphériquesutilisés.
La conception et les spécifications du produitpeuventêtremodifiées sans préavis!

SYLVANIA

Portable WIRELESS SPEAKER
USER MANUAL

Model: SP190

* The picture is only provided for reference. Please refer to the actual unit!
SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

GETTING STARTED
To make a correct use of the functions and know well about the system connection and usage, please read this user's manual carefully before using the product. Keep this manual in a safe place for future reference.

INTRODUCTION
This Bluetooth® speaker will allow you to listen to your music wirelessly from your mobile phone, tablet or other Bluetooth ® enabled device. It delivers powerful and clear sound. The built-in microphone allows you to answer calls from mobile phone.

SAFETY INSTRUCTIONS
This product with Max voltage 5.25V, and electric current 2A for charging, and it will be damaged if charging is done beyond this max voltage and current
Do not insert any metal object in the device.
To avoid a static charge, do not use the device in an extremely dry climate.
Do not attempt to open or repair the device yourself.
Avoid heavy shocks to the product and do not drop it.
Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
Do not expose this product to direct sunlight, Otherwise, the product may be damaged.

INTRODUCTION OF PRODUCT PANEL ANDFUNCTIONS

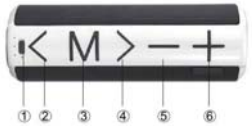

1. On/Off switch 2. PREV
3. Multifunction button : Play/Pause/Mode (Switch between Bluetooth and TF card playing)
4. NEXT 5. Vol- 6. Vol+
7. Micro USB charging port
8. Micro SD card
9. AUX input

Box content
Speaker
Micro USB charging cable
AUX input cable
User's manual

CHARGING THE BLUETOOTH® SPEAKER
Connect the micro USB port of the USB charging cable into the USB port on the side of the speaker. Connect the other end of the USB cable to your computer's USB port or an USB wall charger (not included)
The LED indicator turns RED, indicating the battery is being charged.
The LED indicator will turn off when the speaker is fully charged. (Approximately 3 hours).

PAIRING THE SPEAKER WITH A BLUETOOTH®ENABLED DEVICE
Keep your Bluetooth® Speaker and Bluetooth® enabled device within 1 meter of each other during the pairing process.
Turn on your Bluetooth® Speaker. The blue and red LED lightswill flashalternately, and will have a tone Ding-dong. It means in Pairing Mode.
Set your Bluetooth® enabled device to search for Bluetooth® devices.
When the device finds the**SYLVANIA SP190**, select it. Select 'Pair' to connect the Bluetooth® Speaker to your bluetooth enabled device.It will have double tone Doduo when connection successfully
Depending on which device you are trying to connect the speaker, It may be necessary to enter a passcode. Enter passcode "0000" if prompted by the device.
Your Bluetooth® enabled device will confirm that the pairing was completed, and prompt you to accept the connection. Please respond YES to connect the Bluetooth® Speaker to your Bluetooth® enabled device.

Note : Once the speaker is paired and connected to your Bluetooth® device, it will automatically connect the next time as long as the Bluetooth® on your device is turned on.
When playing music by Bluetooth, the blue LED will flash slowly.

USING YOUR BLUETOOTH® SPEAKERPLAYING MUSIC
To enjoy wireless music on your Bluetooth® Speaker, make sure you are connected to a Bluetooth® enabled device. Once connected you can press PLAY on your Bluetooth® device or you can press the M button on the speaker. Once the music is playing, you can control it from the control buttons of the speaker.

Volume control
Press the '+' or the '-' button to adjust the volume in the desired level.
Note : You may also adjust the volume from your Bluetooth® enabled device's volume control.

Play/Pause
Press the M button to pause the music, To resume the music, press this button again.

Changing Songs (with devices that have AVRCP Bluetooth® profile)
Press the '>' button to go to the next song.
Press the '<' button to go to the previous song.

TELEPHONE BUTTON FUNCTIONS
Note : You may answer & end call while listening to music. The music will stop when a call is answered, and will restart when the call isended.

Answer / End a call :
To answer a call: Short press the M button.
To end a call: Short press the M button again.
To reject a call: Press and hold the M button for about 2 seconds.
To make a new call: Dial the number and press the SEND button on your mobile phone, the call is automatically transferred to the speaker.

To redial the last number called : Press the M button twice quickly.
The last number called will be redialed.

How to Play Micro SD card
Insert the Micro SD card to the product, it will go into the SD card mode and play the music automatically. The blue LED will flash slowly.
Press the ">" button and "<" buttonto the next song or previous song.
Press the "+" or '-' button to adjust the volume in the desiredlevel.
Hold the "M" button can change to Bluetooth mode or AUX mode when 3.5mm cable inserted.

How to Play AUX mode
Insert the 3.5mm cable to the product, it will go into the AUX mode and the red led will flash slowly.
You can enjoy the music from the cell phone or multi media player.
Press the "+" or '-' button to adjust the volume in the desiredlevel.
Hold the "M" button can change to Bluetooth mode or Micro SD card mode when the Micro SD inserted.

TECHNICAL SPECIFICATIONS
Bluetooth ® version: 4.1
Working distance: up to 10 meters in open space
Supporting Profiles: AVRCP, A2DP, Hands-Free Profile (HFP)
and Headset Profile (HSP)
Frequency range: 2.4-2.48Ghz
Output power: 2x3Watts
Distortion: ≤ 1.0%
Frequency response: 180Hz – 20Khz
Hands-free function for answering calls from mobile
Microphone sensitivity: -40dB
Playback time: Music time 6 hours, talk time 10 hours
Charging input power: DC 5V (micro USB)
Charging time: Approx 3 hours
Unit size: 196 x 76 x 79 mm
Unit weight: approx. 332g.

Note: Battery life & charging time may vary, based on usage & typesof devices used.
The product design and specifications may be changed without priornotice!

Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.