QuickStartGuide

MBT0004
www.rcaaudiovideo.com

Congratulations on purchasing your new RCA player.
Please read these instructions for quick tips on using the player.

Getting Started

1. The battery should be fully charged before using your device for the first time. Use the supplied USB connector cable to connect it to your computer or other USB power source. It should be **charged for at least 2 hours** before using for the first time.

2. Transfer audio/video/photo/text files to the player by dragging and dropping files from your computer.
   Important: *The E-book reader supports .txt files only.*
3. Safely eject the drive from your computer (specific instructions vary by operating system—see your computer's help files for information).
4. To turn the player on or off, press and hold the ⏻ button on its right side.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Using Bluetooth

This player offers Bluetooth connectivity to headphones, speakers, or other devices that support Bluetooth. Here's how to set it up.

1. Press and holde the **M** button to go to the player's main menu.
2. In the main menu, press the ❮ button to highlight the ✱ (Bluetooth) icon. Press the ▷II button to select it.
3. In the Bluetooth menu, use the ❮ and ❯ buttons to highlight **Bluetooth Search**. Press the ▷II button to select it.
4. Make sure the other Bluetooth device is on and ready to pair (see the instructions that came with it for more information). Look for this device in the list of devices shown on the player's screen. Use the the ❮ and ❯ buttons to highlight this device in the list. Press the ▷II button to select it.
5. In the next screen, press the ▷II button to select the **Pair** option. That's it—you're connected! Now press the ↩ button and select **All Songs** to choose the song you want to play.

Learn more about the player

To view the user manual directly from the player:

1. Find and open the player on your computer (specific instructions vary by operating system—see your computer's help files for information).
2. Open the User Manuals folder.
3. From the User Manuals folder, select the user manual in your preferred language for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).

- **Keep player out of direct sunlight. Exposure to direct sunlight or extreme heat (such as inside a parked car) may cause damage or malfunction.**

Need more help?

Do not return this product to the store.
Visit **www.rcaaudiovideo.com** for the latest firmware, user manual and FAQ's.

General controls

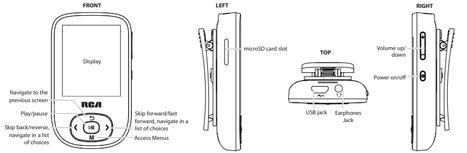

Turn the player on/off	Press and hold the ⏻ button.
Go to the playback menu (during playback)	Tap the **M** button.
Go to the main menu	Press and hold the **M** button.
Navigate to an audio/video/photo/text file	In the main menu, press ❮ or ❯ to select **MUSIC, MOVIE, FILES, PHOTO,** or **E-BOOK** and then press ▷II to select it. Press ❮ or ❯ to navigate to the desired file. Press ▷II to select it.
Play an audio/video/photo/text file	Press ▷II.
Pause playback	Press ▷II in the playback screen, press again to resume.
Adjust the volume	Press the + or – button on the right side of the player.
Skip to the next file	Press ❯.
Skip to the previous file	Press ❮.
Reverse or fast forward an audio file	Press and hold ❮ or ❯ during playback.
Start or pause recording	In the Main menu, press ❮ or ❯ to select the microphone icon (**RECORD**) and then press ▷II to select it. In the **RECORD** menu, press ▷II to start or pause recording. To save the recording, press and hold ▷II .
Playback a voice recording	In the Main menu, press ❮ or ❯ to select **FILES**. In the **FILES** menu, press ❮ or ❯ to select the desired recording, and press ▶II to begin playback.
Reset the player (if it is not responding)	Press and hold the ⏻ button to turn the player off. Then press and hold the ⏻ button to turn the player back on.

Product registration

Thank you for purchasing an RCA product. We pride ourselves on the quality and reliability of all our electronic products but if you ever need service or have a question, our customer service staff stands ready to help. Contact us at www.rcaaudiovideo.com

PURCHASE REGISTRATION: Registering On-line will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.

Register Online at:
WWW.RCAAUDIOVIDEO.COM
Click on Product Registration and Fill Out the Brief Questionnaire

12 Month Limited Warranty Applies to RCA Portable Media Players

Voxx Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-800-645-4994.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media Players, home networks or vehicle electrical systems. This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

For Customer Service
Visit Our Website At
www.rcaaudiovideo.com
Product Information, Photos, FAQ's, User Manual

©2018 VOXX Accessories Corporation
Indianapolis, IN
Trademark Registered
Printed in China

Guía de **Inicio Rápido**

MBT0004
www.rcaaudiovideo.com

Felicitaciones por su compra de su nuevo reproductor RCA.
Por favor, lea estas instrucciones para consejos rápidos sobre el uso del reproductor.

BC

Para empezar

1. La batería debería estar totalmente cargada antes de utilizar su dispositivo por primera vez. Utilice el cable con conector USB suministrado para conectarlo a su computadora o a otra fuente de alimentación USB. Deberá **cargarse durante 2 horas como mínimo** antes de utilizarse por primera vez.

2. Transfiera archivos de audio/video/foto/texto al reproductor arrastrando y soltando los archivos desde su computadora.
   Importante: *El lector de libros electrónicos admite solamente archivos .txt.*
3. Expulse de forma segura la unidad de su computadora (las instrucciones específicas varían según el sistema operativo; consulte los archivos de ayuda de su computadora para obtener mas información).
4. Para encender o apagar el reproductor, oprima y no suelte el botón ⏻ en su lado derecho.

Windows es una marca registrada de Microsoft Corporation en los Estados Unidos y en otros países.

Uso de Bluetooth

Este reproductor ofrece conectividad Bluetooth a los auriculares, altavoces u otros dispositivos compatibles con Bluetooth. Haga lo siguiente para configurarlo.

1. Oprima y no suelte el botón M para ir al menú principal del reproductor.
2. En el menú principal, oprima el botón ❮ para resaltar el icono ✱ (Bluetooth). Oprima el botón ▶II para seleccionarlo.
3. En el menú Bluetooth, utilice los botones ❮ y ❯ para resaltar **Bluetooth Search** (Búsqueda Bluetooth). Oprima el botón ▶II para seleccionarlo.
4. Asegúrese de que el otro dispositivo Bluetooth esté encendido y listo para sincronizarse (consulte las instrucciones que venían con dicho dispositivo para obtener más información). Busque este dispositivo en la lista de dispositivos mostrada en la pantalla del reproductor. Utilice los botones ❮ y ❯ para resaltar este dispositivo en la lista. Oprima el botón ▶II para seleccionarlo.
5. En la siguiente pantalla, oprima el botón ▶II para seleccionar la opción **Pair** (Sincronizar). ¡Ya está—está conectado! Ahora oprima el botón ↩ y seleccione **All Songs** (Todas las canciones) para elegir la canción que quiere escuchar.

Aprenda más sobre el reproductor

Para ver el manual del usuario directamente desde el reproductor:

1. Busque y abra el reproductor en su computadora (las instrucciones específicas varían según el sistema operativo; consulte los archivos de ayuda de su computadora para obtener mas información).
2. Abra la carpeta de manuales de usuario.
3. Desde la carpeta de manuales de usuario, seleccione el manual del usuario en su idioma preferido para obtener más información sobre las funciones del reproductor, información de seguridad y de la garantía, y respuestas a preguntas frecuentes.

- **No exponga el reproductor a la luz directa del sol. La exposición a la luz directa del sol o a calor extremo (tal como dentro de un vehículo estacionado) podría ocasionar daños o funcionamiento errático.**

¿Necesita más ayuda?

No devuelva este producto a la tienda.

Visite **www.rcaaudiovideo.com** para ver el firmware, el manual del usuario y las preguntas frecuentes más recientes.

Controles generales

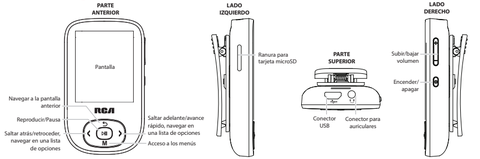

Encender/apagar el reproductor	Oprima y no suelte el botón ⏻.
Ir al menú Reproducir (durante la reproducción)	Toque el botón M.
Ir al menú principal	Oprima y no suelte el botón M.
Navegar a un archivo de audio/video/foto/texto	En el menú principal, oprima ❮ o ❯ para seleccionar **MUSIC** (Música), **MOVIE** (Película), **FILES** (Archivos), **PHOTO** (Foto) o **E-BOOK** (Libro electrónico) y luego oprima ▶II para seleccionarlo. Oprima ❮ o ❯ para desplazarse al archivo deseado. Oprima ▶II para seleccionarlo.
Reproducir un archivo de audio/video/foto/texto	Oprima ▶II.
Pausar la reproducción	Oprima ▶II en la pantalla de reproducción; oprima de nuevo para reanudar.
Ajustar el volumen	Oprima el botón + o – en el lado derecho del reproductor.
Saltar al siguiente archivo	Oprima ❯.
Saltar al archivo anterior	Oprima ❮.
Retroceder o avance rápido de un archivo de audio	Oprima y no suelte ❮ o ❯ durante la reproducción.
Iniciar o pausar la grabación	En el menú principal, oprima ❮ o ❯ para seleccionar el icono del micrófono (**RECORD**) y luego oprima ▶II para seleccionarlo. En el menú **RECORD** (Grabar), oprima ▶II para iniciar o pausar la grabación. Para guardar la grabación, oprima y no suelte ▶II.
Reproducir una grabación de voz	En el menú principal, oprima ❮ o ❯ para seleccionar **FILES** (Archivos). En el menú **FILES**, oprima ❮ o ❯ para seleccionar la grabación deseada, y oprima ▶II para iniciar la reproducción.
Restablecer el reproductor (si no está respondiendo)	Oprima y no suelte el botón ⏻ para apagar el reproductor. Luego, oprima y no suelte el botón ⏻ para volver a encender el reproductor.

Registro del producto

Gracias por haber adquirido un producto RCA. Nos sentimos orgullosos de la calidad y fiabilidad de todos nuestros productos electrónicos, pero si usted necesita servicio o tiene una pregunta, nuestro personal de servicio al cliente siempre está listo para ayudarle. Póngase en contacto con nosotros en www.rcaaudiovideo.com

REGISTRO DE COMPRA: Su registro en línea nos permitirá contactarle en el improbable caso que sea necesario enviarle una notificación de seguridad requerida por la ley Federal de Seguridad del Consumidor.

Regístrese en línea en:
WWW.RCAAUDIOVIDEO.COM
Haga clic en Registro del producto y rellene el breve cuestionario

Garantía limitada de 12 meses
Aplica a los reproductores de medios portátiles RCA

Voxx Accessories Corporation (la "Compañía") le garantiza a usted, el comprador original de este producto que si, bajo condiciones y uso normales, se encontrara que este producto o alguna pieza del mismo presenta defectos materiales o de mano de obra dentro de los primeros 12 meses a partir de la fecha de compra original, tales defectos serán reparados o reemplazados con un producto nuevo o renovado (a opción de la Compañía) sin cargo alguno por las piezas y el trabajo de reparación. Para obtener los servicios de reparación o reemplazo dentro de los términos de esta garantía, el producto se entregará con prueba de cobertura de garantía (por ejemplo, factura con fecha de venta), especificación de los defectos, transporte prepagado, a una estación de garantía aprobada. Para ubicar la estación de garantía más cercana a su domicilio, llame libre de cargo a nuestra oficina de control al: 1-800-645-4994.

Esta garantía no incluye la eliminación de estática o ruido generados externamente, la corrección de problemas de la antena, la pérdida o interrupciones de retransmisión o servicio de Internet, los costos incurridos en la instalación, retirada o reinstalación del producto, los daños causados por virus informáticos, spyware u otro malware, la pérdida de medios, archivos, datos o contenido, ni los daños a cintas, discos, dispositivos o tarjetas de memoria extraibles, altavoces, accesorios, computadoras, periféricos de computadoras, otros reproductores de medios, redes domésticas o sistemas eléctricos de vehículos. Esta garantía no aplica a ningún producto o pieza que, en opinión de la Compañía, haya sufrido daños debido a alteraciones, instalación inadecuada, abuso, uso indebido, negligencia, accidente o por la eliminación o degradación de las etiquetas de fábrica de código de barras o número de serie. EL ALCANCE DE LA RESPONSABILIDAD DE LA COMPAÑÍA BAJO ESTA GARANTÍA ESTÁ LIMITADO A LA REPARACIÓN O EL REEMPLAZO PROVISTO ARRIBA Y, EN NINGÚN CASO, DEBERÁ LA RESPONSABILIDAD DE LA COMPAÑÍA EXCEDER EL PRECIO DE COMPRA PAGADO POR EL COMPRADOR POR ESTE PRODUCTO. Esta Garantía reemplaza cualesquiera otras responsabilidades o garantías expresas. CUALESQUIERA GARANTÍAS IMPLÍCITAS, INCLUYENDO CUALQUIER GARANTÍA IMPLÍCITA DE COMERCIABILIDAD, ESTARÁN LIMITADAS A LA DURACIÓN DE ESTA GARANTÍA ESCRITA. CUALQUIER ACCIÓN POR INCUMPLIMIENTO DE CUALQUIER GARANTÍA EN EL PRESENTE, INCLUYENDO CUALQUIER GARANTÍA IMPLÍCITA DE COMERCIABILIDAD, DEBERÁ PRESENTARSE DENTRO DE UN PERÍODO DE 24 MESES A PARTIR DE LA FECHA DE COMPRA ORIGINAL. EN NINGÚN CASO LA COMPAÑÍA SERÁ RESPONSIBLE POR DAÑOS EMERGENTES O INCIDENTALES POR INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA. Ninguna persona ni representante están autorizados a asumir, en nombre de la Compañía, ninguna responsabilidad salvo la expresada aquí en conexión con la venta de este producto.

Algunos estados no permiten limitaciones sobre la duración de una garantía implícita o la exclusión o la limitación de daños incidentales o emergentes, de modo que es posible que las limitaciones o exclusiones anteriores no apliquen en su caso. Esta Garantía le confiere derechos legales específicos y usted puede tener también otros derechos que varían de estado a estado.

Para Servicio al Cliente
Visite nuestro sitio web en
www.rcaaudiovideo.com
Información del producto, fotos, preguntas frecuentes, Manual del usuario

©2018 VOXX Accessories Corporation
Indianapolis, IN
Marca comercial registrada
Impreso en China

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

IC STATEMENT

This device complies with Industry Canada licence-exempt RSS standard(s)

Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Ce dispositif est conforme aux normes autoriser-exemptes du Canada RSS d'industrie

L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.Cet équipement est conforme avec l'exposition aux radiations IC définies pour un environnement non contrôlé. L'utilisateur final doit respecter les instructions de fonctionnement spécifiques pour satisfaire la conformité aux expositions RF. Cet émetteur ne doit pas être co-localisées

ou opérant en conjonction avec une autre antenne ou transmetteur.