Slate 10" Tablet

User Guide

[UG template version 15b_rev080815]

[sprint_nkj_aqt100_ug_en_150916_d2]

Table of Contents

Introduction 1
About the User Guide 1
Get Started 2
Parts and Functions 2
Nano SIM Card 3
microSD Card 5
Insert microSD Card 5
Unmount the microSD Card 6
Remove the microSD Card 6
Format the microSD Card 7
Charge the Battery 8
Turn Your Tablet On and Off 9
Use the Touchscreen 10
Activate Your Tablet 14
Complete the Setup Screens 14
Basic Operations 20
Basics 20
Home Screen and Applications (Apps) List 20
Tablet Settings Menu 21
Portrait and Landscape Screen Orientation 21
Capture Screenshots 22
Applications 22
Launch Applications 22
Apps List 23
Tablet Number 26
Airplane Mode 26
Enter Text 27
Touchscreen Keyboards 27
Google Keyboard 28
Google Voice Typing 29
Tips for Editing Text 30
Google Account 31

Create a Google Account 31
Sign In to Your Google Account 33
Google Play Store 34
Find and Install an App 34
Request a Refund for a Paid App 35
Update an App 36
Open an Installed App 37
Uninstall an App 38
Get Help with Google Play 39
Lock and Unlock Your Screen 39
Update Your Tablet 40
Update Your Tablet Software 41
Update Your Profile 42
Update Your PRL 43
UICC Unlock 44
Your Tablet Interface 45
Home Screen Basics 45
Home Screen Layout 45
Extended Home Screens 46
Status Bar and Notification Panel 47
Status Bar 48
Notification Panel 49
Customize the Home Screen 50
Change the Wallpaper 50
Add Shortcuts to the Home Screen 51
Add Widgets to the Home Screen 52
Add Folders to the Home Screen 53
Contacts 54
Add a Contact 54
View Contacts 55
Contacts Screen Layout 56
Edit a Contact 57
Delete a Contact 57
Share a Contact 58
Import Contacts 59

Back Up Contacts 60
Messaging and Internet 61
Gmail 61
Create and Send a Gmail Message 61
Check Received Gmail Messages 62
Use Gmail Labels 64
Archive Gmail Threads 64
Mute Gmail Threads 65
Delete Gmail Threads 66
Search Gmail Messages 66
Report Spam Gmail 67
Add Another Google (Gmail) Account 68
Switching between Gmail Accounts 68
Gmail Settings 69
Email 70
Set Up an Email Account 70
Add an Email Account 71
Add an Exchange ActiveSync Account 72
Compose and Send Email 73
Open Email Messages 74
Manage Your Email Inbox 75
Configure Email Settings 77
Data Services General Information (4G LTE) 78
4G LTE 78
Data Connection Status and Indicators 79
Chrome Browser 79
Use the Browser 79
Add a Bookmark 80
View Browser History 81
Open New Browser Tabs 81
Learn to Navigate the Browser 82
Browser Settings 83
Camera and Video 85
Camera Overview 85
Take Pictures and Record Videos 85

Take a Picture 85
Take a Picture with the Timer 86
Record a Picture Using Lens Blur 87
Record Videos 87
View Pictures and Videos 88
View Pictures and Videos Using Photos 88
View Pictures and Videos 89
Edit Pictures 90
Share Pictures or Videos 90
Delete Pictures or Videos 91
Camera Settings 91
Change the Resolution, Quality and Viewfinder Aspect Ratio 92
Change Picture Location Settings 92
Apps and Features 94
NASCAR MOBILE 94
Navigation Apps 95
Google Maps 95
Scout 96
Hangouts 97
Google Search 97
Use Google Search 97
Use Google Voice Search 99
Calculator 99
Calendar 100
Change Calendar View 100
Add an Event to the Calendar 101
View Calendar Events 102
Change Calendar Settings 102
Clock 103
Set Alarms 103
Additional Clock Features 104
Facebook 106
Sign in to Your Facebook Account 106
Use Facebook 107
YouTube 108

View YouTube Videos 108
Post a Video to YouTube 109
Google Play Music App 110
Play Music with Google Play 110
Google Play Music Screen Layout 111
Create Playlists in Google Play Music 112
Sprint Music Plus 114
Connectivity 118
Transfer Files between Your Tablet and a Computer 118
Wi-Fi 120
Turn Wi-Fi On and Connect to a Wireless Network 120
Wi-Fi Settings 122
Disconnect Wi-Fi 122
Wi-Fi Direct 123
Hotspot 124
Tethering 125
Bluetooth 126
Bluetooth Information 126
Enable the Bluetooth Feature 126
Pair Bluetooth Devices 127
Connect to a Paired Bluetooth Device 128
Send Information Using Bluetooth 129
Receive Data via Bluetooth 130
Settings 132
Basic Settings 132
Wi-Fi Settings Menu 134
Bluetooth Settings 135
Data Usage Settings 137
More Settings 138
Virtual Private Networks (VPN) 139
Prepare Your Tablet for VPN Connection 139
Set Up Secure Credential Storage 139
Add a VPN Connection 140
Connect to or Disconnect from a VPN 141
Display Settings 143

Sound and Notification Settings 144
Storage Settings 145
Battery Settings 146
Applications Settings 147
Location Access Settings 148
Security Settings 149
Lock Screen Settings 151
Screen Lock 151
Disable the Screen Lock 154
Lock Screen Options 154
Accounts Settings 155
Language and Input Settings 157
Backup and Reset 159
Date and Time Settings 162
Accessibility Settings 163
Printing Settings 165
Activate This Device 166
About Tablet 166
System Update 168
For Assistance 169
Troubleshooting 169
Specifications 170
Sprint Account Information and Help 171
Sprint Account Passwords 171
Manage Your Account 172
Copyright Information 172
Index 173

Introduction

The following topics describe the basics of using this guide and your new tablet.

About the User Guide

Thank you for purchasing your new Slate 10" Tablet. The following topics explain how best to use this guide to get the most out of your tablet.

Before Using Your Tablet

Read the Get Started guide and Important Information booklet that were packaged with your tablet thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

Descriptions in the User Guide

Note that most descriptions in this guide are based on your tablet's setup at the time of purchase. Unless otherwise noted, instructions begin from the tablet's home screen, which is displayed by tapping ○. Some operation descriptions may be simplified.

Screenshots and Key Labels

Screenshots and other illustrations in this user guide may appear differently on your tablet. Key labels in the user guide are simplified for description purposes and differ from your tablet.

Other Notations

In the user guide, the tablet may be referred to either as "tablet" or "device". A microSD™ or microSDHC™ card is referred to as an "SD Card" or a "memory card."

Get Started

The following topics give you all the information you need to set up your tablet and Sprint service the first time.

Parts and Functions

These topics illustrate your tablet's primary parts and key functions.

Note: Your tablet's screens and apps layouts are subject to change. This user guide uses sample images only.

Tablet Layout

The following illustration outlines your tablet's primary external features and keys.

Part	Description
LED indicator	Displays a tablet notification, charging status, or alert.
Light sensor	Automatically adjusts the display brightness based on the ambient lighting.
Front camera	Takes pictures and records videos while facing the screen and allows you to video conference.
Touchscreen	Displays all the information needed to operate your tablet, such as the applications, the Contacts list, the date and time, and the signal and battery strength.

Part	Description
Back key ◁	Lets you return to the previous screen, or close a dialog box, options menu, the notification panel, or onscreen keyboard.
Home key ○	Returns you to the home screen. Touch and hold to access Google Now.
Recent apps key □	Displays a list of recently used applications.
3.5mm Headset jack	Allows you to plug in either a stereo headset or an optional headset for convenient, hands-free conversations.
Volume buttons	Allows you to adjust the ringtone or media volumes.
Power/lock button	Lets you turn the tablet on or off or turn the screen on or off, or restart the system.
Charger/accessory jack	Allows you to connect the tablet charger or an optional USB cable.
Nano SIM card/microSD card slots	Allows you to insert your nano SIM and a microSD card.
Rear camera	Lets you take pictures and videos.
Speaker	Lets you hear the different ringtones and sounds.

CAUTION! Inserting an accessory into the incorrect jack may damage the tablet.

Nano SIM Card

The nano SIM card is an IC card containing the tablet number and other customer information.

Handling a Nano SIM Card

Keep the following in mind when handling a nano SIM card.

- Customer is responsible for any damage caused by inserting nano SIM card in another-brand IC card reader, etc. The company is not responsible in such case.
- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage the nano SIM card.
- See instructions included with the nano SIM card for handling.
- The nano SIM card is the property of the company.

- The nano SIM card is replaceable (at cost) in case of loss/damage.
- Return the nano SIM card to the company when canceling subscription.
- Returned nano SIM cards are recycled for environmental purposes.
- Note that the nano SIM card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on the nano SIM card. The company is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your nano SIM card or tablet (nano SIM card inserted) is lost/stolen. For details, contact Customer Service.
- Always power off tablet before inserting/removing a nano SIM card.

Insert a Nano SIM Card

Follow these instructions to insert a nano SIM card. Remember to power off your tablet before inserting a nano SIM card.

Note: Your tablet's nano SIM card is preinstalled. These instructions are for reference only.

1. Open the cover of the nano SIM/microSD card slots.
   - Lift upward gently as shown.
2. Insert the nano SIM card.

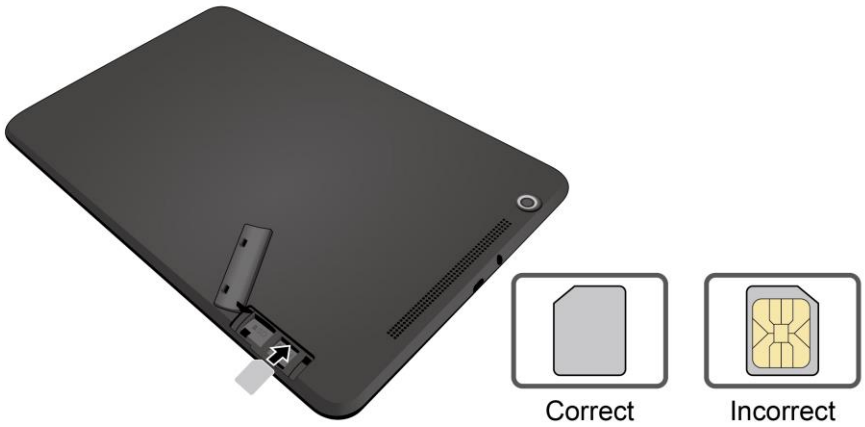

   - Insert gently with gold IC chip facing downward.
3. Close the cover of the nano SIM/microSD card slots.
   - Make sure all the tabs are secure and there are no gaps around the cover.

microSD Card

Your tablet supports the use of an optional microSD card (not included) to expand its storage capacity. Some cards may not operate properly with your tablet.

⚠️ microSD Card Cautions

Data: Information stored on the microSD card can become lost or changed accidently or as a result of damage. It is recommended that you keep a separate copy of important data. The company is not responsible for damages from data that is lost or changed.

Reading/Writing Data: Never power off while reading or writing data.

Battery Level: A low battery charge may prevent reading/writing to the microSD card.

Handling SD Card: Use/store microSD cards away from the reach of infants. May cause choking if swallowed.

Insert microSD Card

Follow these steps to insert an optional microSD card (not included). Make sure to power your tablet off before inserting or removing a microSD card.

1. Open the cover of the nano SIM/microSD card slots.
   - Open gently in the direction shown.
2. Insert the microSD card.

   - Insert the microSD card all the way gently without bending and with terminals facing upward.
   - Insert only microSD cards.
3. Close the cover of the nano SIM/microSD card slots.
   - Make sure all the tabs are secure and there are no gaps around the cover.

Unmount the microSD Card

Always unmount the microSD card before removing it from your tablet.

1. From the Home screen, tap **Apps** > **Settings**.
2. Tap **Storage**.
3. Tap **Unmount SD card** > **OK**.

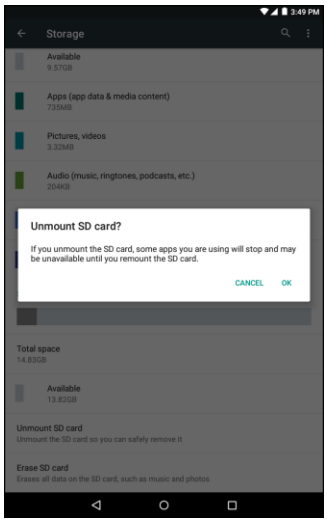

- The menu option name changes from **Unmount SD card** to **Mount SD card**. The memory card is now unmounted.

Remove the microSD Card

Follow these instructions to remove a microSD card. Always power the tablet off before inserting or removing a microSD card.

1. From the Home screen, tap **Apps** > **Settings**.
2. Tap **Storage**.
3. Tap **Unmount SD card** > **OK**.

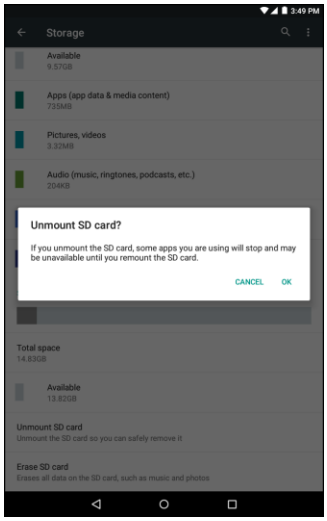

4. Open the cover of the nano SIM/microSD card slots.
5. Slide the microSD card out of the slot to remove it.
6. Close the cover of the nano SIM/microSD card slots.

Format the microSD Card

When you insert an optional microSD card for the first time, it is recommended that you format it on your tablet.

1. From the Home screen, tap **Apps** > **Settings**.
2. Tap **Storage**.
3. Tap **Erase SD card**.
4. Tap **ERASE SD CARD** again, and then tap **ERASE EVERYTHING** to confirm.

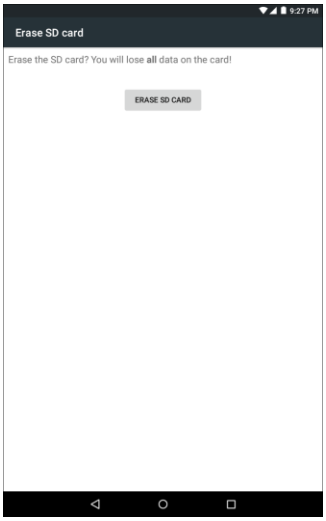

- All data on the memory card is erased, and the card is formatted for use on your tablet.

Charge the Battery

Follow these instructions to charge your tablet's battery using either the included AC adapter or via a USB connection on your computer.

Charge Using the AC Adapter

1. Plug the USB connector into the charger/accessory jack at the top of your tablet.

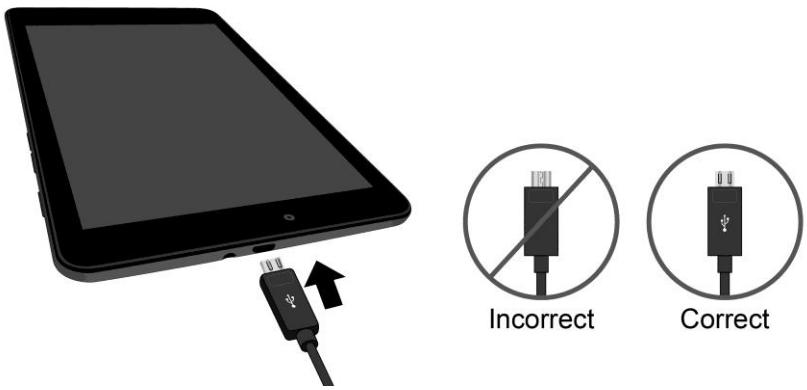

2. Plug the other end of the USB cable into the AC adapter.
3. Plug the AC adapter into an electrical outlet.
4. After charging, disconnect the tablet from the charger.
   - Unplug the AC adapter from the outlet, and remove the micro USB cord from the tablet and the AC adapter.

Note: Always unplug the charger from the wall socket after the tablet is fully charged to save unnecessary power consumption of the charger.

Charge Using a PC Connection

Before using a PC connection to charge your tablet, ensure that the computer is turned on. Depending on the type of connection, your tablet's battery may not charge.

1. Insert the small end of the micro USB cord into the charger/accessory jack on the top of your tablet.

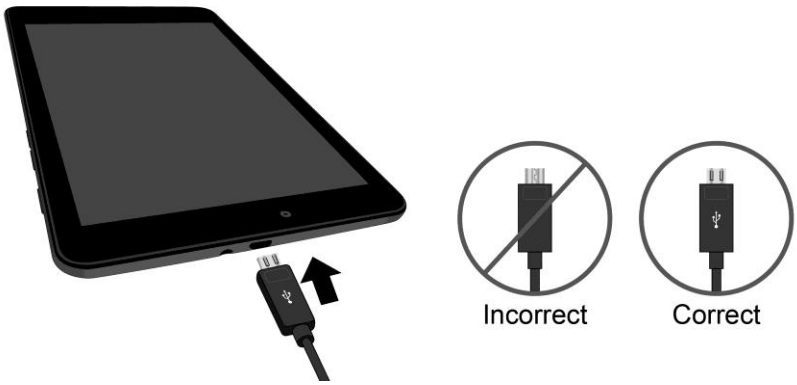

2. Insert the large end of the micro USB cord into an external USB port on your computer.
3. After charging, safely remove the micro USB cord from both the tablet and the computer.

Turn Your Tablet On and Off

The instructions below explain how to turn your tablet on and off.

Turn Your Tablet On

- Press and hold the **Power/lock** button.
  - ❖ Your tablet will power on. Depending on the settings, you may see the lock screen.
    - See Lock and Unlock Your Screen and Screen Lock for information about using the screen lock.
    - The first time you turn the tablet on, you will see the startup screens. See Complete the Setup Screens for details.
    - If your tablet is not yet activated, see Activate Your Tablet for more information.

Turn Your Tablet Off

1. Press and hold the **Power/lock** button to display the device options menu.

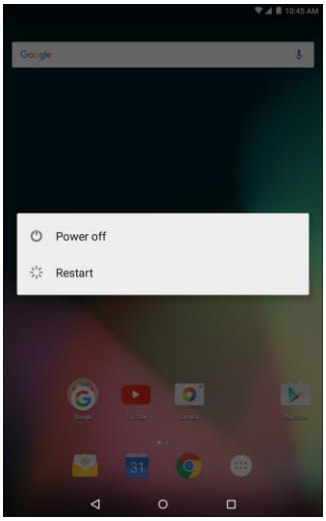

2. Tap **Power off** to turn the tablet off.

   ❖ Your tablet will power off.

Your screen remains blank while your tablet is off (unless the battery is charging).

Use the Touchscreen

Your tablet's touchscreen lets you control actions through a variety of touch gestures.

Tap or Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply tap or touch them with your finger.

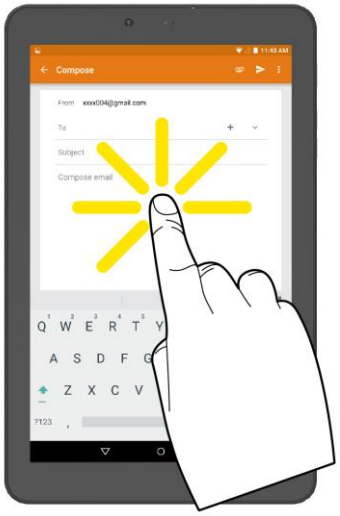

Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.

Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

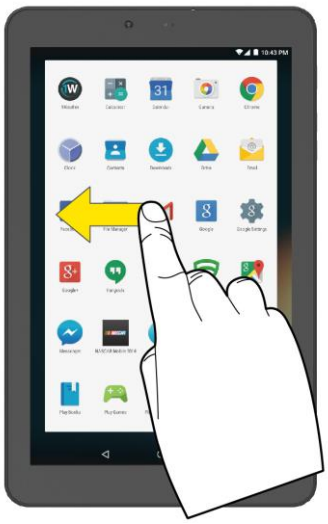

Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.

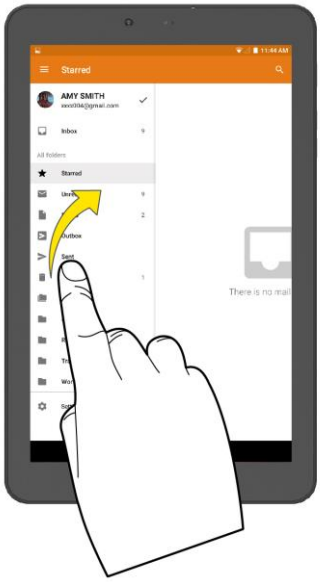

Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the tablet sideways. When entering text, you can turn the tablet sideways to bring up a bigger keyboard. See Touchscreen Keyboards for more details.

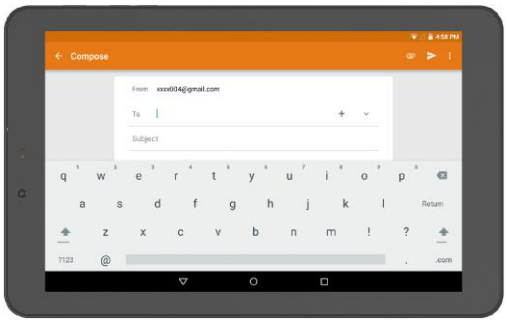

Note: The Auto-rotate check box needs to be selected for the screen orientation to automatically change.

From the Home screen, tap **Apps** > **Settings** > **Display** > **When device is rotated** > **Rotate the contents of the screen**.

Tip: You can also access the screen rotation setting from the notification panel. Pull down the status bar and tap **Auto-rotate** or **Portrait** to select or deselect the option.

Pinch and Spread

“Pinch” the screen using your thumb and forefinger to zoom out or “spread” the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

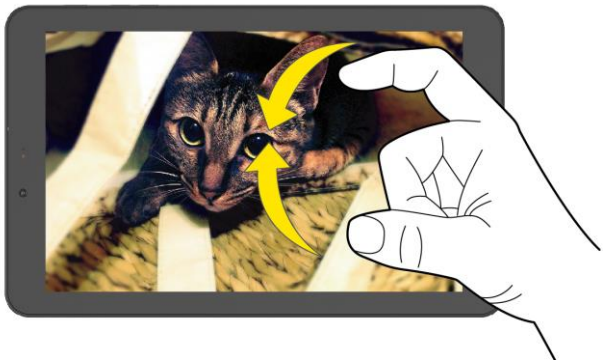

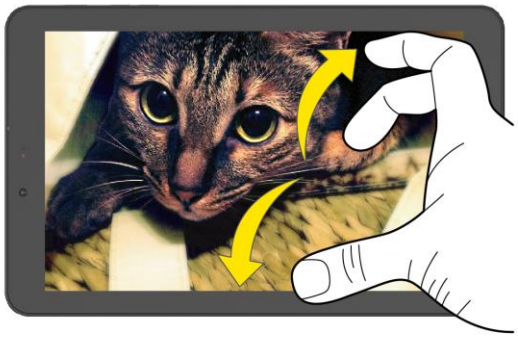

Activate Your Tablet

Follow the instructions below to activate your tablet if it has not already been activated. Depending on your account or how and where you purchased your tablet, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your tablet at a Sprint Store, it is probably activated and ready to use.
- If you received your tablet in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
  - When you turn the tablet on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your tablet in the mail and you are activating a new tablet for an existing number on your account, you can activate on your computer online or directly on your tablet.
  - **Activate on your computer:**
    - Go to sprint.com/activate and complete the online instructions to activate your tablet.
  - **Activate on your tablet:**
    - Turn on your new tablet. Your tablet will automatically attempt Hands-Free Activation.
    - Tap **Activate** to override auto-activation and start the manual activation wizard.
    - Follow the onscreen prompts to complete the activation process.

To confirm activation, attempt to load a web page in Chrome browser while ensuring that Wi-Fi is disabled. If you are able to load a web page with Wi-Fi disabled, then activation is confirmed. If your tablet is still not activated, visit sprint.com/support for assistance. If you do not have access to the Internet, call Sprint Customer Service at **1-888-211-4727**.

Tip: Do not press the **Power/lock** button while the tablet is being activated. Pressing the **Power/lock** button cancels the activation process.

Note: If you are having any difficulty with activation, visit sprint.com/support.

Complete the Setup Screens

The setup screens help you set up certain features and preferences on your tablet. Once your tablet has been turned on, you will see a Welcome message. You can then complete the setup process.

Note: You may be able to complete the setup screens before your tablet has been activated on your account.

1. At the Welcome screen, you can configure your device's accessibility settings or choose to skip.

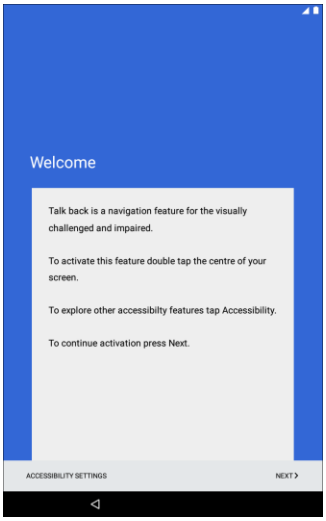

2. Follow the onscreen instructions to complete each section. For each topic, you will have the option to skip it and continue to the next screen.

   - **Select language** – Select a preferred language.

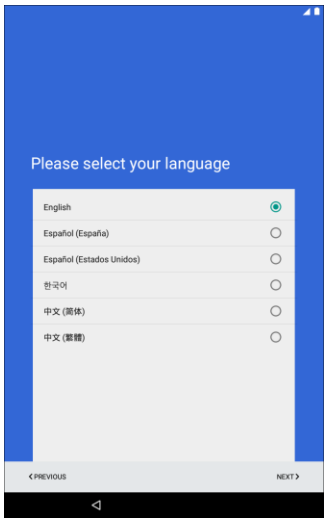

   - **Select Wi-Fi network** – If prompted, follow the prompts to sign in to an available Wi-Fi network. For secured Wi-Fi networks, you will need to enter a password. See Wi-Fi for more details.

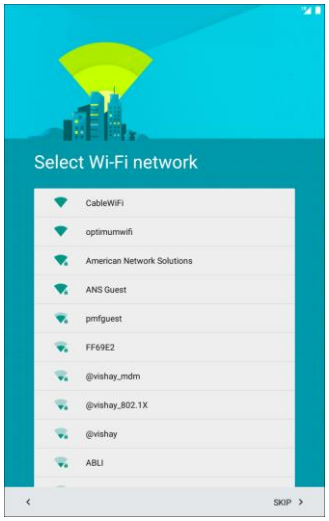

- **Add your account** – Tap **Enter your email** and complete the steps to sign in to your current Google Account, or tap **Or create a new account** to set up a new Google Account. Tap **SKIP** to skip Google setup. The following options may apply depending on your selection:

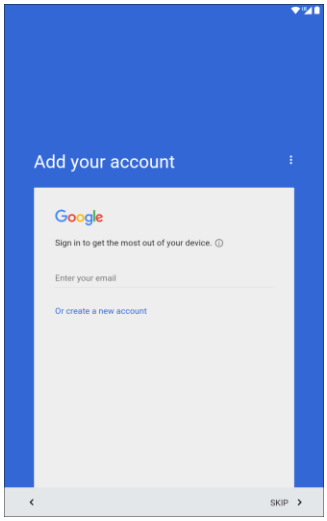

  - **Enter your email** – Enter your Gmail address and password and tap **ACCEPT** to agree to the terms of service and privacy policy and sign in to your current Google Account.
  - **Or create a new account** – Follow the instructions to sign up for a new Google Account. There will be screens to enter your first and last names, create an email address (Gmail), create a password, enter recovery information (including a backup email address and recovery question), an option to join Google+, and an option to enable purchases from the Google Play store app. Tap **NEXT** between each screen.

- **Set up payment info** – If you are setting up a new Google account, select billing options for purchases made through Google Play. Select **Remind me later** to skip this step.

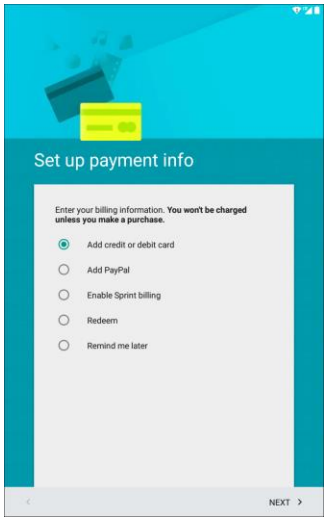

- **Get your apps & data** – If you are using a Google Account you had set up on a previous Android device, you can choose to use that device's backup information to restore backed-up apps, data, system settings, Wi-Fi passwords, etc., from the previous device to your new tablet. Tap **Set up as a new device** to skip this step.

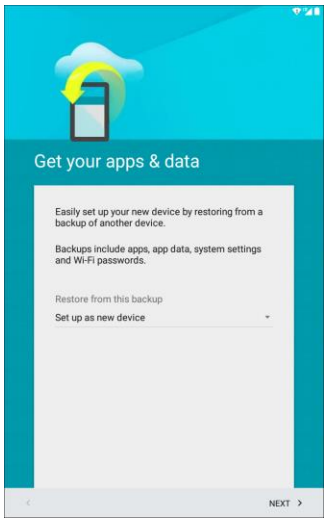

- **Enter your name** – If you skip the Google Account setup on the previous step, you can enter your name.

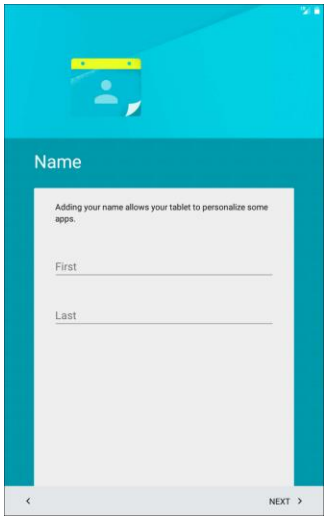

- **Protect your tablet** – Tap **SET SCREEN LOCK NOW** to configure the screen lock method and follow the onscreen instructions to complete the process. Tap **SKIP** to skip this step.

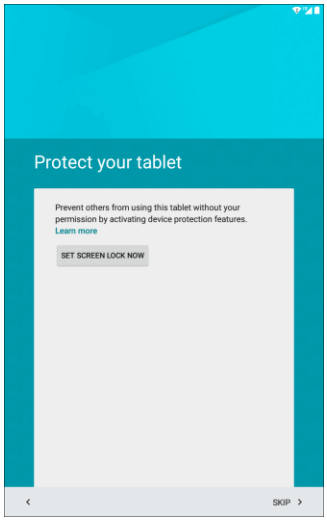

- **Google services** – Select your Google location and service options and then tap **NEXT**.

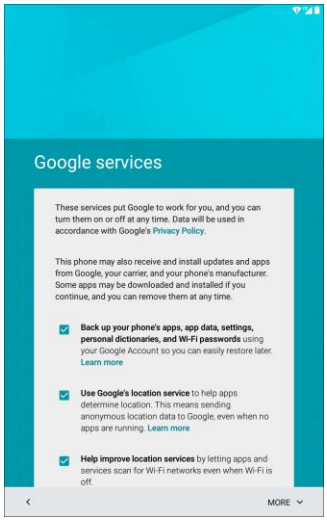

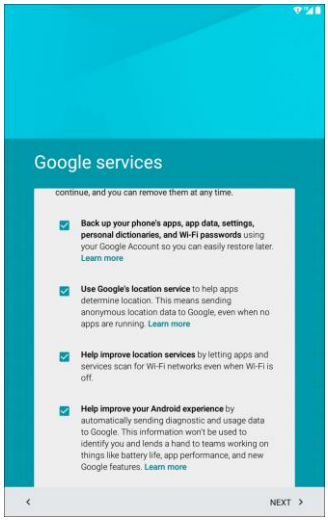

3. Your setup is now complete. Follow the onscreen instructions to learn about basic tap menu navigation, view tutorials, or just get started.

❖ Your tablet is now set up for use. If you skipped any part of the setup, you can access additional options through the Apps screen or through Settings.

Note: You do not need to sign up for a Google Account to use your tablet. However, to download apps from Google Play, you must link your tablet to a Google Account.

Basic Operations

The following topics outline basic features and operations of your tablet.

Basics

The following topics offer an overview of your tablet's basic operations.

Home Screen and Applications (Apps) List

Most of your tablet's operations originate from the home screen or the apps list.

1. From any screen, tap the **Home** key to display the home screen.
2. Tap **Apps** to display the apps list.

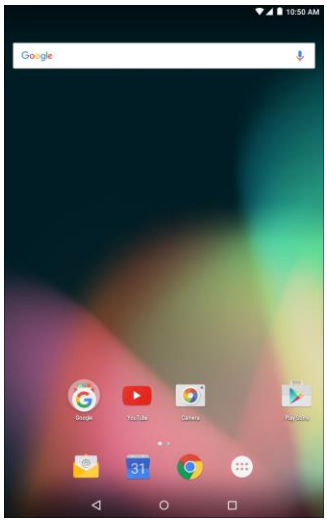

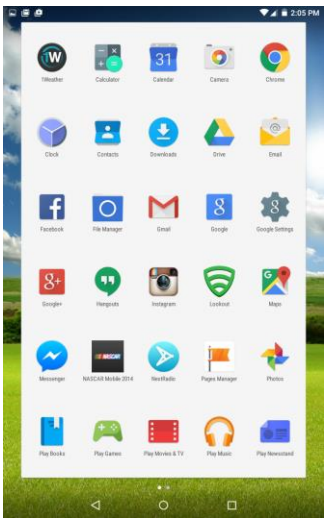

For information about using the home screen, see Home Screen Basics.

Select Options and Navigate Screens

Tap icons, onscreen keys, and other items to open or activate the assigned function.

- Tap the **Back** key to return to the previous screen.

Recent Applications

You can display a list of recently used applications using the Recent Apps key.

- Tap the **Recent Apps** key to view a list of recently used applications.

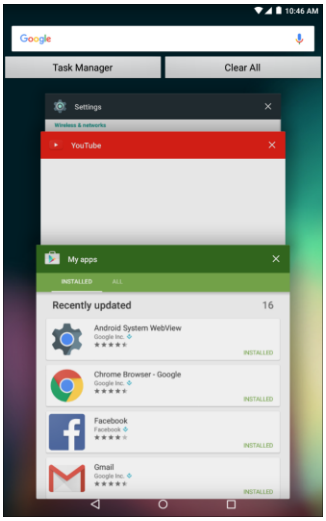

- Tap **Clear All** to clear the list.

Tablet Settings Menu

You can customize your tablet's settings and options through the Settings menu.

- From the home screen, tap **Apps** > **Settings** .

  – or –

  Pull down the status bar and tap **Settings** .

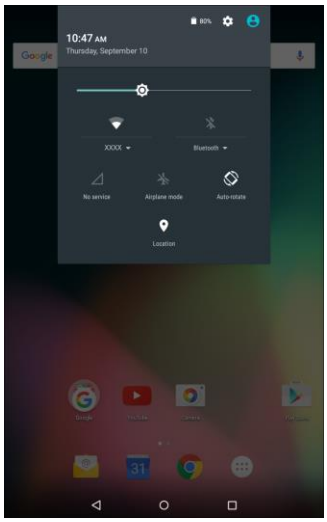

For more information, see Settings.

Portrait and Landscape Screen Orientation

The default orientation for your tablet's screen is portrait (vertical), but many apps will change to landscape orientation (widescreen) when you rotate the tablet sideways.

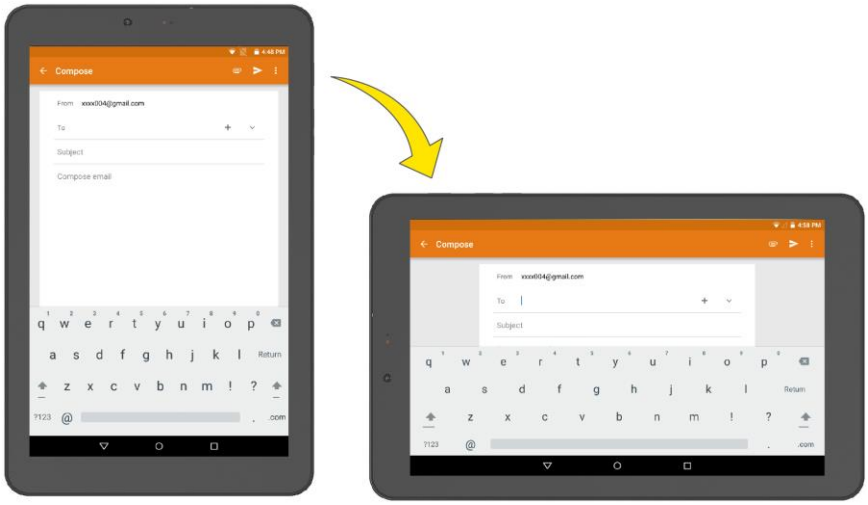

Note: Not all screens will adjust for landscape orientation.

Turn Screen Rotation On or Off

1. Pull down the status bar twice to display the quick settings menu.
2. Tap **Portrait** to turn the Screen rotation on. When the function is enabled, the displayed icon is switched to .

Note: You can also set the rotation option from the main settings menu. From the Home screen, tap **Apps** > **Settings** > **Display** > **When device is rotated** > **Rotate the contents of the screen**.

Capture Screenshots

You can use your tablet's power and volume buttons to capture screenshots.

- Press and hold the **Power/lock** button and the **Volume Down** button at the same time to capture a screenshot of the current screen.
  - The current screenshot will be captured and stored in the Screenshots album in your tablet. To view the screenshots, tap the **Home** key > **Apps** > **Photos** .

Applications

The following topics describe how to access the applications (apps) list and launch apps on your tablet.

Launch Applications

All installed apps can be accessed and launched from the apps list.

1. From the home screen, tap **Apps** .

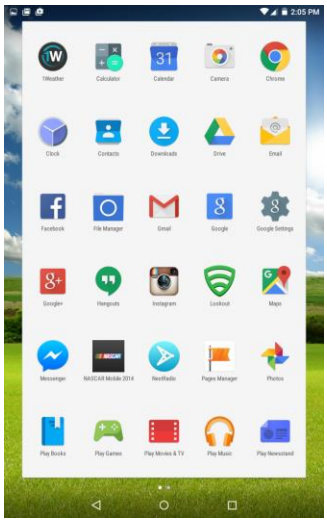

❖ The apps list opens.

2. Tap and app icon to launch the corresponding application.

❖ The application opens.

Apps List

The apps list expands to include any apps you download and install on your tablet. The following table outlines the primary apps that have been preinstalled on your tablet.

App	Function/Service
1Weather	Launches the 1Weather application, which allows you to track and view weather forecasts and current condition for "My Location" or any location you choose.
Calculator	Launches the Calculator application, which allows you to perform mathematical calculations using your tablet.
Calendar	Launches the Calendar application, which allows you to record events and appointments.
Camera	Launches the Camera application, which allows you to take photos and record videos.
Chrome	Launches the Chrome Web browser, which allows you to surf the Internet.
Clock	Launches the Clock application, which allows you to set the alarm and use the timer and stopwatch functions.

App	Function/Service
Contacts	Launches the Contacts application, which allows you to create a new contact and manage your contacts.
Downloads	Launches the Downloads application, which allows you to view or delete what you have downloaded.
Drive	Launches the Google Drive application, which allows you to back up your files to Google Drive.
Email	Launches the Email application, which allows you to send or receive emails.
Facebook	Launches the Facebook application, which allows you to access Facebook using your tablet.
File Manager	Launches the File Manager application, which allows you to manage the files.
Gmail	Launches the Gmail application, which allows you to send and receive emails via Gmail.
Google	Launches the Google Now application, which allows you to search information using your tablet.
Google Settings	Accesses the Google Settings menu.
Google+	Launches the Google+ application, which allows you to stay connected with your family and friends via Google+.
Hangouts	Launches the Hangouts application, which allows you to chat with your family and friends.
Instagram	Launches the Instagram application, which allows you to take photo or video, and then share it with other people.
Lookout	Launches the Lookout application, which allows you to configure the security settings for your tablet. Once the configurations are complete, you can log into Lookout.com to locate your device, view your backed up data, and manage your device.
Maps	Launches the Google Maps application, which helps you locate places, view maps, and get driving directions.

App	Function/Service
Messenger	Launches the Messenger application, which allows you to instantly reach your Facebook friends or people in Contacts. You can also have group chats, share photos and videos, and chat while using other applications.
NASCAR Mobile	Launches the NASCAR Mobile, which allows you to follow your favorite NASCAR driver with news, video, and Live race features.
NextRadio	Launches the NextRadio application, which allows you to see and hear your favorite local radio stations.
Pages Manager	Launches the Pages Manager application, which allows you to connect with your audience and keep up with activity on multiple pages from one place.
Photos	Launches the Photos application, which allows you to manage your Google+ photos, albums, and videos.
Play Books	Launches the Google Play Books application, which allows you to read or search your favorite books.
Play Games	Launches the Google Play Games application, which allows you to discover new games, check out what your friends play, track scores, and play with your friends.
Play Movies & TV	Launches the Google Play Movies & TV application, which allows you to download or watch movies and TV shows using your tablet.
Play Music	Launches the Google Play Music application, which allows you to discover, play, store, and share your favorite music.
Play Newsstand	Launches the Google Play Newsstand application, which allows you to subscribe to the topic and news sources you are interested in.
Play Store	Launches the Google Play store application, which allows you to search and download games, applications, movies, or books.
Portable Hotspot	Accesses the Portable Hotspot menu.
Settings	Accesses the tablet's Settings menu.
Sprint Music Plus	Launches the Sprint Music Plus application, which allows you to purchase and download digital music files to play on your tablet.

App	Function/Service
Voice Search	Launches the Voice Search application, which allows you to search the Web by speaking.
YouTube	Launches the YouTube application, which allows you to view video or upload videos from your tablet.

Tablet Number

Follow the instructions below to display your tablet's wireless tablet serial number.

1. From the home screen, tap **Apps** > **Settings** > **About tablet** .
2. Tap **Status**.

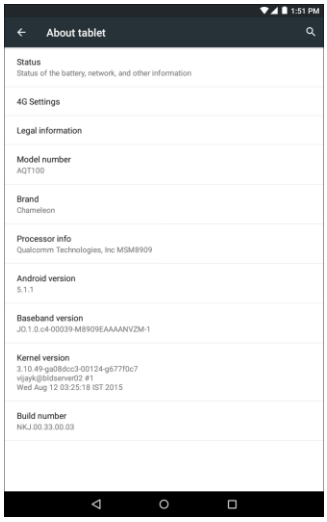

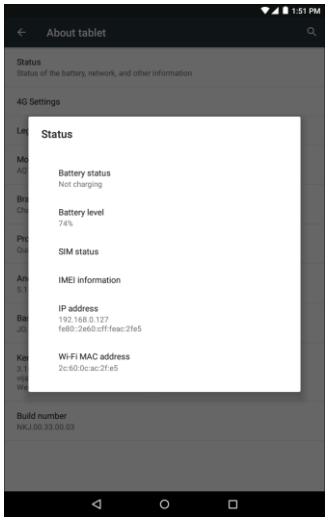

❖ You will see the number listed under **Serial number**.

Airplane Mode

Airplane mode turns off all functions that emit or receive signals, while leaving your tablet on so you can use apps that don't require a signal or data.

To turn on airplane mode:

1. From the home screen, tap **Apps** > **Settings** > **More** .

2. On the **Airplane mode** option, tap the switch to **On** .

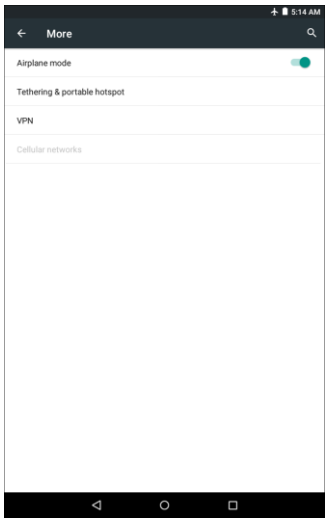

❖ Your tablet is now in airplane mode. You will see the airplane mode icon in the status bar.

Tip: You can also access airplane mode through the status bar menu. Pull down the status bar and tap **Airplane mode** . When the function is enabled, the displayed icon is switched to .

To turn off airplane mode:

1. From the home screen, tap **Apps** > **Settings** > **More** .
2. On the **Airplane mode** option, tap the switch to **Off** .

❖ Your tablet's wireless connection features are now restored.

Tip: You can also access airplane mode through the status bar menu. Pull down the status bar and tap **Airplane mode** . When the function is disabled, the displayed icon is switched to .

Enter Text

You can type on your tablet using one of the available touchscreen keyboards or Google voice typing.

Touchscreen Keyboards

Your tablet offers you several text input methods. The keyboard appears automatically onscreen when you tap a text entry field, and they can be used in either portrait or landscape mode. You can also use the Google Voice typing option to enter text using your voice (see Google Voice Typing for details).

The methods available include:

- **Google keyboard** allows you to enter text by tapping keys on the virtual keyboard. Google keyboard also supports several functions including word completion suggestion, automatic correction, and next-word prediction. See Google Keyboard for details.

- **Google voice typing** allows you to speak your entries. See Google Voice Typing for details.
- **Japanese IME** allows you to type in Japanese on your keyboard.

Note: Keyboard layouts and options may change depending on where you're using them. For example, if you're entering text to do a Web search, a search icon may be available instead of an enter key.

Google Keyboard

The Google Keyboard makes typing fast and easy with gesture and voice.

Assign Google Keyboard for Text Entry

1. From the home screen, tap **Apps** > **Settings**.
2. Tap **Language & input**.
3. Tap **Current Keyboard** > **Google Keyboard**.

Use Google Keyboard

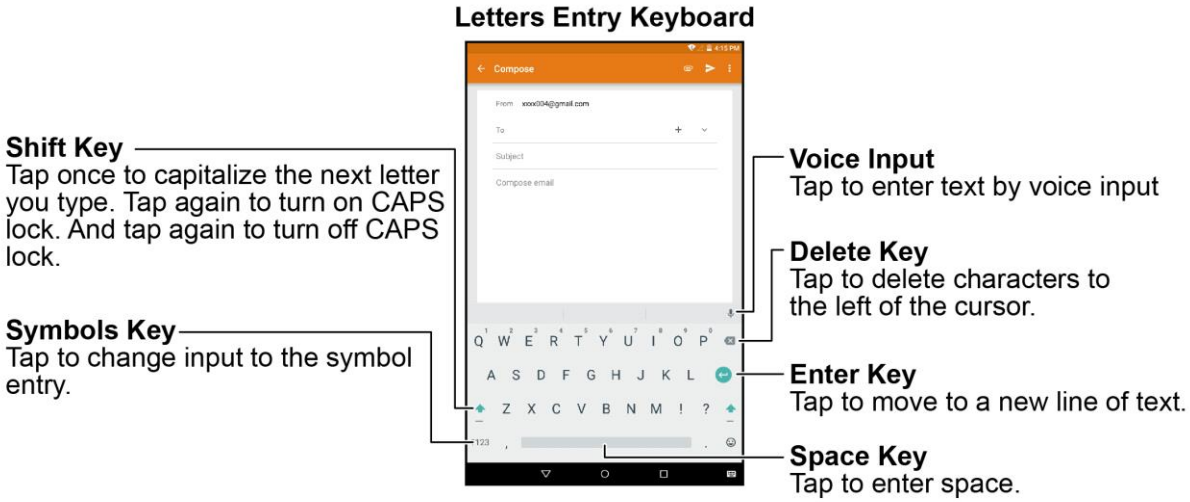

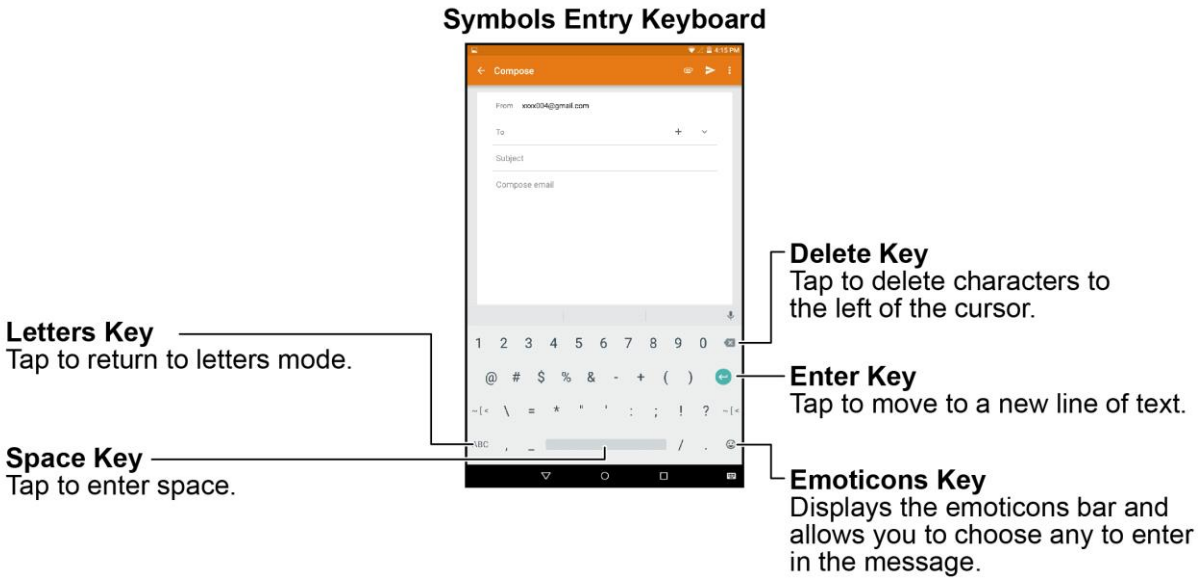

1. Tap a text field where you want to enter the text.
2. Enter the desired text.
   - To delete incorrect characters, tap . Tap and hold to delete the whole word.
   - To enter numbers or symbols, tap ?123.
   - To enter a smiley, tap .
   - By default, Google Keyboard starts with a capital at the beginning of text. Tap to change the case of the text. Tap again to switch to all upper case letters.
3. When you have finished, tap to close the keyboard.

Configure Google Keyboard

To configure options for Google keyboard, tap the **Home** key > **Apps** > **Settings** > **Language & input** > **Google Keyboard** and change the desired settings.

Google Voice Typing

Google Voice typing uses Google voice recognition to convert speech to text.

Assign Google Voice Typing for Text Entry

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Language & input** .

3. Tap **Current Keyboard** > **CHOOSE KEYBOARDS** > **Google voice typing**.

Use Google Voice Typing

1. Tap .
2. Speak to the tablet and watch your text being entered on the screen.
3. If the text is incorrect, tap .
4. When you have finished, the on-screen keyboard will appear.

Configure Google Voice Typing

To configure options for Google voice typing, tap the **Home** key > **Apps** > **Settings** > **Language & input** > **Google voice typing** and change the desired settings.

Tips for Editing Text

Your tablet gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

Note: Some apps do not support text editing, while others may offer their own way to select and edit text.

Edit Existing Text

1. Tap the text at the point you want to edit. The selection cursor displays at the point you tapped.
2. Enter additional text, or delete text by tapping .

Copy, Delete, or Replace Text

1. Tap and hold the text or word you want to select. The selected text is highlighted between selection cursors .

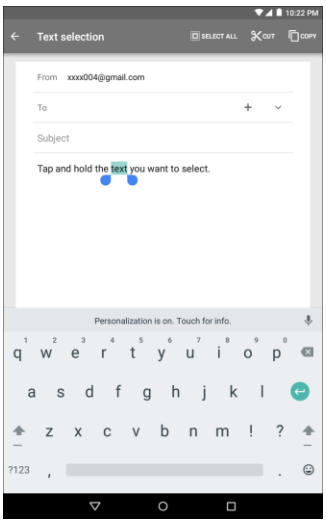

2. Drag either cursor to select more or less text.

3. On the pop-up menu, tap:

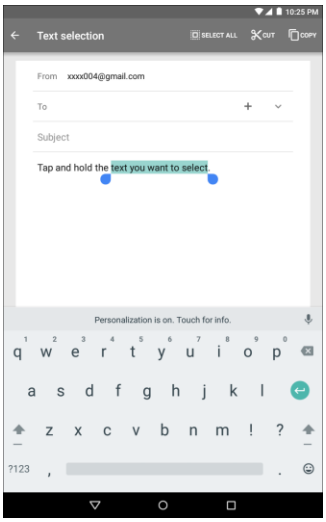

   - **SELECT ALL** to highlight all text in the field.
   - **CUT** to remove the selected text.
   - **COPY** to save the selected text to the clipboard.

4. Enter the text.

5. Tap to delete the selected text.

Paste Text

1. Tap and hold the text at the point you want to edit. The selection cursor displays at the point you tapped.

2. Tap **PASTE** to paste the copied text.

Google Account

You will need a Google Account to access several tablet features such as Gmail, Google Maps, Hangouts, and the Google Play applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your tablet and your online Google Account.

⚠️ Google Account Cautions

Be sure not to forget your Google Account ID or password.

Create a Google Account

If you do not already have a Google Account, you can create one online or using your tablet.

Note: Although you need a Gmail account to use certain features of your tablet, such as Google Play, you do not need to use Gmail as the default account for your tablet.

Create a Google Account Online

1. From a computer, launch a Web browser and navigate to www.google.com.
2. On the main page, select **Sign-in**, then click **Create an account**.
3. Follow the onscreen prompts to create your free account.
4. Log into your provided email address, locate the email from Google, and respond to the new email to both confirm and activate your new account.

Create a Google Account Using Your Tablet

1. From the home screen, tap **Apps** > **Settings** > **Accounts** > **Add account**.

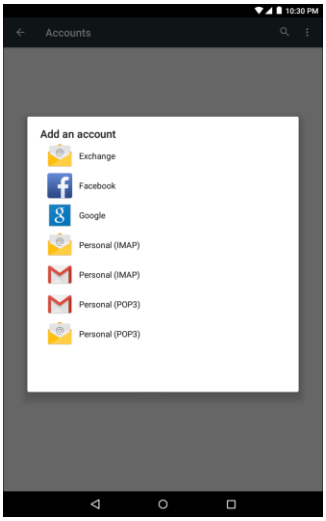

2. Tap **Google** and then tap **Or create a new account**.

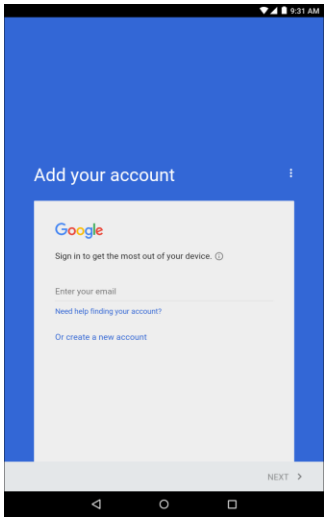

3. Follow the prompts to set up your account. Tap **NEXT** to proceed between steps, which may include:
   - Enter your **First name** and **Last name**.
   - Enter a desired **Username**.
   - Enter and reenter a password.
   - Set a phone number to recover your Google Account in case you forget your password.
   - View Privacy and Terms.
   - Select Google service options.
   - Set up payment information.
4. When the email setup is complete, your tablet will communicate with the Google server to confirm your information.

Note: When setting up a new Google Account, either on your tablet or online, you will be prompted to add a secondary email address. Enter a second Gmail address or any other email address from which you currently send and receive email. This address is used to authenticate your account should you ever encounter problems or forget your password. It is strongly encouraged for Android users so you can regain access to Google services and purchases on your tablet.

Sign In to Your Google Account

If you have a Google Account but have not yet signed in with your tablet, follow these instructions to sign in to your Google Account.

1. From the home screen, tap **Apps** > **Settings** > **Accounts** > **Add account**.
2. Tap **Google**, and then tap **Enter your email**.

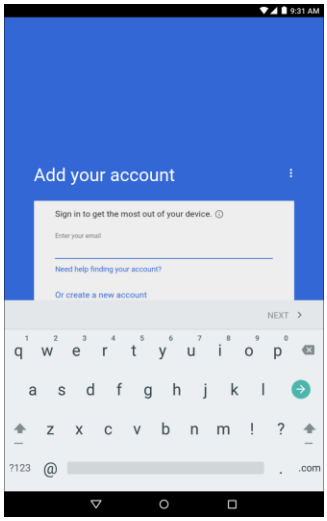

3. Enter your Gmail address and password, and then tap **NEXT**.

4. Follow the onscreen instruction to complete the email setup. Your tablet then communicates with the Google server to confirm your information.

Google Play Store

Google Play store™ is the place to go to find new Android apps, books, movies, and music for your tablet. Choose from a wide variety of free and paid content ranging from productivity apps and games to bestselling books and blockbuster movies and music. When you find what you want, you can easily download and install it on your tablet.

To access the Google Play store app, you must first connect to the Internet using your tablet's Wi-Fi or mobile data connection and sign in to your Google Account. See Chrome Browser and Sign In to Your Google Account for details.

Installing Applications

Many different kinds of applications can be installed on your tablet from Google Play (provided by Google Inc.). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

Important: Our policies often do not apply to third-party applications. Third-party applications may access your personal information or require us to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Find and Install an App

When you install apps from the Google Play store and use them on your tablet, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings for your tablet. Download and install only apps that you trust.

1. From the home screen, tap **Apps** > **Play Store** .
2. When you open the Google Play store app for the first time, the Terms of Service window will appear. Tap **ACCEPT** to continue.
3. Browse through the categories (**APPS**, **GAMES**, **MOVIES & TV**, **MUSIC**, **BOOKS**, or **NEWSSTAND**), find an item you're interested in, and tap the name.

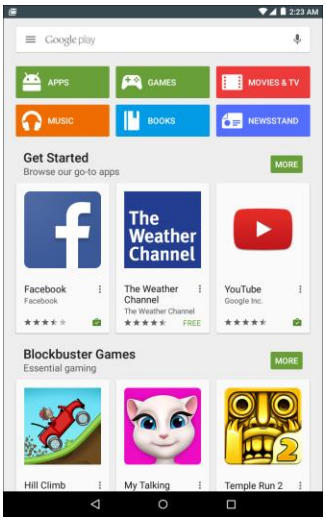

4. Tap an app to read a description about the app and user reviews.

5. Tap **INSTALL** (for free applications) or the price (for paid applications).

Note: If you have not already done so, you will need to set up a payment method to purchase paid apps from Google Play.

6. The subsequent screen notifies you whether the app will require access to your personal information or access to certain functions or settings of your tablet. If you agree to the conditions, tap **ACCEPT** (for free apps) or **ACCEPT** and then **BUY** (for paid apps) to begin downloading and installing the app.

   - If you have not already set up a payment method, tap **CONTINUE** and then follow the prompts to arrange payment and complete the purchase.

❖ The selected app is downloaded and installed on your tablet.

Warning: Read the notification carefully! Be especially cautious with applications that have access to many functions or a significant amount of your data. Once you tap **OK** on this screen, you are responsible for the results of using this item on your tablet.

Purchasing Applications

Purchase apps at your own risk. Sprint is not responsible for any harm to you or third parties resulting from the use of purchased apps.

Request a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your phone.

If you change your mind, you can install the app again, but you can't request a refund a second time.

1. From the home screen, tap **Apps** > **Play Store** .

2. Tap **Menu** > **My apps**.

3. Tap the app to uninstall for a refund. The details screen for the app opens.

4. Tap **Refund**, and then tap **Yes** to confirm. Your app is uninstalled and the charge is canceled.

Update an App

Depending on your settings, many apps will update automatically, or you can update apps directly from the Play Store app.

Update an App Directly

1. From the home screen, tap **Apps** > **Play Store** .

2. Tap **Menu** > **My apps**.

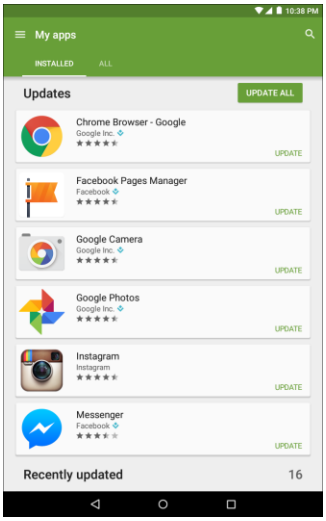

3. Tap the app you want to update, and then tap **UPDATE** > **ACCEPT**.

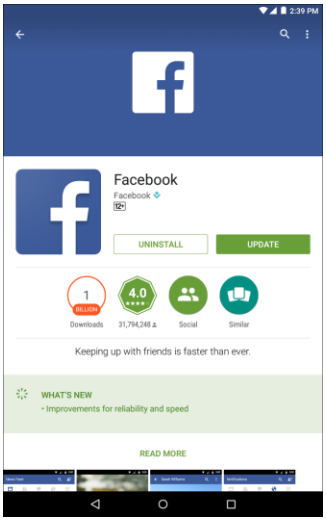

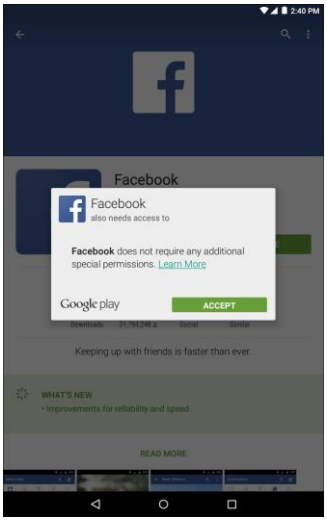

❖ The app update is downloaded and installed.

Set Automatic App Updates

1. From the home screen, tap **Apps** > **Play Store** .
2. Tap **Menu** > **My apps**.

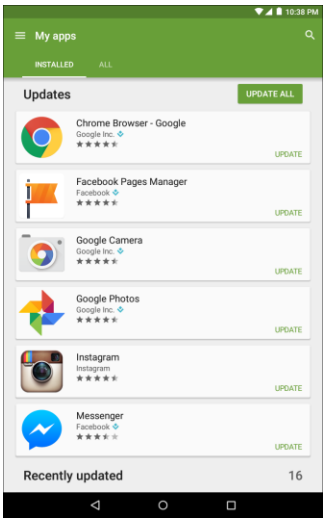

3. Tap the app you want to set for auto-update, and then tap > **Auto-update**.

❖ The app is set to update automatically whenever an update becomes available.

Note: Automatic updates are unavailable for some apps.

Open an Installed App

There are two methods to open any app that you have downloaded and installed from Google Play.

1. From the home screen, tap **Apps** > **Play Store** .

2. Tap **Menu** > **My apps**.

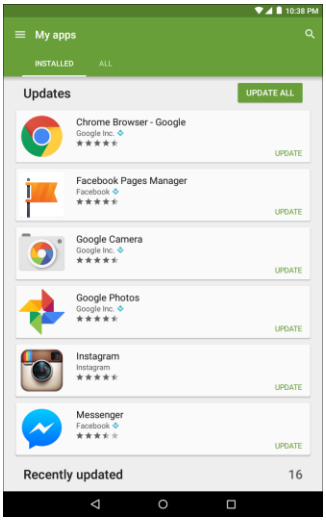

3. Tap the desired application, then tap **OPEN**.

-or-

1. From the home screen, tap **Apps** .

2. Tap the icon of the newly installed application.

Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play.

1. From the home screen, tap **Apps** > **Play Store** .

2. Tap **Menu** > **My apps**.

3. Tap the app you want to uninstall, and then tap **UNINSTALL** > **OK**.

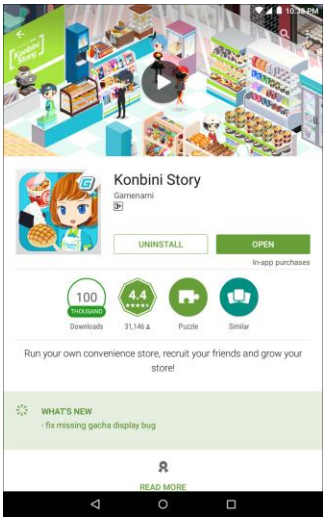

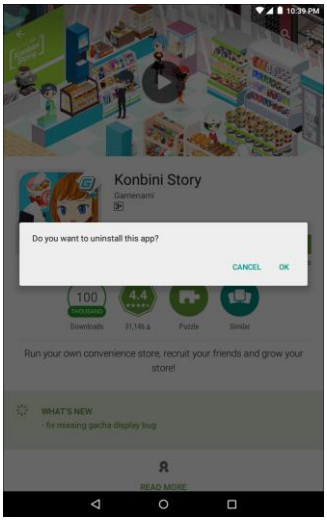

❖ The app is uninstalled and removed from your tablet.

Get Help with Google Play

The Google Play store app offers an online help option if you have questions or want to know more about the app.

1. From the home screen, tap **Apps** > **Play Store** .
2. Tap **Menu** > **Help & Feedback**.

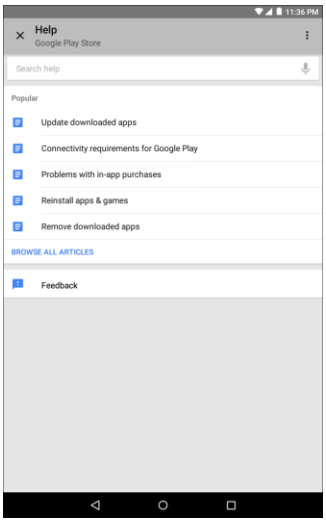

❖ The Google Play store Help page opens and you can find comprehensive, categorized information about Google Play store.

Lock and Unlock Your Screen

Your tablet allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power/lock** button. Pressing the **Power/lock** button again or will turn on your tablet screen and show the lock screen.

To save battery power, the tablet automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages while the tablet's screen is off.

Note: For information on how to adjust the time before the screen turns off, see Display Settings.

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power/lock** button.

   ❖ The lock screen appears.

2. Swipe your finger upward to unlock it.

   ❖ The screen is unlocked.

   - If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN. See Screen Lock.

Update Your Tablet

From time to time, updates may become available for your tablet. You can download and apply updates through the **Settings** > **System Update** menu.

⚠ Software Update Cautions

During update: The tablet cannot be used until the software update is complete. It may take time to update your tablet's software.

Signal during update: Update your tablet where signal reception is good, and do not change location during the update process. Make sure the battery is adequately charged before beginning an

update. A weak signal or low battery during an update may cause the update to fail. An update failure may disable the tablet.

Other functions during update: Other tablet functions cannot be used during a software update.

Update Your Tablet Software

You can update your tablet's software using the System Update option.

Before Updating Your Tablet

Updating your tablet may result in a loss of saved data depending on the condition of your tablet (malfunctioning, damaged, water seepage, etc.). You must back up all critical information before updating your tablet firmware.

Back Up All Data Prior to Update

1. From the home screen, tap **Apps** > **Settings** > **Backup & reset**.
2. Set the desired option switch to enable the feature.
   - Enable the **Back up my data** option to back up data, Wi-Fi password, and other settings to Google services.
   - Enable the **Automatic restore** option to restore backed up settings and data when reinstalling an app.

As an added precaution, to preserve any data on your microSD card, please unmount it from your tablet prior to starting the update process. From the Home screen, tap **Apps** > **Settings** > **Storage** > **Unmount SD card**.

Update Your Tablet's Software

Once you have backed up all your data, use the **Update Firmware** option to update your tablet's software.

1. From the home screen, tap **Apps** > **Settings** > **System Update**.

2. Tap **Update Firmware**.

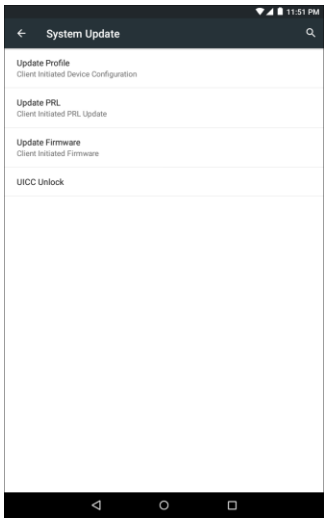

❖ Your tablet automatically downloads and installs any available updates. You may be required to power your tablet off and back on to complete the software upgrade.

Confirm Your Current Tablet Software

1. From the home screen, tap **Apps** > **Settings** > **About tablet** .
2. Locate the **Android version** read-only field.

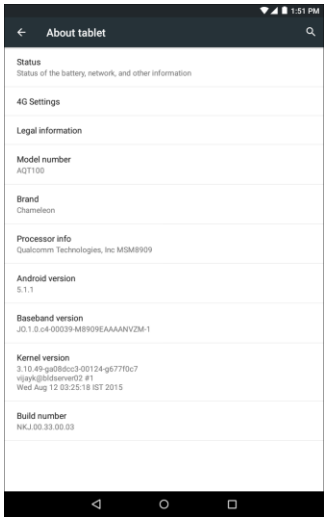

Update Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your tablet.

1. From the home screen, tap **Apps** > **Settings** > **System Update** > **Update Profile**.

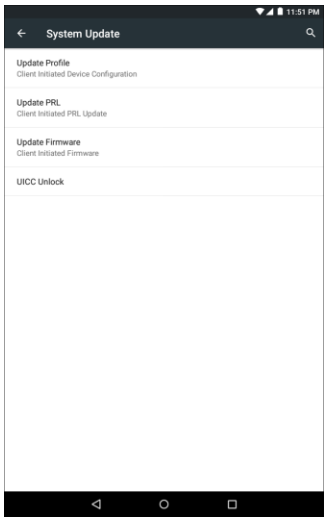

2. Follow the onscreen instructions.

   ❖ The tablet will download and install the profile update and you will see a confirmation when complete.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Update Your PRL

This option allows you to download and update the PRL (preferred roaming list) automatically.

1. From the home screen, tap **Apps** > **Settings** > **System Update** > **Update PRL**.

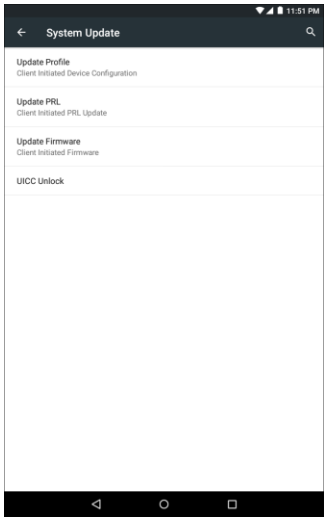

2. Follow the onscreen instructions.

   ❖ The tablet will download and install the PRL update and you will see a confirmation when complete.

UICC Unlock

This option allows you to unlock the client initiated UICC.

1. From the home screen, tap **Apps** > **Settings** > **System Update** > **UICC Unlock**.

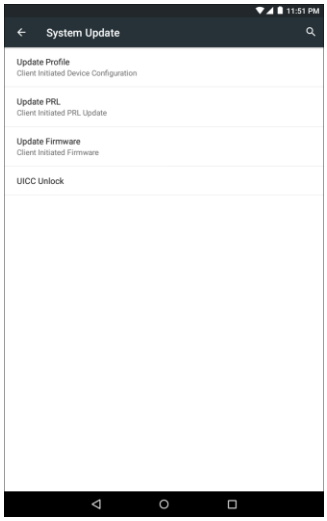

2. Follow the onscreen instructions.

Your Tablet Interface

The following topics describe how to use and customize your tablet's home screen, understand the status bar, and use the notification panel.

Home Screen Basics

The home screen is the starting point for your tablet's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more.

Home Screen Layout

The following illustration outlines your tablet's home screen layout including status bar, application icons, apps launcher, and keys.

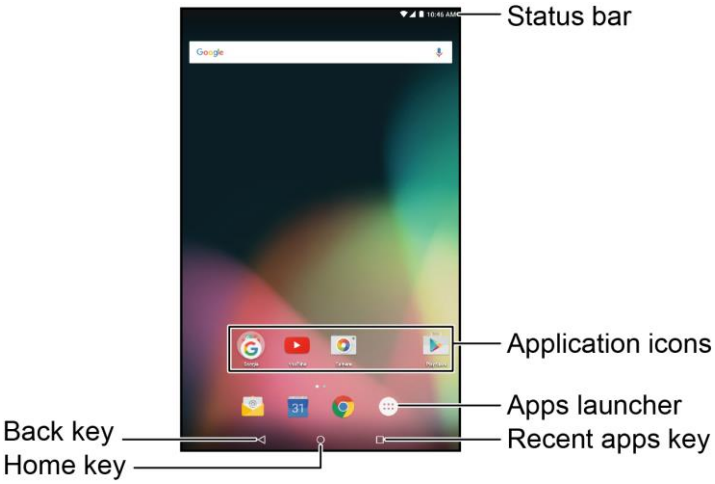

Item	Description
Status bar	The status bar displays icons to notify you of your tablet's status (on the right side) and notifications (on the left side).
Application icons	Application icons are shortcuts to favorite applications. You can add and remove these shortcuts as you wish.
Apps launcher	Tap to open the applications (apps) list. The apps launcher is a primary shortcut available from the home screen.
Recent apps key	Tap to display a list of recently used applications.
Home key	Tap to display the main home screen.

Item	Description
Back key ◁	Tap to return to the previous screen.

Tip: Tap the **Home** key ○ to return to the main home screen from any other screen.

Extended Home Screens

In addition to the main home screen, your tablet features extended home screens to provide more space for adding icons, widgets, and more. Press **Home** key ○ to display the main home screen and then slide the screen right or left to move from the main screen to an extended screen.

There are up to 20 extended screens available in addition to the main home screen.

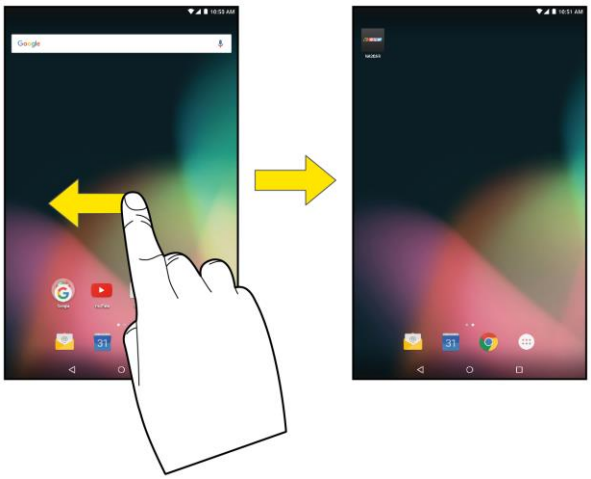

- If you are not already using the maximum number of screens for your tablet, you can add more screens by tapping ⋮⋮⋮ to access the all applications. Then tap and drag an app icon to a new blank screen. An additional page will be automatically created on the home screen.

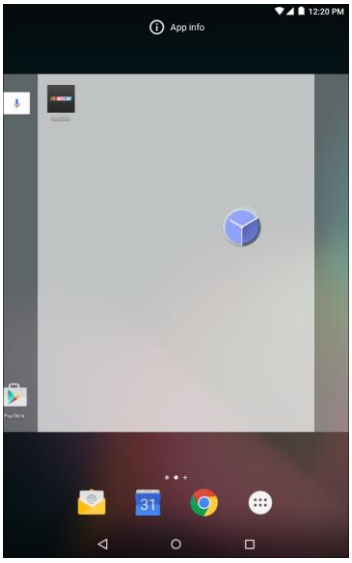

- While on an extended screen, press **Home** key ◯ to return to the main home screen.

To go directly to a particular screen:

1. From any screen, tap and hold an empty space.

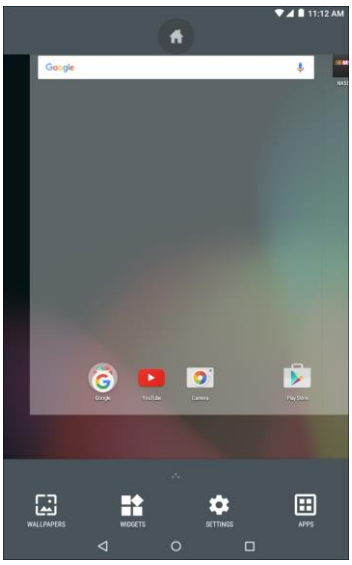

2. Slide the screen right or left to switch between screens.

Status Bar and Notification Panel

Your tablet's status and notifications are available at a glance at the top of the screen.

Status Bar

The status bar at the top of the home screen provides tablet and service status information on the right side and notification alerts on the left. To view the notification panel or access the quick settings menu, pull down the status bar from the top of the screen.

Main Status Icons

Icon	Status
	Signal strength - Shows your current signal strength (the more bars there are, the stronger the signal is).
	No service - Your tablet cannot find a mobile network.
LTE	Sprint 4G LTE data service is available.
	Bluetooth® on - Indicates that Bluetooth is on.
	Wi-Fi connected - Indicates that Wi-Fi is in use.
	GPS active - Indicates that GPS is active.
	Location on - Indicates that Location is on.
	Airplane mode - Indicates that your tablet is in Airplane mode.
	Very low battery - Indicates that the battery is very low.
	Battery drained (50%) - Indicates that the battery is partially drained.
	Battery full - Indicates that the battery is fully charged.
	Battery charging - Indicates that the battery is charging.
	Alarm - Indicates that an alarm is set.

Main Notification Icons

Icon	Notification

Icon	Notification
	New Email - Indicates a new Email message.
	New Gmail - Indicates a new Gmail message.
	Upcoming event - Alerts you of an upcoming event.
	Data is syncing - Application sync is active and synchronizations is in progress for Gmail, Calendar, and Contacts.
	Problem with Sign-In or Sync - There has been an issue with your connection to Google server, you were not properly signed into your account. In order to use Google application or sync feature, you must set up and sign into an active Google Account.
	USB connected - You tablet has detected an active USB connection.
	More notifications not displayed - Indicates that there are more notifications which are not displayed in the status bar.
	Uploading data - Indicates that your tablet is uploading data.
	Downloading data - Indicates that your tablet is downloading data.
	Connected to VPN - Indicates that your tablet is connected to a Basic VPN.
	Carrier data - Data use threshold approaching or exceeded.
	No SIM - Indicates that your tablet cannot detect any SIM card.

Notification Panel

Your tablet's notifications appear at the left side of the status bar, and you can access the full notification panel by pulling down the status bar. From there, you can check notifications, download updates, open messaging apps, use the quick settings menu, and more.

Open the Notification Panel

- Pull down the status bar. (Slide your finger down from the top of the screen.)
  - ❖ The notification panel opens. To check notifications, tap an item in the list.

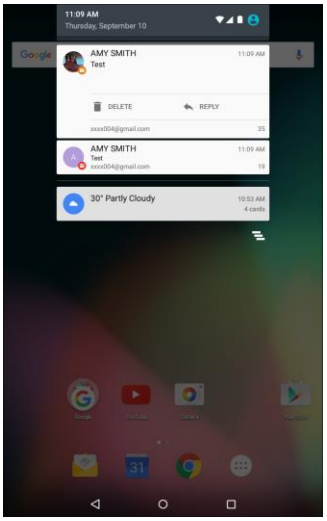

Close the Notification Panel

- Slide the notification panel up. (Slide your finger up from the bottom of the screen.)

  – or –

  Tap the **Back** key to close the notification panel.

Notification Panel

The notification panel gives you access to both the notifications and the quick settings menus.

Customize the Home Screen

Learn how to set the wallpaper and add, move, or remove shortcuts, widgets, and folders from the home screen.

Operations for Rearranging the Home Screen

- **Moving Widgets and Icons**: From the Home screen, tap and hold an item and then drag it to the desired location.
- **Deleting Widgets and Icons**: From the Home screen, tap and hold an item and then drag it to **Remove**.
- **Displaying the Home Screen Menu**: From the Home screen, touch and hold an empty space to display the home screen menu. Menu options include WALLPAPERS, WIDGETS, SETTINGS, and APPS.

Change the Wallpaper

Select and assign your tablet's background wallpaper.

1. From the home screen, tap **Apps** > **Settings** > **Display** > **Wallpaper**.

- You can also access the wallpaper from the Home screen. Tap and hold an empty space, and then tap **WALLPAPERS**.

2. Tap an option to select the wallpaper.

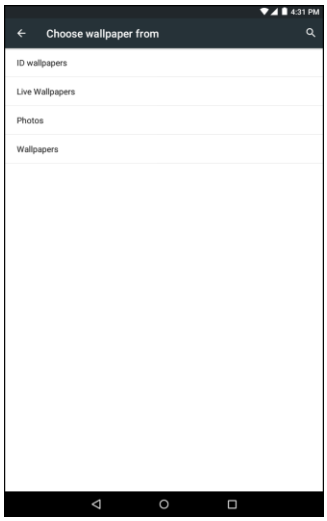

- **ID wallpapers** to open the available wallpapers that were included in your Sprint ID pack.
- **Live Wallpapers** to open a list of animated wallpapers installed on your tablet.
- **Photos** to use a picture save on your tablet as a wallpaper. You can crop the picture before setting it as a wallpaper.
- **Wallpapers** to use a default wallpaper from the wallpaper gallery.

3. Select a wallpaper and tap **Set wallpaper**.

❖ The wallpaper is set.

Add Shortcuts to the Home Screen

You can add shortcuts for quick access to favorite apps from the home screen.

1. From the home screen, tap **Apps** .
2. Touch and hold an app icon.

- ❖ The icon will disengage and you will see thumbnails of your home screen.

3. Drag the icon to an empty location on the home screen.

- ❖ The shortcut is added to the home screen.

Add Widgets to the Home Screen

You can add widgets to your tablet's home screen. Widgets are self-contained apps that display on a home screen. Unlike a shortcut, the Widget works as an onscreen application. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Email and email accounts, and many others.

1. Tap and hold an empty space, and then tap **WIDGETS**.

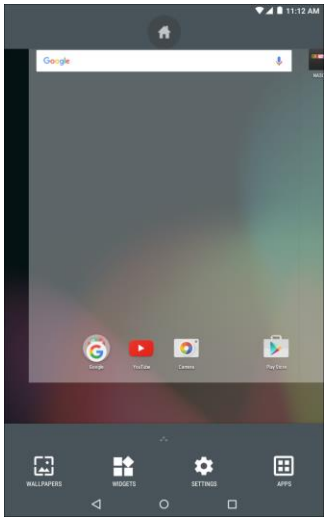

2. Touch and hold a widget icon.

- ❖ The icon will disengage and you will see thumbnails of your home screen.

3. Drag the icon to an empty location on the home screen.

❖ The widget is added to the home screen.

Add Folders to the Home Screen

You can group home screen shortcuts into folders for convenient access.

1. From the home screen, tap and drag an app shortcut onto another app shortcut until a white circle appears.

2. To open the folder, tap the folder icon.

3. From the opened folder, tap **Unnamed Folder** to change the folder name.

Tip: You can add multiple apps in your folder by repeating step 1.

Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your tablet as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

Contacts Cautions

Information saved in Contacts may be lost or changed if the battery is removed for a long period or left uncharged. Accidents or malfunctions may also cause loss or change to information. It is recommended that you keep a separate copy of contacts and other important information. The company is not responsible for any damages from lost or changed contacts.

Add a Contact

You can add contacts from your tablet's Contacts application. Enter details such as name, phone numbers, email addresses, mailing addresses, and more.

1. From the home screen, tap **Apps** > **Contacts** .

   ❖ You will see the Contacts list.

2. Tap to add a contact.

3. Select the account if you want to save contacts to your Google Account or tap **ADD NEW ACCOUNT** to create an account.

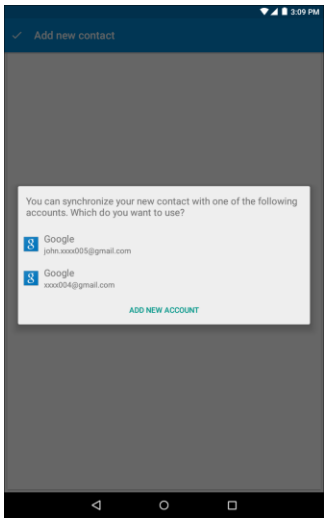

4. Use the keyboard to enter as much information as you want.

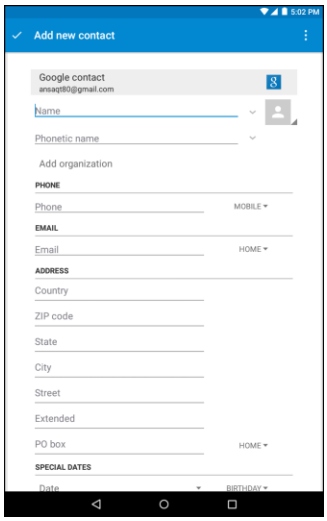

- : Tap the picture icon to assign a picture to the contact.
- Name
- Phone
- Email
- Address
- Special Dates
- Groups
- Add another field: Tap **ADD ANOTHER FIELD** to include additional information such as IM, Notes, Nickname, Website, etc.

Note: To select a type (label) for a phone number, email address or postal address (such as Mobile, Home, Work, etc.), tap the type to the right of the field and select the appropriate type.

5. When you have finished adding information, tap **Add new contact**.

   ❖ The contact is added.

View Contacts

View a contact's details by displaying a contact entry.

1. From the home screen, tap **Apps** > **Contacts** .

   ❖ You will see the Contacts list.

2. Tap a contact to view its details.

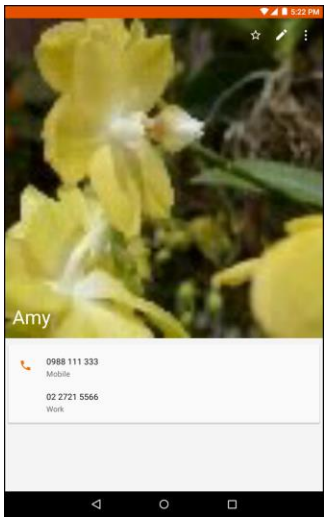

❖ The contact's detailed listing appears.

Contacts Screen Layout

The following illustration shows your Contacts app layout and describes the various features.

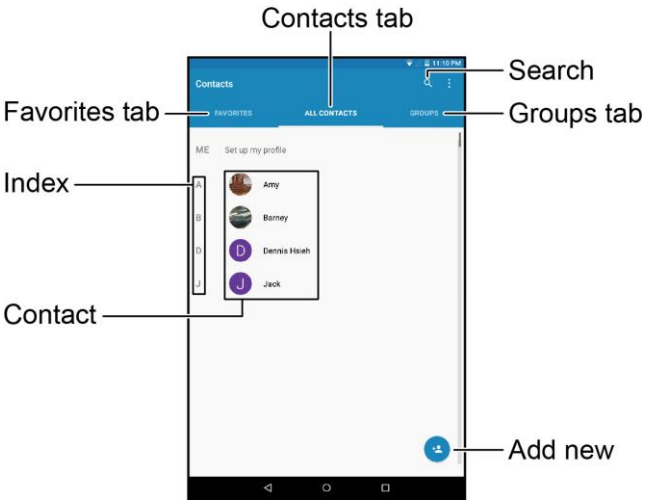

Item	Description
Favorites tab	Show favorite contacts.
Contacts tab	Show all contacts.
Groups tab	Show contact groups.
Contact	Tap to show contact's details.
Search	Search contacts.

Item	Description
Index	Browse contacts by letter.
Add new	Add a new contact.

Edit a Contact

Once you've added a contact, you can add or edit any of the information in the entry, assign an ID picture, customize with a unique ringtone, and more.

1. From the home screen, tap **Apps** > **Contacts** .
2. Tap a contact to view its details.
3. Tap .

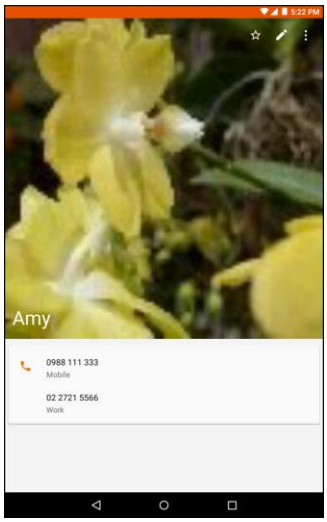

4. Tap any field you want to change or add. See Add a Contact.
5. Add or edit the information, and then tap **Edit Contact**.
   - ❖ Your changes are saved to the contact entry.

Note: To select a type (label) for a phone number, email address, or postal address (such as Mobile, Home, Work, etc.), tap the type to the right of the field.

Delete a Contact

You can delete a contact from the contacts details page.

1. From the home screen, tap **Apps** > **Contacts** .

2. Tap a contact to view its details.

3. Tap ⋮ > **Delete**.

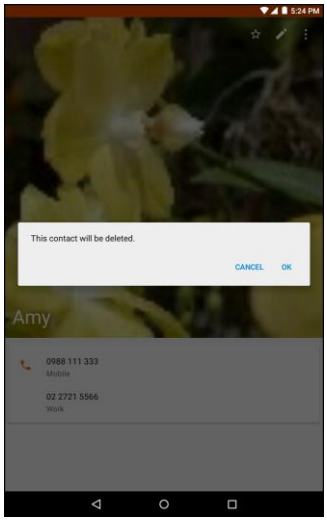

4. Tap **OK**.

❖ The contact is deleted.

Share a Contact

You can quickly share contacts using Bluetooth, Email, Gmail, or Google Drive.

1. From the home screen, tap **Apps** > **Contacts**.

2. Tap a contact to display it, and then tap ⋮ > **Share**.

3. Select one of the following methods:

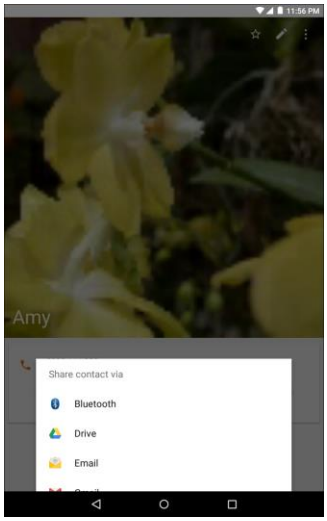

- **Bluetooth** to send the information via Bluetooth. See Bluetooth for information on pairing and sending via Bluetooth.
- **Drive** to share the information with Google Drive**.**
- **Email** to send the information as an email attachment. See Compose and Send Email for details on sending email.
- **Gmail** to send the information as a Gmail attachment. See Create and Send a Gmail Message for details.

4. Complete the required steps as prompted for the selected method.

❖ The selected contact will be shared.

Import Contacts

Your tablet offers a couple of options for importing or exporting contacts from installed nano SIM card or your tablet's internal memory.

Import Contacts from Your Internal Storage

1. From the home screen, tap **Apps** > **Contacts** .
2. Tap > **Import/export**.

❖ You will see the Import/export contacts menu.

3. Tap **Import from storage**.
4. Select **Phone storage** and tap **OK**.

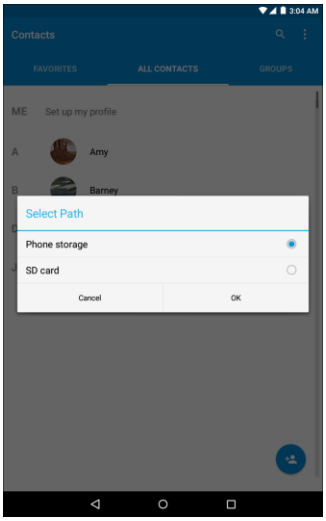

5. Follow the onscreen instructions to complete the import.

❖ The contacts are imported and stored in the selected account.

Back Up Contacts

You can export all of the contacts on your tablet as vCard files. You can then copy this file to a computer or another tablet that is compatible with this format, such as an address book application.

Back Up Contacts to Your Internal Storage

1. From the home screen, tap **Apps** > **Contacts**.
2. Tap ⋮ > **Import/export**.
3. Tap **Export to storage**.

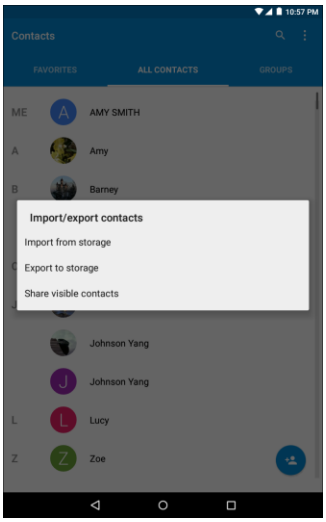

4. Select the contact(s) to export and tap ✓.
5. Select **Phone storage** and tap **OK**.
6. Follow the onscreen instructions to complete the export.

❖ The contacts are exported and saved to the internal memory.

Messaging and Internet

With wireless service, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, social networking accounts, and Hangouts.

Gmail

Use Google's Gmail service and your Google Account to send, receive, and manage your Gmail messages. Before using Gmail, you must register a Google (Gmail) Account on your tablet. See Google Account for details.

Gmail Cautions

Gmail is handled as email from a PC. Restricting email from PCs on your tablet prevents your tablet from receiving Gmail.

Create and Send a Gmail Message

Use your tablet to create and send Gmail messages.

1. From the home screen, tap **Apps** > **Gmail** .

   ❖ The Gmail inbox opens.

2. In the inbox, tap .

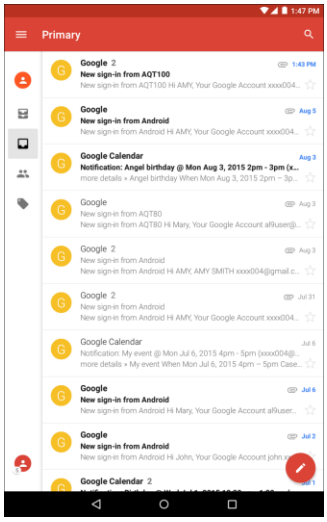

   ❖ The Gmail composition window opens.

3. Enter the message recipient(s), subject, and message, and then tap .

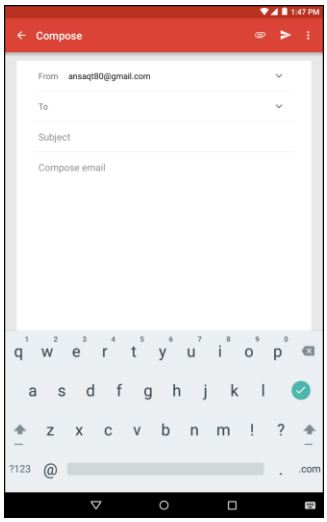

❖ The Gmail message is sent.

Gmail Composition Options

- **Adding Cc/Bcc**: In the mail composition window, tap , and then add recipients.
- **Attaching Files**: In the mail composition window, tap > **Attach file**. Locate and then tap the file you want to attach.
- **Save as a Draft (Send Later)**: While composing your message, > **Save draft**. The message is saved as a draft for later.
- **Delete Mail Being Composed**: In the mail composition window, tap > **Discard** > **DISCARD**.

Note: To view your draft email messages, in the inbox, tap > **Drafts**.

Note: To view your sent messages, in the inbox, tap > **Sent**.

Check Received Gmail Messages

Your tablet allows you to access, read, and reply to all your Gmail messages.

Open New Gmail Messages

When new Gmail arrives, you will see in the status bar.

1. Pull down the status bar to display the notification panel.

2. Tap the new message from the notification panel.

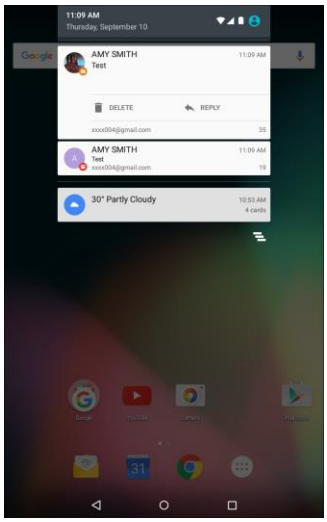

❖ The new Gmail message opens.

- If you have two or more new Gmail messages, tapping the notification opens the Gmail inbox.

Open Gmail Messages

You can also read and reply to all your Gmail messages from the Gmail inbox.

1. From the home screen, tap **Apps** > **Gmail** .

❖ The Gmail inbox opens.

2. Tap the message thread you want to view.

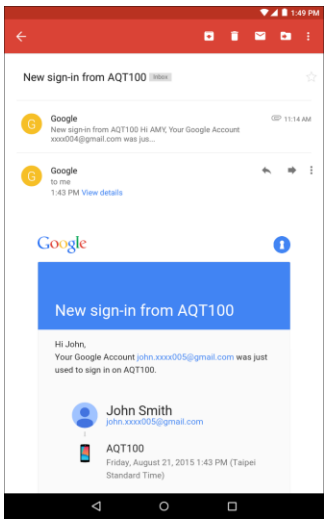

❖ The message thread opens, with the newest message displayed.

Options when Reviewing Gmail Messages

- **Replying to Gmail Messages**: With the Gmail message open, tap , compose your reply message, and tap .
  - To reply to all, tap **Options** > **Reply all**.
- **Forwarding Gmail Messages**: With the Gmail message open, tap , enter a recipient and an additional message, and tap .

Use Gmail Labels

Gmail saves all mail in one box, but you can add labels that allow you to sort your Gmail conversation threads. For example, when a new thread starts with a received mail, the label "Inbox" is automatically added to the thread. By then adding the label "travel," all threads with "travel" are shown in a list.

1. From the home screen, tap **Apps** > **Gmail** .
   - ❖ The inbox opens.
2. Touch and hold a conversation thread to add a checkmark to it, and then tap > **Move to**.
3. Tap a label for the thread.

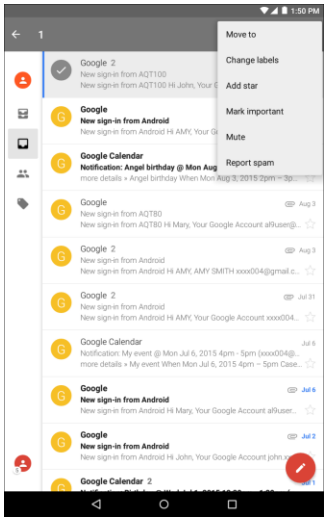

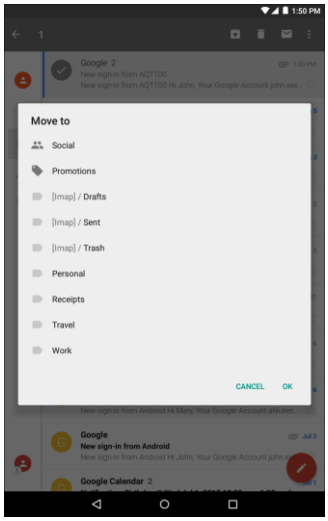

4. Tap **OK**.
   - ❖ The thread is added to the selected label.

Archive Gmail Threads

Remove sent and received Gmail threads so they do not appear in the inbox. When replies arrive for archived threads, they appear in the inbox again.

1. From the home screen, tap **Apps** > **Gmail**.

2. Touch and hold a conversation thread to add a checkmark to it, and then tap .

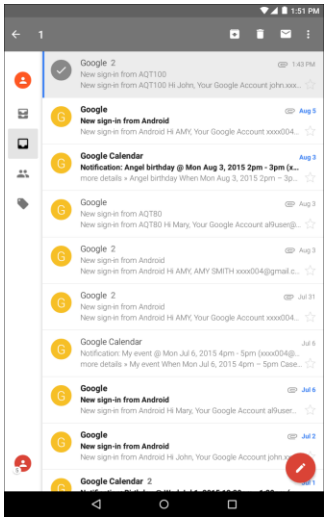

❖ The thread is now archived.

Mute Gmail Threads

If registered on a mailing list, there will be threads with always-continuing conversations. For long threads that are not important, mute the threads and they will no longer appear in the inbox. When mail arrives that includes a user's address as a recipient or in Cc, mail will again appear in the inbox.

1. From the home screen, tap **Apps** > **Gmail**.

2. Touch and hold a conversation thread to add a checkmark to it, and then tap > **Mute**.

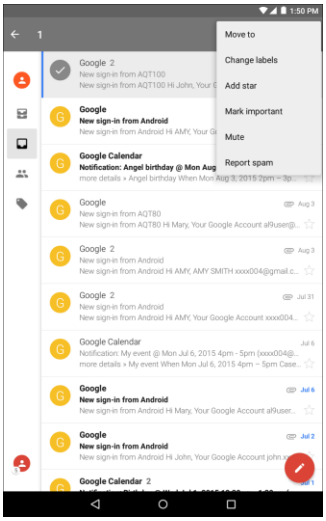

❖ The thread is now hidden.

Delete Gmail Threads

If you no longer wish to keep a Gmail conversation thread, you can simply delete it from the inbox.

1. From the home screen, tap **Apps** > **Gmail** .
2. Touch and hold a conversation thread to add a checkmark to it, and then tap .

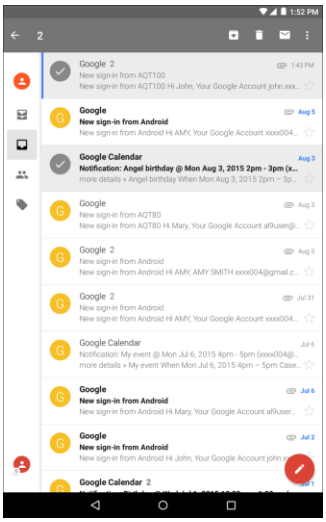

❖ The thread is deleted.

Search Gmail Messages

If you need to find a specific message or message thread, you can search Gmail from the inbox.

1. From the home screen, tap **Apps** > **Gmail** .
2. Tap .

3. Enter your search text and tap .

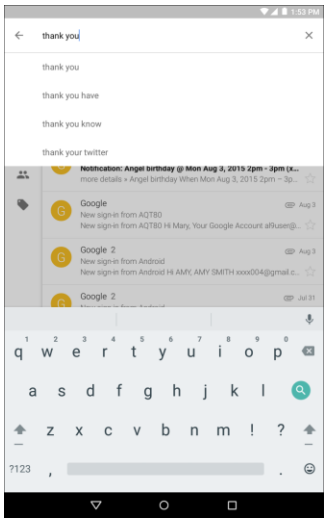

❖ The search results appear. Tap a message or thread from the list to display it.

Report Spam Gmail

You can report spam Gmail messages from your tablet's Gmail inbox.

1. From the home screen, tap **Apps** > **Gmail** .

❖ The inbox opens.

2. Touch and hold a conversation thread to add a checkmark to it, and then tap > **Report spam**.

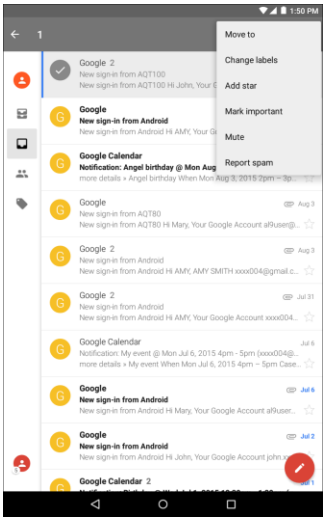

❖ The selected message is reported as spam Gmail.

Add Another Google (Gmail) Account

If you have multiple Gmail accounts you wish to view on your tablet, you can add them from the **Settings** > **Accounts** menu.

1. From the home screen, tap **Apps** > **Settings** > **Accounts** > **Add account**.
2. Tap **Google**, and then tap **Enter your email**.

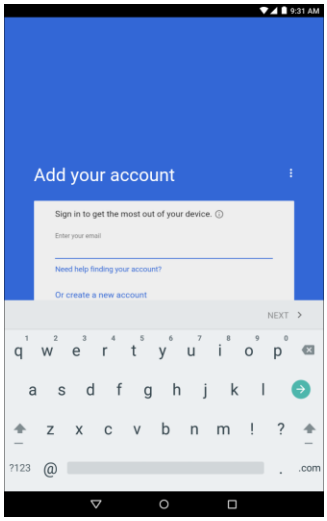

3. Enter your Gmail address and password, and then tap **NEXT**.
4. Follow the onscreen instructions to complete the email setup. Your tablet then communicates with the Google server to confirm your information.

   ❖ You are signed in to your Google Account, and you can access both of your Gmail accounts from the Gmail app.

Note: You can also sign up for a new Gmail account from the Settings menu. In step 2 above, tap **Or create a new account** and follow the prompts.

Switching between Gmail Accounts

If you have more than one Gmail account set up, you can switch between them in the Gmail app.

1. From the home screen, tap **Apps** > **Gmail**.
2. Tap . Then tap next to the primary account.

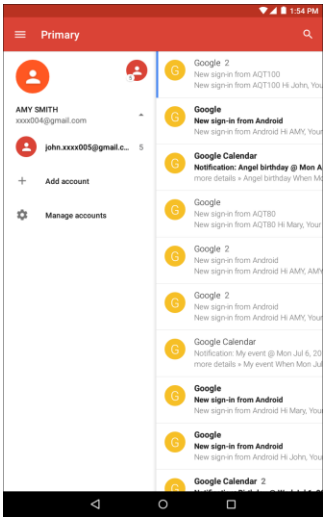

3. Tap the account you want to view from the list.

❖ The selected account inbox is displayed.

Gmail Settings

You can access settings for the Gmail app and for your individual Gmail accounts from the Gmail Settings menu.

1. From the home screen, tap **Apps** > **Gmail** .

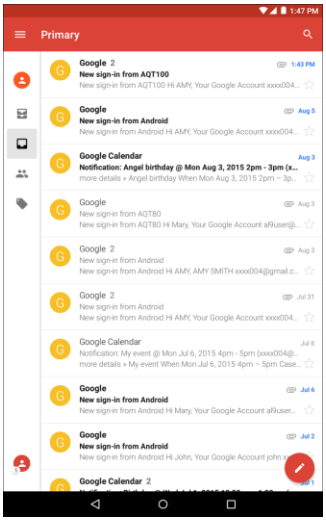

❖ The Primary inbox opens.

2. Tap ☰ > **Settings**.

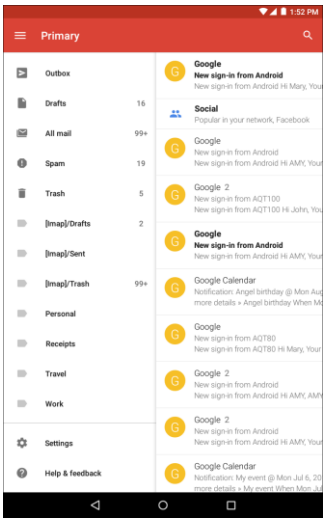

3. Tap **General settings** to access settings for all accounts, or tap an account name to configure settings for a specific Gmail account.

   - **General settings**: Gmail default action, Conversation view, Swipe actions, Sender image, Reply all, Auto-fit messages, Auto advance, Confirm before deleting, Confirm before archiving, and Confirm before sending.

   - **Account settings**: Inbox type, Inbox categories, Notifications, Inbox sound, Signature, Vacation responder, Sync Gmail, Days of mail to sync, Manage labels, Download attachments, and Images.

Note: Available settings are subject to change.

Email

Use the Email application to send and receive email from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

Set Up an Email Account

Your tablet supports several types of email accounts and allows you to have multiple email accounts set up at one time.

Before setting up an email account, make sure you have the username (user ID), password, server name, etc., so you can get set up successfully.

1. From the home screen, tap **Email** or tap **Apps** > **Email** .

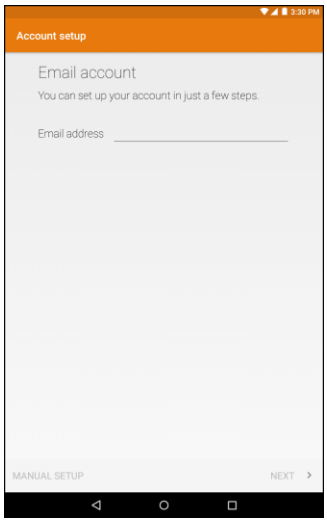

   - A popup window for adding an account appears if no email account has been previously set up.

2. Follow the onscreen instructions to set up your email account.

   - The email account is set up and you will begin receiving email.

Add an Email Account

You can add several types of personal email accounts, such as POP3 and IMAP accounts, on your tablet.

Add an Email Account from the Email App

You can add email accounts directly from the email app, even if you have another email account set up.

1. From the home screen, tap **Email** or tap **Apps** > **Email** .

   - The email inbox opens.

2. Tap ☰ > **Settings** > **Add account**.

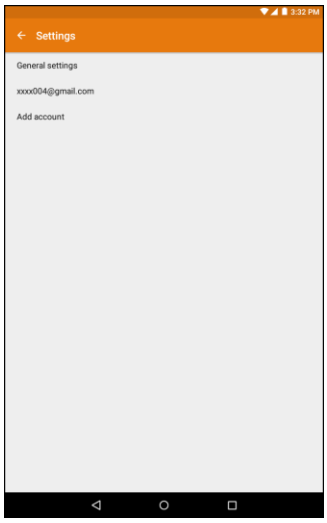

3. Follow the onscreen instructions to complete the account setup.

   ❖ The email account is added and you will begin receiving email for the account.

Note: You can also sign up for a new Email account from the Settings menu.

Important: If the account type you want to set up is not in the tablet database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

Add an Exchange ActiveSync Account

If you synchronize your tablet with your Exchange ActiveSync account, you can read, manage, and send email in the same easy way as with a POP3/IMAP account. However, you can also access some powerful Exchange features.

Important: Before setting up a Microsoft Exchange ActiveSync Account, contact your company's Exchange Server administrator for required account settings information.

1. From the home screen, tap **Apps** > **Settings** > **Accounts** > **Add account** > **Exchange**.

2. Enter your **Email address** and then tap **MANUAL SETUP**.

3. Tap **EXCHANGE**.

4. Enter your password and tap **NEXT**.

5. Enter the required information:

- **Username**: Enter your network domain and username, separated by “\”.
- **Password**: Enter your network access password (case-sensitive).
- **Server**: Enter your system’s Exchange server remote email address. Obtain this information from your company network administrator.
- **Security Type**: Select the security type.
- **Port**: Specify the port number.

6. Follow the onscreen prompts to configure options for the account.

Note: Consult your network administrator for assistance in configuring your account.

Compose and Send Email

Compose and send email using any account you have set up on your tablet. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. From the home screen, tap **Email** or tap **Apps** > **Email**.

❖ The email inbox opens.

- If you want to switch to a different email account, tap and then select another account.

2. Tap **Compose**.

❖ The email composition window opens.

3. Enter the message recipient(s).

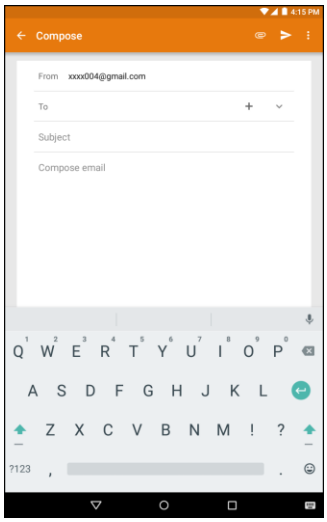

- You can add multiple recipients to an email message.
- To add recipients from Contacts, tap +, select the contact(s) you wish to include, and then tap ✓.

4. Enter the email subject and message.
   - To add an attachment to the message, tap > **Attach file**. Locate and then tap the file you want to attach.
5. Tap .

❖ The email message is sent.

Open Email Messages

You can open and read email messages directly from the email inbox. Reading and replying to email on your tablet is as simple as on your computer.

1. From the home screen, tap **Email** or tap **Apps** > **Email** .

❖ The email inbox opens.

2. Tap the message you want to view.

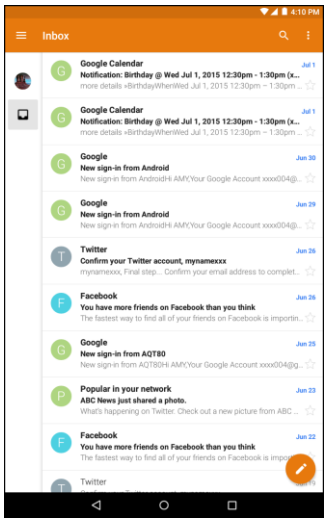

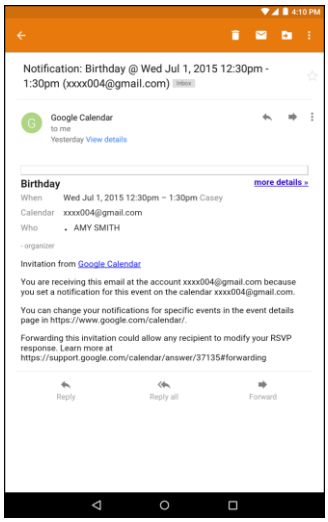

❖ The email message opens.

3. Tap to reply to the message.

   - To reply to all, tap > **Reply all**.

Tip: Tap the account name at the top of the screen to switch to a different email account.

Tip: You can also access new email messages from the notification panel. Pull down the status bar to display the notification panel, and then tap an email notification. The email inbox will open and display the new email message.

Options when Reviewing Email Messages

- **Resetting Mail as Unread**: With the email message open, tap .
- **Deleting Email**: With the email message open, tap .
- **Forwarding Email Messages**: With the email message open, tap , enter a recipient and an additional message, and tap .

Manage Your Email Inbox

Your email inbox provides management options for viewing, sorting, and deleting your email messages.

View Your Email Inbox

1. From the home screen, tap **Apps** > **Email** .

❖ The email inbox opens.

2. Tap ☰ and select the desired account, or tap **Combined view** to see all your email inboxes at once.

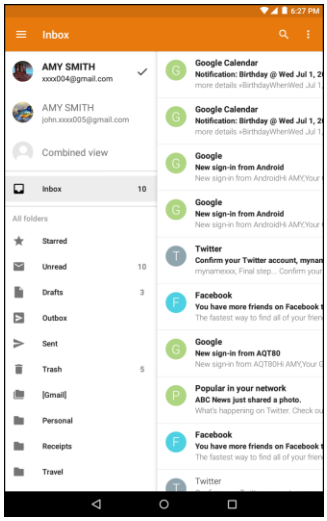

Refresh an Email Account

Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

- While viewing the account you want to synchronize, swipe your finger downward to refresh.

Sort Email Messages

1. On the email account inbox, tap ⋮ > **Sort by**.

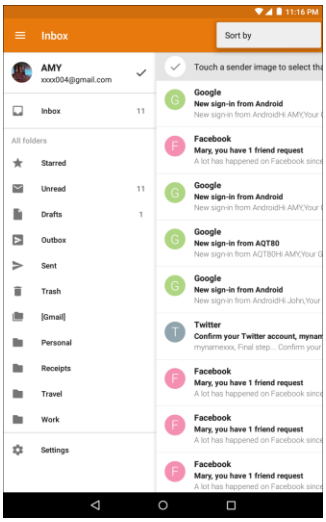

2. Select one of the sort options to sort email messages.

3. Tap **OK**.

Delete an Email Message

1. On the email account inbox, touch and hold the message you want to delete.

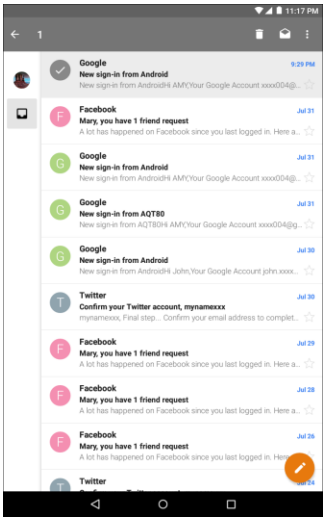

2. Tap .

Delete Multiple Email Messages

1. On the email account inbox, tap and hold the messages you want to delete.

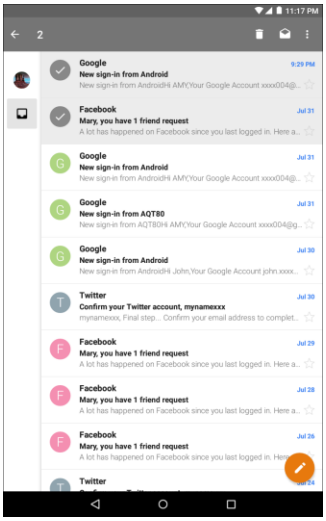

2. Tap .

Configure Email Settings

You can configure various settings for your email account such as account name, email checking frequency, default account, notifications, and server settings.

1. From the home screen, tap **Email** or tap **Apps** > **Email** .

2. Tap ☰ > **Settings**.

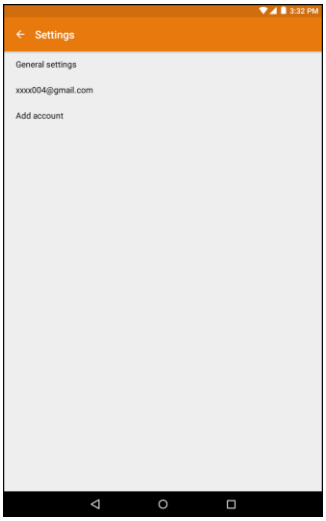

3. Tap **General settings** or an email account. Then change the desired settings.

Data Services General Information (4G LTE)

The following topics will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your tablet.

Important: Certain data services requests may require additional time to process. While your tablet is loading the requested service, the touchscreen or onscreen keyboard may appear unresponsive when in fact they are functioning properly. Allow the tablet some time to process your data usage request.

4G LTE

The Sprint 4G LTE network provides your tablet with wireless Internet access over greater distances than Wi-Fi and delivers data transfer rates of up to 60 Mbps. To connect your tablet to the 4G LTE network, you need to be in an area covered by the 4G LTE network.

For more information about the availability of Sprint 4G LTE service in your location, visit sprint.com/coverage.

Note: The availability and range of the network depends on a number of factors including your distance to the base station, and infrastructure and other objects through which the signal passes.

Set Your Network Options

1. From the home screen, tap **Apps** > **Settings** > **More** > **Cellular networks** > **Network operators**.

2. Select **Choose automatically** or select one of the available networks.

❖ The tablet will scan for the best available Sprint network and will automatically connect to it.

When your tablet is connected via 4G LTE, LTE appears in the status bar.

Note: The Sprint networks are self-discoverable, which means no additional steps are required for your tablet to connect to it.

Data Connection Status and Indicators

Your tablet displays the current status of your data connection through indicators at the top of the screen. The following symbols are used:

Icon	Status
◢	**Network (full signal):** The number of bars indicate the strength of the signal. More bars mean a better signal.
LTE	**4G LTE data service:** Your tablet is connected to a 4G LTE network.

Chrome Browser

Your tablet's Chrome mobile Web browser gives you full access to both mobile and traditional websites on the go, using LTE or Wi-Fi data connections. If you are signed in with a Google Account, the Chrome browser will import all your bookmarks and other Web preferences for use on your tablet.

Use the Browser

1. From the home screen, tap **Chrome** or tap **Apps** > **Chrome** .

   ❖ Chrome opens.

2. Tap the address bar at the top and enter search words (for a Google search) or a Web address (URL).

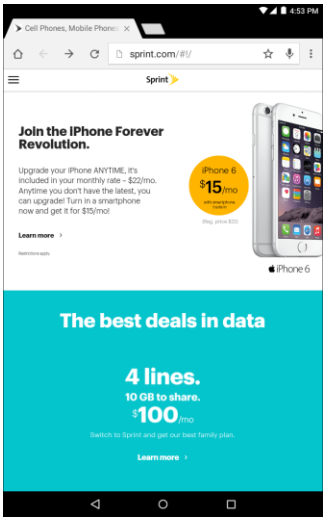

❖ The search results appear or a Web page opens.

Browser Use Options

- **Searching within a Web Page**: With a Web page displayed, tap ⋮ > **Find in page**, and enter your search text.

Tip: To change the tablet's default launch page to your current page, tap ⋮ > **Settings** > **Home page** > **Open this page** and enter the current page's Web address.

Add a Bookmark

Bookmark favorite sites using the browser menu options.

1. From the home screen, tap **Chrome** or tap **Apps** > **Chrome**.

   ❖ The browser opens.

2. Navigate to the Web page you want to bookmark, and tap ☆.

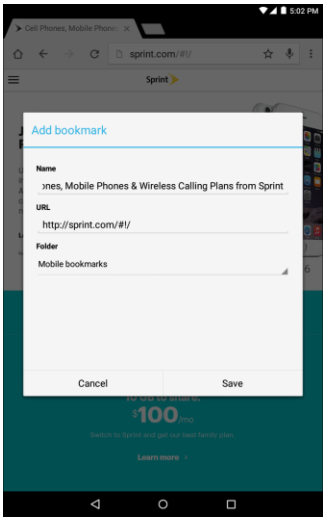

   ❖ The add bookmark window opens.

3. Check or change the bookmark title, URL, and the folder name. Then tap **Save** to save the settings.

   ❖ The Web page is added to bookmarks.

Bookmark Options

- **Editing Bookmarks**: From the browser, tap ⋮ > **Bookmarks**. Tap and hold a bookmark that you want to edit. Then tap **Edit bookmark** and edit the bookmark. Tap **Save** to save the changes.

- **Deleting Bookmarks**: From the browser, tap ⋮ > **Bookmarks**. Tap and hold a bookmark that you want to delete. Then tap **Delete bookmark**.

View Browser History

Use the browser menu options to view your browsing history.

1. From the home screen, tap **Chrome** or tap **Apps** > **Chrome** .

   ❖ The browser opens.

2. Tap > **History**.

3. Tap an entry.

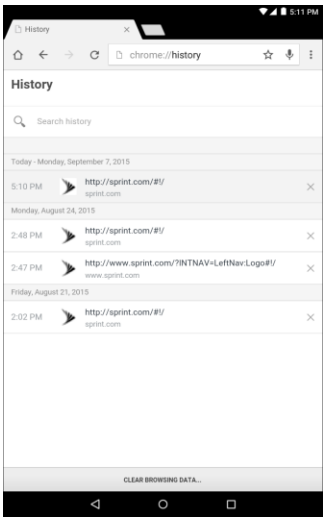

   ❖ The Web page opens.

Open New Browser Tabs

Use tabbed browsing to switch between websites quickly and easily.

1. From the home screen, tap **Chrome** or tap **Apps** > **Chrome** .

   ❖ The browser opens.

2. Tap ⋮ > **New tab**.

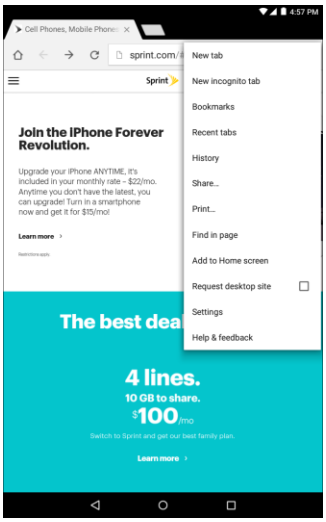

❖ A new tab appears.

❖ To switch tabs, tap one of the available thumbnails in the tabs window.

Learn to Navigate the Browser

Navigating through menus and websites during a data session is easy once you've learned a few basics. Here are some tips for getting around:

Scrolling

As with the other menus on your tablet, you will have to scroll up and down to see everything on the website.

To scroll a Web page:

- Slide your finger on the screen in the direction you wish to scroll.

Selecting

Once you've learned how to scroll, you can start navigating the Web.

To select items or links:

- Simply tap a link or an item.

Links, which are often displayed as underlined text, direct you to Web pages, select special functions, or more.

Go Back

Tap the **Back** key ◁ to go back one page.

Repeat this process to keep going back through your recently visited pages.

Browser Settings

The Browser menu offers additional options to expand your use of the Web on your tablet.

Open the Browser Menu

1. From the home screen, tap **Chrome** or tap **Apps** > **Chrome** .
2. Tap ⋮ to enter the Browser menu.

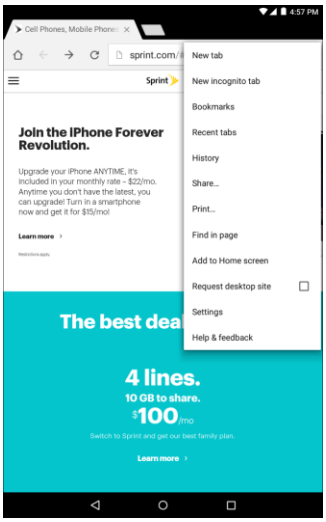

3. Select one of the available options and modify the setting.

Chrome Support

- To find on-tablet help with Chrome, from Chrome, tap ⋮ > **Help & feedback**.

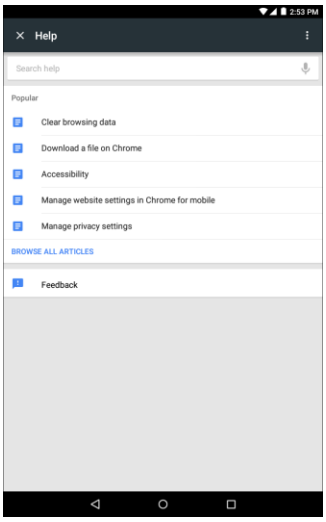

- A Web page will open displaying Google help for Chrome.

Tip: For more information, from your computer, visit: google.com/intl/en/chrome/browser/mobile/.

Camera and Video

You can use the camera or video camera to take and share pictures and videos. Your tablet comes with a 5 megapixel camera with an autofocus feature that lets you capture sharp pictures and videos.

Camera Overview

The camera's overview screen lets you view your subject and access camera controls and options.

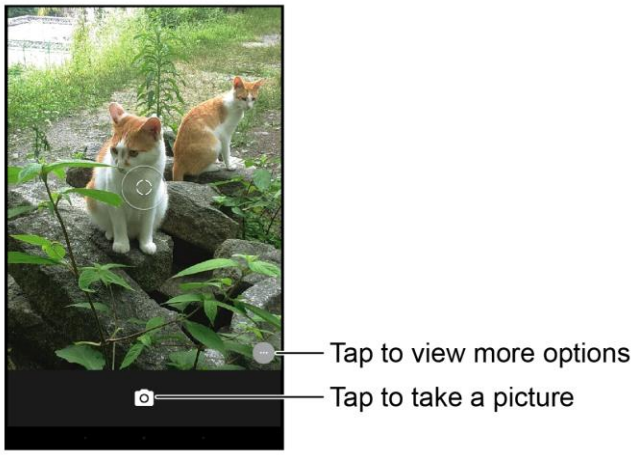

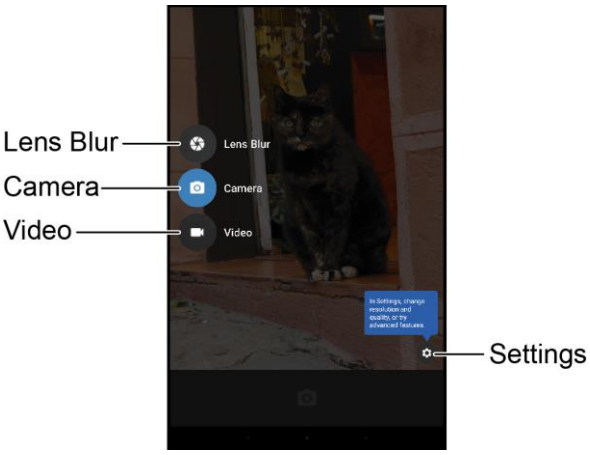

Tip: Swipe from left to right to switch modes or access the Settings menu.

Take Pictures and Record Videos

The following topics teach you how to take pictures and record videos with your tablet's camera.

Capturing Pictures/Videos

- **File Format for Pictures**: File format for pictures is JPEG.
- **File Format for Videos**: File format for videos is MPEG4.

⚠️ Camera Cautions

If Lens Becomes Dirty: Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

Avoid Exposure to Direct Sunlight: Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.

Take a Picture

You can take high-resolution pictures using your tablet's camera.

1. From the home screen, tap **Apps** > **Camera** .

   ❖ The camera viewfinder appears.

2. Aim the camera at your subject.

   - The camera will automatically focus, but you can tap another part of the screen to move the focus there.
   - Spread two fingers apart on the screen to zoom in.
   - Pinch two fingers together on the screen to zoom out.
   - To switch to the front camera, tap > . To switch back to the rear camera, tap .

3. Tap to take the picture.

Take a Picture with the Timer

You can capture photos using the timer.

1. From the home screen, tap **Apps** > **Camera** .
2. Tap .
3. Tap once to use the 3-second timer. Tap it again to use the 10-second timer.
4. To start the timer, tap .

- The picture will be taken after either 3 seconds or 10 seconds.

Record a Picture Using Lens Blur

You can make the subject of your picture stand out by blurring the background.

1. From the home screen, tap **Apps** > **Camera** .
2. Swipe from left to right, then tap to switch to Lens Blur mode.
3. Aim the camera at your subject and tap .

4. When prompted, slowly move the device up, keeping the focus centered on the subject.

Record Videos

Record high-quality videos using your tablet's video camera.

1. From the home screen, tap **Apps** > **Camera** .
2. Swipe from left to right, then tap to switch to Video mode.
   - To switch to the front camera, tap > . To switch back to the rear camera, tap .
3. Tap to start recording.

   - To take a photo, tap anywhere in the screen. The video will keep recording.
4. Tap to stop recording.

View Pictures and Videos

You can view the most recent pictures or videos.

- Swipe from right to left on any screen to view last taken picture or recorded video.

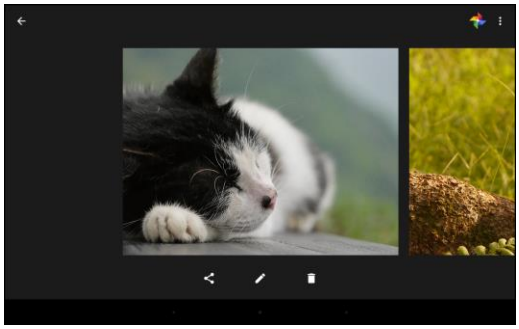

- If you took multiple photos or videos. Keep swiping left to scroll through them.

View Pictures and Videos Using Photos

Using the Photos application, you can view pictures and watch videos that you've taken with your tablet's camera, downloaded, or copied onto your storage card or tablet memory.

For pictures that are on your storage card or tablet memory, you can do basic editing such as rotating and cropping. You can also easily assign a picture as your contact picture or wallpaper and share pictures with your friends.

View Pictures and Videos

You can access and view all your stored pictures and videos from your tablet's Photos.

1. From the home screen, tap **Apps** > **Photos** .

   ❖ The Photos album opens. By default, the pictures and videos in an album are displayed in grid view.

2. Tap an image to view the picture or video.

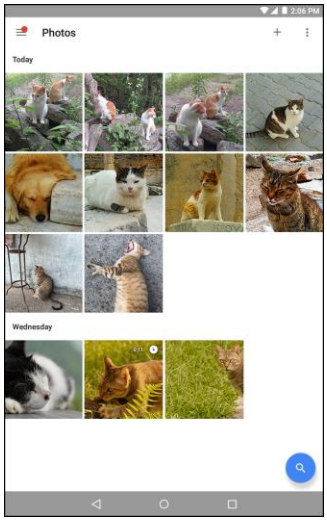

   ❖ The picture opens or the video begins playing.

   - Tap a picture or video to view it full screen.
   - When viewing pictures and videos, you can touch and hold an image to open a selection menu and choose what to do with the picture or video.

Pictures and Videos: Options while Viewing

- **Zoom In or Out on a Picture**: Tap the screen twice or pinch the screen to zoom in or out on a picture.

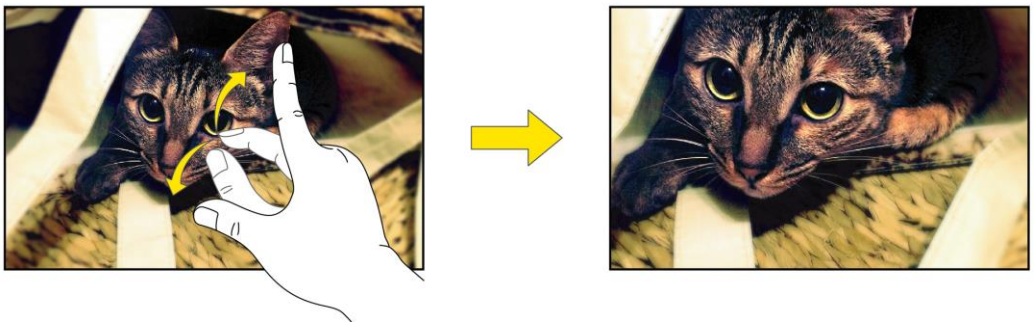

- **Viewing Videos**: Use the onscreen controls to play, pause, or stop the video playback.

Note: When viewing pictures, you can touch and hold on a picture or video to open a selection menu and choose what to do with the picture or video.

Edit Pictures

When viewing the photo or video, you can edit, delete, or view the file information.

1. From the home screen, tap **Apps** > **Photos** .
2. Select the picture you want to edit and tap .
3. Select one of the available options:

   - Tap to automatically adjust color and exposure, manually change lighting, manually adjust color, or add effects.
   - Tap to add or adjust a filter.
   - Tap to crop or rotate the picture.

Tip: While editing, you can tap and hold the picture to compare your edits to the original.

4. When finished editing, tap > **SAVE**.

Share Pictures or Videos

You can share your photos or videos with your friends and family.

1. From the home screen, tap **Apps** > **Photos** .
2. Select the picture or video you want to share.
3. Tap .

4. Select the desired sharing application or method.
5. Follow the onscreen prompts to complete and send the file.

Delete Pictures or Videos

You can delete the unwanted photos or videos.

1. From the home screen, tap **Apps** > **Photos** .
2. Select the picture or video you want to delete.
3. Tap to delete the file.

Camera Settings

You can adjust your camera's settings using the icons on the main camera screen and the full camera settings menu.

Change the Resolution, Quality and Viewfinder Aspect Ratio

You can specify the image resolution or video quality before taking the photo or recording the video.

1. From the home screen, tap **Apps** > **Camera** .
2. Swipe from left to right, then tap to access the Settings menu.
3. Tap **Resolution & quality**.

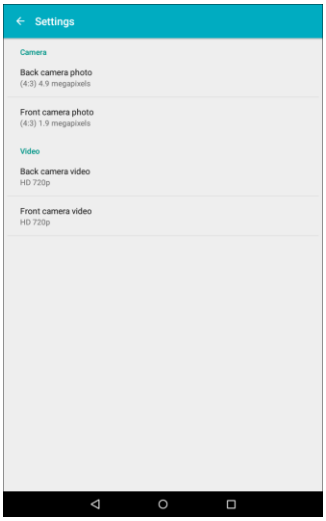

4. Select the camera type and change the desired setting.

Change Picture Location Settings

You can choose whether the camera stores location information for the pictures you take.

1. From the home screen, tap **Apps** > **Camera** .
2. Swipe from left to right, then tap to access the Settings menu.
3. Tap **Save location**.

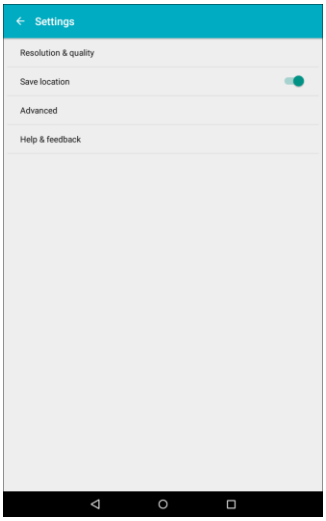

4. Slide the switch to on or off.

Apps and Features

The following topics detail many of your tablet's tools and features such as maps and navigation, calendar, clock, social networking apps, music, and more.

NASCAR MOBILE

Now you have the ability to get every bit of NASCAR coverage, news, and stats right on your phone.

Install the NASCAR MOBILE App on Your Phone

Before you use the NASCAR MOBILE app on your phone, you must download and install the app from Google Play.

1. From the home screen, tap **Apps** > **Play Store** .
2. Tap the Search icon and search for "nascar mobile".
3. Tap **NASCAR MOBILE** from the results list.
4. Tap **INSTALL**, and then tap **ACCEPT**.
   - ❖ The app will be downloaded and installed on your phone.
5. When the download has completed, tap **OPEN**.
   - To open the app from the home screen, tap **Apps** > **NASCAR** .

Use the NASCAR MOBILE App

1. From the home screen, tap **Apps** > **NASCAR** .

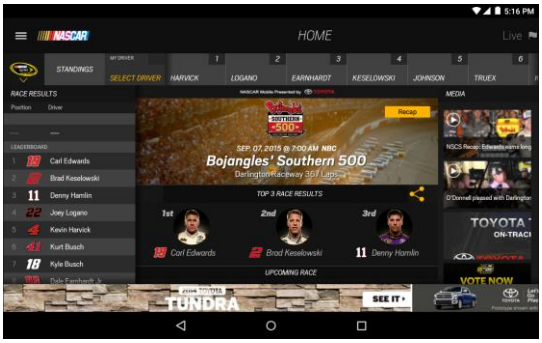

   - ❖ The NASCAR Mobile app opens.
2. Follow the prompts to customize your app and begin following your favorite racers.

Navigation Apps

Your tablet offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

Enable Location Services on Your Tablet

Before using any location-based services, you must enable your tablet's location feature. For information about setting your tablet's location options, see Location Access Settings.

Google Maps

Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

View Maps of Specified Places

Use Google Maps to locate and map a specific address or destination.

1. From the home screen, tap **Apps** > **Maps** .

   ❖ Google Maps opens.

   - If prompted, follow the onscreen instructions to accept terms of use.

2. Enter an address, city, facility name, etc., and then tap a candidate in the results list or tap on the onscreen keyboard.

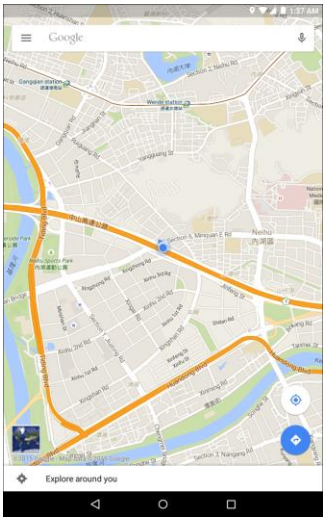

   ❖ A map of the specified location opens.

Google Maps Operations

- **Viewing Current Location**: From the Maps app, tap .

- **Obtain Useful Area Information for Current Location**: From the Maps app, tap , enter the information you're looking for, and then tap a result to view it.
- **View Traffic Information, Aerial Photos, Etc., in Maps**: From the Maps app, tap and then tap **Traffic**, **Satellite**, **Google Earth**, etc.
- **Check Route to Destination**: From the Maps app, tap , enter your current location and your destination, and then tap a method of transport (car, public transit, bicycle, or on foot).
  - ❖ Route candidates appear in a list.
- **Check Detailed Operation for Maps**: From the Maps app, tap > **Help**.

Scout

Scout™ by Telenav is a daily personal navigator that helps you get where you're going. It lets you see and hear turn-by-turn directions and it can provide important, personalized information about traffic and alternate routes.

Install the Scout App on Your Tablet

Before you use Scout on your tablet, you must download and install the app from the Google Play store app.

1. From the home screen, tap **Apps** > **Play Store** .
2. Tap the Search icon and search for "scout navigation".
3. Tap **Scout GPS Navigation & Meet Up** from the results list.
4. Tap **INSTALL**, and then tap **ACCEPT**.
   - ❖ The app will be downloaded and installed on your tablet.
5. When the download has completed, tap **OPEN**.
   - To open the app from the home screen, tap **Apps** > **Scout** .

Use Scout as Your Personal Navigator

1. From the home screen, tap **Apps** > **Scout** .
   - ❖ The Scout app will open.
   - If prompted, accept the terms of use before continuing.
2. Follow the on-screen instructions to access, launch, and use.

Hangouts

Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, and also use video calling. Log in to a Google Account beforehand (see Google Account).

Using Hangouts

1. From the home screen, tap **Apps** > **Hangouts** .

   ❖ The Hangouts app will open.

2. Tap **Add** to start a new Hangout.

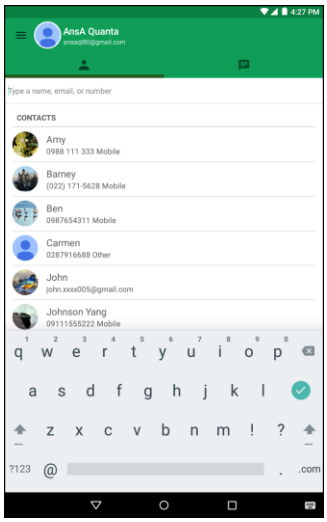

3. Type a name, email, number, or circle, or select a contact from the list.

4. Type a message or tap to start a video chat.

   ❖ A chat window or a video chat window opens.

   - Each time text is entered, the corresponding friend appears.
   - If a friend is not in a Hangout, you will see a message. Tap **INVITE** to invite them to join the Hangout.

Google Search

Search information saved on the tablet and in tablet applications as well as on the Internet.

Use Google Search

Type search terms in the Google Search bar to find information on your tablet and around the globe.

1. From the home screen, tap the Google search bar or tap **Apps** > **Google** .

❖ The Search window opens.

- If confirmation appears, follow the onscreen instructions.
- If a description for Google Now appears, tap **GET STARTED** and follow the onscreen instructions if you want to use Google Now.

2. Type your search keywords and tap on the onscreen keyboard.

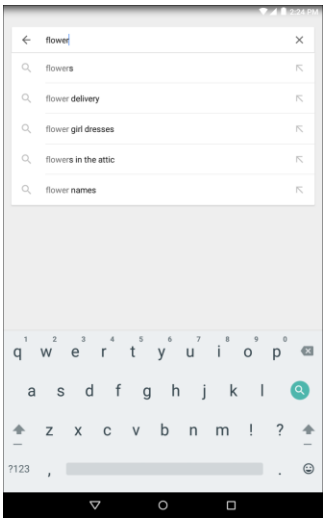

❖ Search results appear.

- To search by voice, tap in the search bar and speak your search terms.

Google Search Operations

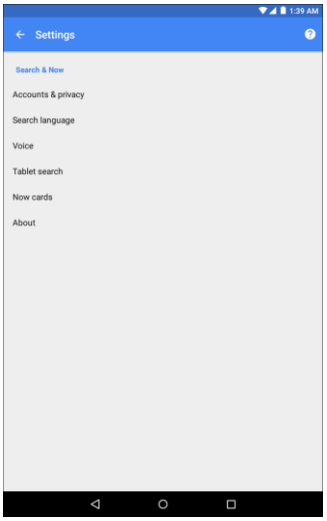

- **Managing Account and Privacy**: In the search window, tap > **Settings** > **Accounts & privacy** and change the settings.

- **Changing the Search Language**: In the search window, tap ☰ > **Settings** > **Search language** and select the spoken language.
- **Configuring Voice Search**: In the search window, tap ☰ > **Settings** > **Voice** and change the settings.
- **Changing Search Information**: In the search window, tap ☰ > **Settings** > **Tablet search** and select where to search.
- **Manage Now Cards**: In the search window, tap ☰ > **Settings** > **Now cards** and change the settings.
- **View Google Search Version**: In the search window, tap ☰ > **Settings** > **About** and view the version and legal information.

Use Google Voice Search

Use your voice to search instead of typing with Google Voice Search.

1. From the home screen, tap **Apps** > **Voice Search**.
   - ❖ The Voice Search window opens.
2. Speak your search terms.

   - ❖ Search results appear.

Calculator

Your tablet's convenient built-in calculator lets you perform basic mathematical equations.

1. From the home screen, tap **Apps** > **Calculator**.
   - ❖ The calculator app launches.

2. Tap onscreen keys for calculations.

❖ Calculation results appear.

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events.

In order to sync with your Google calendar, you must sign in to a Google Account on your tablet. See Google Account.

Change Calendar View

To change the calendar view, do the following.

- **Change Calendar View**: From the Calendar, tap ☰ > **Schedule**, **Day**, **Week**, or **Month** to change the current view.

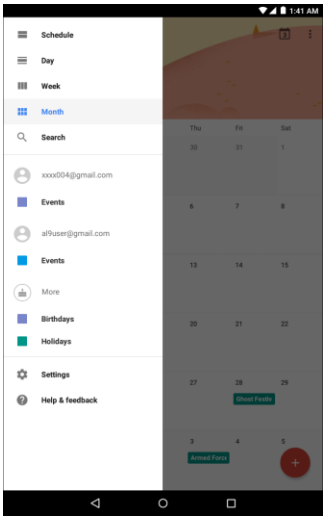

- **View Next/Previous Month/Week/Day**: From the Calendar, flick the screen left or right.

Add an Event to the Calendar

Add events to your calendar directly from the Calendar application.

1. From the home screen, tap **Calendar** or tap **Apps** > **Calendar**.

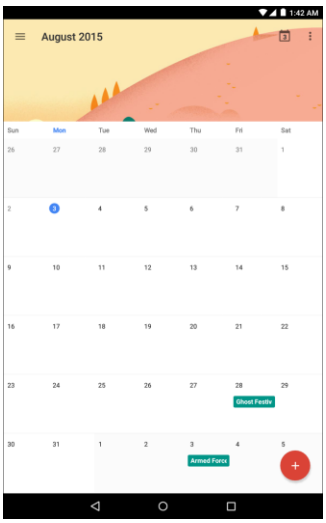

❖ The Calendar app opens.

2. Click an empty day or time on your calendar.

❖ The add event window opens.

Tip: You can also create an event by tapping .

3. Enter an event title, start date/time, end date/time, etc., and then tap **SAVE**.

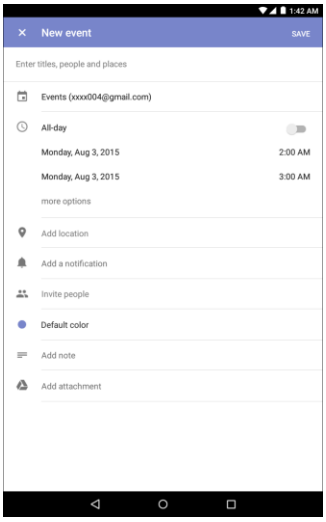

❖ The event is added to your calendar.

View Calendar Events

You can view more information about an event or edit the event.

1. From the home screen, tap **Calendar** or tap **Apps** > **Calendar**.

   ❖ The Calendar app opens.

2. Tap a date and then tap an event.

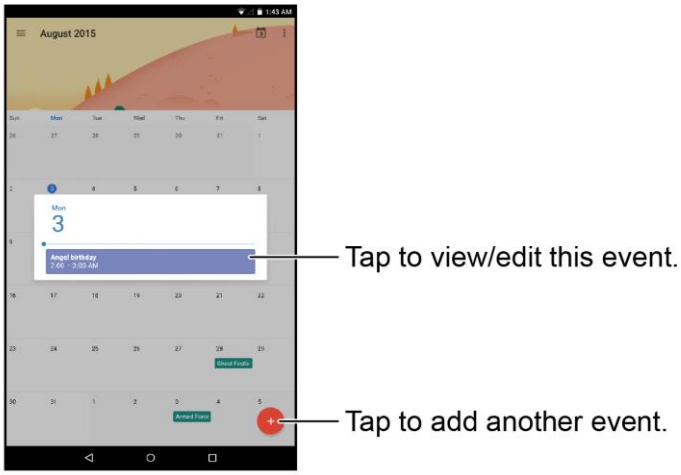

   ❖ The event details appear.

   - To edit the event, tap and modify the necessary settings. Then tap **SAVE** to save the changes.
   - To delete the event, tap > **DELETE**. Then tap **OK** to confirm the deletion.

Change Calendar Settings

You can view more information about an event or edit the event.

1. From the home screen, tap **Calendar** or tap **Apps** > **Calendar**.
2. Tap > **Settings**.

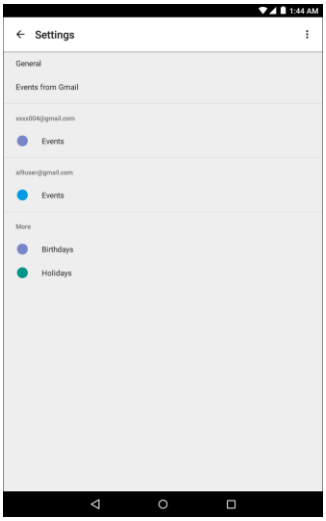

3. Tap the menu option you want to configure.

4. Change the necessary settings.

Clock

Your tablet has a clock app that lets you set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your tablet as a desk clock.

Check the Time

You can check the tablet any time on your tablet. The current time displays in the upper right corner of the status bar. Many widgets and lock screens also display the time and provide options for how time is displayed.

Set Alarms

Set multiple alarms using your tablet's Clock app.

1. From the home screen, tap **Apps** > **Clock** .

   ❖ The Clock appears.

2. Tap on the top of the screen.

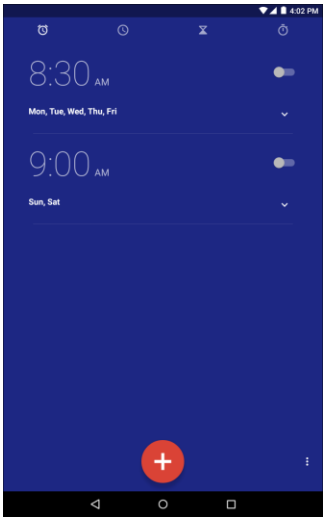

3. Tap to add a new alarm.
4. Slide the clock pointer to set the time and then tap **OK**.
5. Check the **Repeat** checkbox to set the repeat mode. Then select the desired week days.
6. Tap to set the ringtone. Then select the desired alarm sound and tap **OK** to confirm.
7. Tap **Label** to enter the alarm label. Enter the name and tap **OK**.

❖ The alarm is set.

Additional Clock Features

Your tablet's clock app provides additional useful features including world clock, stopwatch, and timer functions. All features are available from the clock app display.

■ From the home screen, tap **Apps** > **Clock** .

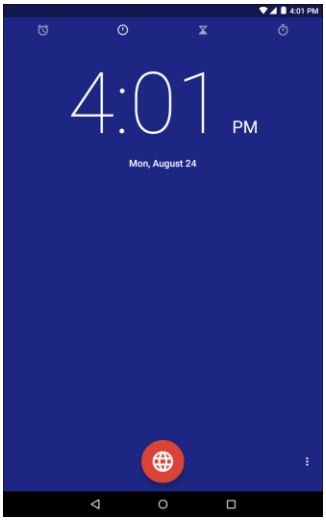

❖ The Clock appears.

World Clock

The world clock lets you keep track of the current time in multiple cities around the globe.

1. From the clock app, tap on the top of the screen.
2. Tap and select a city.
3. Repeat to add multiple cities.

Timer

The timer provides a countdown timer.

1. From the clock app, tap on the top of the screen.
2. Use the keypad to set the length of the timer.

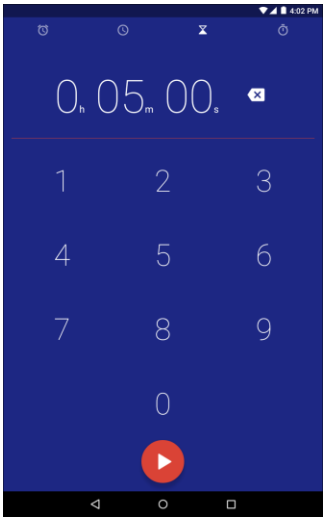

3. Tap to begin the timer.

Stopwatch

The stopwatch lets you time events down to the hundredth of a second.

1. From the clock app, tap on the top of the screen.
2. Tap to start the stopwatch.

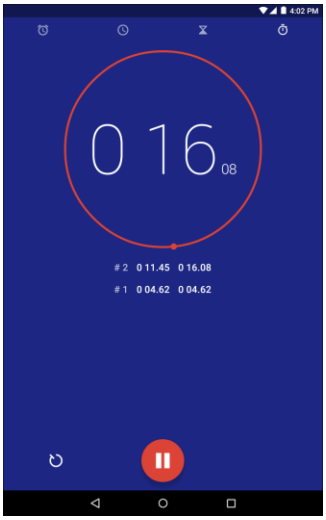

   - While the watch is running, tap to record a lap. Repeat this step to record another new lap.

3. Tap to pause the stopwatch.
   - To reset the stopwatch, tap .
   - To share your results, tap .

Facebook

Post updates, read what your friends are up to, upload pictures and check-ins, and more with on-the-go Facebook access.

Sign in to Your Facebook Account

Before you use Facebook on your tablet, you must sign in first to your Facebook account.

1. From the home screen, tap **Apps** > **Facebook** .

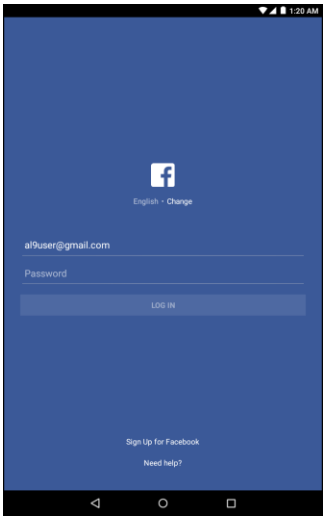

2. Enter your Facebook username and password and tap **LOG IN**.

   ❖ Your Facebook account is added to your tablet.

Tip: If you do not have a Facebook account, tap **Sign Up for Facebook** to create a new account.

Use Facebook

Once you've downloaded the app and signed in, you can post and read updates, upload pictures, tag locations, and more, all from your tablet.

1. From the home screen, tap **Apps** > **Facebook** .

   ❖ The Facebook app launches.

   - If this is the first time you've used Facebook on your tablet, enter your Facebook ID and password and tap **LOG IN** to sign in to an existing account, or tap **Sign Up for Facebook** to set up a new Facebook account.

2. Tap **STATUS** and type an update, tap **PHOTO** and upload a picture from the gallery, tap **CHECK IN** to share your location, "Like" and comment on friends' posts, and more.

YouTube

View videos uploaded to YouTube and upload your own videos to your YouTube account.

View YouTube Videos

You can use the YouTube app to view videos on YouTube even if you aren't signed in to a YouTube account.

1. From the home screen, tap **Apps** > **YouTube** .

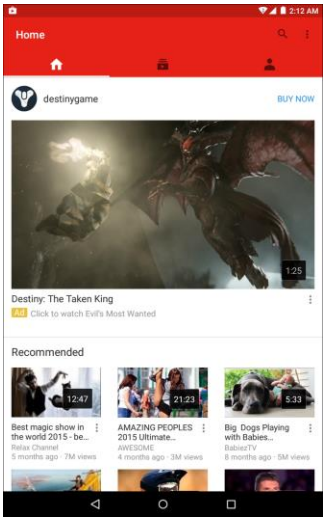

❖ The YouTube app launches.

- If you're prompted to provide confirmation to use the site, follow the onscreen instructions to continue.

2. Search through the YouTube channels and tap a video you want to see.

❖ The video plays on your tablet screen.

- Tap the screen to pause or resume play while watching.

Post a Video to YouTube

You can post videos to your YouTube account from your tablet. Before posting, you must set up a YouTube account and sign in to it on your tablet.

1. From the home screen, tap **YouTube** or tap **Apps** > **YouTube**.
2. Tap tab.

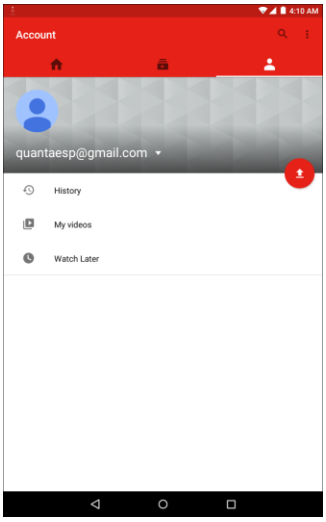

3. Tap and select a video to upload.

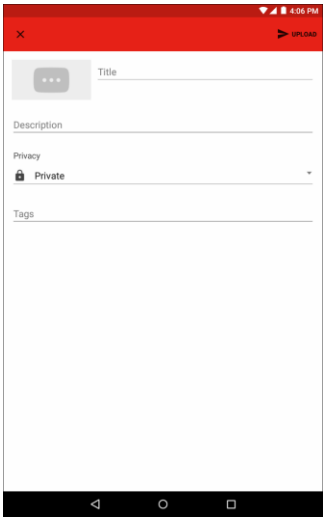

- Enter a title, description, and tags, and select a privacy setting.

4. Tap **UPLOAD**.

❖ The video is uploaded to your YouTube channel.

Google Play Music App

The Google Play Music app lets you browse, shop, and play back songs purchased from Google Play as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Play Music library and instantly ready to play via streaming or download.

For more information about Google Play Music, visit play.google.com/about/music.

Note: For information about loading music onto your tablet, see Transfer Files between Your Tablet and a Computer.

Play Music with Google Play

Use the Google Play Music app to listen to all your music on your tablet. Compatible music file formats include: MP3 and WAV.

1. From the home screen, tap **Apps** > **Play Music** .

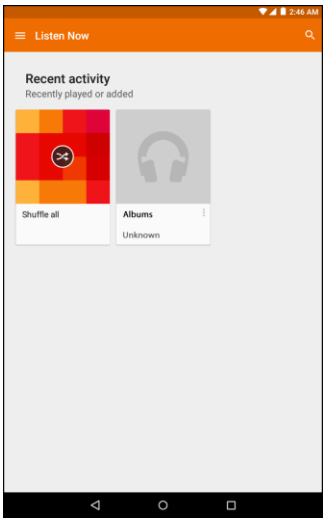

❖ The Play Music app opens.

- If this is the first time you've used Google Play Music on your tablet, you need to sign in or add a new account to get started.

2. To open the media library, tap > **My Library**. Then select a library category such as GENRES, ARTISTS, ALBUMS, or SONGS.

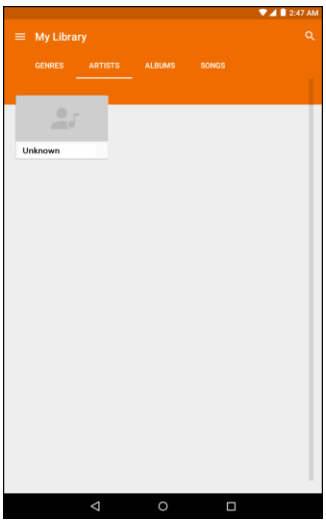

3. Tap an item from the category window and then tap a song.

❖ The song begins playing.

Google Play Music Screen Layout

The following diagram outlines the main features of the Play Music app player screen.

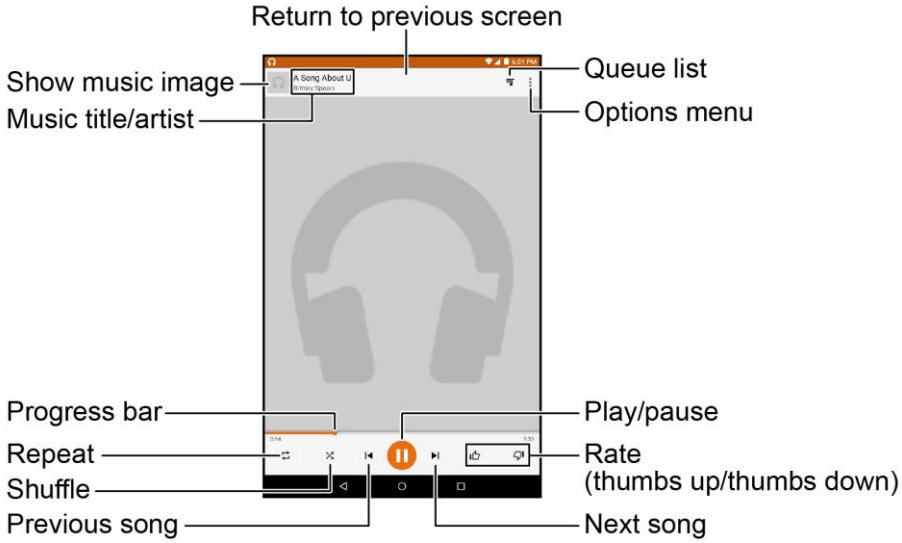

Feature	Description
Return to music list	Tap to return to the previous screen.
Show music image	Display music image.
Music title/artist	Display a music title and artist name.

Feature	Description
Progress bar	Drag the bar forward/back to move to any point in a song.
Repeat	Repeat a song.
Shuffle	Play songs in random order.
Previous song	Tap to restart the current song. Tap twice to go back to the previous song.
Play/pause	Tap to switch play and pause.
Next song	Go to the next song.
Rate (thumbs up/thumbs down)	Tap to rate the current song.
Options menu	Set the following options: Add to playlist, Go to artist, Go to album, Clear queue, Save queue.
Queue list	Display a queue list.

Create Playlists in Google Play Music

Organize music into playlists to fit every occasion.

Adding Music to a Playlist

1. From the home screen, tap **Apps** > **Play Music** .
2. Tap a category on the music library screen.

3. Tap ⋮ next to the song you want to add to a playlist. Then tap **Add to playlist**.

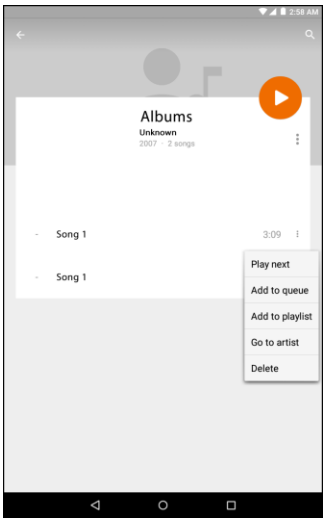

4. Tap **New playlist**.

5. Enter a name and tap **CREATE PLAYLIST**.

❖ The playlist is created.

Playing a Playlist

1. Tap ☰ > **My Library** and select **PLAYLISTS** tab.

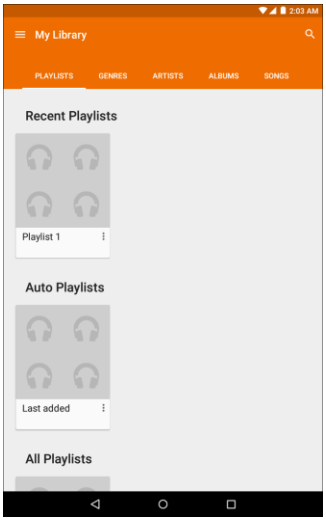

2. Tap the playlist you want to play. Then tap the song you want to play.

Deleting a Song from a Playlist

1. Tap ☰ > **My Library** and select **PLAYLISTS** tab.

2. Tap the playlist you want to access. Then tap ⋮ next to the song you want to delete.

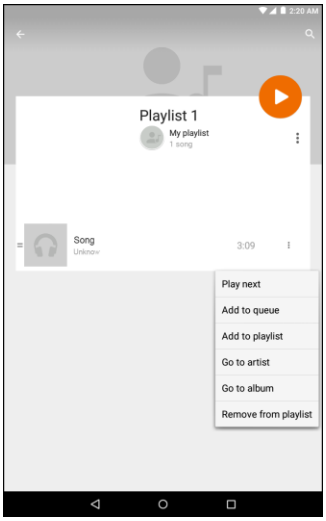

3. Tap **Remove from playlist**.

Sprint Music Plus

With Sprint Music Plus and the Music Store, Ringtone Store, and Ringback Tone Store, you can purchase, download, and play music, ringtones, and ringback tones for your tablet.

Update the Sprint Music Plus App on Your Tablet

Before you use Sprint Music Plus on your tablet, you must update the app from the Google Play store app.

1. From the home screen, tap **Apps** > **Play Store** .
2. Tap **Menu** > **My apps**.

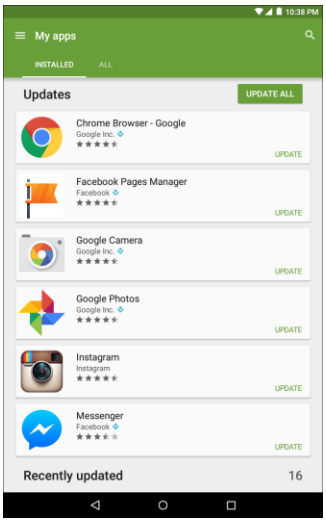

3. Tap **Sprint Music Plus**.

4. Tap **UPDATE** > **ACCEPT**.

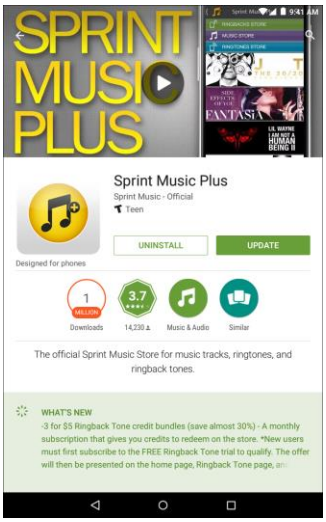

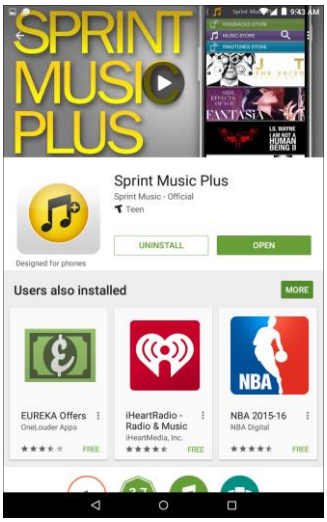

5. When the update has completed, tap **OPEN**.

   - To open the app from the home screen, tap **Apps** > **Sprint Music Plus**.

Access Sprint Music Plus

1. From the home screen, tap **Apps** > **Sprint Music Plus**.

❖ The app opens.

   - The first time you use the app, tap **Accept** to agree to the Premium Services Terms of Use.

2. Tap a store option from the main page (**Ringbacks Store**, **Music Store**, or **Ringtones Store**), or tap > **Music** (under **Library**) to access your music.

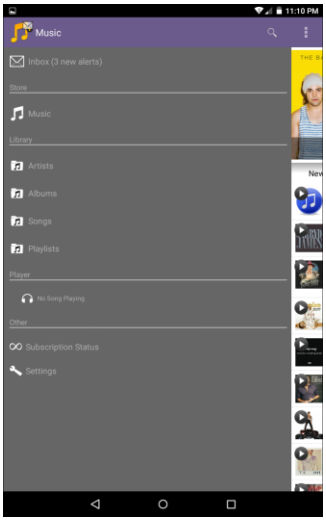

- Tap the onscreen navigation tools to skip ahead or rewind. Tap at any time to see additional options.

- For more information, tap > **Settings** > **About** or **Help**.

Note: If you have loaded music on to your tablet from your computer (see Transfer Files between Your Tablet and a Computer), you will need to sync your music to listen to it through Sprint Music Plus. From the Sprint Music Plus app, tap > **Settings** > **Synchronize your music library**. Once synced, you will see your music in the library.

Purchase and Download Music from the Sprint Music Plus Store

From the Sprint Music Plus Store, you can shop for songs to purchase and download to your tablet.

1. From the home screen, tap **Apps** > **Sprint Music Plus** > **Music Store**.

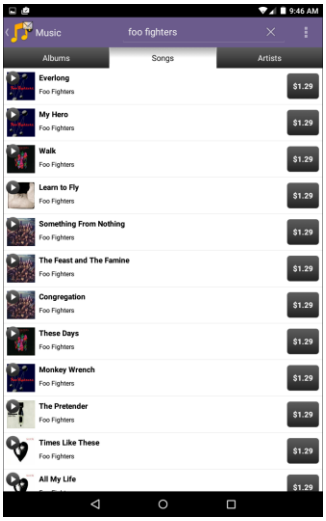

❖ The app will open and display the Music Store.

2. Enter a song or artist in the search field or browse through options in the tabs in the center of the screen.

3. Tap a song to select it.

❖ The song information screen is displayed.

4. Follow the onscreen instructions to preview or purchase the song. Tap at any time to display the Sprint Music Plus menu.

Tip: For ringtones or ringback tones, tap **Ringtone Store** or **Ringback Tone Store** from the Sprint Music Plus main menu.

Connectivity

The following topics address your tablet's connectivity options, including USB file transfer, Wi-Fi, Bluetooth, and more.

Transfer Files between Your Tablet and a Computer

You can use the supplied USB cable to connect your tablet directly to your computer and transfer music, pictures, and other content files.

For example, if you have a music album stored on your computer that you want to listen to on your tablet with any of the music apps, just attach your tablet to the computer and copy the files to the music folder.

File Transfer Tips

- If you want to save data to a memory card on your tablet, make sure the microSD card is installed and active. See microSD Card.
- Avoid removing the microSD card while transferring data.
- Data exchange may use the methods outlined in the following table:

Method	Description
Media Device (MTP)	Transfer files between your tablet and PC such as pictures, videos, and music.
Camera (PTP)	Transfer picture and video files between your tablet and PC.
Mount SD card	Transfer media files in the memory card on the computer.
Charging	Only charging the device.

Transfer Files between the Tablet and a Computer

1. Connect your tablet to your computer using the supplied USB/charging cable.
   - Insert the larger end of the cable to the charger/accessory jack at the top of the tablet.
   - Insert the USB end of the cable into an available USB port on your computer. You may need to remove the USB cable from the charging head to access it.

2. Pull down the status bar to display the notification panel. The USB connection options appears.

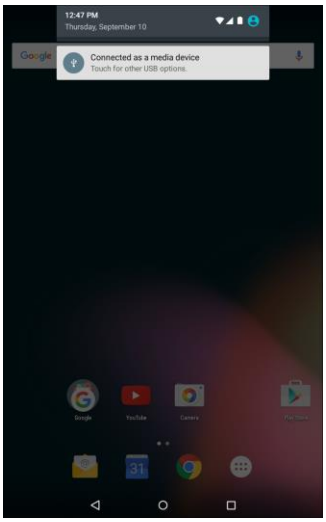

❖ The files on your tablet can now be accessed via your computer.

- For most transfers, you'll want to use **Connected as a media device**.
- To change the option, tap it in the notification panel to open the **USB computer connection** window, and then tap the desired option.

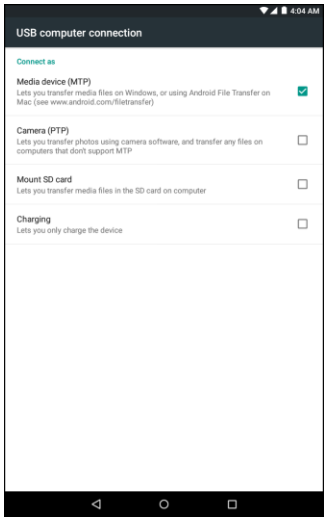

3. On your computer, navigate to the detected device (such as through the My Computer menu) and open it.
4. If available, select a drive (**SD card** for microSD card, **Internal storage** for internal tablet storage).
5. Select a folder (for example, **Music** for songs and albums) and copy files to it from your computer.
6. When you are done, disconnect your tablet from your computer.

❖ The transferred files are now saved to your tablet or microSD card.

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your tablet's Wi-Fi, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

Turn Wi-Fi On and Connect to a Wireless Network

Use the wireless and networks settings menu to enable your tablet's Wi-Fi radio and connect to an available Wi-Fi network.

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Wi-Fi** .

❖ The Wi-Fi settings menu appears.

3. Tap the switch to **On** to turn Wi-Fi on.

❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.

- To disable Wi-Fi, tap the switch to **Off** .

4. Tap a Wi-Fi network to connect, enter the password (if it's not an open network), and then tap **CONNECT**.

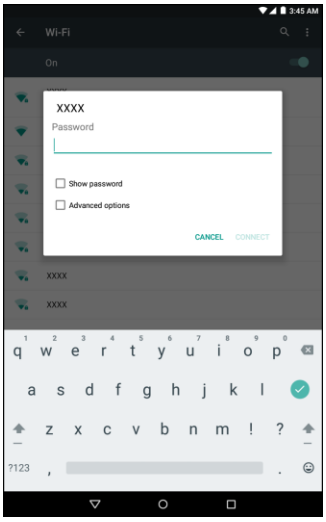

❖ Your tablet is connected to the Wi-Fi network. You will see ( ) in the status bar.

- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.

- Entering a password is not required if an access point is not security protected.

Note: The next time your tablet connects to a previously accessed secured wireless network, you will not be prompted to enter the password again, unless you reset your tablet to its factory default settings or you instruct the tablet to forget the network.

Note: Wi-Fi networks are self-discoverable, which means no additional steps are required for your tablet to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed wireless networks.

Wi-Fi Settings

Use the Wi-Fi settings menu to manually set your Wi-Fi connection options.

1. From the home screen, tap **Apps** > **Settings**.
2. Tap **Wi-Fi**.
3. Tap the switch to **On** to turn Wi-Fi on.
4. Tap ⋮ > **Advanced**.

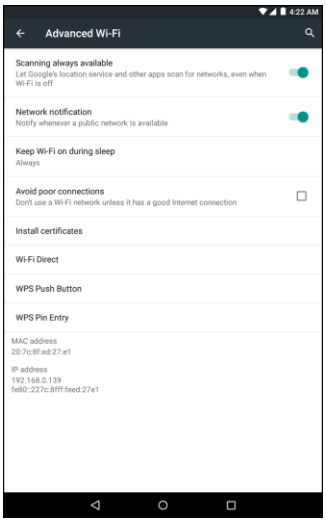

❖ The advanced Wi-Fi settings menu appears.

5. Configure your Wi-Fi settings.

❖ Your Wi-Fi settings changes are saved.

Disconnect Wi-Fi

You may wish to disconnect from a connected Wi-Fi network without turning Wi-Fi off.

1. From the home screen, tap **Apps** > **Settings**.
2. Tap **Wi-Fi**.

3. Tap the name of the connected access point and then tap **FORGET**.

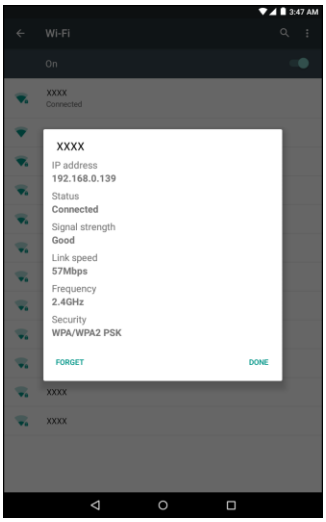

❖ Wi-Fi is disconnected.

- After disconnecting from an access point, you may need to re-enter the password to reconnect.

Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices simply via Wi-Fi, without an access point or via the Internet.

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Wi-Fi** .

❖ The Wi-Fi settings menu appears.

3. Tap the switch to **On** to turn Wi-Fi on.

❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.

4. Tap > **Advanced** > **Wi-Fi Direct**.

❖ The Wi-Fi Direct settings menu appears.

- Wi-Fi Direct and Wi-Fi are unavailable at the same time.

5. Tap a device with which to connect.

- If connected via Wi-Fi, you will see a confirmation. Follow the onscreen instructions.

6. Accept the connection on the other device.

❖ The tablet is connected via Wi-Fi Direct.

- If a connection is not accepted after a certain period, the connection request is canceled.
- To stop a connection, tap **End connection** > **OK**.

Hotspot

Hotspot allows you to turn your tablet into a Wi-Fi hotspot. When this feature is turned on, you can share your tablet's mobile data services via Wi-Fi with other Wi-Fi enabled devices. The feature works best when used in conjunction with 4G data services.

Important: Use of the Hotspot feature requires an additional subscription. Sign on to your account at sprint.com/mysprint to learn more.

Note: Turning on Hotspot will disable your tablet's connection to other Wi-Fi networks.

Set Up Hotspot

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **More** > **Tethering & portable hotspot**.

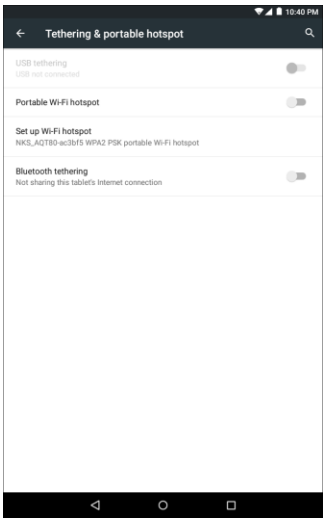

❖ The Tethering & Portable Hotspot window opens.

3. Tap the **Portable Wi-Fi hotspot** switch to **On** to turn Hotspot on.

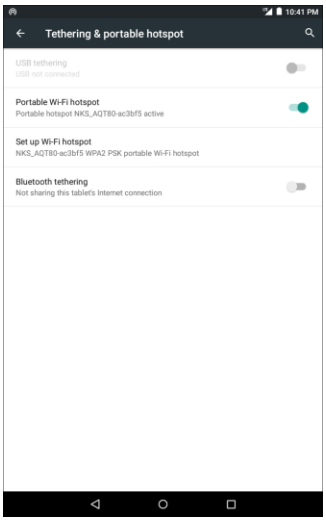

❖ Hotspot is enabled.

- To disable Hotspot, tap the switch to **Off** .

Note: The best way to keep using the tablet as a hotspot is to have it connected to a power supply.

Important: Write down the passkey (password) for this communication (shown onscreen).

Connect to Hotspot

1. Enable Wi-Fi (wireless) functionality on your target device (laptop, media device, etc.).
2. Scan for Wi-Fi networks from the device and select your tablet hotspot from the network list.
3. Select this tablet and follow your onscreen instructions to enter the passkey (provided on the Wi-Fi Hotspot page).

❖ The device is connected via your tablet's Hotspot.

4. Launch your Web browser to confirm you have an Internet connection.

Tethering

Use Tethering to share your device's Internet connection with a computer that connects to your device via USB cable, or by Bluetooth.

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **More** > **Tethering & portable hotspot**.
3. Select a tethering option: **USB tethering** or **Bluetooth tethering**.

❖ Tethering is turned on, and your tablet's Internet connection can be shared with a connected device.

- For USB tethering, connect your tablet to the target device with the supplied USB cable.
- For Bluetooth tethering, pair your tablet with the other device via Bluetooth.

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless tablets. The Bluetooth communication range is usually approximately 30 feet.

Bluetooth Hints

Question: Can't use Bluetooth?

Answer: Is your tablet in airplane mode? Bluetooth is unavailable in airplane mode.

Bluetooth Function Cautions

Information may not appear correctly on connected devices depending on the transferred data.

Bluetooth Information

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.

Function	Description
Audio output	Listen to music, etc., wirelessly.
Data exchange	Exchange data with Bluetooth devices.

Enable the Bluetooth Feature

Use the settings menu to enable or disable your tablet's Bluetooth capabilities.

- Wireless connection to all Bluetooth functions is not guaranteed for the tablet.
- The tablet may not connect properly depending on the other device.

To enable Bluetooth:

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Bluetooth** .
   - The Bluetooth settings open.
3. Tap the switch to **On** to turn Bluetooth on.

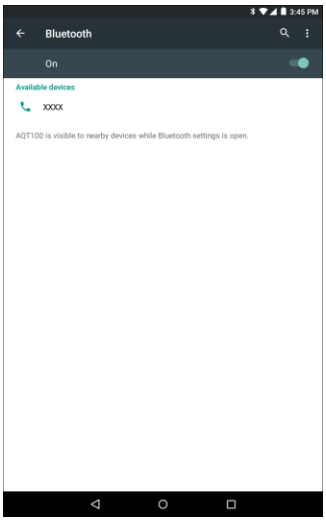

❖ Bluetooth is enabled.

- To disable Bluetooth, tap the switch to **Off** .

Tip: You can also turn Bluetooth on or off with the toggle menu in the notification panel. Pull down the status bar to display the notification panel and then tap **Bluetooth** to turn Bluetooth on or off.

Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless tablet is prohibited, such as aboard an aircraft and in hospitals.

Pair Bluetooth Devices

Search for and pair nearby Bluetooth devices. Registered Bluetooth devices can be connected simply.

- Enable the Bluetooth function on the Bluetooth devices being paired beforehand.

To pair Bluetooth devices:

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Bluetooth** .

   ❖ The Bluetooth settings open.

   - Nearby devices appear in the “Available devices” list.
   - If a target device is not detected, tap > **Refresh** to search again.

3. Tap a device from the “Available devices” list, and follow the onscreen instructions to pair with the device.

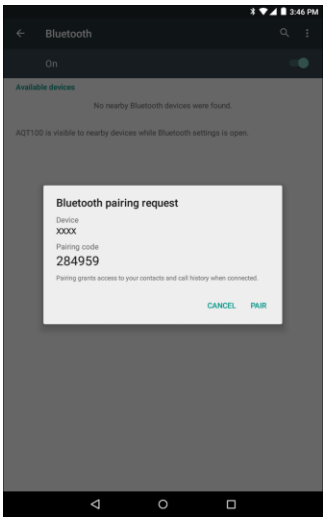

❖ The Bluetooth device is paired to your tablet.

- Methods to accept a Bluetooth connection differ depending on the devices used.

Unpairing from a Paired Device

1. From the Bluetooth settings menu, tap ⚙ next to the paired device you wish to unpair.

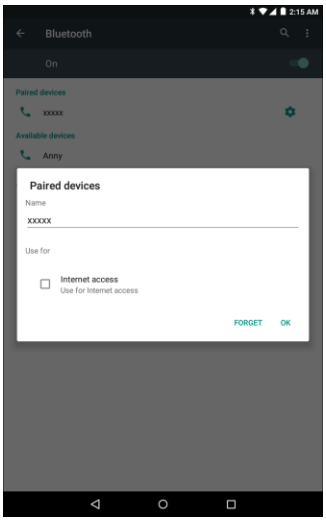

2. Tap **FORGET**.

❖ The device is unpaired from your tablet. To make another connection with the device, you will need to pair again.

Connect to a Paired Bluetooth Device

You can listen to music over a Bluetooth stereo headset. It’s the same procedure to set up stereo audio and hands-free devices.

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Bluetooth** .
   - ❖ The Bluetooth settings open.
     - Paired Bluetooth devices appear in the “Paired devices” list.
3. Tap a device from the “Paired devices” list.
   - ❖ Your tablet connects to the paired device.

The pairing and connection status is displayed below the device’s name in the Bluetooth devices section. When the device is connected to your tablet, the Bluetooth paired icon is displayed in the status bar. Depending on the type of device you have connected, you can then start using the headset or car kit to listen to music.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Send Information Using Bluetooth

You can use Bluetooth to transfer information between your tablet and another Bluetooth-enabled device such as a tablet or notebook computer.

Types of Data You Can Send via Bluetooth

You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Contacts
- Audio files

In the instructions below, Contacts data is being used as an example.

Sending Contacts Data via Bluetooth

1. From the home screen, tap **Apps** > **Contacts** .
2. Tap a contact to send.
3. Tap > **Share** > **Bluetooth**.

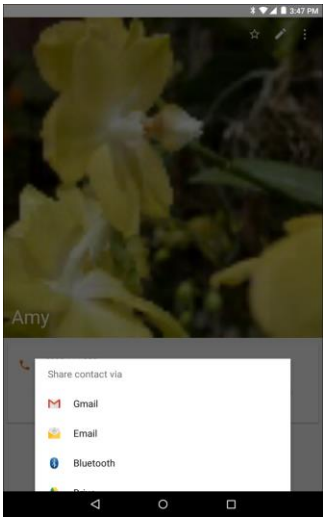

4. Tap a paired device to receive the data.

❖ The contact information is sent.

- If you see a message to confirm, follow the onscreen instructions.

Receive Data via Bluetooth

Your tablet is capable of receiving a wide variety of file types with Bluetooth, including pictures, music tracks, and documents such as PDFs.

1. When another device attempts to send a file to your tablet via Bluetooth, you will see a request to accept the file.

2. Tap **ACCEPT**.

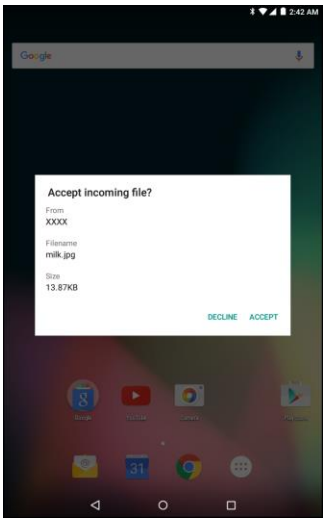

❖ The file is sent to your tablet.

- When your tablet receives a file, you will see a notification. To open the file immediately, pull down the status bar to display the notification panel, and then tap the notification.

- When you open a received file, what happens next depends on the file type:
  - Media files and documents are usually opened directly in a compatible application. For example, if you open a music track, it starts playing in the Music application.
  - For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

Settings

The following topics provide an overview of items you can change using your tablet's Settings menus.

Basic Settings

From the home screen, tap **Apps** > **Settings** to access your tablet's settings menu.

The table below outlines the top-level settings categories.

Category	Description
Wi-Fi	Enable and set Wi-Fi options.
Bluetooth	Enable and configure Bluetooth connections.
Data usage	Check your tablet's data usage.
More	Provides additional wireless and network options.
Display	Set wallpaper, brightness, screen timeout, and more.
Sound & notification	Control your tablet's audio such as media, alarms, and notifications.
Storage	View the internal storage and manage the memory card.
Battery	Monitor your tablet's battery usage.
Apps	View installed applications and running applications.
Location	Select how your tablet determines its location.
Security	Configure the security settings including encryption options, password visibility, and more.
Accounts	Add and manage your email or social networking accounts.
Language & input	Configure the language and input method settings.

Category	Description
Backup & reset	Configure the data backup settings and format your tablet to its factory defaults.
Date & time	Configure the date and time settings.
Accessibility	Set accessibility options such as screen magnification, hearing aid compatibility, and other related options.
Printing	Configure the printing settings.
Activate this Device	Activate a new tablet or use additional self-service options.
About tablet	View your tablet information.
System Update	Check for system updates.

Access Settings

1. From the home screen, tap **Apps** > **Settings** .

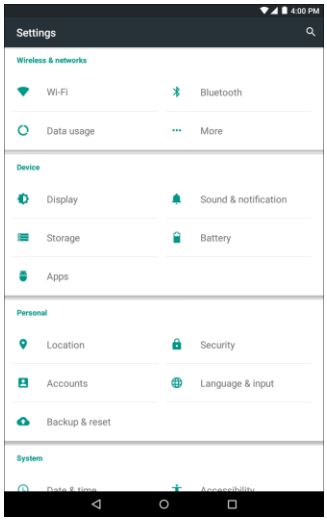

❖ The settings menu opens.

2. Select categories and then select your settings options.

❖ Settings are made and applied.

Tip: You can also access settings from the notification panel. Pull down the status bar and tap the notification panel to open the Quick Settings menu. Then tap to access the Settings .

Wi-Fi Settings Menu

The Wi-Fi settings menu lets you turn Wi-Fi on or off, set up and connect to available Wi-Fi networks, and configure advanced Wi-Fi options.

For more information about Wi-Fi settings, see Wi-Fi.

1. From the home screen, tap **Apps** > **Settings** **.**
2. Tap **Wi-Fi** .
   - ❖ The Wi-Fi settings menu appears.
3. Tap the Wi-Fi switch to **On** to turn Wi-Fi on.
   - ❖ Wi-Fi is enabled. You will see the names and security settings of in-range Wi-Fi networks.
     - To disable Wi-Fi, tap the switch to **Off** .
4. Tap a Wi-Fi network, enter the password, and tap **CONNECT**.
   - ❖ Your tablet is connected to the selected Wi-Fi network.
     - The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
     - Entering a password is not required if an access point is not security protected.

Advanced Wi-Fi Settings

The advanced Wi-Fi settings menu lets you set up and manage wireless access points.

- **Enable Scanning Always Available**: From Wi-Fi settings, tap > **Advanced** > **Scanning always available**. Tap the switch to **On** to enable this function.
- **Enable Notification When Open Networks Are Available**: From Wi-Fi settings, tap > **Advanced** > **Network notification**.
  - The setting is available when Wi-Fi is turned on.
  - Tap **Network notification** to turn the option on or off.
- **Set Timing for Pausing a Connection**: From Wi-Fi settings, tap > **Advanced** > **Keep Wi-Fi on during sleep** and then select a setting.

- **Enable Wi-Fi Only for Stable Connection**: From Wi-Fi settings, tap ⋮ > **Advanced** > **Avoid poor connections**.
  - The setting is available when Wi-Fi is turned on.
  - Check the **Avoid poor connections** check box to turn the option on.
- **Install Certificates for Wi-Fi Authentication**: From Wi-Fi settings, tap ⋮ > **Advanced** > **Install certificates** and then select a certificate stored in Google Drive, Downloads, the internal storage, or the memory card.
- **Sharing Data with Other Wi-Fi Direct Devices**: From Wi-Fi settings, tap ⋮ > **Advanced** > **Wi-Fi Direct** and then follow the onscreen instructions on both device to complete the connection.
- **Initiate Wi-Fi Connection via WPS**: From Wi-Fi settings, tap ⋮ > **Advanced** > **WPS Push button** or **WPS PIN Entry**. Push the WPS button or enter the PIN to initiate the connection.
- **Check MAC Address**: From Wi-Fi settings, tap ⋮ > **Advanced**.
  - MAC Address appears below “MAC address.”
- **Check IP Address**: From Wi-Fi settings, tap ⋮ > **Advanced**.
  - IP Address appears below “IP address.”

Bluetooth Settings

Your tablet’s Bluetooth® capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your tablet’s Bluetooth usage, see Bluetooth.

1. From the home screen tap **Apps** > **Settings** .
2. Tap **Bluetooth** .

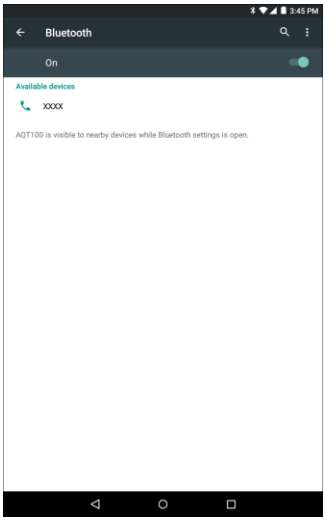

❖ The Bluetooth settings open.

Bluetooth Settings Operations

- **Enable Bluetooth**: In Bluetooth settings, tap the switch to **On** to enable Bluetooth.
  - When enabled, confirmation appears for your tablet to be discoverable by other devices. Follow the onscreen instructions.
  - Set the switch to **On** to enable or **Off** to disable.
- **Pairing Bluetooth Devices**: Make sure the other devices are set to be discovered. From Bluetooth settings, tap the device name in “Available devices” and follow the onscreen instructions.
  - Depending on the device, you may be required to enter or accept a passkey.
  - If the target device does not appear, tap ⋮ > **Refresh** to search again.
  - This setting is available when Bluetooth is enabled.
- **Change the Name of a Paired Device**: From Bluetooth settings, tap ⚙ next to a paired device name. On the Name field, enter a new name, and tap **OK**.
  - Emojis cannot be used in a device name.
  - This setting is available when Bluetooth is enabled.
- **Canceling Pairing**: From Bluetooth settings, tap ⚙ next to a paired device name, and then tap **FORGET**.
  - This setting is available when Bluetooth is enabled.
- **Enable Service from a Paired Device**: From Bluetooth settings tap ⚙ next to a paired device name, and then tap the listing under **Use for**.
  - If a confirmation prompt appears, follow the onscreen instructions.
  - This setting is available when Bluetooth is enabled.
  - This setting is available when the paired device is providing a service.
- **Search for Other Devices**: From Bluetooth settings, tap ⋮ > **Refresh**.
  - This setting is available when Bluetooth is enabled.
- **Change the Name of your Tablet**: From Bluetooth settings, tap ⋮ > **Rename this device**. On the Rename this device field, enter a new name, and tap **RENAME**.
- **Check Files Received via Bluetooth Transfer**: From Bluetooth settings, tap ⋮ > **Show received files**. The Bluetooth received screen appears.

Data Usage Settings

The data usage menu lets you view your tablet's mobile and Wi-Fi data usage, set data limits, restrict hotspot usage, and more.

1. From the home screen tap **Apps** > **Settings** .
2. Tap **Data usage** .

❖ The data usage window opens.

Data Usage Settings Operations

- **Enable Mobile Data**: In Data usage window, tap the **Cellular data** switch to **On** to enable the service.
- **Set Amount for Alert when Data Usage Increases**: From the Data usage window, tap the **Set cellular data limit** switch to **On** to enable this function. Then drag the horizontal warning slider up and down to set an amount.
  - Data usage amounts are approximate. Actual amounts may differ.
  - This setting is available when Cellular data is enabled.
- **Set Date for Resetting Data Usage**: To set the data usage measuring cycle, from the Data usage window, tap the time period field and then select **Change cycle**. Set a reset date, and tap **SET**.
  - This setting is available when Cellular data is enabled.
- **Enable Restriction on Mobile Data in Background**: From the Data usage window, tap > **Restrict background data** > **OK**.

- This setting stops some apps and services from working unless your tablet is connected to a Wi-Fi network.
- If a confirmation appears, tap **OK**.

- **View Both Mobile Data and Wi-Fi Usage**: From the Data usage window, tap ⋮ > **Show Wi-Fi**.
  - When **Show Wi-Fi** is enabled, you will see a Wi-Fi tab at the top of the Data usage window. Tap to view your tablet's Wi-Fi data usage.

More Settings

The More settings menu provides access to additional wireless and network options.

More Settings Options

Setting	Description
Airplane mode	Disable all settings that emit or receive signals.
Tethering & portable hotspot	Share your tablet's mobile data connection via USB/Bluetooth or as a portable Wi-Fi hotspot.
VPN	Set up and manage the Virtual Private Network (VPN).
Cellular networks	Configure the Access Point name and choose a network operator.

Access More Settings Options

1. From the home screen tap **Apps** > **Settings** .

2. Tap **More** ⋯.

3. Set items.

❖ Your settings are saved and implemented.

Virtual Private Networks (VPN)

From your tablet, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

Prepare Your Tablet for VPN Connection

Depending on the type of VPN you are using at work, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

Before you can initiate a VPN connection, your tablet must first establish a Wi-Fi or data connection. For information about setting up and using these connections on your tablet, see Chrome Browser and Turn Wi-Fi On and Connect to a Wireless Network.

Set Up Secure Credential Storage

If your network administrator instructs you to download and install security certificates, you must first set up the tablet's secure credential storage before setting up a VPN.

1. From the home screen tap **Apps** > **Settings**.

2. Tap **Security** , and then tap **Screen lock** > **Password**.

3. Enter a new password (at least four characters without any spaces) and tap **CONTINUE**.

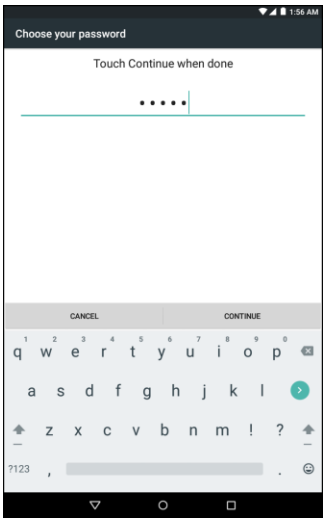

4. Reenter the password and tap **OK** to confirm your password.

   ❖ The password is set, allowing secure credential storage.

5. Tap **Trusted credentials** and then tap your preferred system and user credentials.

   ❖ Your secure credentials storage is set.

You can then download and install the certificates needed to access your local network. Your network administrator can tell you how to do this.

Add a VPN Connection

Use the VPN settings menu to add a VPN connection to your tablet.

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **More** > **VPN**.

   ❖ The VPN settings window appears.

3. Tap +, and then enter the information for the VPN you want to add.

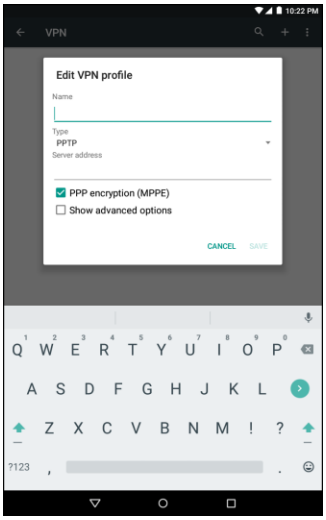

   - Information may include Name, Type, Server address, PPP encryption (MPPE), and advanced options.

   - Set up all options according to the security details you have obtained from your network administrator.

4. Tap **SAVE**.

   ❖ Your VPN is added to the VPNs section of the VPN settings window.

Connect to or Disconnect from a VPN

Once you have set up a VPN connection, connecting and disconnecting from the VPN is easy.

Access the VPN Settings Window

1. From the home screen tap **Apps** > **Settings** .

2. Tap **More** > **VPN**.

   ❖ The VPN settings window appears.

Connect to a VPN

1. From the VPNs section of the VPN setting window, tap the VPN that you want to connect to.

2. When prompted, enter your login credentials, and then tap **CONNECT**.

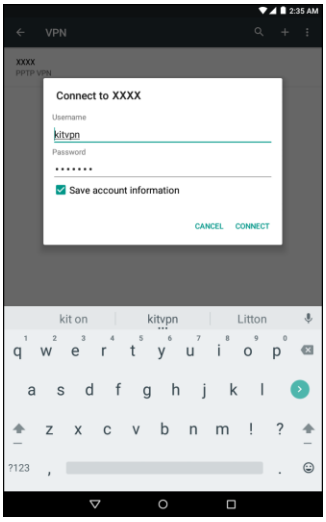

❖ You will connect to the selected VPN.

- When you are connected, a VPN connected icon appears in the notification area of the status bar.

3. Open the Web browser to access resources such as intranet sites on your corporate network.

Disconnect from a VPN

1. Pull down the status bar and tap the notification panel to access the Quick Settings menu.

2. Tap the VPN connection to disconnect. A confirmation message appears and tap **DISCONNECT VPN** to disconnect from it.

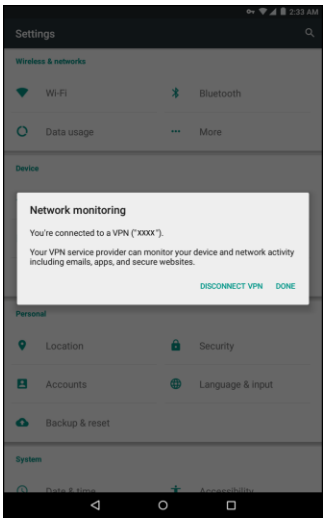

❖ Your tablet disconnects from the VPN.

Display Settings

Use the tablet's display settings menu to adjust items such as wallpaper, brightness, screen timeout, and more.

Display Settings Overview

The display settings menu allows you to configure the following options:

Display Setting	Description
Brightness level	Set the display brightness.
Adaptive brightness	Optimize the brightness level depending on the surrounding light conditions.
Wallpaper	Set a wallpaper for the home screen.
Sleep	Set a screen timeout duration. **Note**: Longer durations discharge the battery more quickly.
Daydream	Specify what the screen displays when your device is docked or while charging.
Ambient display	Wake the screen when you pick up the device or receive notifications.
Font size	Set font size for the display.
When device is rotated	Set whether to allow the screen to rotate the display with the tablet orientation, where applicable.

Access Display Settings

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Display** .

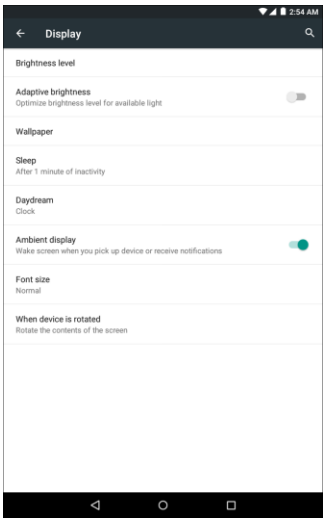

3. Set your display options.

❖ Your display settings are saved and applied.

Sound and Notification Settings

The Sound and notification settings menu lets you control your tablet's audio, from ringtones and alerts to tap tones and notifications.

Sound and Notification Settings Overview

The Sound and notification settings menu allows you to configure the following options:

Sound and Notification Setting	Description
Media volume	Set volume for media playback.
Alarm volume	Set volume for alarms.
Notification volume	Set volume for notifications.
Interruptions	Configure the interruptions settings, including the priority interruptions and downtime.
Default notification ringtone	Set a tone for the ringtone for notifications.
Other sounds	Set a tone when locking/unlocking the screen or tapping the screen.
When device is locked	Manage whether the notifications can be seen when your tablet is locked.

Sound and Notification Setting	Description
App notifications	Manage notifications settings individually for each application.
Notification access	View which application can access your notifications.

Access Sound and Notification Settings

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Sound & notification** .

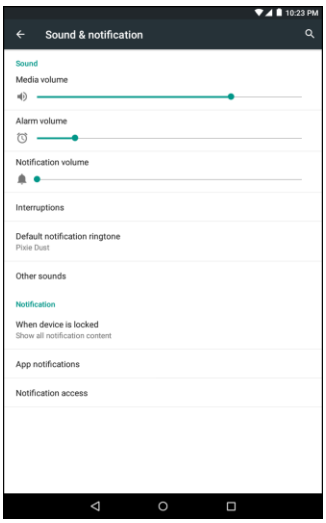

3. Set your sound and notification options.

❖ Your sound and notification settings are saved and applied.

Storage Settings

The storage settings menu lets you manage internal storage on your tablet and provides menu choices for an optional SD card (not included).

Storage Settings Overview

The storage settings menu allows you to configure the following options:

Storage Setting	Description
Total space	View the total space/free space in your tablet memory and in an optional installed memory card.

Storage Setting	Description
Unmount SD card	If an optional memory card is installed, tap to unmount the memory card to allow for safe removal.
Mount SD card	If an optional memory card is installed, tap to mount the memory card and make it available for use.
Erase SD card	If an optional memory card is installed, tap to erase all data stored on the card and prepare it for use by your tablet.

Access Storage Settings

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Storage** .

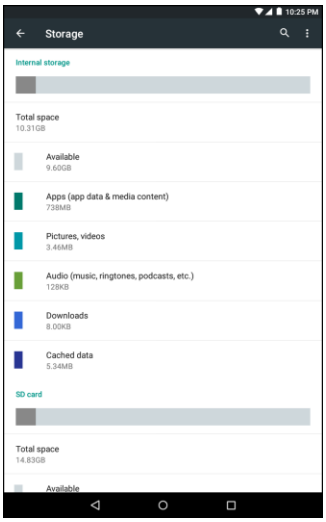

3. Check or tap items.

❖ Review your storage settings.

Battery Settings

Monitor your tablet's battery usage through this settings menu. View which functions are consuming your battery's charge and at what percentage.

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Battery** .

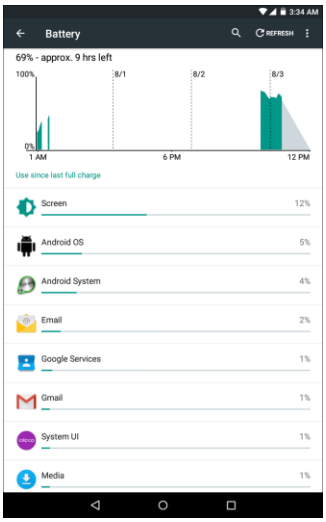

3. Tap items to view details.

❖ Check your battery condition and access additional options.

Tip: To enable the battery saver function, tap > **Battery saver** > **On** .

Note: The battery saver function will automatically disable when your tablet is charging.

Applications Settings

Check installed applications and running applications.

Applications Settings Overview

Items that can be checked in the Apps settings menu include the following:

Apps Setting	Description
DOWNLOADED	Check downloaded applications.
ON SD CARD	Check all applications on your optional installed memory card.
RUNNING	Check running applications.
ALL	Check all applications.

Access Applications Settings

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Apps** .

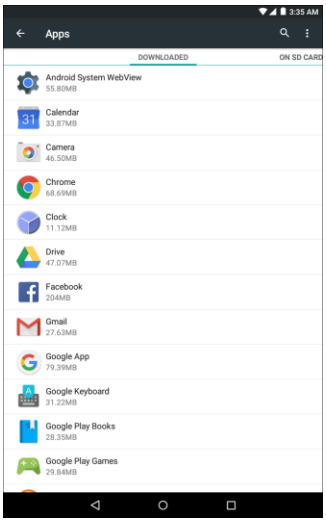

3. Tap items to view details.

❖ Check your application settings condition and access additional options.

- Depending on the app and its location, you may be able to force the app closed, uninstall or disable the app, clear cache and data, and more.

Location Access Settings

Your Location Services settings menu lets you select how your tablet determines its location (using the wireless networks, GPS satellites, both, or neither).

Enable Location Services

Before using any features that require location assistance, you must enable your tablet's location services.

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Location** .

3. Tap the setting to toggle Location on .

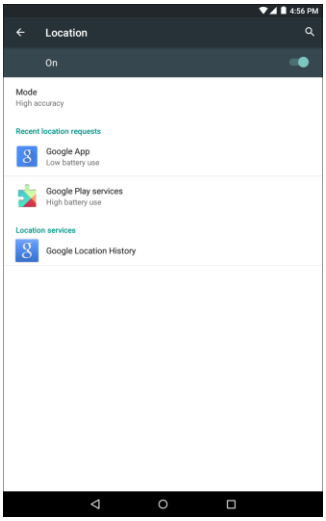

❖ Your tablet's location services are enabled.

- If you see a confirmation, follow the onscreen instructions to connect.

Configure Location Mode

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Location** > **Mode**.
3. Select the desired settings.

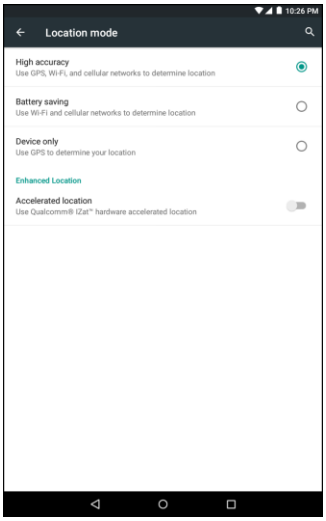

❖ Your location settings are applied and saved.

Security Settings

The Security settings menus let you set encryption options, password visibility, administrator settings, and credential storage options.

Security Settings Overview

Many security settings are dependent on Screen lock settings, SIM lock settings, etc. The following table outlines the settings available through the Security settings menu:

Security Setting	Description
Screen lock	Manage the screen lock options.
Owner info	Enter information that is displayed on the lock screen.
Lockscreen shortcuts	Assign a lock screen shortcut.
Encrypt tablet	Encrypt all data on your tablet.
Set up SIM/RUIM card lock	Set up SIM card to lock or change the SIM pin codes.
Make passwords visible	Toggle to show or hide passwords when entering form data.
Device administrators	View or turn off device administrators.
Unknown sources	Allow or deny installation of applications from sources other than the Google Play store application.
Storage type	Display the storage type for certificates.
Trusted credentials	Display trusted CA certificates.
Install from SD card	Install the certificates from the memory card.
Clear credentials	Remove all certificates.
Trust agents	Manage trust agents for features such as Smart Lock.
Screen pinning	Enable this function to keep the current screen in view until you unpin.
Apps with usage access	Manage what applications have access to app-usage data.

Access Security Settings

Before using any features that require location assistance, you must enable your tablet's location services.

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Security** .

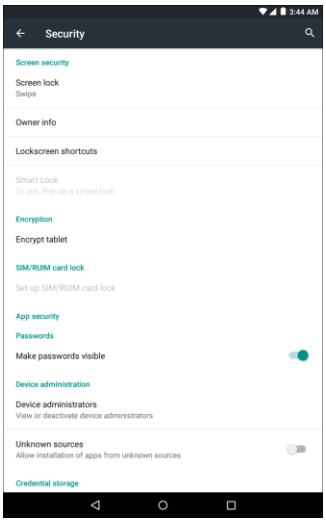

❖ The Security settings menu opens.

3. Set your security options.

❖ Your security settings are applied and saved.

Lock Screen Settings

The lock screen settings let you set your method for unlocking your tablet, customize lock screen options, determine whether to show pop-up tips for unlocking the tablet, and enter your owner information to be displayed on the lock screen.

Screen Lock

You can increase the security of your tablet by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, enter the correct PIN, or enter the correct password to unlock the tablet's control keys, buttons, and touchscreen.

In order from least secure to most secure, the available screen lock options are:

- None
- Swipe
- Pattern
- PIN
- Password

Important: To protect your tablet and data from unauthorized access, it is recommended that you use the highest security level available (Password protection). It is also recommended you frequently change your password to ensure the safety of your tablet and personal data.

Access Screen Lock Settings

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Security** > **Screen lock**.

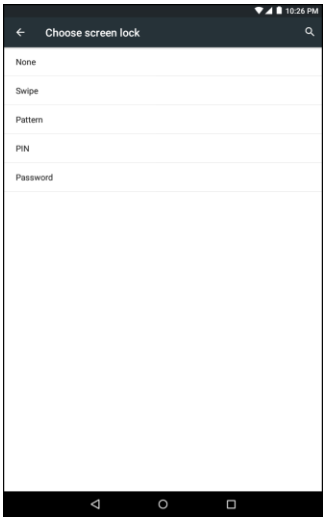

❖ The Screen lock settings menu opens.

Use a Screen Unlock Pattern

1. From the Screen lock settings menu, tap **Pattern**.
2. Draw the screen unlock pattern by connecting at least four dots in a vertical, horizontal, or diagonal direction. Lift your finger from the screen when finished.

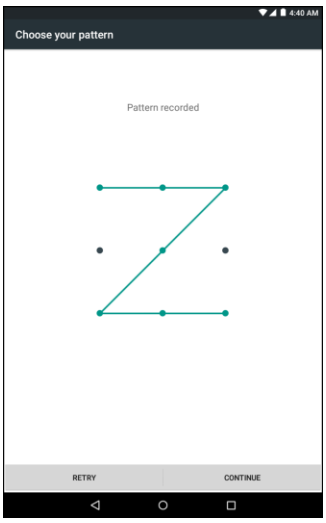

❖ The tablet records the pattern.

3. Tap **Continue**.

4. When prompted, draw the screen unlock pattern again, and then tap **CONFIRM**.

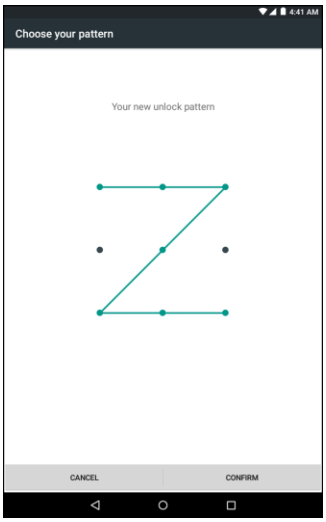

❖ The screen unlock pattern is saved.

- If you fail to draw the correct unlock pattern on the screen after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Note: Disable the **Make pattern visible** option if you do not want the unlock pattern to display on the screen when you unlock it.

Note: To change your unlock screen pattern, from home, tap **Apps** > **Settings** > **Security** > **Screen lock**.

Use a Screen Unlock PIN

1. From the Screen lock settings menu, tap **PIN**.
2. Enter a PIN and tap **CONTINUE**.

3. Enter your PIN again and tap **OK** to save the setting.

❖ The screen lock is set.

- If you fail to enter the correct PIN after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Use a Screen Unlock Password

1. From the Screen lock settings menu, tap **Password**.
2. Enter a password and tap **CONTINUE**.
3. Enter your password again and tap **OK** to save the setting.

❖ The screen lock is set.

- If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Important: To protect your tablet and data from unauthorized access, it is recommended that you use the screen unlock password (highest security). It is also recommended that you frequently change your password to ensure the safety of your tablet and personal data.

Disable the Screen Lock

Follow the instructions below to turn off your current screen lock.

1. From the home screen, tap **Apps** > **Settings** > **Security** > **Screen lock**.

❖ The Lock screen settings menu opens.

2. Draw your unlock screen pattern, enter your PIN, or enter your password.
3. Tap **None**.

❖ The screen lock is disabled.

Note: If you fail to enter the correct password after five attempts, you will be prompted to wait for 30 seconds before you can try again.

Lock Screen Options

There are several configurable options available in the Lock Screen settings menu.

Lock Screen Options Overview

The following options are available in the Lock Screen settings menu:

Security Setting	Description

Security Setting	Description
Make pattern visible	You can select whether the pattern will be visible on the screen when you unlock your tablet using a pattern.
Automatically lock	Choose the amount of time before the screen automatically locks after the screen has timed-out.
Power button instantly locks	You can instantly lock the screen when you press the **Power/lock** button.
Smart lock	Configure your tablet to automatically unlock the device when you have a trusted device connected, when you are at the trusted location, when it recognizes your face or voice, or when you are carrying it with you.

Access Lock Screen Settings

1. From the home screen, tap **Apps** > **Settings** > **Security** > **Screen lock**.
2. Select **Pattern**, **PIN**, or **Password**. Then follow the onscreen instructions to complete the lock screen setup.

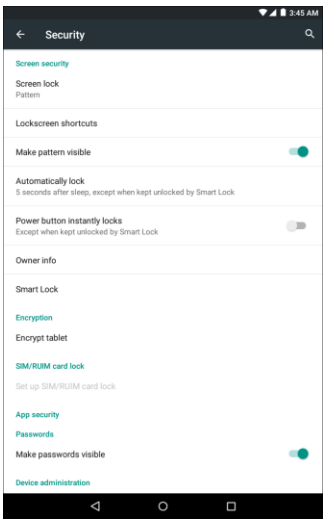

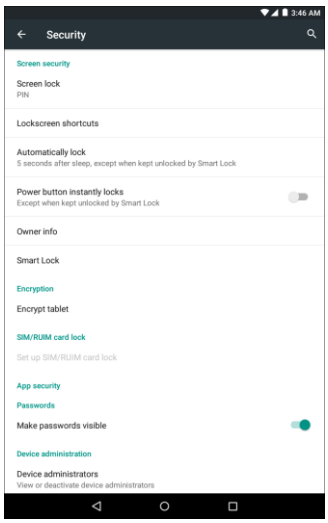

❖ The available Lock screen menu options appear on the screen.

Accounts Settings

The Accounts settings menu lets you add and manage all your email, social networking, and picture and video sharing accounts.

Set Up a New Account

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Accounts** > **Add account**.

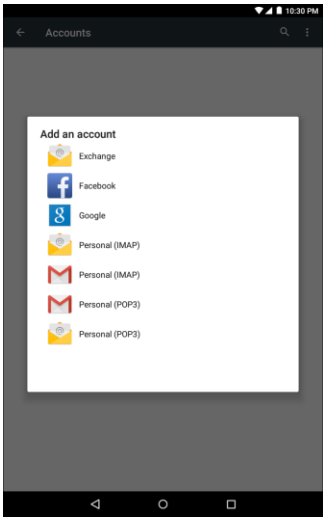

❖ An Add account window appears.

3. Tap an account type and then follow the onscreen instructions to add the required account information.

❖ The account is added to the accounts list.

Manage Existing Accounts

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Accounts** and select an account.

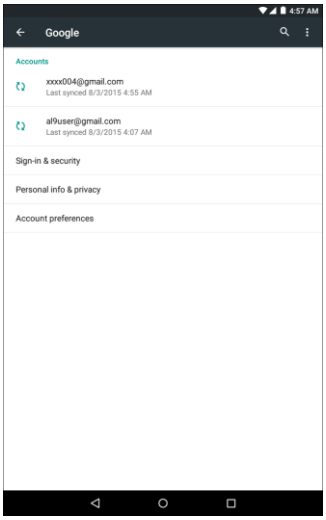

❖ The account settings menu appears.

3. Select the option to configure and modify the necessary settings.

❖ The account options are updated.

Note: The available settings options vary depending on the account type.

Language and Input Settings

Your tablet's language and input settings let you select a language for the tablet's menus and keyboards, select and configure keyboard settings, configure speech input settings, and set your tablet's mouse/trackpad options.

Language and Input Settings Overview

You can set the following options in the Language and input settings menu:

Language and Input Setting	Description
Language	Set the language for your display and menus.
Spell checker	Enable/disable spell check function.
Personal dictionary	Add or edit user preset words to the dictionary.
Current keyboard	Set the default method for entering text.
Google keyboard	Configure Google keyboard settings.

Language and Input Setting	Description
Google voice typing	Configure Google voice typing settings.
Voice input	Configure your voice search settings.
Text-to-speech output	Configure text-to-speech output settings.
Pointer speed	Set the speed of the pointer for a mouse/trackpad.

Access Language and Input Setting Options

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Language & input** .

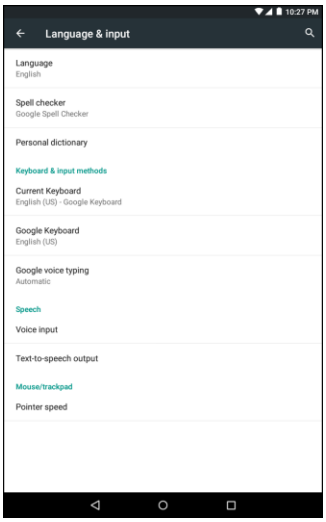

❖ The Language and input settings menu opens.

3. Select the option to configure and modify the necessary settings.

❖ The language and input settings are applied and saved.

Language and Input Options

Some of the language and input options are detailed below.

- **Set the Display Language**: From the Language and input settings menu, tap **Language** and then tap a language to assign it.

- **Enable Spell Checker**: From the Language and input settings menu, tap **Spell checker** and then tap the switch to **On** to enable the spell check function. Tap **Language** to specify the language or tap next to **Google Spell Checker** option to configure the settings.
- **Add Words to Dictionary**: From the Language and input setting menu, tap **Personal dictionary** and then tap **ADD** to add a word to the dictionary.
- **Set Input Method**: From the Language and input setting menu, tap **Current Keyboard** and then tap an input method.
- **Enable Voice Input**: From the Language and input setting menu, tap **Current Keyboard** > **CHOOSE KEYBOARDS** and then tap the **Google voice typing** switch to **On**.
- **Set Google Keyboard Options**: From the Language and input settings menu, tap **Google Keyboard** and configure your keyboard options.
- **Set Voice Output When Using Voice Search**: From the Language and input settings menu, tap **Voice input**, select a setting option, and tap next to the selected option to configure the settings.
- **Set Output for Text-to-Speech Output**: From the Language and input settings menu, tap **Text-to-speech output**, tap a setting option and configure the settings. To configure **Google Text-to-speech Engine**, tap next to this option and configure the necessary settings.
- **Set Speed of Pointer for Mouse/Trackpad**: From the Language and input settings menu, tap **Pointer speed**, drag the bar to adjust the speed, and tap **OK**.

Backup and Reset

Your tablet's Backup & reset menu lets you back up your tablet's data and settings to Google servers before resetting your tablet to the original factory settings. The Factory data reset erases all data from the tablet's application storage, including:

- Your Google Account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

Backup and Reset Overview

The following options are available in the Back up and reset menu:

Backup and Reset Option	Description
Back up my data	Enable backup for application data, Wi-Fi passwords, and other settings to Google servers.

Backup and Reset Option	Description
Backup account	Select the account used to back up data.
Automatic restore	When reinstalling an application, backed up settings and data will be restored.
Factory data reset	Reset all settings and delete all data on your tablet.

- Performing a factory data reset erases all data on the tablet. It is recommended that you back up important data before performing a factory data reset.
- Erased information cannot be restored. Only erase data after you are sure you have saved everything you need.

Access Backup and Reset Options

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Backup & reset** .

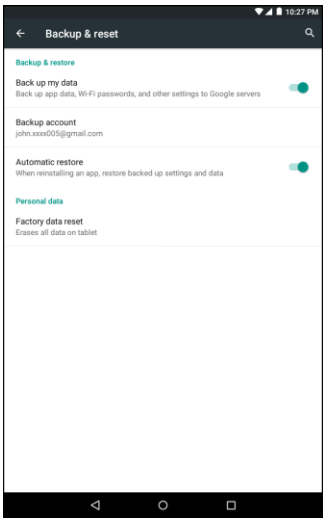

❖ The Backup and reset menu opens.

3. Set options.

❖ The backup and reset settings are applied and saved.

- If you're performing a Factory Data Reset, follow the prompts to confirm the data removal. The tablet will erase all data and reboot.

Factory Data Reset

Tip: Before performing a factory data reset on your tablet, you may want to unmount an installed microSD memory card to avoid losing any data you may have stored on it. From home, tap **Apps** > **Settings** > **Storage** > **Unmount SD card** to unmount the microSD card.

1. From the Backup and reset menu, tap **Factory data reset**.
2. Read the factory data reset information page and tap **RESET TABLET**.

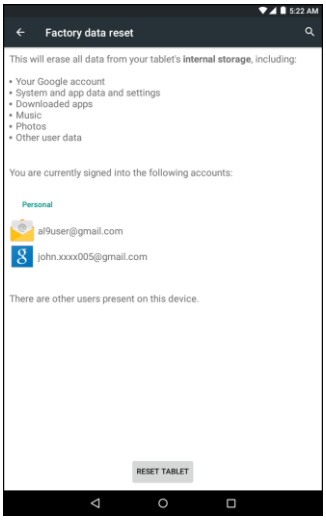

3. Tap **ERASE EVERYTHING**.

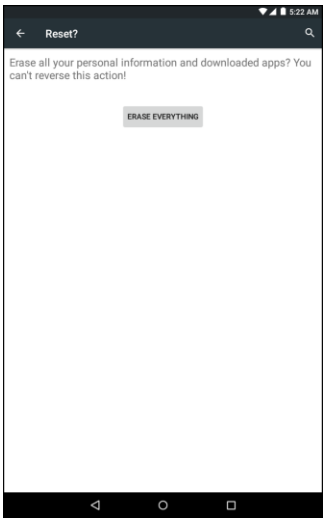

❖ Your tablet will power down and reset itself, which may take up to 10 minutes.

- Once the tablet has reset, it will run through the update processes again. When finished, you will see the Welcome screen and Setup application. See Complete the Setup Screens to start over.

Date and Time Settings

Use the date and time settings menu either to automatically use the network-provided date and time or manually set these values, as well as select time and date format options.

Date and Time Overview

The following date and time options may be configured:

Date and Time Option	Description
Automatic date & time	Enable or disable the system to set the date and time automatically via the connected wireless network.
Automatic time zone	Enable or disable the system to set the time zone automatically via the connected wireless network.
Set date	Set the date manually (only available when Automatic date and time option is disabled).
Set time	Set the time manually (only available when Automatic date and time option is disabled).
Select time zone	Set the time zone manually (only when Automatic time zone is disabled).
Use 24-hour format	Enable or disable 24-hour format.

Access Date and Time Options

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Date & time** .

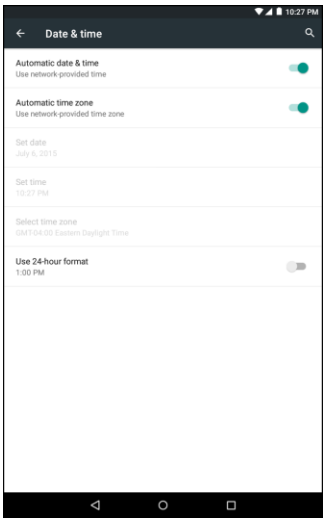

3. Set available date and time options.

❖ Your date and time settings are applied and saved.

Accessibility Settings

The accessibility menu lets you enable and manage accessibility-related applications.

Accessibility Settings Overview

The following accessibility options may be configured:

Accessibility Option	Description
TalkBack	Enable this option to let your tablet provides spoken feedback to help visually impaired users.
Switch Access	Enable this option to control your tablet using the configurable key combinations.
Mono audio	Enable this option to set up your tablet to play all sounds in each ear.
Sound balance	Adjust the balance between left or right audio.
Captions	Enable this option to display subtitles where available. You also have options to specify the language, text size, and caption style.
Magnification gestures	Enable this option to zoom in and out by triple-tapping the screen.

Accessibility Option	Description
Persistent Alerts	Enable this option to set the repeat interval of notifications for the selected applications.
Large text	Enable this option to make text appear bigger on the screen.
High contrast text	Enable this option to let the system automatically fix the text color to make the text easier to see on the screen.
Auto rotate screen	Enable this option to set the screen to rotate automatically when your tablet is rotated.
Speak passwords	Enable this option to let your tablet to read passwords as they are entered.
Accessibility shortcut	Enable this option to quickly turn on accessibility features.
Text-to-speech output	Configure the text-to-speech output settings.
Touch & hold delay	Set the delay time when the screen recognizes the touch and hold operation.
Color inversion	Enable this option to exchange the color values.
Color correction	Enable this option to change the display mode based on different types of color blindness.

Access Accessibility Options

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Accessibility** .

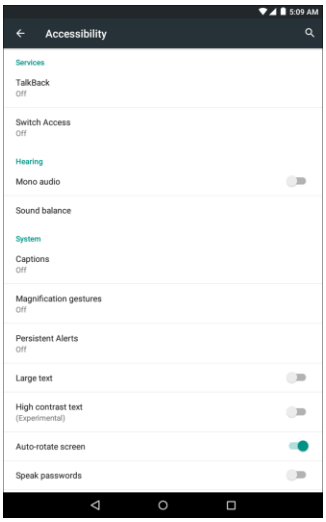

3. Set available accessibility options.

❖ Your accessibility settings are applied and saved.

Printing Settings

The printing menu lets you print any file wirelessly from your tablet to an optional compatible printer. Make sure your tablet is connected to the same network as the printer.

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **Printing** .

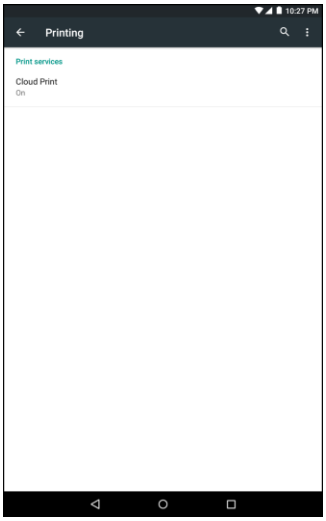

❖ The Printing menu appears.

3. Select a print service from the list. Tap the switch to **On** to enable the service.

   - Tap ⋮ > **Add printer** to add a new printer.
   - Tap ⋮ > **Settings** to configure the printer settings.

Activate This Device

Use this menu to activate a new tablet or use additional self-service options such as checking the status of an in-service tablet.

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **Activate this Device** .

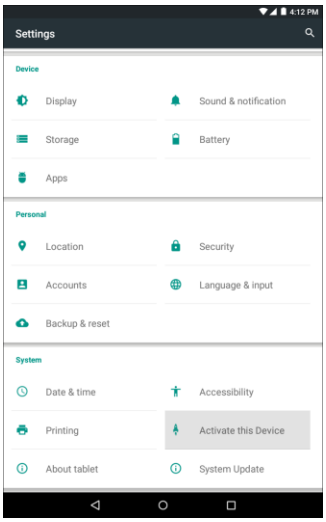

   ❖ The Device Self Service menu appears.

3. Follow the onscreen prompts to activate your tablet or review your summary.

   ❖ Your tablet activates. If already activated on an account, you will see a usage and plan summary.

About Tablet

The About Tablet menu lets you access important tablet information and view legal and safety information.

About Tablet Overview

The following About Tablet items may be reviewed or set:

About Tablet Item	Description

About Tablet Item	Description
Status	View your tablet's status. Status information includes helpful information about battery status and level, SIM status, IMEI information, addresses for IP, MAC, and Bluetooth, and more.
4G settings	View the network provider information and IP address.
Legal information	View the open source licenses and Google legal, Wallpaper, and Carrier legal information.
Model number	View your tablet's model number.
Brand	View your tablet's brand name.
Processor info	View the processor information.
Android version	View the Android version number.
Baseband version	View your tablet's baseband version.
Kernel version	View your tablet's kernel version.
Build number	View the current tablet build number.

Access About Tablet Options

1. From the home screen, tap **Apps** > **Settings** .
2. Tap **About tablet** .

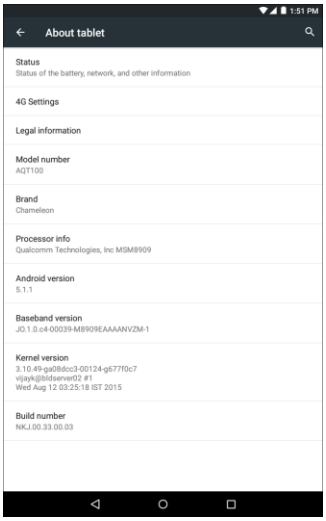

3. Select or view available options.

❖ Your tablet information is displayed.

System Update

The system update menu lets you update your tablet's software and other related settings.

System Update Overview

The following system update options may be configured:

System Update Option	Description
Update Profile	Update your user profile information.
Update PRL	Update the latest PRL (Preferred Roaming List) used by your tablet to access the network.
Update Firmware	Download and update the firmware for your tablet.
UICC Unlock	Unlock your tablet's UICC (Universal Integrated Circuit Card).

1. From the home screen, tap **Apps** > **Settings** .

2. Tap **System Update** .

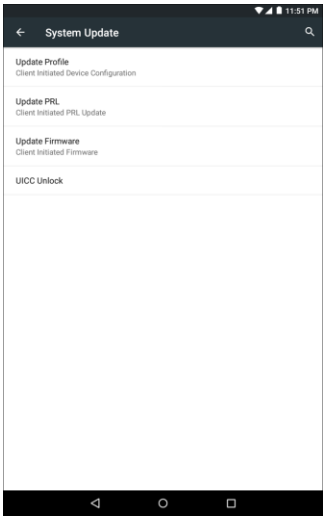

❖ The System Update menu appears.

3. Set available system update options.

❖ Your accessibility settings are applied and saved.

For Assistance

The following topics address areas of support for your tablet, including troubleshooting, specifications, account information, and customer service contact information.

Troubleshooting

Check the questions and answers below for troubleshooting solutions for common tablet issues.

Check Here First

Question: Tablet freezes/operation is unstable.

Answer: Turn the tablet on again. If you are unable to turn the tablet off, force device power-off by long press **Power/lock** button for 14 seconds, followed by long press **Power/lock** button for 14 seconds to force device power-on. Data that was being edited is erased after your tablet is powered on again.

Question: Operation is unstable after a new application was installed.

Answer: The newly installed application may be the cause. Uninstall the application in Safe mode. See Uninstall an App. To turn the tablet on in Safe mode:

- Press and hold the **Power/lock** button > touch and hold **Power off**, read the disclaimer for safe mode, and then tap **OK**.
  - After turning the tablet on in Safe mode, "Safe mode" appears at lower left.
  - After restarting in Safe mode, your tablet can be powered on as usual.
  - Before turning the tablet on in Safe mode, it is recommended that you back up important data.
  - By powering the tablet on in Safe mode, added widgets may be deleted.

Question: Cannot use tablet, mail, or Internet.

Answer 1: Check whether you are where signal is weak or out of service area.

Answer 2: Power the tablet on again.

Answer 3: Is the tablet in Airplane mode? To check that Airplane mode is disabled:

- From the home screen, tap **Apps** > **Settings** > **More** and set the **Airplane mode** switch to **Off**.

Answer 4: Is data communication disabled? To check that data communication is enabled:

- From the home screen, tap **Apps** > **Settings** > **Data usage** and set the **Cellular data** switch to **On**.

Answer 5: Is a disabled access point set? To configure the access point:

- From the home screen, tap **Apps** > **Settings** > **More** > **Tethering & portable hotspot** > **Set up Wi-Fi hotspot** and modify the Network Name, Security, and Password. Then tap **SAVE** to save the settings.

Question: Battery level goes down quickly.

Answer: Are you where signal is weak or have been out of service area for a long period? Using the device where signal is weak or being out of service area uses a lot of battery.

Question: Cannot install applications.

Answer: Applications cannot be installed with only a little free space on the tablet or SD card. To check free space, see Storage Settings. Applications not supported by your tablet cannot be installed.

Question: Cannot unlock screen.

Answer: Power the tablet on again. If you are unable to turn the tablet off, force device power-off by long press **Power/lock** button for 14 seconds, followed by long press **Power/lock** button for 14 seconds to force device power-on. Data that was being edited is erased after the tablet is powered on again.

Specifications

The following tables list your tablet's specifications.

Tablet Specifications

Item	Description
Display	10" IPS display HD (800x1280) Multi-point capacitive touch
OS	Android 5.1 Lollipop
Memory	1 GB LPDDR3 16GB
Camera	Front camera: 2M FF Rear Facing: 5MP AF

Item	Description
Connectivity	BT 4.1 + LE WiFi 802.11b/g/n GPS LTE B2/B4/B5/B12/B25/B26/B41
I/O	3.5mm audio jack Micro USB Micro SD Nano SIM
Sensor	Accelerometer E-compass
Dimensions	162.3 x 260 x 8.95mm
Battery	5200 mAh Li-polymer / Embedded

Sprint Account Information and Help

Find out about account passwords and information about managing your account and finding help.

Sprint Account Passwords

You will need to create passwords to protect access to your personal account information, your voicemail account, and your data services account. As a Sprint customer, you enjoy unlimited access to all your information.

Account User Name and Password

If you are the account owner, you will create an account user name and password when you sign on to sprint.com/mysprint. (Click **Register** and follow the prompts to get started.) If you are not the account owner (if someone else receives the bill for your Sprint service), you can get a sub-account password at sprint.com/mysprint.

Data Services Password

With your Sprint tablet, you may elect to set up an optional data services password to control access and authorize purchases.

For more information, or to change your passwords, sign on to sprint.com/mysprint.

Manage Your Account

Manage your Sprint account from your computer, your Sprint tablet, or any other tablet.

Online: sprint.com/mysprint

- Access your account information.
- Check your data used (depending on your Sprint service plan).
- View and pay your bill.
- Enroll in Sprint online billing and automatic payment.
- Purchase accessories.
- Shop for the latest Sprint tablets.
- View available Sprint service plans and options.
- Learn more about data services and other products like games, ringtones, screen savers, and more.

Copyright Information

©2015 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

Index

4G, 78
About Tablet
  4G settings, 167
  Android version, 167
  Baseband version, 167
  Brand, 167
  Build number, 167
  Kernel version, 167
  Legal information, 167
  Model number, 167
  Processor information, 167
  Status, 167
Accessibility Settings
  Accessibility shortcut, 164
  Auto rotate screen, 164
  Captions, 163
  Color correction, 164
  Color inversion, 164
  High contrast text, 164
  Large text, 164
  Magnification gestures, 163
  Persistent Alerts, 164
  Speak password, 164
  Switch Access, 163
  TalkBack, 163
  Text-to-speech output, 164
  Touch and hold delay, 164
Accounts
  Add new, 156
  Manage, 156
  Settings, 155
Activation, 14, 166
Airplane Mode, 26
Alarm, 103
Apps
  Find and install, 34
  Open, 37
  Request refunds, 35
  Uninstall, 38
  Update, 36
Apps Settings, 147
Back Key, 3
Back Up Contacts, 60
Back Up Tablet
  Automatic restore, 160
  Back up my data, 159
  Backup account, 160
Battery
  Settings, 146
Bluetooth, 126
  Connect, 128
  Receive information, 130
  Send information, 129
  Settings, 135
  Turn on or off, 126
Bookmark, 80
Browser
  Bookmark, 80
  History, 81
  Tabs, 81
Calculator, 99
Calendar, 100
  Add event, 101
  Change settings, 102
  View events, 102
Camera, 85
  Settings, 91
  Take a picture, 85
  Take a picture using Lens Blur, 87
  Take a picture with the Timer, 86
Car Kit
  Connect, 128
Chrome, 79
Clock, 103
  Alarm, 103
  Stopwatch, 106
  Timer, 105
  World Clock, 105
Contacts, 54
  Add contact, 54
  Back Up, 60
  Delete, 57
  Edit, 56, 57
  Import, 59
  Share, 58
  View, 55
Data Services, 78
  Password, 171

Status indicators, 79
Data Usage Settings, 137
Date and Time Settings
Automatic date and time, 162
Automatic time zone, 162
Select time zone, 162
Set date, 162
Set time, 162
Use 24-hour format, 162
Display Settings
Adaptive brightness, 143
Ambient display, 143
Brightness level, 143
Daydream, 143
Font size, 143
Sleep, 143
Wallpaper, 143
When device is rotated, 143
Drag, 11
Editing Text, 30
Email
Add account, 71
Add Exchange ActiveSync account, 72
Compose and send, 73
Configure settings, 77
Manage inbox, 75
Send Gmail, 61
Setup, 70
View and reply, 74
Enter Text, 27
Exchange ActiveSync
Add account, 72
Extended Home Screen, 46
Facebook, 106
Factory Data Reset, 161
Files
Transfer between tablet and computer, 118
Flick, 12
Folders, 53
Gmail
Archive threads, 64
Create account, 31
Delete threads, 66
Labels, 64
Mute threads, 65
New messages, 62
Read and reply, 62
Read messages, 63
Report spam, 67
Search, 66
Send message, 61
Switch accounts, 68, 69
Google
Chrome, 79
Create account, 31
Hangouts, 97
Sign in, 33
Voice search, 99
Google Keyboard, 28
Google Maps, 95
Google Play
Find and install apps, 34
Help, 39
Store, 34
Google Play Music, 110
Google Search, 97
Google Voice Typing, 29
GPS Satellites, 148
Hangouts, 97
Headset
Connect, 128
Headset Jack, 3
Home Key, 3
Home Screen, 45
Add Folders, 53
Add Shortcuts, 51
Add Widgets, 52
Customize, 50
Extended, 46
Hotspot, 124
Import Contacts, 59
Internet, 61
Keyboard
Google keyboard, 28
Touchscreen, 27
Language and Input Settings
Default keyboard, 157
Google Keyboard, 157
Google Voice Typing, 158
Language, 157
Personal dictionary, 157
Pointer Speed, 158
Spell checker, 157
Text-to-speech output, 158
Voice Input, 158
Location
GPS satellites, 148
Wireless networks, 148

Location Services, 148
Lock Button, 3
Maps, 95
Memory, 145
Messaging, 61
microSD Card
  Erase, 146
  Mount, 146
  Unmount, 146
Mobile Hotspot, 124
Music
  Google Play Music, 110
  Sprint Music Plus, 114
NASCAR MOBILE, 94
Navigation, 95
  Google Maps, 95
  Scout, 96
Notification Icons, 48
Notification Panel, 49
Notifications, 48
Photos, 88
  View pictures and videos, 89
Pictures
  Delete, 91
  Edit, 90
  Share, 90
  Take with camera, 85
  View, 89
Pinch, 13
Play Music, 110
Play Store, 34
  Find and install apps, 34
Power Button, 3
Power Off, 9
Power On, 9
Printing, 165
PRL Update, 43
Recent Apps Key, 3
Reset Tablet
  Factory data reset, 160
Rotate, 12
Scout, 96
Screen Lock, 151
Screen Rotation, 143
Screen Unlock Password, 154
Screen Unlock Pattern, 152
Screen Unlock PIN, 153
Search
  Google, 97
Secure Credential Storage, 139
Security Settings
  Apps with usage access, 150
  Clear credentials, 150
  Device Administrators, 150
  Encrypt tablet, 150
  Install from SD card, 150
  Make passwords visible, 150, 155
  Owner info, 150
  Screen Lock, 151
  Screen pinning, 150
  Smart Lock, 155
  Storage type, 150
  Trusted agents, 150
  Trusted credentials, 150
  Unknown sources, 150
Settings, 132
  Overview, 132
Setup Screens, 14
Share
  Contacts, 58
Slide, 11
Sound Settings
  Alarm volume, 144
  Apps notifications, 145
  Default notification ringtome, 144
  Interrruptions, 144
  Media volume, 144
  Notification access, 145
  Notification volume, 144
  Other sounds, 144
  When device is locked, 144
Speaker, 3
Spread, 13
Sprint Account
  Management, 172
  Passwords, 171
Sprint Music Plus, 114
Status Bar, 48
Status Icons, 48
Stopwatch, 106
Storage
  Settings, 145
Swipe, 11
System Update Settings, 168
  UICC Unlock, 168
  Update PRL, 168
  Update Profile, 168
Tablet Update

PRL, 43
Profile, 42, 44
Software, 41
Tap, 10
Tethering, 125
Text Editing, 30
Text Entry, 27
Timer, 105
Touch, 10
Touch and Hold, 11
Touchscreen
Keyboard, 27
Turn off, 40
Turn on, 40
Turn Your Tablet Off, 9
Turn Your Tablet On, 9
Typing, 27
Video Camera
Record video, 87
Videos
Record, 87
View, 89
Voice Search, 99
Voice Typing, 29
Volume
Button, 3
VPN, 139
Add connection, 140
Connect or disconnect, 141
Prepare for connection, 139
Secure credential storage, 139
Wallpaper, 50
Widgets, 52
Wi-Fi, 120
Settings, 134
Turn on and connect, 120
World Clock, 105
YouTube, 108
Zoom, 13