OFF ROAD RACER

RADIO CONTROLLED ALL-TERRAIN VEHICLE

TWO FREQUENCIES FOR COMPETITIVE RACING

BLUE HAT TOY COMPANY

SPRING-LOADED SHOCKS FOR OFF-ROAD ACTION!

SUPER CHARGED FAST OFF-ROAD POWER!

WIRELESS RC ACTION!

DX2016Q
Toy RC Off-Road Racer

AGES 6+

AVAILABLE IN 2 FREQUENCIES!

BOX CONTAINS THE FOLLOWING FREQUENCY:

☐ 27 MHz
☐ 49 MHz

BATTERY OPERATED PLAY VEHICLE

AGES 6 AND UP

⚠ WARNING!
CHOKING HAZARD - Small parts . Not suitable for children under 3 years.

BATTERY INSTALLATION

Car requires 4 "AA" 1.5V batteries (not included). The remote control requires 1 "9V" battery (not included).

- Carefully remove items from package.
- Locate the battery compartment on the bottom of the car and the side of the remote controller.
- Locate and loosen screws on the battery compartments and remove the battery compartment doors.
- Insert 4 "AA" 1.5V batteries and 1 "9V" battery into the controller and replace the battery compartment doors and screws.

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Avoid water, sand and snow when operating your car.
- Do not damage your car or controller during use.
- Never operate your car on the street or highway.
- Adult supervision is recommended when operating this car.
- Remove all batteries when not in use to avoid accidental operation.
- Never operate your car in a confined or crowded area, and do not use people or animals as obstacles.
- Do not operate your car near furniture, objects or hard surfaces, as this will cause damage to both the objects and the car.
- Keep fingers, hair and loose clothing away from the tires, gears and motor while the car is switched to "ON".
- Do not leave car or transmitter near sources of heat or under direct sunlight for long periods of time.
- Do not leave car or transmitter outside overnight. Dampness is harmful to interior components.

BASIC OPERATION

- Switch both the vehicle and controller power switches to the "ON" position.
- Adjust the steering alignment lever located on the bottom of the vehicle (between front wheels) if the vehicle does not run straight when moving forward.

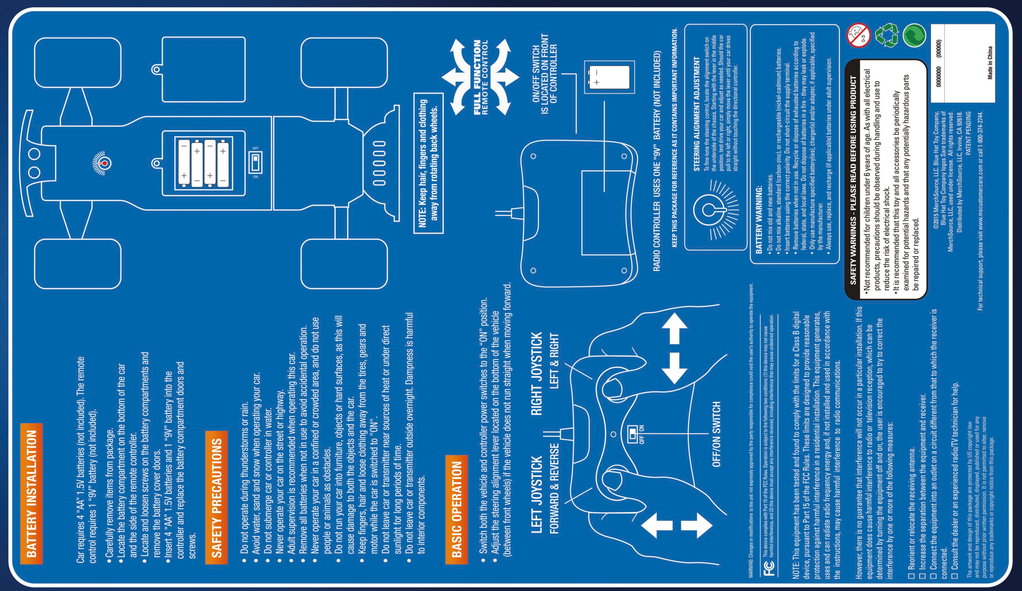

STEERING ALIGNMENT ADJUSTMENT
This feature helps steering controls. Locate the alignment switch on the bottom of the vehicle (between the front wheels). Adjust the switch until the car moves straight when moving forward. Do not adjust the switch while the car is moving. If the car does not move straight without touching the directional controller.

BATTERY WARNING
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Install batteries in accordance with the polarity (+ and -) markings on the battery and the product.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to local, state, and local laws. Do not dispose of batteries in fire. They may leak or explode.
- Do not short circuit the battery terminals. Do not dismantle, incinerate or overheat batteries. Do not recharge non-rechargeable batteries.
- Follow the manufacturer's instructions and safety precautions when using and storing batteries.
- Always use replace and recharge if applicable batteries under adult supervision.

SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT
- Not recommended for children under 6 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electrical shock.
- It is recommed that children handle all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

©2015 MerchSource, LLC. Blue Hat Toy Company, MerchSource, LLC. Toy Company and design are trademarks of MerchSource, LLC. Toy Company and design are trademarks of MerchSource, LLC. Toy Company and design are trademarks of