UNDERWATER EXPLORER

RADIO CONTROLLED SUBMARINE

BLUE HAT TOY COMPANY

NOTE: SUBMARINE IS DESIGNED FOR SWIMMING POOL USE ONLY. Never operate submarine in ocean water, as salt is corrosive to moving parts.

BATTERY INSTALLATION

The submarine requires 4 "AA" 1.5V batteries (not included). The controller requires one 9V battery (not included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance.

- Carefully remove items from the package.
- Locate the battery compartment on the end of the submarine.
- Twist the end of the submarine to expose battery chamber. Insert 4 "AA" batteries while observing the correct polarity (Fig.1).
- Return the battery chamber by inserting into compartment by aligning the top ridge and refasten the end of submarine to secure.
- Remove the screw on back of the remote control to open battery door.
- Insert one 9V alkaline battery while observing the correct polarity (Fig.2).
- Replace the battery compartment door.
- Move both the submarine and controller power switches to the "ON" position.

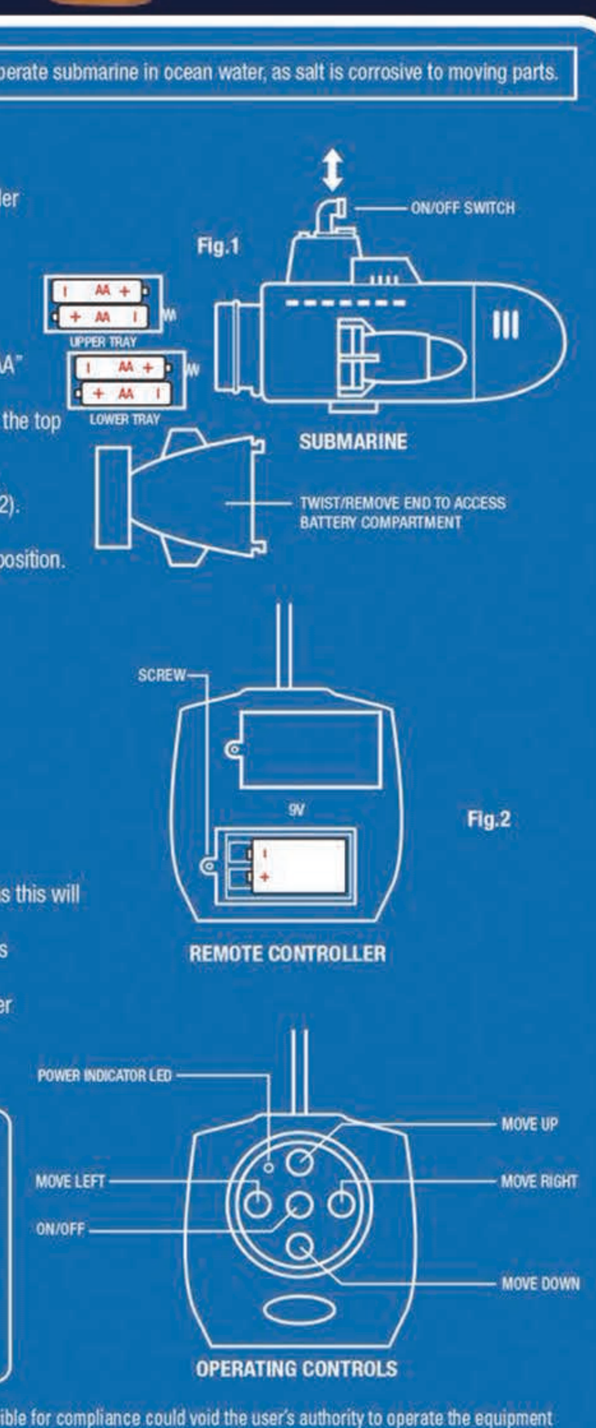

SAFETY PRECAUTIONS

- Adult supervision is required at all times.
- Always exercise normal swim safety when using this item.
- Do not operate during thunderstorms or rain.
- Operate only in swimming pool.
- Avoid salty ocean water, as this will corrode metal parts.
- Never submerge remote control in water.
- Never operate submarine without proper adult supervision.
- Remove all batteries when not in use to avoid accidental operation.
- Do not use people or animals as obstacles inside pool.
- Do not run submarine into pool walls, objects or other hard surfaces, as this will cause damage to the submarine.
- Keep fingers, hair and loose clothing away from the spinning propellers while the submarine is switched to "ON".
- Do not leave submarine or remote control near sources of heat or under direct sunlight for extended periods.
- Do not leave submarine or remote control outside overnight.
- Always remove submarine from water when not in use.

BATTERY WARNING:
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Only use manufacture specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with these instructions, may cause interference with radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmfil interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by onee or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and the receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

0000000 (xxxxx)

Made in China

©2015 MerchSource, LLC. Blue Hat Toy Company and all associated logos are trademarks of MerchSource, LLC. All rights reserved.

Distributed by MerchSource, LLC, Irvine, CA 92618.

For technical support, please visit www.mscustomercare.com or call 1-800-374-2744.

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

UNDERWATER EXPLORER

RADIO CONTROLLED SUBMARINE

WORKING LED SPOTLIGHT

REAL UNDERWATER ACTION!

WIRELESS RC ACTION!

WARNING!

BATTERY OPERATED PLAY VEHICLE

AGES 6+

BLUE HAT

MULTI-DIRECTIONAL OPERATION

- RC Controller Allows the Submarine to Turn Left, Right, Go Backwards, Climb, and Dive for Endless Water Fun
- Launch an Exciting Submarine Adventure as You Wirelessly Explore the Depths of Your Pool
- The Integrated Spotlight Shines Brightly Inside the Water for Night Time Operation
- Control the Sub's Movement Via Twin Directional Propellers

EXCITING SUBMARINE ACTION!

- Full Function RC Action for Endless Water Fun
- Explore the Depths of Your Pool Via Remote Control
- Working LED Spotlight Shines Brightly Underwater
- Real Diving Action Via Twin Directional Propellers

Submarine requires 4 "AA" 1.5V alkaline batteries (not included). Remote control requires one 9V alkaline battery (not included). See bottom panel for important battery information. Colors and styles may vary.

ART DEPARTMENT

Job # / Filename

Designer: Dinh Tran

File Format: Adobe Illustrator CC (live)

Printing Process / Finishing: Gloss finish
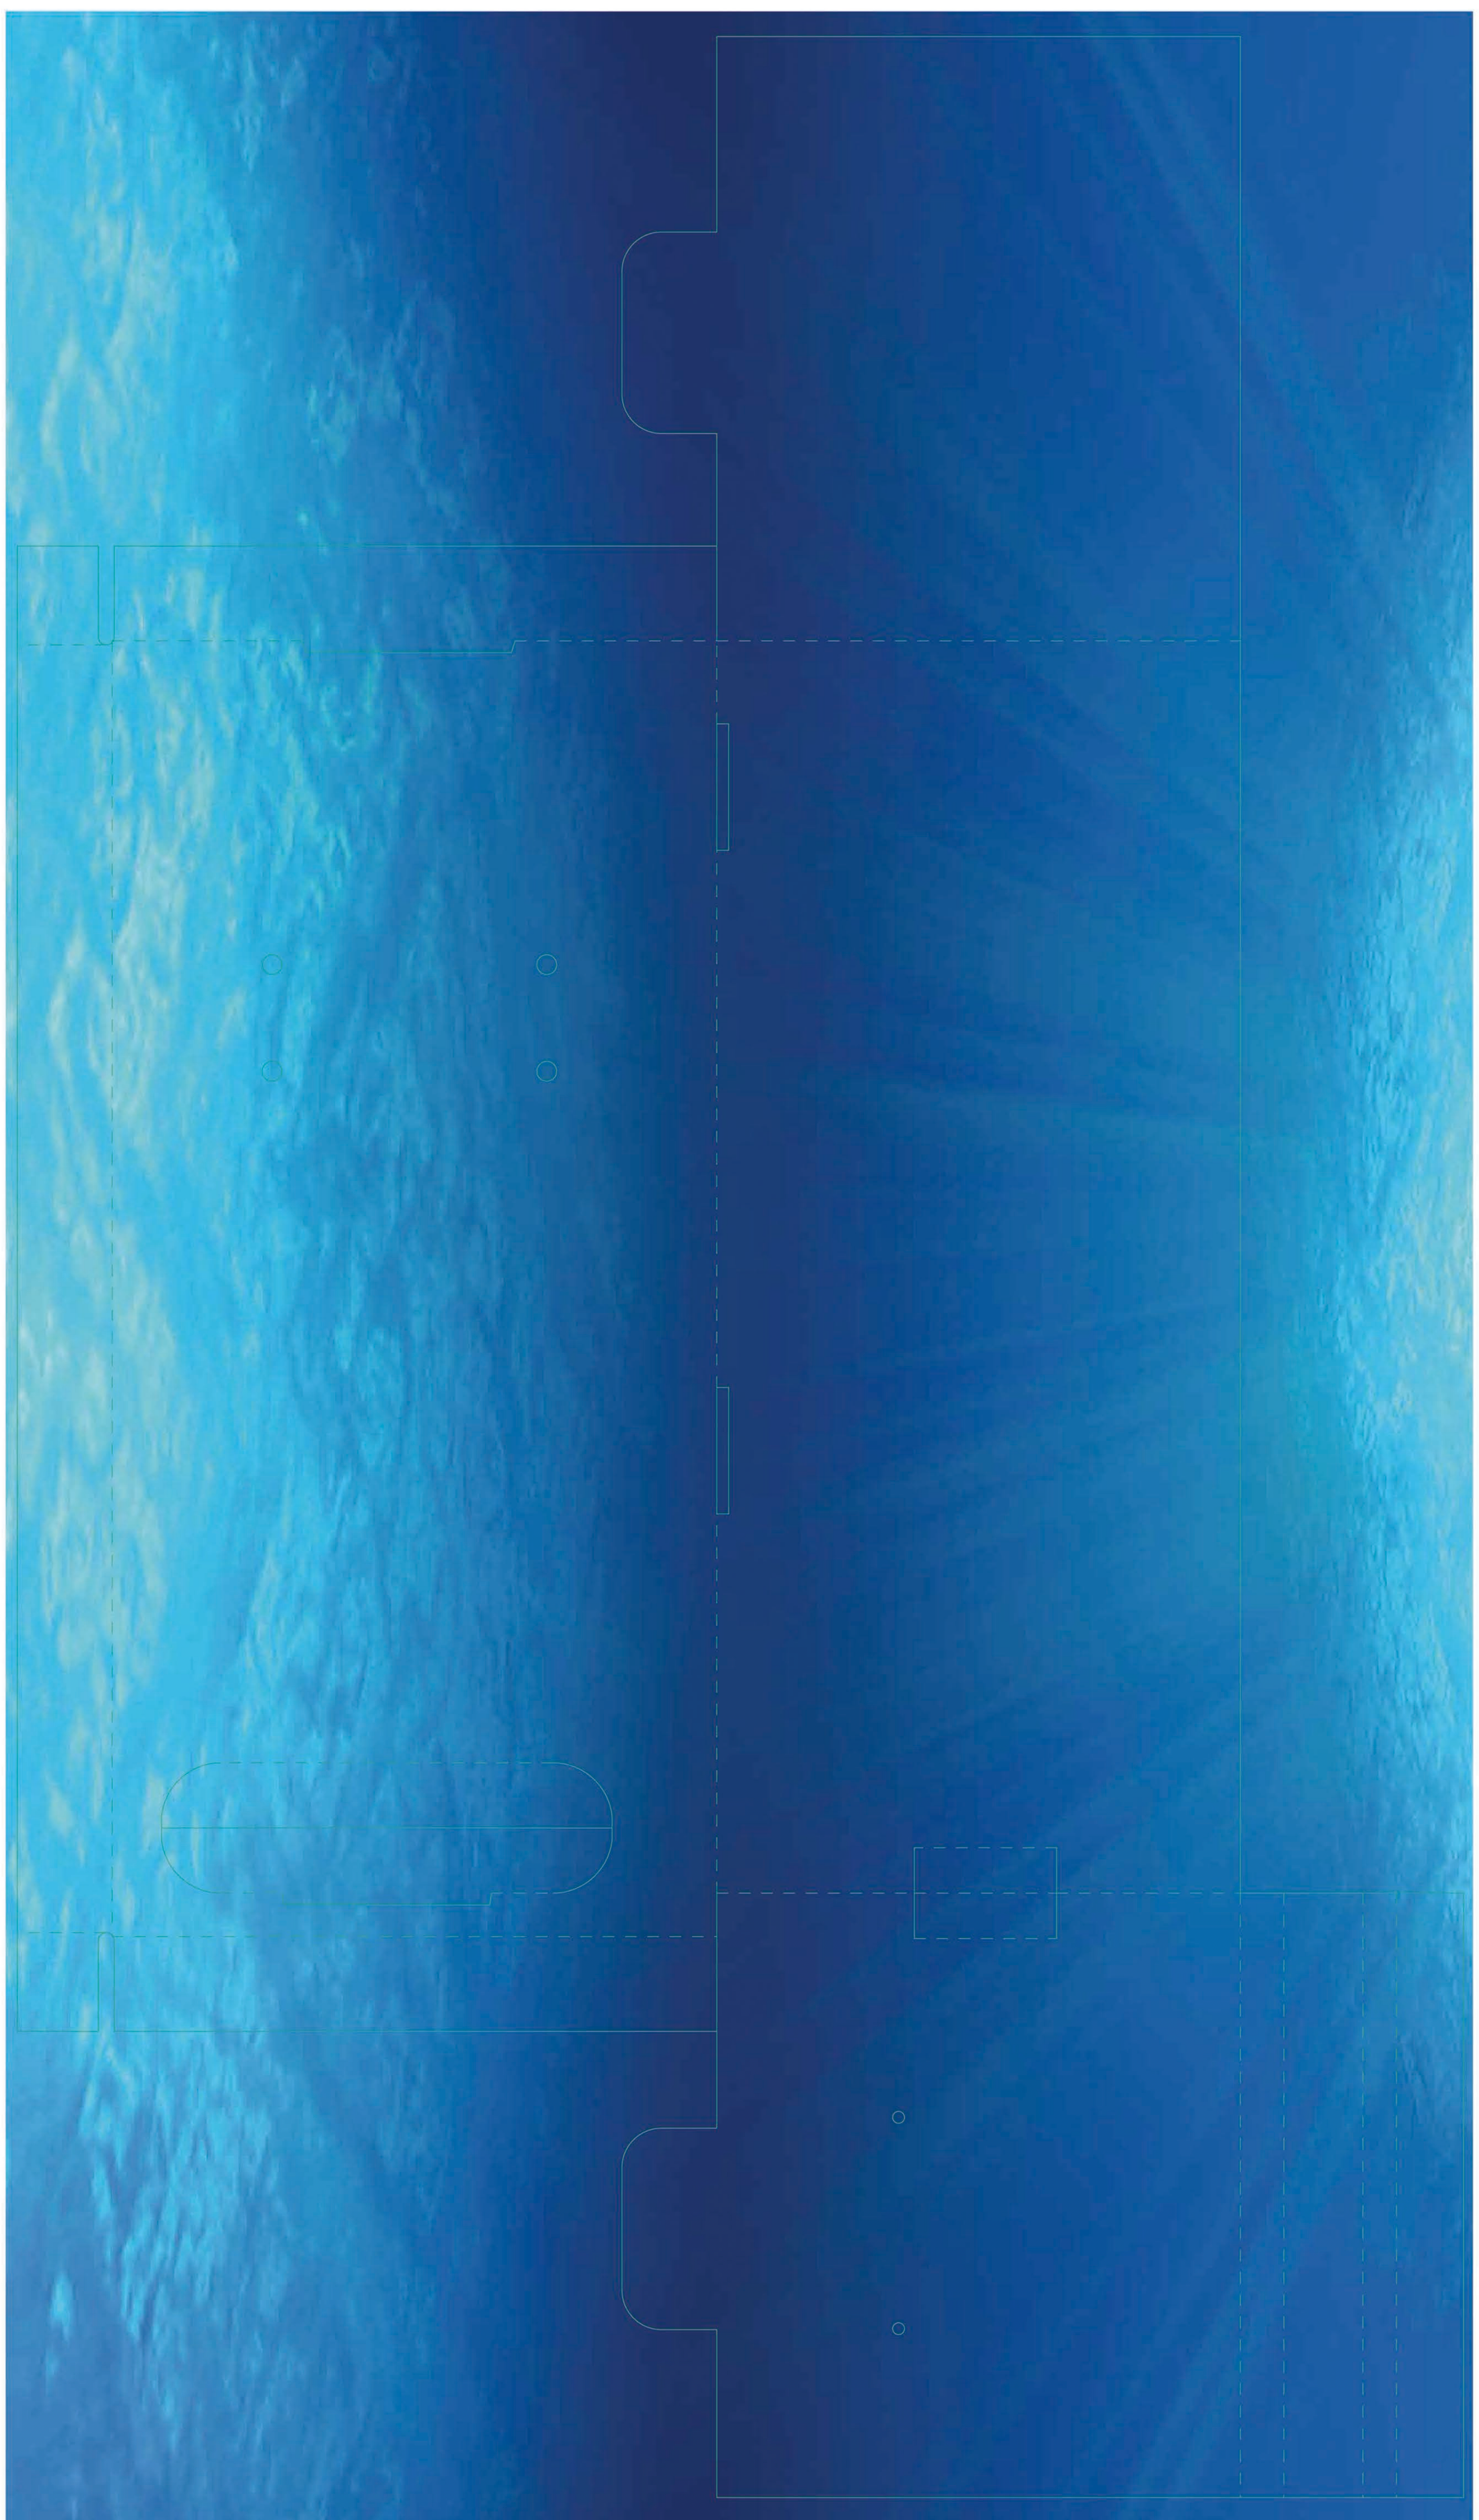
MerchSource