LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

STANDS UP ON ITS OWN

DX2016H
Toy RC Motorcycle

BLUE HAT
TOY COMPANY™

AGES 6+

BOX CONTAINS THE FOLLOWING FREQUENCY:
☐ 27 MHz
☐ 49 MHz

BATTERY OPERATED PLAY VEHICLE

AGES 6 AND UP

⚠ WARNING!
CHOKING HAZARD-
Small parts. Not suitable for children under 3 years.

BLUE HAT
TOY COMPANY™

TWO FREQUENCIES FOR COMPETITIVE RACING

WIRELESS RC ACTION!
INTERMEDIATE SKILL LEVEL

OVER 95-FT RANGE

STANDS UP ON ITS OWN!

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

BLUE HAT
TOY COMPANY™

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

STANDS UP ON ITS OWN

EXCITING RACING ACTION!

- *High Speed RC Motorcycle with Leaning Function*
- *Full Function Wireless Remote Control*
- *High-Performance Rubber Grip Tires*
- *Available In 2 Frequencies For Competitive Racing*

FULL FUNCTION REMOTE CONTROL

- High Speed RC Motorcycle with Leaning Action
- Full Function Wireless Remote Control
- High-Performance Rubber Grip Tires
- Available In 2 Frequencies For Competitive Racing

Motorcycle requires five "AA" 1.5V batteries (not included). RC controller requires one 9V battery (not included). See bottom panel for additional information. Colors and styles may vary.

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

BATTERY INSTALLATION

Operation requires 5 "AA" 1.5V batteries (not included) for motorcycle, and one 9V battery (not included) for radio controller.

- After removing your motorcycle from the box, you must remove the paper tray. Unscrew the fastener underneath the motorcycle to remove from the tray.
- Locate the battery compartment on the underside of the motorcycle, and the radio controller.
- Remove the battery compartment.
- Insert 5 "AA" 1.5V batteries according to the polarity diagram located on the battery tray. (Fig. 1)
- Replace the battery compartment and battery cover.
- Slide open the battery compartment door of the controller. (Fig. 2)
- Insert the one 9V battery following the correct polarity.
- Replace the screw/battery compartment door securely before operating.

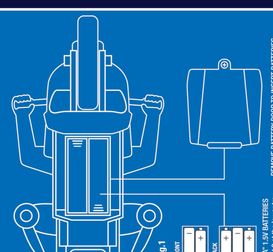

BASIC OPERATION

NOTE: YOUR MOTORCYCLE MUSTBE SET ON LARGE, OPEN AREAS.

- Switch the controller power switch to the "ON" position.
- Operate the motorcycle according to the controls diagram below.
- For best operation, use on a level and flat surface.
- To start your motorcycle press the left joystick forward and slightly turn the motorcycle in the opposite direction in which it is resting.
- **To control your motorcycle, slow down the speed and press left or right.**
  1. **To balance your motorcycle, slow down the speed and release the forward joystick repeatedly.**
  2. **While pressing the left or right joystick, press and release the forward joystick repeatedly.**

OPERATING CONTROLS

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nicad-cadmium) batteries.
- Insert batteries according to polarity diagram inside battery compartment.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be recharged only under adult supervision. Remove batteries from toy before recharging. Use only the recommended battery or equivalent type as recommended by the manufacturer.
- Always use, replace, and recharge all applicable batteries under adult supervision.

SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT

- Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electrical shock.
- It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2014 MacroSource, LLC. Blue Hat Toy Company logos are trademarks of MacroSource, LLC. All rights reserved.

Distributed by MacroSource, LLC, Irvine, CA 92618

For customer support, please visit www.mosupplierservice.com or call 1.800.374.2144.

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is not permitted to alter, remove or reproduce any copyright notice from this package.

2905058 (33415)

6 942021 316244 6

Made in China