BLUE HAT
TOY COMPANY™

TWO FREQUENCIES
FOR COMPETITIVE RACING

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

STANDS UP ON ITS OWN!

WIRELESS
RC
ACTION!
INTERMEDIATE
SKILL
LEVEL

OVER 95-FT
RANGE

BLUE HAT
TOY COMPANY™

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

STANDS UP
ON ITS OWN

EXCITING RACING ACTION!

- High Speed RC Motorcycle with Leaning Function
- Full Function Wireless Remote Control
- High-Performance Rubber Grip Tires
- Available In 2 Frequencies For Competitive Racing

BLUE HAT
TOY COMPANY™

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

AGES 6+

BOX CONTAINS THE FOLLOWING FREQUENCY:
☐ 27 MHz
☐ 49 MHz

BATTERY OPERATED PLAY VEHICLE

AGES 6 AND UP

⚠ WARNING!
CHOKING HAZARD-
Small parts. Not suitable for children under 3 years.

STANDS UP
ON ITS OWN

DX2016H
Toy RC Motorcycle

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

BLUE HAT
TOY COMPANY™

STANDS UP ON ITS OWN!

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

Motorcycle requires five "AA" 1.5V batteries (not included). RC controller requires one 9V battery (not included). See bottom panel for additional information. Colors and styles may vary.

STANDS UP
ON ITS OWN

FULL FUNCTION
REMOTE CONTROL

- High Speed RC Motorcycle with Leaning Action
- Full Function Wireless Remote Control
- High-Performance Rubber Grip Tires
- Available In 2 Frequencies For Competitive Racing

LEAN MACHINE

RADIO CONTROLLED RACING MOTORCYCLE

BATTERY INSTALLATION

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

Operation requires 5 "AA" 1.5V batteries (not included) for motorcycle, and one 9V battery (not included) for radio controller.

- After removing your motorcycle from the box, you must remove the paper tray. Unscrew the fastener underneath the motorcycle to remove the battery tray.
- Locate the battery compartment on the underside of the motorcycle, and the radio controller.
- Remove the battery compartment.
- Insert 5 "AA" 1.5V batteries according to the polarity diagram located on the battery tray. (Fig. 1)
- Replace the battery compartment and battery cover.
- Slide open the battery compartment door of the controller. (Fig.2)
- Insert the one 9V battery following the correct polarity.
- Replace the battery compartment door securely before operating.

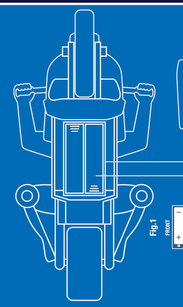

BASIC OPERATION

NOTE: YOUR MOTORCYCLE WORKS BEST IN LARGE, OPEN AREAS.

- Switch the controller power switch to the "ON" position.
- Operate the motorcycle according to the controls diagram below.
- Keep the motorcycle upright and in the upright position.
- To start your motorcycle press the left joystick forward and slightly turn the motorcycle in the opposite direction in which it is resting.

TURNING TURN LEAN MACHINE:
1. To hidden your turn slow down the speed and press left or right.
2. While pressing the left or right joystick, press and release the forward joystick repeatedly.

OPERATING CONTROLS

BATTERY WARNING:

- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Install batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Do not leave dead batteries in the product. Remove immediately if leaking. Leaks, odors, and local rises. Do not dispose of batteries in a fire; they may rupture or explode.
- Only use batteries specified (alkaline/standard, rechargeable and/or adapter, if applicable, specified by manufacturer).
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT

- Not recommended for children under 6 years of age. As with all electrical products, precautions should be observed during handling and use to avoid electrical shock and injury.
- It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

2905058 (33415)

Made in China

©2016 MacroDisc, LLC, Blue Hat Toy Company, Blue Hat Toy Company logo are trademarks of MacroDisc, LLC. All rights reserved.

Distributed by MacroDisc, LLC, Irvine, CA 92618
For Customer Service, please visit www.macrodiscusa.com or call 1-800-374-2164

The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. It is our pleasure to be the owners of copyrights and trademarks in this package.