iPod® MODE

Using iPod® Mode

Playing/Pausing iPod® Songs

Once an iPod® is connected, the mode will automatically start and begin playing an iPod® song.

<For RDS model>

While playing, press the ⏸ button to pause and press ▶ button to play.

✻ NOTICE

iPod®s with unsupported communication protocols may not properly operate in the audio system.

Changing Songs

Press the SEEK TRACK key to move to the previous or next song.

✻ NOTICE

- **Pressing the SEEK TRACK key after the song has been playing for 2 seconds will start the current song from the beginning.**
- **Pressing the SEEK TRACK key before the song has been playing for 1 seconds will start the previous song.**
- **Slight time differences may exist depending your iPod® product.**

Rewinding / Fast-forwarding Songs

While playing, press and hold the SEEK TRACK key (over 0.8 seconds) to rewind or fast-forward the current song.

Searching Categories

Turn the TUNE knob left/right to search for the desired category.

<For RDS model>

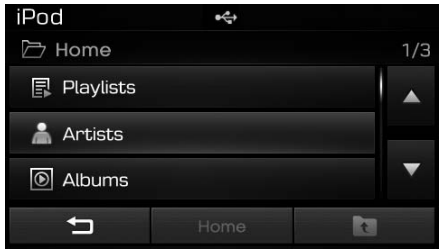

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:43 AM Page 62

Once you find the desired category, press the TUNE knob to select and play.

✻ NOTICE

There are eight categories that can be searched, including Playlists, Artists, Albums, Genres, Songs, Composers, Audiobooks and Podcasts.

Category Menu

Within the iPod® Category menu, you will have access to the , , and features.

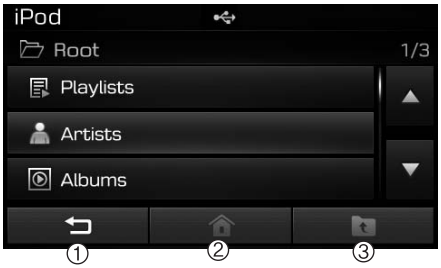

<For RDS model>

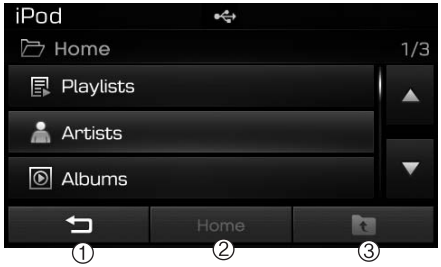

1. : Displays the play screen
2. (Home): Moves to the iPod® root category screen
3. : Moves to the previous category

✻ NOTICE

- **If the search mode is accessed while playing a song, the most recently searched category is displayed.**
- **Search steps upon initial connection may differ depending on the type of iPod® device.**

iPod® Mode Menu

Within this mode, you will have access to the Random(Shuffle), Repeat and List features.

<For RDS model>

Random(Shuffle)

Press the (Shuffle) button to play songs in random(Shuffle) order.

- Random(Shuffle) All : Plays all songs in Random(Shuffle) order.

Repeat

Press the (Repeat) button to repeat the current song. Press the button again to turn the repeat feature off.

• Repeat : Repeats the current song

List

Press the (List) button to display the Category Menu.

<For RDS model>

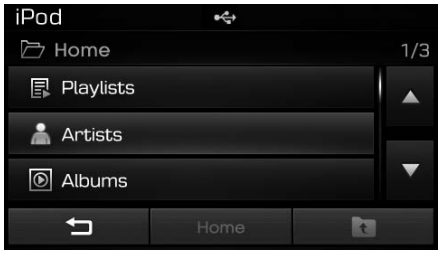

Turn the TUNE knob left/right to search for the desired category.

Once you find the desired category, press the TUNE knob to select and play.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:43 AM Page 64

AUX MODE

Using AUX Mode

Press the MEDIA key ▸ Select [AUX]

An external device can be connected to play music.

Connecting an External Device

External audio players (Camcorders, car VCR, etc.) can be played through a dedicated cable.

MY MUSIC MODE

Using My Music Mode

Playing/Pausing My Music Files

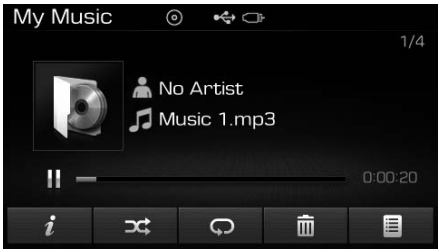

<For RDS model>

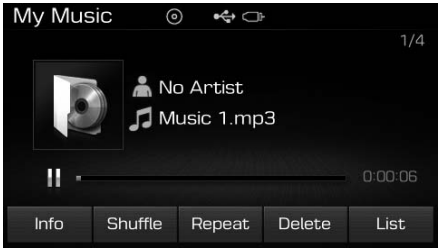

While playing, press the ⏸ button to pause and press ▶ button to play.

✻ NOTICE

If there are no files saved within My Music, the My Music button will be disabled.

Changing Files

Press the SEEK TRACK key to move to the previous or next file.

✻ NOTICE

- **Pressing the SEEK TRACK key after the file has been playing for 2 seconds will start the current file from the beginning.**
- **Pressing the SEEK TRACK key before the file has been playing for 1 seconds will start the previous file.**

Selecting from the List

Turn the TUNE knob left/right to search for the desired file.

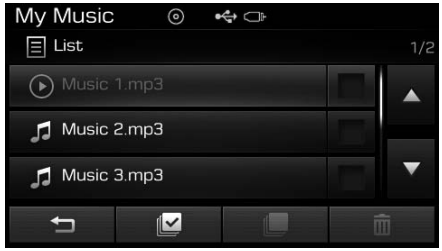

<For RDS model>

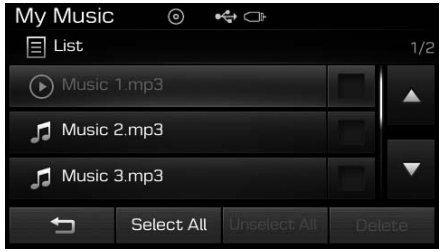

Once you find the desired file, press the TUNE knob to start playing.

Rewinding / Fast-forwarding Files

While playing, press and hold the SEEK TRACK key to rewind or fast-forward the current file.

Scan

Press the SCAN key to play the first 10 seconds of each file.

My Music Mode Menu

Within this mode, you will have access to the Info, Random(Shuffle), Repeat, Delete and List features.

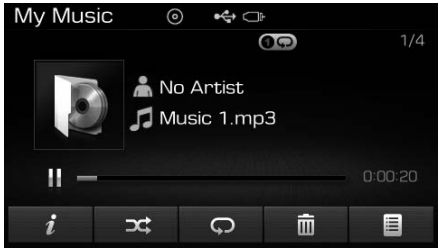

<For RDS model>

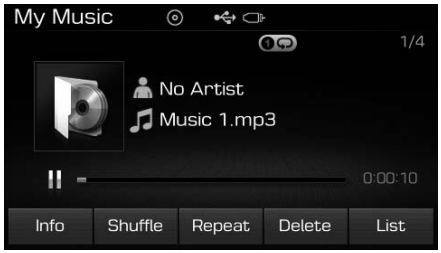

Info

Press the *i* (Info) button to display details about the current file.

✻ NOTICE

The title, artist and album info are displayed only when such information is recorded within the MP3 file ID3 tag.

Random

Press the (Shuffle) button to play files in random order. Press the button again to turn the Random feature off.

Repeat

Press the (Repeat) button to repeat the current song. Press the button again to turn the repeat feature off.

Deleting Files

Press the (Delete) button to delete the current file.

List

Press the List button to display the file list screen.

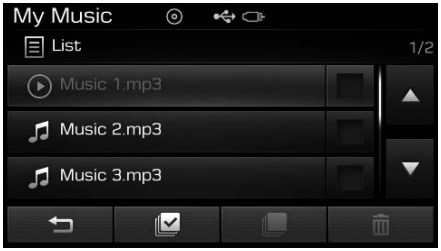

<For RDS model>

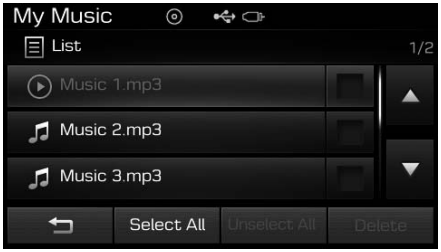

Turn the ◎TUNE knob left/right to search for files. Once the desired file is displayed, press the knob to select and play.

List Menu

From the List screen, it is possible to delete files you previously saved into My Music.

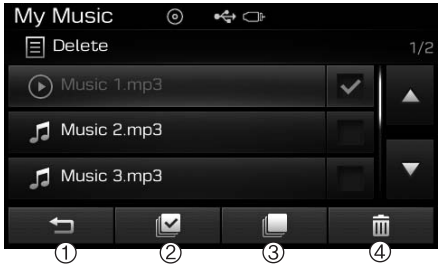

<For RDS model>

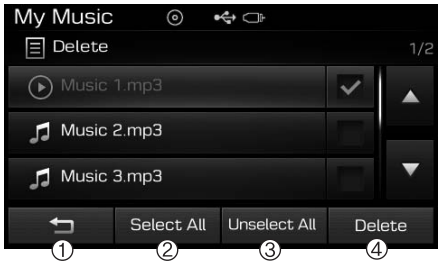

Press the (Select All) button or individually select the files you want to delete. Once files are selected, the (Unselect All) button and (Delete) buttons will be enabled.

1) : Moves to the previous screen
2) (Selects all) : Selects all files
3) (Unselect All) : Deselects all selected files
4) (Delete) : Deletes selected files

After selecting the files you want to delete, press the (Delete) button to delete the selected files.

✻ NOTICE

- **If there is memory available, up to 6,000 files can be saved.**
- **Identical files cannot be copied more than 1,000 times.**
- **To check memory information, go to SETUP ▶ [System] ▶ [Memory Information]**

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:43 AM Page 68

Bluetooth® Wireless Technology AUDIO MODE (for *Bluetooth®* Wireless Technology equipped model)

Using *Bluetooth®* Wireless Technology Audio Mode

Playing/Pausing Bluetooth® Wireless Technology *Audio*

Once a *Bluetooth®* Wireless Technology device is connected, the mode will automatically start.

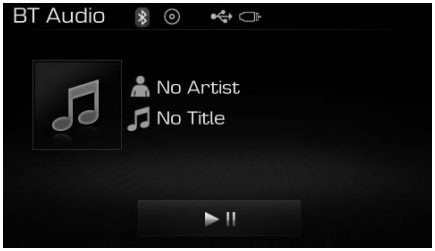

While playing, press the ▶II button to pause and press ▶II button to play.

✻ NOTICE

The play/pause feature may operate differently depending on the mobile phone.

Changing Files

Press the SEEK TRACK key to move to the previous or next file.

Setting Connection

If a *Bluetooth®* Wireless Technology device has not been connected, press the SETUP key ▸[Phone] button to display the *Bluetooth®* Wireless Technology connection screen.

It is possible to use the pair phone, connect/disconnect and delete features from your *Bluetooth®* Wireless Technology phone.

✻ NOTICE

- **If the *Bluetooth®* Wireless Technology audio is not operating properly, check whether the feature is turned off at SETUP ▸[Phone] ▸[Audio streaming] (Streaming Audio). If the feature is off, turn back on and try again.**
- **If music is not yet playing from your mobile device after converting to *Bluetooth®* Wireless Technology Audio mode, pressing the play button once may start playing the mode. Check to see that music is playing from the *Bluetooth®* Wireless Technology device after converting to *Bluetooth®* Wireless Technology Audio Mode.**

Bluetooth® Wireless Technology (for RDS, *Bluetooth®* Wireless Technology equipped model)

Using *Bluetooth®* Wireless Technology Handsfree

- *Bluetooth®* Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, *Bluetooth®* Wireless Technology phones, PDAs, various electronic devices, and automotive environments, *Bluetooth®* Wireless Technology allows data to be transmitted at high speeds without having to use a connector cable.
- *Bluetooth®* Wireless Technology Handsfree refers to a device which allows the user to conveniently make phone calls with *Bluetooth®* Wireless Technology mobile phones through the audio system.

⚠ CAUTION

- ***Bluetooth® Wireless Technology Handsfree is a feature that enables drivers to practice safe driving. Connecting the car audio system with a Bluetooth® Wireless Technology phone allows the user to conveniently make calls, receive calls, and manage the phone book. Before using the Bluetooth® Wireless Technology , carefully read the contents of this user's manual.***
- ***Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents.***
- ***Do not operate the device excessively while driving.***
- ***Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.***

✻ NOTICE - USING UPON CONNECTING *Bluetooth®* Wireless Technology PHONE

- Before connecting the car audio system with the mobile phone, check to see that the mobile phone supports *Bluetooth®* Wireless Technology features.
- Even if the phone supports *Bluetooth®* Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the *Bluetooth®* Wireless Technology power is turned off. Disable the hidden state or turn on the *Bluetooth®* Wireless Technology power prior to searching/connecting with the car audio system.
- If you do not want to automatically connect your *Bluetooth®* Wireless Technology phone, try the following.
  1. Turn off the *Bluetooth®* Wireless Technology feature in your mobile phone.
     - For more information on *Bluetooth®* Wireless Technology features within your mobile, refer to your mobile phone user's manual.
  2. Turn off the *Bluetooth®* Wireless Technology feature in your car audio system.

(Continued)

(Continued)

- To turn off the *Bluetooth®* Wireless Technology feature in your car audio system, go to SETUP ▶ [Phone] and [turn off] the *Bluetooth®* Wireless Technology feature.

- Park the vehicle when connecting the car audio system with your mobile phone.
- *Bluetooth®* Wireless Technology connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
  1. Turn the *Bluetooth®* Wireless Technology function within the mobile phone off/on and try again.
  2. Turn the mobile phone power Off/On and try again.
  3 Completely remove the mobile phone battery, reboot, and then again.
  4. Reboot the audio system and try again.
  5. Delete all paired devices, pair and try again.
- The Handsfree call volume and quality may differ depending on the mobile phone.

(Continued)

(Continued)

- *Bluetooth®* Wireless Technology features supported within the vehicle are as follows. Some features may not be supported depending on your *Bluetooth®* Wireless Technologydevice.
  - Answering and placing *Bluetooth®* Wireless Technology Handsfree calls
  - Menu operation during call (Switch to Private, Switch to call waiting, Outgoing volume)
  - Download Call History
  - Download Mobile Phone book
  - Phone book/Call History Auto Download
  -*Bluetooth®* Wireless Technology device auto connection - *Bluetooth®* Wireless Technology Audio
- It is possible to pair up to five *Bluetooth®* Wireless Technology devices to the car system.
- Only one *Bluetooth®* Wireless Technology device can be connected at a time.
- Other devices cannot be paired while a *Bluetooth®* Wireless Technologydevice is already connected.
- When a *Bluetooth®* Wireless Technology device is being connected, the connection process cannot be canceled.

(Continued)

(Continued)

- Only *Bluetooth®* Wireless Technology Handsfree and *Bluetooth®* Wireless Technology audio related features will operate within this system.
- Normal operation is possible only for devices that support Handsfree or audio features, such as a *Bluetooth®* Wireless Technology mobile phone or a *Bluetooth®* Wireless Technology audio device.
- Only one function can be used at a time between the *Bluetooth®* Wireless Technology Handsfree and *Bluetooth®* Wireless Technology audio. (While playing *Bluetooth®* Wireless Technology audio, streaming will end upon entering the *Bluetooth®* Wireless Technology phone screen.)
- If a connected *Bluetooth®* Wireless Technology device becomes disconnected for various reasons, such as being out of range, turning the device OFF, or a *Bluetooth®* Wireless Technology communication error, *Bluetooth®* Wireless Technology devices are automatically searched and connected.
- Placing the audio system within an electromagnetic environment may result in noise interference.

Pairing a *Bluetooth®* Wireless Technology wireless technology Device

What is *Bluetooth®* Wireless Technology Pairing?

Pairing refers to the process of synchronizing your *Bluetooth®* Wireless Technology phone or device with the car audio system for connection. Pairing is necessary to connect and use the *Bluetooth®* Wireless Technology feature.

Pairing PHONE Key / Key on the Steering Remote Controller

When No Devices have been Paired

1. Press the PHONE key or the key on the steering remote controller. The following screen is displayed.
2. Press the OK button to enter the Pair Phone screen.

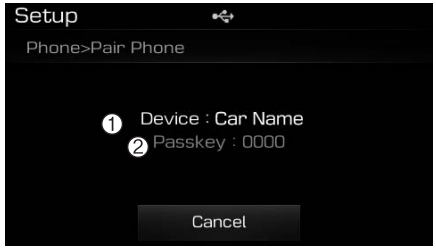

1) Device : Name of device as shown when searching from your *Bluetooth®* Wireless Technology device
2) Passkey : Passkey used to pair the device

3. From your *Bluetooth®* Wireless Technology device (i.e. Mobile Phone), search and select your car audio system.
4. After a few moments, a screen is displayed where the passkey is entered.
   Here, enter the passkey “0000” to pair your *Bluetooth®* Wireless Technology device with the car audio system.
5. Once pairing is complete, the following screen is displayed.

✻ NOTICE

- **If *Bluetooth®* Wireless Technology devices are paired but none are currently connected, pressing the PHONE key or the key on the steering remote controller displays the following screen. Press the [Pair] button to pair a new device or press the [Connect] to connect a previously pair device.**

Pairing through [PHONE] Setup

Press the SETUP key ▸Select [Phone]▸Select [Pair Phone] ▸ Select ◉TUNE knob

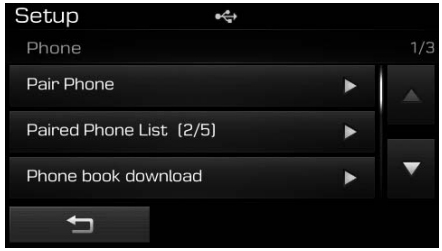

1. The following steps are the same as the steps described in the “When No Devices have been Paired” section.

✻ NOTICE

- The waiting period during phone pairing will last for one minute. The pairing process will fail if the device is not paired within the given time. If the pairing process fails, you must start the process from the beginning.
- Generally, most *Bluetooth*® Wireless Technology devices will automatically connect once pairing is complete. However, some devices may require a separate verification process to connect. Check to see whether *Bluetooth*® Wireless Technology has been properly connected within your mobile phone.
- List of paired *Bluetooth*® Wireless Technology devices can be viewed at SETUP ▸ [Phone] ▸ [Paired Phone List].

Connecting a Device

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

1) Connected Phone : Device that is currently connected
2) Paired Phone : Device that is paired but not connected

From the paired phone list, select the device you want to connect and press the button.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:43 AM Page 74

Changing Priority

What is Priority?

It is possible to pair up to five *Bluetooth®* Wireless Technology devices with the car audio system. As a result, the “Change Priority’ feature is used to set the connection priority of paired phones. However, the most recently connected phone will always be set as the highest priority.

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

From the paired phone list, select the phone you want to change to the highest priority, then press the button from the Menu. The selected device will be changed to the highest priority.

Disconnecting a Device

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

From the paired phone list, select the currently connected device and press the button.

Deleting a Device

Press the SETUP key▸Select [Phone]▸Select [Paired Phone List]

From the paired phone list, select the device you want to delete and press the button.

✻ NOTICE

- When deleting the currently connected device, the device will automatically be disconnected to proceed with the deleting process.
- If a paired *Bluetooth®* Wireless Technology device is deleted, the device's call history and phone book data will also be deleted.
- To re-use a deleted device, you must pair the device again.

USING *Bluetooth®* Wireless Technology

Phone Menu Screen

Phone Menus

With a *Bluetooth®* Wireless Technology device connected, press the PHONE key to display the Phone menu screen.

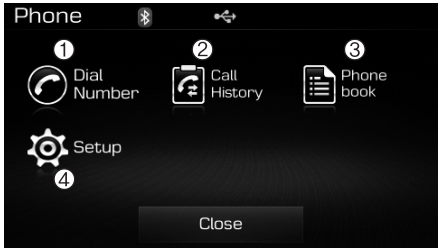

1) Dial Number : Displays the dial screen where numbers can be dialed to make calls
2) Call History : Displays the call history list screen
3) Phone book : Displays the Phone book list screen
4) Setup : Displays Phone related settings

✻ NOTICE

- If you press the [Call History] button but there is no call history data, a prompt is displayed which asks whether to download call history data.
- If you press the [Phone book] button but there is no phone book data, a prompt is displayed which asks whether to download phone book data. .
- This feature may not be supported in some mobile phones. For more information on download support, refer to your mobile phone user's manual.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:43 AM Page 76

Calling by Dialing a Number

Press the PHONE key▸Select [Dial Number]

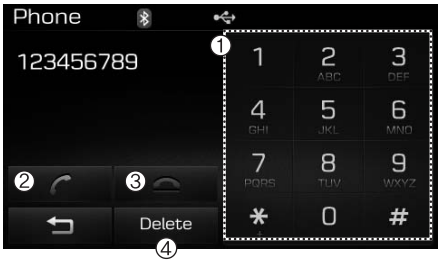

1) Dial Pad : Used to enter phone number
2) Call : If a number has been entered, calls the number If no number has been entered, switches to call history screen
3) End : Deletes the entered phone number
4) Delete : Deletes entered numbers one digit at a time

Answering Calls

Answering a Call

Answering a call with a *Bluetooth®* Wireless Technology device connected will display the following screen.

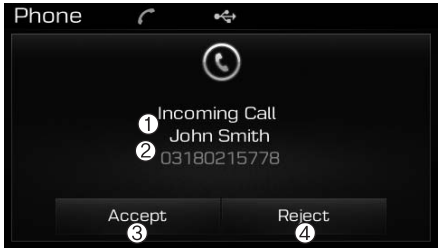

1) Caller : Displays the other part's name when the incoming caller is saved within your phone book
2) Incoming Number : Displays the incoming number
3) Accept : Accept the incoming call
4) Reject : Reject the incoming call

✻ NOTICE

- **When the incoming call pop-up is displayed, most Audio and SETUP mode features will not operate. Only the call volume can be operated.**
- **The telephone number may not be properly displayed in some mobile phones.**
- **When a call is answered with the mobile phone, the call mode will automatically convert to Private mode.**

During a Handsfree Call

1) Caller : Displays the other party's name if the incoming caller is saved within your phone book
2) Incoming Number : Displays the incoming number
3) Call time : Displays the call time
4) End : Ends call
5) Private : Converts to Private mode
6) Out Vol. : Sets call volume as heard by the other party
7) Mute : Turns Mic Mute On/Off

✻ NOTICE

If the mic is muted, the other party will not be able to hear your voice.

Call History

Press the PHONE key ▸ Select [Call History]

A list of incoming, outgoing and missed calls is displayed.

Press the [Download] button to download the call history.

1) Call History :
   - Displays recent calls (call history)
   - Connects call upon selection
2) Download : Download Recent Call History

✻ NOTICE

- **The call history list will display up to 30 outgoing, incoming, and missed calls.**
- **Upon downloading call histories, previously saved histories are deleted.**
- **Incoming calls with hidden caller IDs will not be saved in the call history list.**
- **Previously saved phone book entries are stored even if a device is disconnected and re-connected.**
- **The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth*® Wireless Technology device supports the download feature.**

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:43 AM Page 78

Phone Book

Press the PHONE key ▶ Select [Phone book]

The list of saved phone book entries is displayed. Press the [Download] button to download the call history.

1) Phone book List :
   -Displays downloaded phone book entries
   -Connects call upon selection
2) Download : Download phone book entries

✻ NOTICE

- **Up to 1,000 phone book entries can be copied into car phone book.**
- **Upon downloading phone book data, previously saved phone book data will be deleted.**
- **Downloading is not possible if the phone book download feature is turned off within the *Bluetooth*® Wireless Technology device. Also, some devices may require device authorization upon attempting to download. If downloading cannot be normally conducted, check the *Bluetooth*® Wireless Technology device setting or the screen state.**
- **Caller ID information will not be displayed for unsaved callers.**
- **The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth*® Wireless Technology device supports the download feature.**

Bluetooth® Wireless Technology (for *Bluetooth®* Wireless Technology equipped model)

Pairing a *Bluetooth®* Wireless Technology wireless technology Device

What is *Bluetooth®* Wireless Technology Pairing?

Pairing refers to the process of synchronizing your *Bluetooth®* Wireless Technology phone or device with the car audio system for connection. Pairing is necessary to connect and use the *Bluetooth®* Wireless Technology feature.

Pairing PHONE Key / Key on the Steering Remote Controller

When No Devices have been Paired

1. Press the PHONE key or the key on the steering remote controller. The following screen is displayed.
2. Press the OK button to enter the Pair Phone screen.

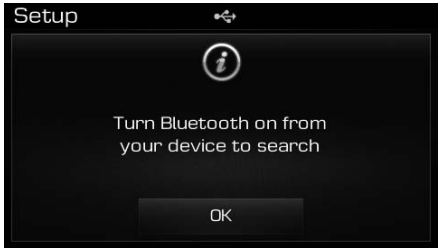

1) Device : Name of device as shown when searching from your *Bluetooth®* Wireless Technology device
2) Passkey : Passkey used to pair the device

3. From your *Bluetooth®* Wireless Technology device (i.e. Mobile Phone), search and select your car audio system.
4. After a few moments, a screen is displayed where the passkey is entered.
   Here, enter the passkey “0000” to pair your *Bluetooth®* Wireless Technology device with the car audio system.
5. Once pairing is complete, the following screen is displayed.

✻ NOTICE

- **If *Bluetooth*® Wireless Technology devices are paired but none are currently connected, pressing the PHONE key or the key on the steering remote controller displays the following screen. Press the [Pair] button to pair a new device or press the [Connect] to connect a previously pair device.**

Pairing through [PHONE] Setup

Press the SETUP key ▸Select [Phone]▸Select [Pair Phone] ▸ Select ◉TUNE knob

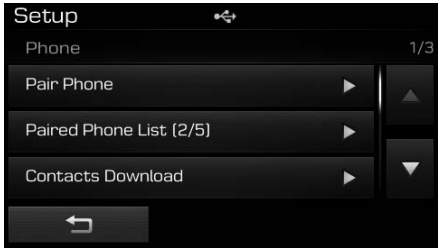

1. The following steps are the same as the steps described in the “When No Devices have been Paired” section.

✻ NOTICE

- **The waiting period during phone pairing will last for one minute. The pairing process will fail if the device is not paired within the given time. If the pairing process fails, you must start the process from the beginning.**
- **Generally, most *Bluetooth*® Wireless Technology devices will automatically connect once pairing is complete. However, some devices may require a separate verification process to connect. Check to see whether *Bluetooth*® Wireless Technology has been properly connected within your mobile phone.**
- **List of paired *Bluetooth*® Wireless Technology devices can be viewed at SETUP ▸[Phone]▸[Paired Phone List].**

Connecting a Device

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

1) Connected Phone : Device that is currently connected
2) Paired Phone : Device that is paired but not connected

From the paired phone list, select the device you want to connect and press the Connect button.

Changing Priority

What is Priority?

It is possible to pair up to five *Bluetooth®* Wireless Technology devices with the car audio system. As a result, the "Change Priority' feature is used to set the connection priority of paired phones. However, the most recently connected phone will always be set as the highest priority.

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

From the paired phone list, select the phone you want to change to the highest priority, then press the Change priority button from the Menu. The selected device will be changed to the highest priority.

Disconnecting a Device

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

From the paired phone list, select the currently connected device and press the Disconnect button.

Deleting a Device

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

From the paired phone list, select the device you want to delete and press the Delete button.

✻ NOTICE

- When deleting the currently connected device, the device will automatically be disconnected to proceed with the deleting process.
- If a paired *Bluetooth®* Wireless Technology device is deleted, the device's call history and contacts data will also be deleted.
- To re-use a deleted device, you must pair the device again.

USING *Bluetooth®* Wireless Technology

Phone Menu Screen

Phone Menus

With a *Bluetooth®* Wireless Technology device connected, press the PHONE key to display the Phone menu screen.

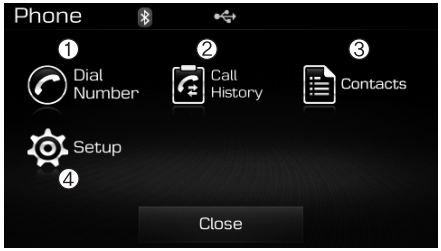

1) Dial Number : Displays the dial screen where numbers can be dialed to make calls
2) Call History : Displays the call history list screen
3) Contacts : Displays the Contacts list screen
4) Setup : Displays Phone related settings

✻ NOTICE

- If you press the [Call History] button but there is no call history data, a prompt is displayed which asks whether to download call history data.
- If you press the [contacts] button but there is no contacs data, a prompt is displayed which asks whether to download contacts data.
- This feature may not be supported in some mobile phones. For more information on download support, refer to your mobile phone user's manual.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:43 AM Page 84

Calling by Dialing a Number

Press the PHONE key ▸ Select [Dial Number]

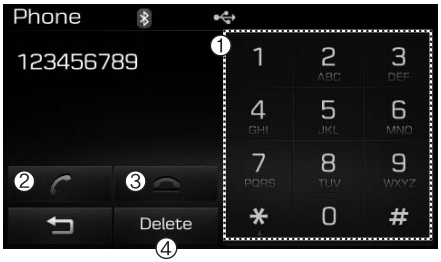

1) Dial Pad : Used to enter phone number
2) Call : If a number has been entered, calls the number If no number has been entered, switches to call history screen
3) End : Deletes the entered phone number
4) Delete : Deletes entered numbers one digit at a time

Answering Calls

Answering a Call

Answering a call with a *Bluetooth®* Wireless Technology device connected will display the following screen.

1) Caller : Displays the other part's name when the incoming caller is saved within your contacts
2) Incoming Number : Displays the incoming number
3) Accept : Accept the incoming call
4) Reject : Reject the incoming call

✻ NOTICE

- **When the incoming call pop-up is displayed, most Audio and SETUP mode features will not operate. Only the call volume can be operated.**
- **The telephone number may not be properly displayed in some mobile phones.**
- **When a call is answered with the mobile phone, the call mode will automatically convert to Private mode.**

During a Handsfree Call

1) Caller : Displays the other party's name if the incoming caller is saved within your contacts
2) Incoming Number : Displays the incoming number
3) Call time : Displays the call time
4) End : Ends call
5) Private : Converts to Private mode
6) Out Vol. : Sets call volume as heard by the other party
7) Mute : Turns Mic Mute On/Off

✻ NOTICE

If the mic is muted, the other party will not be able to hear your voice.

Call History

Press the PHONE key ▸ Select [Call History]

A list of incoming, outgoing and missed calls is displayed.

Press the Download button to download the call history.

1) Call History :
   - Displays recent calls (call history)
   - Connects call upon selection
2) Download : Download Recent Call History

Contacts

Press the PHONE key ▸ Select [Contacts]

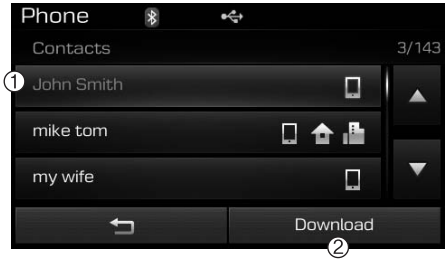

The list of saved phone book entries is displayed. Press the Download button to download the call history.

1) Contacts List :
   - Displays downloaded contacts entries
   - Connects call upon selection
2) Download : Download contacts entries

✻ NOTICE

- Up to 1,000 contacts entries can be copied into car contacts.
- Upon downloading contacts data, previously saved contacts data will be deleted.
- Downloading is not possible if the contacts download feature is turned off within the *Bluetooth®* Wireless Technology device. Also, some devices may require device authorization upon attempting to download. If downloading cannot be normally conducted, check the *Bluetooth®* Wireless Technology device setting or the screen state.
- Caller ID information will not be displayed for unsaved callers.
- The download feature may not be supported in some mobile phones. Check to see that the *Bluetooth®* Wireless Technology device supports the download feature.

✻ NOTICE - USING THE Voice Recognition

- When using the voice recognition feature, only commands listed within the user's manual are supported.
- Be aware that during the operation of the voice recognition system, pressing any key other than the key or touching the screen will terminate voice recognition mode.
- For superior voice recognition performance, position the microphone used for voice recognition above the head of the driver's seat and maintain a proper position when saying commands.
- Within the following situations, voice recognition may not function properly due to external sound.
  - When the windows and sunroof are open
  - When the wind of the cooling / heating device is strong
  - When entering and passing through tunnels
  - When driving on rugged and uneven roads
  - During severe rain (heavy rains, windstorms)
- Phone related voice commands can be used only when a *Bluetooth®* Wireless Technology device is connected.
- When making calls by stating a name, the corresponding contact must be downloaded and stored within the audio system.
- After downloading the *Bluetooth®* Wireless Technology phone book, it takes some times to convert the phone book data into voice information. During this time, voice recognition may not properly operate.
- Pronounce the voice commands naturally and clearly as if in a normal conversation.

VOICE RECOGNITION (if equipped)

Using Voice Recognition

Starting Voice Recognition

Shortly press the key on the steering remote controller .Say a command

<For RDS model>

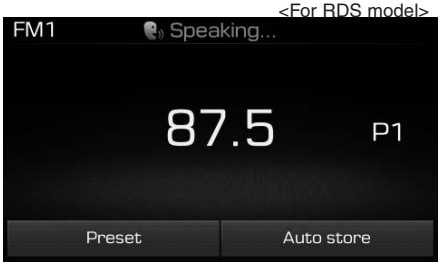

If voice recognition is in [Normal Mode], then the system will say “Please say a command. Beep~”

- If voice recognition is in [Expert Mode], then the system will only say a “Beep~”
- To change the Normal Mode/Expert Mode setting, go to SETUP ▶ [System] ▶ [Prompt Feedback].

✻ NOTICE

For proper recognition, say the command after the voice instruction and beep tone.

Skipping Prompt Messages

While prompt message is being stated ▶ Shortly press the key on the steering remote controller (under 0.8 seconds)

The prompt message is immediately ended and the beep tone will sound. After the “beep”, say the voice command.

Re-starting Voice Recognition

While system waits for a command ▶ Shortly press the key on the steering remote controller (under 0.8 seconds)

The command wait state is immediately ended and the beep ton will sound. After the “beep”, say the voice command.

ENDING VOICE RECOGNITION

While Voice Recognition is operating
▶Press and hold the key on the steering remote controller (over 0.8 seconds)

✻ NOTICE

- **While using voice command, pressing a steering wheel remote control or a different key will end voice command.**
- **In a state where the system is waiting for a voice command, say “cancel” or “end” to end voice command.**
- **In a state where the system is waiting for a voice command, press and hold the key on the steering remote controller to end voice command.**

❊ Illustration on using voice commands

• ***Starting voice command.***

Shortly pressing the key (under 0.8 seconds):

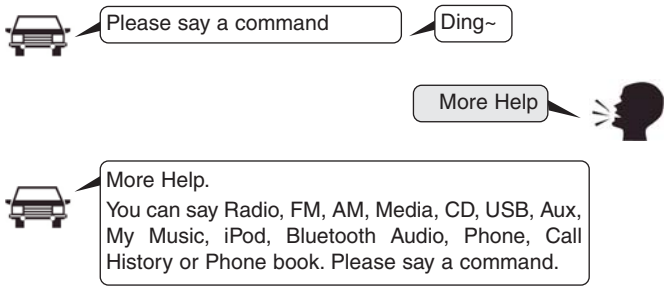

• ***Skipping Voice Recognition***

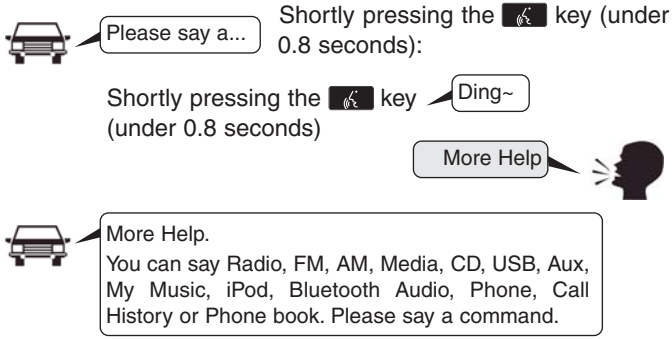

• ***End voice command.***

Shortly pressing the key (under 0.8 seconds):

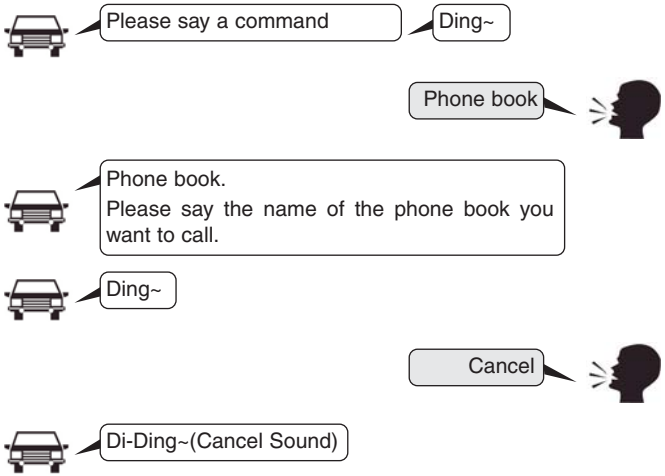

Voice Command List

- Common Commands: These are commands that can be used in all situations. (However, some commands may not be supported in special circumstances.)

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system.
Help	Provides guidance on commands that can be used within the current mode.
Call<Name>	Calls <Name> saved in phone book Ex) Call “John”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Phone book”, “Dial Number” to execute corresponding functions.
Call History	Displays the Call History screen.
Phone book	Displays the phone book screen. After saying this command, say the name of a phone book saved in the phone book to automatically connect the call.
Dial Number	Display the Dial number screen. After saying this command, you can say the number what you want to call.
Redial	Connects the most recently called number.
Radio	• When listening to the radio, displays the next radio screen. (FM1➞ FM2➞ FMA ➞ AM ➞ AMA) • When listening to a different mode, displays the most recently played radio screen.

Command	Function
FM	• When currently listening to the FM radio, maintains the current state. • When listening to a different mode, displays the most recently played FM screen.
FM1(FM One)	Displays the FM1 screen.
FM2(FM Two)	Displays the FM2 screen.
FMA	Displays the FMA screen.
AM	Displays the AM screen.
AMA	Displays the AMA screen.
FM Preset 1~6	Plays the most recently played broadcast saved in FM Preset 1~6.
AM Preset 1~6	Plays the broadcast saved in AM Preset 1~6.
FM 87.5~107.9	Plays the FM broadcast of the corresponding frequency.
AM 530~1710	Plays the AM broadcast of the corresponding frequency.
TA on	Enable Traffic Announcement
TA off	Disable Traffic Announcement
News on	Enable RDS News feature
News off	Disable RDS News feature

Command	Function
Media	Moves to the most recently played media screen.
Play Track 1~30	If a music CD has been inserted, plays the corresponding track.
CD	Plays the music saved in the CD.
Search CD	Moves to the CD track or file selection screen. • For audio CDs, move to the screen and say the track number to play the corresponding track. • Moves to MP3 CD file selection screen. After manually operate the device to select and play music.
USB	Plays USB music.
Search USB	Moves to USB file selection screen. After manually operate the device to select and play music.
iPod	Plays iPod music.
Search iPod	Moves to the iPod file selection screen. After, manually operate the device to select and play music.
My Music	Plays the music saved in My Music.
Search My Music	Moves to My Music file selection screen. After manually operate the device to select and play music.

Command	Function
AUX (Auxiliary)	Plays the connected external device.
Bluetooth Audio	Plays the music saved in connected *Bluetooth®* Wireless Technology device.
Mute	Mutes the radio or music volume.
Pardon?	Repeats the most recent comment.
Cancel (Exit)	Ends voice command.

- FM/AM radio commands: Commands that can be used while listening to FM, AM radio.

Command	Function
Preset 1~6	Plays the broadcast saved in Preset 1~6.
Auto Store	Automatically selects radio broadcast frequencies with superior reception and saves in Presets 1~6.
Preset Save 1~6	Saves the current broadcast frequency to Preset 1~6.
Seek up	Plays the next receivable broadcast.
Seek down	Plays the previous receivable broadcast.
Next Preset	Selects the preset number next to the most recently selected preset. (Example: When currently listening to preset no. 3, then preset no. 4 will be selected.)
Previous Preset	Selects the preset number previous to the most recently selected preset. (Example: When currently listening to preset no. 3, then preset no. 2 will be selected.)
Scan	Scans receivable frequencies from the current broadcast and plays for 10 seconds each.
Preset Scan	Moves to the next preset from the current present and plays for 10 seconds each.
AF on	Enable Alternative Frequency feature
AF off	Disable Alternative Frequency feature
Region	Enable Region feature

- Audio CD commands: Commands that can be used while listening to Audio CD.

Command	Function
Region off	Disable Region feature
Program Type	Moves to the RDS Program type selection screen. After, manually operate the device to select a desired program type.
Random	Randomly plays the tracks within the CD.
Random Off	Cancels random play to play tracks in sequential order.
Repeat	Repeats the current track.
Repeat Off	Cancels repeat play to play tracks in sequential order.
Next Track	Plays the next track.
Previous Track	Plays the previous track.
Scan	Scans the tracks from the next track for 10 seconds each.
Track 1~30	Plays the desired track number.
Search Track	Moves to the track selection screen. After, say the track name to play the corresponding track.
Information	Displays the information screen of the current track.

- MP3 CD / USB commands: Commands that can be used while listening to music files saved in CD and USB.

Command	Function
Random	Randomly plays the files within the current folder.
All Random	Randomly plays all saved files.
Random Off	Cancels random play to play files in sequential order.
Repeat	Repeats the current file.
Folder Repeat	Repeats all files in the current folder.
Repeat Off	Cancels repeat play to play files in sequential order.
Next File	Plays the next file.
Previous File	Plays the previous file.
Scan	Scans the files from the next files for 10 seconds each.
Search File	Moves to the file selection screen.
Search Folder	Moves to the folder selection screen.
Information	Displays the information screen of the current file.
Copy	Copies the current file into My Music.

- iPod Commands: Commands that can be used while playing iPod.

Command	Function
All Random	Randomly plays all saved songs.
Random	Randomly plays the songs within the current category.
Random Off	Cancels random play to play songs in sequential order.
Repeat	Repeats the current song.
Repeat Off	Cancels repeat play to play songs in sequential order.
Next Song	Plays the next song.
Previous Song	Plays the previous song.
Search Song	Moves to the song selection screen.
Information	Displays the information screen of the current song.

- My Music Commands: Commands that can be used while playing My Music.

Command	Function
Random	Randomly plays all saved files.
Random Off	Cancels random play to play files in sequential order.
Repeat	Repeats the current file.
Repeat Off	Cancels repeat play to play files in sequential order.
Next File	Plays the next file.
Previous File	Plays the previous file.
Scan	Scans the files from the next files for 10 seconds each.
Search File	Moves to the file selection screen.
Information	Displays the information screen of the current file.
Delete	Deletes the current file. You will bypass an additional confirmation process.
Delete All	Deletes all files saved in My Music. You will bypass an additional confirmation process.

- *Bluetooth®* Wireless Technology Audio Commands: Commands that can be used while playing Phone Music.

Command	Function
Play	Plays the currently paused song.
Pause	Pauses the current song.

SETUP (FOR RDS, BLUETOOTH® WIRELESS TECHNOLOGY EQUIPPED MODEL)

Starting Mode

Press the SETUP key to display the Setup screen.

You can select and control options related to [Display], [Sound], [Phone] and [System].

Display Settings

Adjusting the Brightness

Press the SETUP key ▸ Select [Display] ▸ Select [Brightness]

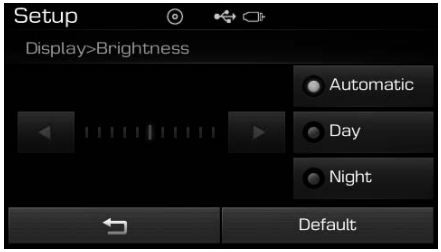

Use the ◀, ▶ buttons to adjust the screen brightness or set the Brightness on Automatic, Day, or Night mode.

Press the Default button to reset.

1) Automatic : Adjusts the brightness automatically
2) Day : Always maintains the brightness on high
3) Night: Always maintains the brightness on low

Pop-up Mode

Press the SETUP key ▸ Select [Display] ▸ Select [Pop-up Mode]

This feature is used to display the Pop-up Mode screen when entering radio and media modes.

When this feature is turned on, pressing the RADIO or MEDIA key will display the Pop-up Mode screen.

✻ NOTICE

The media Pop-up Mode screen can be displayed only when two or more media modes have been connected.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:44 AM Page 96

Scroll Text

Press the SETUP key ▸ Select [Display] ▸ Select [Scroll text]

This feature is used to scroll text displayed on the screen when it is too long to be displayed at once.

When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

MP3 Information Display

Press the SETUP key ▸ Select [Display] ▸ Select [Song Info]

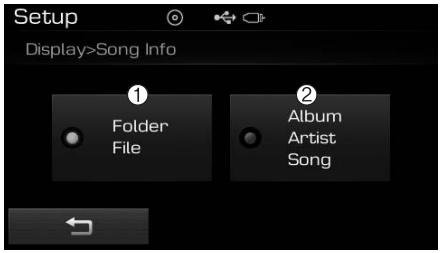

This feature is used to change the information displayed within USB and MP3 CD modes.

1) Folder File : Displays file name and folder name
2) Album Artist Song : Displays album name/artist name/song

Sound Settings

Audio Settings

Press the SETUP key ▸ Select [Sound] ▸ Select [Audio Setting]

Use the ◀, ▶, ▲, ▼ buttons to adjust the Fader/Balance settings.

Use the ◀, ▶ buttons to adjust the Bass/Middle/Treble settings.

Press the Default button to reset.

SDVC (Speed Dependent Volume Control)

Press the SETUP key ▸ Select [Sound] ▸ Select [Speed Dependent Vol.]

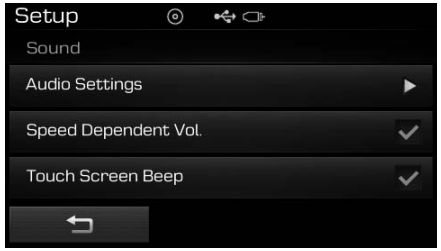

The volume level is controlled automatically according to the vehicle speed. SDVC can be set by selecting from On / Off.

Touch Screen Beep

Press the SETUP key ▸ Select [Sound] ▸ Select [Touch Screen Beep]

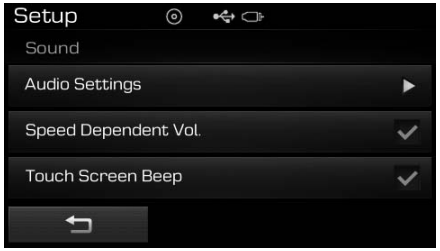

This feature is used to turn the touch screen beep on/off.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:44 AM Page 98

Bluetooth® Wireless Technology Setting

Pairing a New Device

Press the SETUP key ▸ Select [Phone] ▸ Select [Pair Phone]

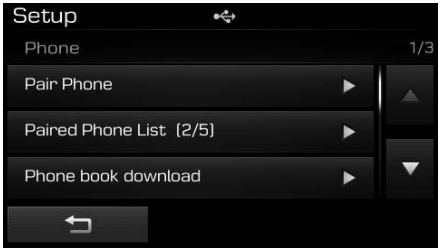

Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the "Pairing through Phone Setup" section within *Bluetooth®* Wireless Technology.

Viewing Paired Phone List

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the "Setting *Bluetooth®* Wireless Technology Connection" section within *Bluetooth®* Wireless Technology.

1) : Moves to the previous screen
2) : Connect/ disconnects currently selected phone
3) : Deletes the currently selected phone
4) : Sets currently selected phone to highest connection priority

✻ NOTICE BEFORE DOWNLOADING PHONE BOOKS

- **Only phone books within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.**
- **To learn more about whether your mobile phone supports phone book downloads, refer to your mobile phone user's manual.**
- **The Phone book for only the connected phone can be downloaded. Before downloading, check to see whether your phone supports the download feature.**

Downloading Phone books

Press the SETUP key ▸ Select [Phone] ▸ Select [Phone book Download]

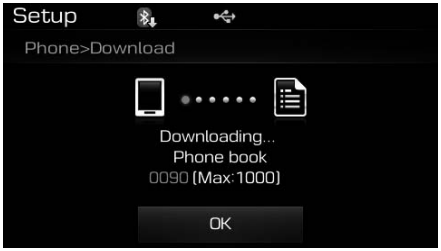

The Phone book is downloaded from the mobile phone and the download progress is displayed.

✻ NOTICE

- **Up to 1,000 phone book entries can be copied into car phone book.**
- **Up to 1,000 phone book entries can be saved for each paired device.**
- **Upon downloading phone book data, previously saved phone book data will be deleted. However, Phone book entries saved to other paired phones are not deleted.**

Auto Download (Phone Book)

Press the SETUP key ▸ Select [Phone] ▸ Select [Auto Download]

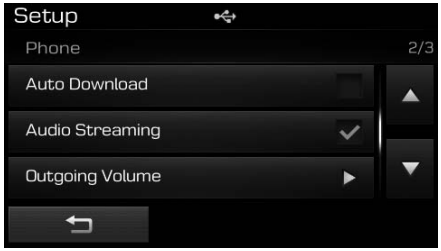

This feature is used to automatically download mobile phone book entries once a *Bluetooth®* Wireless Technology phone is connected.

✻ NOTICE

- **The Auto Download feature will download mobile phone book entries every time the phone is connected. The download time may differ depending on the number of saved phone book entries and the communication state.**
- **When downloading a phone book, first check to see that your mobile phone supports the phone book download feature.**

Audio Streaming

Press the SETUP key ▸ Select [Phone] ▸ Select [Audio Streaming]

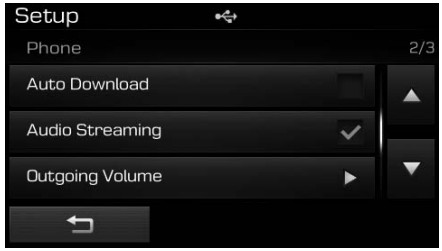

When Audio Streaming is turned on, you can play music files saved in your *Bluetooth®* Wireless Technology device from the car.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:44 AM Page 100

Outgoing Volume

Press the SETUP key ▸ Select [Phone] ▸ Select [Outgoing Volume]

Use the –, + buttons to adjust the outgoing volume level.

Turning Bluetooth System Off

Press the SETUP key ▸ Select [Phone] ▸ Select [Bluetooth System Off]

Once *Bluetooth®* Wireless Technology is turned off, *Bluetooth®* Wireless Technology related features will not be supported within the audio system.

✻ NOTICE

To turn *Bluetooth®* Wireless Technology back on, go to SETUP ▸ [Phone] and press "Yes".

System Setting

Memory Information

Press the SETUP key ▶ Select [System] ▶ Select [Memory Information]

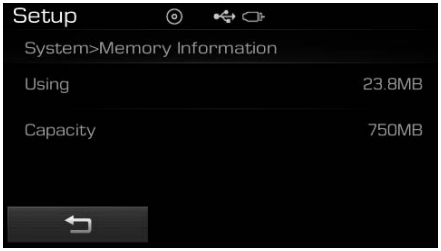

This feature displays information related to system memory.

1) Using : Displays capacity currently in use
2) Capacity : Displays total capacity

Language

Press the SETUP key ▶ Select [System] ▶ Select [Language]

This feature is used to change the system and voice recognition language.

If the language is changed, the system will restart and apply the selected language.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:44 AM Page 102

SETUP

(for *Bluetooth®* Wireless Technology equipped model)

Starting Mode

Press the SETUP key to display the Setup screen.

You can select and control options related to [Display], [Sound], [Phone] and [System].

Display Settings

Adjusting the Brightness

Press the SETUP key ▸ Select [Display] ▸ Select [Brightness]

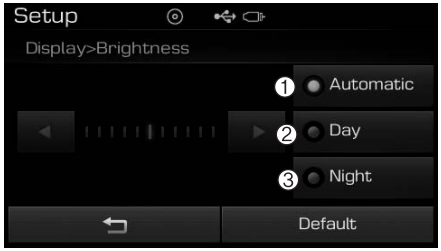

Use the ◀, ▶ buttons to adjust the screen brightness or set the Brightness on Automatic, Daylight, or Night mode.

Press the Default button to reset.

1) Automatic : Adjusts the brightness automatically
2 Day : Always maintains the brightness on high
3) Night: Always maintains the brightness on low

Mode Pop up

Press the SETUP key ▸ Select [Display] ▸ Select [Mode Pop up]

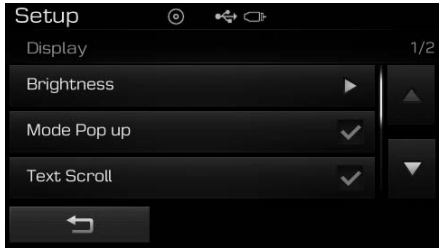

This feature is used to display the Mode Pop up screen when entering radio and media modes.

When this feature is turned on, pressing the RADIO or MEDIA key will display the Mode Pop up screen.

✻ NOTICE

The media Mode Pop up screen can be displayed only when two or more media modes have been connected.

Text Scroll

Press the SETUP key ▸ Select [Display] ▸ Select [Text Scroll]

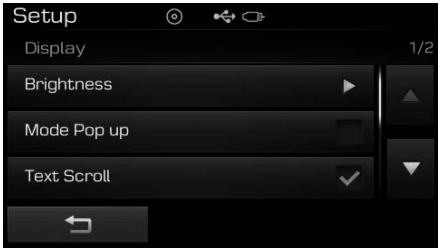

This feature is used to scroll text displayed on the screen when it is too long to be displayed at once.

When turned on, the text is repeatedly scrolled. When turned off, the text is scrolled just once.

MP3 Information Display

Press the SETUP key ▸ Select [Display] ▸ Select [Media Display]

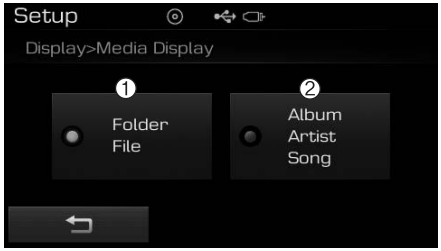

This feature is used to change the information displayed within USB and MP3 CD modes.

1) Folder File : Displays file name and folder name
2) Album Artist Song : Displays album name/artist name/song

Sound Settings

Sound Settings

Press the SETUP key ▸ Select [Sound] ▸ Select [Sound Setting]

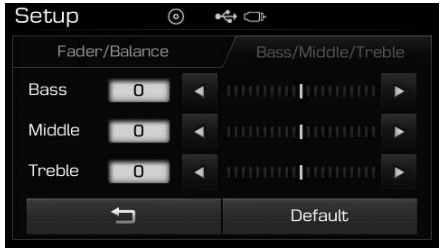

Use the ◀, ▶, ▲, ▼ buttons to adjust the Fader/Balance settings.

Use the ◀, ▶ buttons to adjust the Bass/Middle/Treble settings.

Press the Default button to reset.

SDVC (Speed Dependent Volume Control)

Press the SETUP key ▸ Select [Sound] ▸ Select [Speed Dependent Vol.]

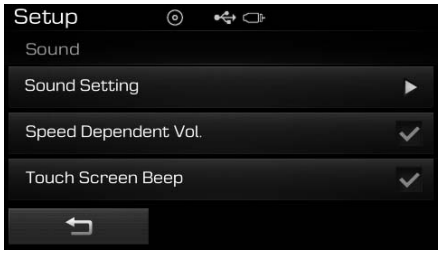

The volume level is controlled automatically according to the vehicle speed. SDVC can be set by selecting from On/Off.

Touch Screen Beep

Press the SETUP key ▸ Select [Sound] ▸ Select [Touch Screen Beep]

Bluetooth® Wireless Technology Setting

Pairing a New Device

Press the SETUP key ▸ Select [Phone] ▸ Select [Pair Phone]

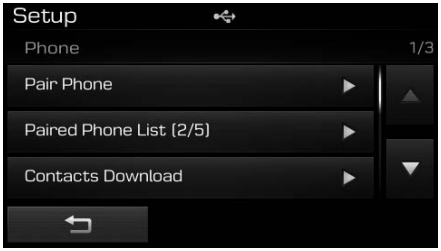

Bluetooth® Wireless Technology devices can be paired with the audio system.

For more information, refer to the "Pairing through Phone Setup" section within *Bluetooth®* Wireless Technology.

Viewing Paired Phone List

Press the SETUP key ▸ Select [Phone] ▸ Select [Paired Phone List]

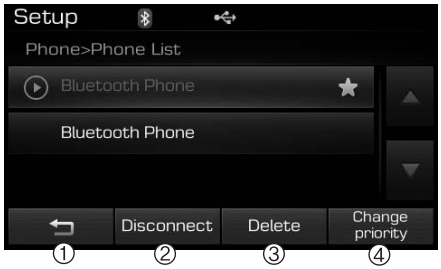

This feature is used to view mobile phones that have been paired with the audio system. Upon selecting a paired phone, the setup menu is displayed.

For more information, refer to the "Setting *Bluetooth®* Wireless Technology Connection" section within *Bluetooth®* Wireless Technology.

1) ⮌ : Moves to the previous screen
2) Connect/Disconnect Phone : Connect/ disconnects currently selected phone
3) Delete : Deletes the currently selected phone
4) Change Priority : Sets currently selected phone to highest connection priority

✻ NOTICE BEFORE DOWNLOADING CONTACTS

- **Only contacts within connected phones can be downloaded. Also check to see that your mobile phone supports the download feature.**
- **To learn more about whether your mobile phone supports contacts downloads, refer to your mobile phone user's manual.**
- **The contacts for only the connected phone can be downloaded. Before downloading, check to see whether your phone supports the download feature.**

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:44 AM Page 106

Downloading Contacts

Press the SETUP key ▸ Select [Phone] ▸ Select [Contacts Download]

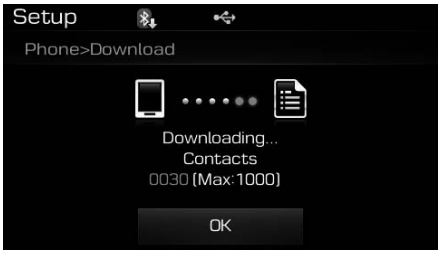

The contacts is downloaded from the mobile phone and the download progress is displayed.

✻ NOTICE

- **Up to 1,000 contacts entries can be copied into car contacts.**
- **Up to 1,000 contacts entries can be saved for each paired device.**
- **Upon downloading contacts data, previously saved contacts data will be deleted. However, contacts entries saved to other paired phones are not deleted.**

Auto Download (Contacts)

Press the SETUP key ▸ Select [Phone] ▸ Select [Auto Download]

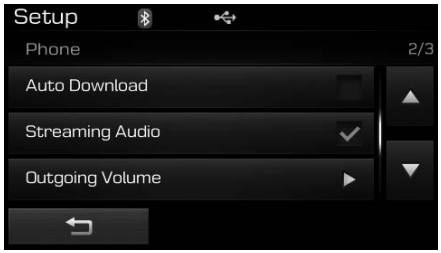

This feature is used to automatically download mobile contacts entries once a *Bluetooth®* Wireless Technology phone is connected.

✻ NOTICE

- **The Auto Download feature will download mobile contacts entries every time the phone is connected. The download time may differ depending on the number of saved contacts entries and the communication state.**
- **When downloading a contacts, first check to see that your mobile phone supports the contacts download feature.**

Streaming Audio

Press the SETUP key ▸ Select [Phone] ▸ Select [Streaming Audio]

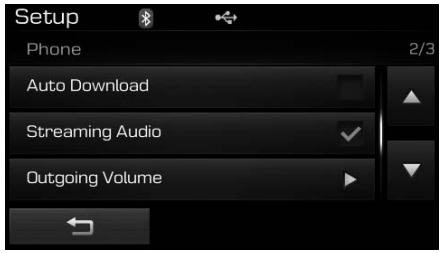

When Streaming Audio is turned on, you can play music files saved in your *Bluetooth®* Wireless Technology device from the car.

Outgoing Volume

Press the SETUP key ▸ Select [Phone] ▸ Select [Outgoing Volume]

Use the -, + buttons to adjust the outgoing volume level.

Turning Bluetooth System Off

Press the SETUP key ▸ Select [Phone] ▸ Select [Bluetooth System Off]

Once *Bluetooth®* Wireless Technology is turned off, *Bluetooth®* Wireless Technology related features will not be supported within the audio system.

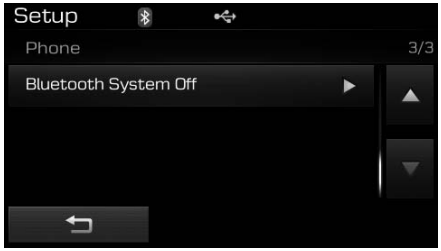

✻ NOTICE

To turn *Bluetooth®* Wireless Technology back on, go to SETUP ▸ [Phone] and press "Yes".

System Setting

Memory Information

Press the SETUP key ▸ Select [System] ▸ Select [Memory Information]

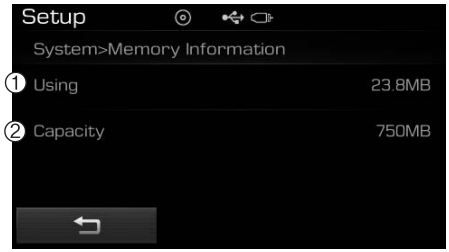

This feature displays information related to system memory.

1) Using : Displays capacity currently in use
2) Capacity : Displays total capacity

REAR VIEW CAMERA (if equipped)

- The system has been equipped with a rear view camera for user safety by allowing a wider rear range of vision.
- The rear view camera will automatically operate when the ignition key is turned ON and the transmission lever is set to R.
- The rear view camera will automatically stop operating when set to a different lever.

⚠ CAUTION

The rear view camera has been equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance. For safety, directly check the rear and left/right sides.

H_LF_A,B_AUDIO:BH hma 4-109~(Audio).qxd 5/19/2014 9:44 AM Page 109

APPENDIX

Name		Description
Monday		Monday
Tuesday		Tuesday
Wednesday		Wednesday
Thursday		Thursday
Friday		Friday
Saturday		Saturday
Sunday		Sunday
Use tune knob		Use tune knob
Volume		Volume
Max		Volume maxinmum
Min		Volume mininmum
AST (Auto store)		Automatically selects and saves channels
No Media		Empty media file in CD or USB
No File		Empty media file in CD or USB
Empty File		Empty media file in MY MUSIC
Info (Information)		Information of playing files
Artist		Artist name, MP3/CD file currently being played
Title		Song name, MP3/CD file currently being played
Album		Album name, MP3/CD file currently being played
Genres		"Genres" is keyword for searching mode of playlists for iPod
Composers		"Composers" is filtering keyword for searching mode of playlists for iPod

Name		Description
Playlists		"Playlists" is filtering keyword for searching mode of playlists for iPod
Songs		"Songs" is filtering keyword for searching mode of playlists for iPod
Audiobooks		"Audiobooks" is filtering keyword for searching mode of playlists for iPod
Podcasts		"Podcasts" is filtering keyword for searching mode of playlists for iPod
RPT (Repeat)		Audio play mode of Reapeat
FLD.RPT (Folder Repeat)		Audio play mode of Folder Reapeat
RDM (Random)		Audio play mode of Random
FLD.RDM(Folder Random)		Audio play mode of Folder Random
ALL RDM (All Random)		Audio play mode of All Random
COPY		Copy MP3 file to flash memory for MY MUSIC
Cancel copy		Cancel copy mode
File copied		Completed File copy
Free		Free size of memory
Copy failed		Copy failed
Search		Search files
Loading CD		Loading CD
Reading CD		Reading CD
Reading Error		Reading Error
Mechanism Error		Mechanism Error

Name		Description
Ejecting CD		Ejecting CD
Audio CD		Audio CD
Track		Audio CD song order
Reading Media		Reading Media
Not supported		Not supported file format
Empty iPod		Empty iPod, iPod don't have playable data
Communication Error		Communication error between audio and iPod or usb
Delete		Delete the paired phone or files in MY MUSIC
Del.All		Delete all files
Del.Sel		Select files to delete
Return		Return menu
List		List files or paired phones
Select Files		Select Files
Memory is full, Delete files		Memory is full, Delete files
Over 6000 files. can copied not be copied		Over 6000 files. can not be
Over 1000 same files can not be copied		Over 1000 same files can not be copied
System will automati cally switchoff after 1 hour with ignition off		System will automatically switchoff after 1 hour with igni-tion off
Battery discharge Start the engine		Battery discharge Start the engine

Name		Description
Setup		Setup
Display		Setup display mode
Mode Pop up		This function is used to select popup menu on or off
Scroll text		This function is used to display characters longer than the LCD text displays
Song Info		Setup display information being played
Folder/File		Display Folder/file name, file currently being played
Album/Artist/Song		Display Album/Artist/Song name, file currently being played
Sound		Setup sound mode
Audio Settings		Setup Audio settings that consist BASS,Middle,Treble,Fader and Balance
PowerBass		This function is used to improve bass sound quality
Speed Dependent Vol.		Automatically adjust the volume according to the car speed
Volume Dialogue		Adjust volume level of Dialogue
Bass		Bass is sound of low frequency. It can be adjusted sound by user
Middle		Middle is sound of middle fre-quency. It can be adjusted sound by user

Name		Description
Treble		Treble is sound of high frequency. It can be adjusted sound by user
Fader		Fader is sound positon between FRONT and REAR. It can be adjusted sound by user
Balance		Balance is sound positon between Right and Left. It can be adjusted sound by user
Default		This function is used to initialize setting value
Clock		Setup time
Clock Settings		Enters time advanced settings
Day Settings		Enters day advanced settings
Time Format		Refer to the time display The time can be displayedin 12 hours or 24 hours
Clock Disp.(Pwr Off)		This function is used to select clock display mode in power off
Automatic RDS Time time automatically.		This function is used to set the RDS
System		Setup system or system infor mation
Memory Information		Display used memory size
VRS Mode		Setup Voice command mode
Normal		Normal mode. This function is used to set default value of voice recognition factor

Name		Description
Expert		Expert mode. This function is used to set exercised value of voice recognition factor
Language		This function is used to select user language
Deutsch		Deutsch
English(UK)		English(UK)
Français		French
Italiano		Italian
Español		Spanish
Nederlands		dutch
Svenska		swedish
Dansk		Danish
Русский		Russian
Polski		Polish
Türkçe		Turkish
The system will be rebooted		The system will be rebooted
Please change language when ignition ON		Please change language when ignition ON
Bluetooth not ready Please wait		You can use BT System for a moment Because BT system is being initialized
Add a new Bluetooth device from your phone		Add a new *Bluetooth®* Wireless Technology device from your phone
Processing Bluetooth Please try later		You can use BT System for a moment Because BT system is being initialized or processing other command

Name		Description
Incoming Call		Receivng phone
Call Ended		Call Ended
Call Rejected		When there is unwanted call, You push the button on the steering remote controller
Unknown		"Unknown" mean Headunit or phone don't have any information about phone number
Call is not possible		Call is not possible
MIC Mute		Microphone mute
Activate Bluetooth System?		Activate *Bluetooth®* Wireless Technology System
Bluetooth System activated		*Bluetooth®* Wireless Technology system activated
No phone paired. Pair a phone?		Empty phone paired. Pair a phone?
No connected phone. Connect a phone?		No connected phone. Connect a phone?
Phone book is empty. Download?		Phone book is empty
Available only when		This is a warning, Do not enter the MENU about BT Setup. When vehicle is moving
Listening...		Listen to instruction of audio
Phone book Download vehicle is stationary		Downloading phone book from phone paired to audio
Auto Download		After pairing phone, audio system automatically download phone book

Name		Description
Audio Streaming		After pairing phone, audio system can support *Bluetooth®* Wireless Technology streaming mode
Outgoing Volume		Set outoging volume "0 ~ 5"
Bluetooth System Off		Turn off *Bluetooth®* Wireless Technology System
Bluetooth System ON		Turn on *Bluetooth®* Wireless Technology System
Device :		*Bluetooth®* Wireless Technology device name
Passkey		Passkey for pairing a phone
Pairing complete		Pair a *Bluetooth®* Wireless Technology phone to the audio
Pairing failed		Audio & Phone connection have failed
Already 5 devices paired. Delete a paired phone?		All 5 phones have already been paired. Delete a previously paired phone to pair new phone
Connection complete		Audio & Phone connection have succeed
Connection failed. Retry?		Audio & Phone connection have failed
Priority changed		Changed priority about the registered phones
Overwrite previous phone book?		Overwrite previous phone book information

Name		Description
Phone does not support Phone book download		Phone does not support Phone book download
No connected Bluetooth device		There are phone in the connection list
Phone does not support Bluetooth audio		But it was actually not connected BT pairing
Downloading stopped		Downloading stopped

Safety Symbols

Warning

- When encountering this symbol in the manual, you must follow these recommendations to avoid irreparable damage to your car, system or connected devices or to avoid accidents with injuries or death.

IC Information

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference

Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence.
L'exploitation est autorisee aux deux conditions suivantes :
(1) l'appareil ne doit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioelectrique subi, meme si le brouillage est susceptible d'en compromettre le fonctionnement.

The antenna(s) used for this device must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

FCC notification to users

This equipment has been tested and found to comply with the limits for a CLASS B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference, the user is encouraged to try to correct the interference by consulting with a KIA dealer or an experienced technician for technical assistance.

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.