Email: sales@autel.com
Web: www.autel.com

Quick Reference Guide

PROFESSIONAL CODE READER AL1 Lite

Thank you for purchasing Autel tool. This tool is manufactured to a high standard and will provide years of trouble-free performance when used in accordance to these instructions and properly maintained.

Getting Started

IMPORTANT: Before operating or maintaining this unit, please read these instructions carefully. Failure to use this unit correctly may cause damage and/or personal injury and will void the product warranty.

1

Search for **Autel Link** in the Google Play store or App Store to download and install the app to your device, or scan the above QR code to download the Autel Link app.
In Android system, you will be directed to Google Play, while iOS users will be directed to the App Store.

2

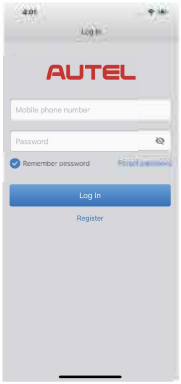

Open the Autel Link app and tap **Register** in the middle of the screen. Follow the on-screen instructions to complete the registration. Log in with your registered email address/phone number and password.

3

On your device, tap **Me > Device Manager > Binding Equipment**, the device will automatically jump to the next screen. Tap to scan the QR code imprinted on the **AL1 Lite** tool.

4

After the scanning is complete and the serial number is automatically retrieved, tap the **Bind Equipment** button at the bottom of the screen to proceed. Tap the tool name — **AL1 Lite** to enter the next screen.

5

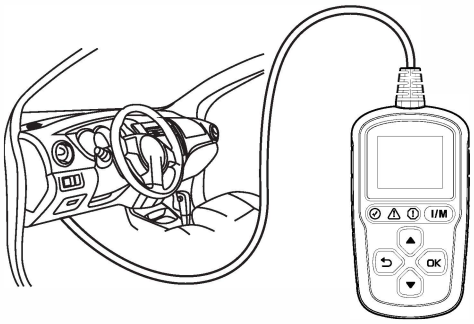

Connect the OBDII cable's 16-pin male adapter to the vehicle's Data Link Connector (DLC), which is generally located under the vehicle dashboard.

The tool will be automatically powered on.

Your AL1 Lite is now ready to use.

6

Tap the **Connect Device** button at the bottom of the screen to connect the device. Once connected successfully, tap the **Firmware Upgrade** button to update the firmware.

Connect to the Vehicle

1

Scan QR Code to visit our website at www.autel.com.

To update the firmware, please create an Autel ID and register the product with device's serial number and password, which can be found by tapping the **Setup > About** buttons on the tool screen.

2

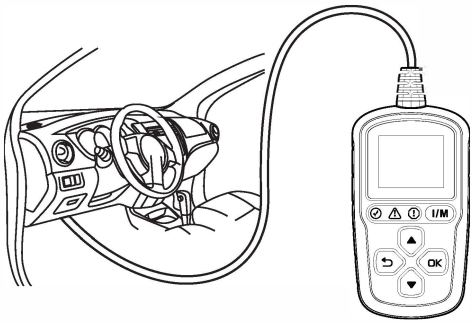

Connect the OBDII cable's 16-pin male adapter to the vehicle's Data Link Connector (DLC), which is generally located under the vehicle dashboard.

The tool will be automatically powered on.

Your AL1 Lite is now ready to use.

NOTE: The interfaces in this quick guide are for reference only.

For service and support, please contact us.

http://pro.autel.com / www.autel.com / support@autel.com

0086-755-2267-2493 (China HQ) / 1-855-AUTEL-US (288-3587) (North America)

0049 (0) 6103-2000520 (Europe) / +045 5948465 (APAC) / +971 585 002709 (IMEA)

© Autel Intelligent Technology Corp., Ltd. All Rights Reserved.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

REV	POSITION	DATE	DESCRIPTION

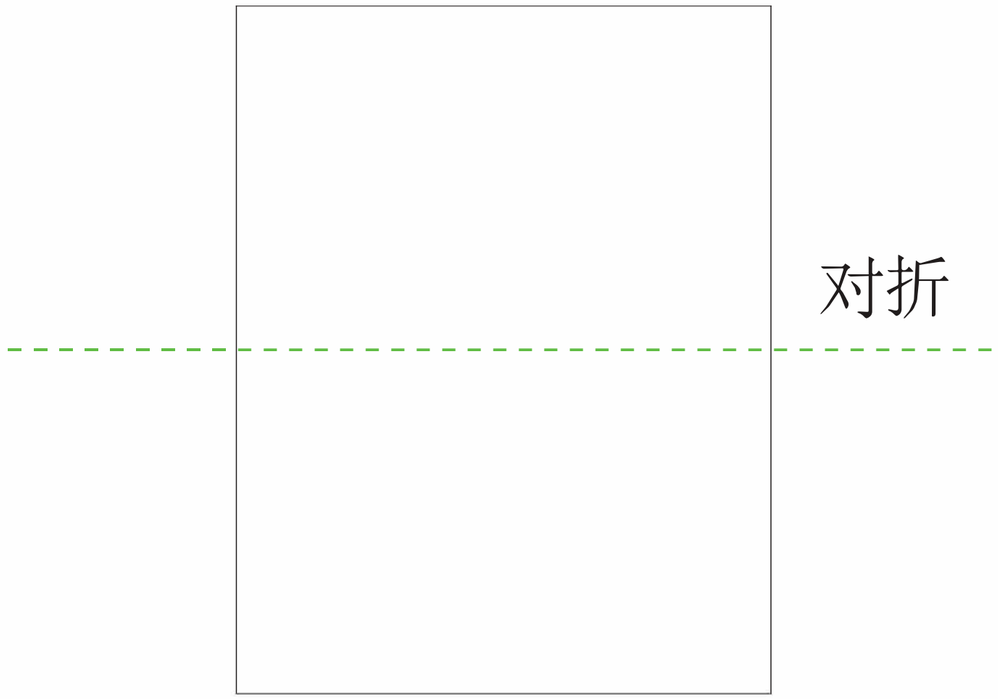

颜色

PANTONE BLACK

注：AUTEL设计部不指定供应商。效果做到参考样品一致即可。

DIM	Sheetmetal	Machining
0~6	0.10	0.05
6~30	0.15	0.10
30~120	0.25	0.15
120~300	0.35	0.20
300~600	0.50	0.25
600~1200	0.60	0.30
>1200	0.80	0.50
ANG.	1~	30"

AUTEL 道通科技股份有限公司 Autel Intelligent Technolog Corp.Ltd.

These Drawings And Specification Are The Property Of AUTEL .And Shall NOT Be Reproduced Copyied Or Used In Any Manner Without The Prior Wri tten Consent Of AUTEL

PROJ

DRAW: 汤清洪
CHKD: 兰金香
STAD:
APPD: 廖岳龙
SHEET: 1 OF 1

TITLE: 快速指引

UNIT'S: 190x264mm
FINISH:
MASS(Kg):
SCALE:
PRODUCT: AL2300

DWG NO.: AUT62060562
PART NO.: 500005431
Material: 120g书写纸

RELEASE LEVEL: &PROJ_RELEASE
FILE NAME: MO_EL NAME
D