⚠ Avoid Hearing Damage

To prevent possible hearing damage, do not use the SWITCH at high volume for a long period of time and always lower the volume level of the device you connect to the SWITCH Audio Input port before connecting.

FCC ID: WZ5-SWITCH

Model : SWITCH and SWITCH RACER.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING:
Modification of this device to receive cellular radio telephone service signals is prohibited under FCC rules and Federal Law.

The complete declaration is available online at: www.racingelectronics.com

RACING ELECTRONICS

www.RacingElectronics.com
1-800-272-7111

SWITCH

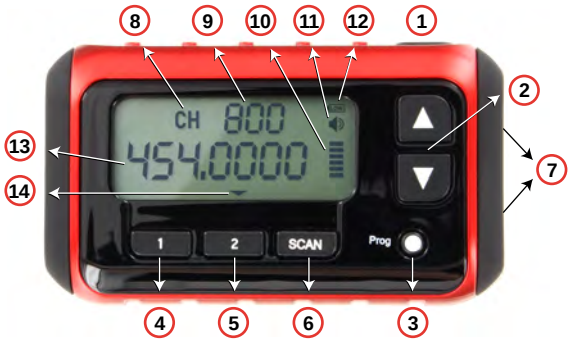

1. Power On/Off Button
2. Volume or Channel Up/Down Buttons
3. Programming Button
4. Channel 1 Preset Button
5. Channel 2 Preset Button
6. Scanning modes Button
7. IN (Auxiliary Audio Input), OUT (Earphone Jack)
8. Channel or Sub Channel Indicator
9. Channel Number Display
10. Volume Level Bars
11. Communication Indicator
12. Low Battery Indicator
13. Frequency Display
14. Preset or Scan Mode Selection Indicator

OPERATION MODES

Channel 1 Preset Listening

- Press 1 to hold on the preset 1 channel.
- Long press 1 to display the preset 1 sub channel info on the display.

Channel 2 Preset Listening

- Press 2 to hold on the preset 2 channel.
- Long press 2 to display the preset 2 sub channel info on the display.

Scanning

- Press SCAN to scan between Preset 1 and 2.

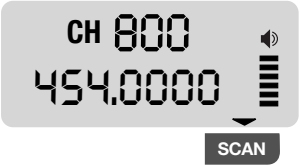

Scanning with Priority

- Hold SCAN and then press 1 or 2 at the same time to set the preset 1 or 2 as a priority on the scanning process.
- The preset 1 or 2 selection indicator is blinking when the priority is set.

PROGRAMMING STEPS

1 Channel Programming

- Long Press on the Prog ○.
- The channel number is blinking.

2 Navigate through the Channels

- Scroll up or down with ▲ ▼ to select a channel.
- Long press to skip up by 100.
- Press Prog ○ for sub channel programming or long press on 1 or 2 to save the frequency as a preset 1 or 2.

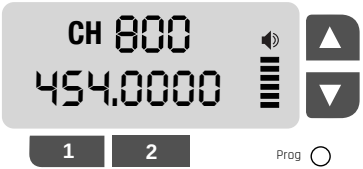

3 Navigate through the Sub Channels

- Scroll up or down with ▲ ▼ to select a sub channel.
- Long press to skip up by 10.

Note: OFF = Not Considered

4 Save Channel and Exit Programming Mode

- Long Press on 1 or 2 to save the frequency as a Preset 1 or 2.
- Exit programming mode by pressing the Prog ○.