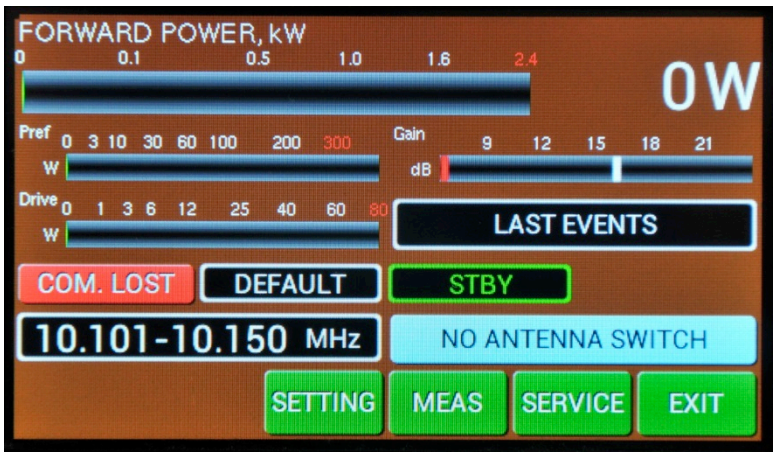


**Menu display** allows to go deeper to the SETTINGS mode, MEASuring mode or to SERVICE mode.

Press **SETTING** button.

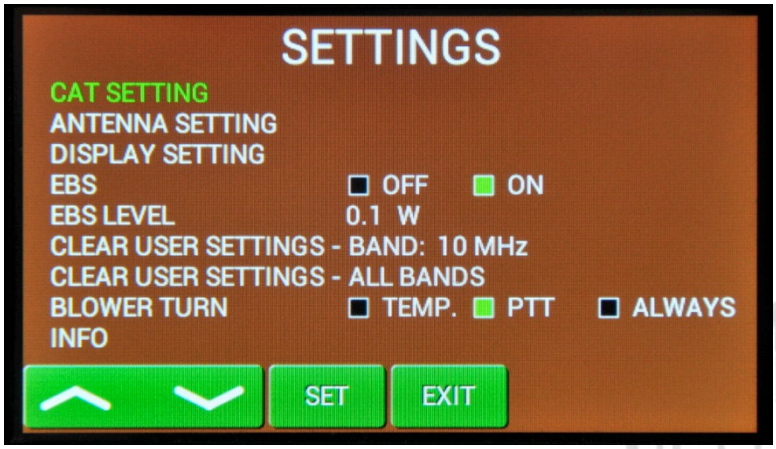


We are in the settings mode again, but with little difference in **INFO** part.

Scroll to **INFO** and press **SET**.

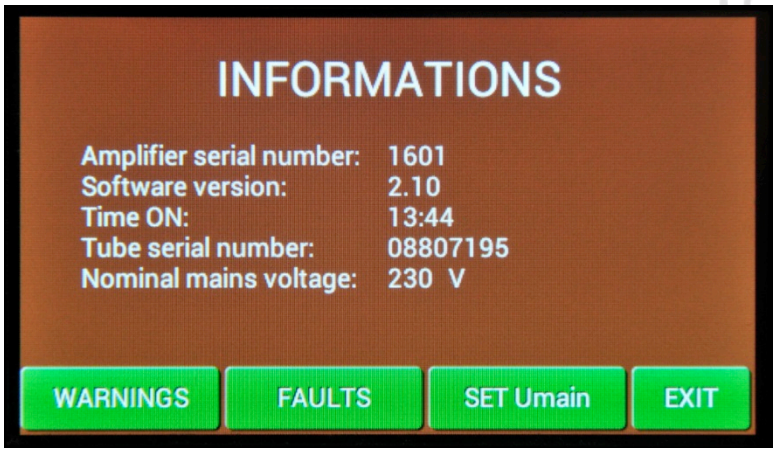


New button is visible – **SET Umain**. Press it.

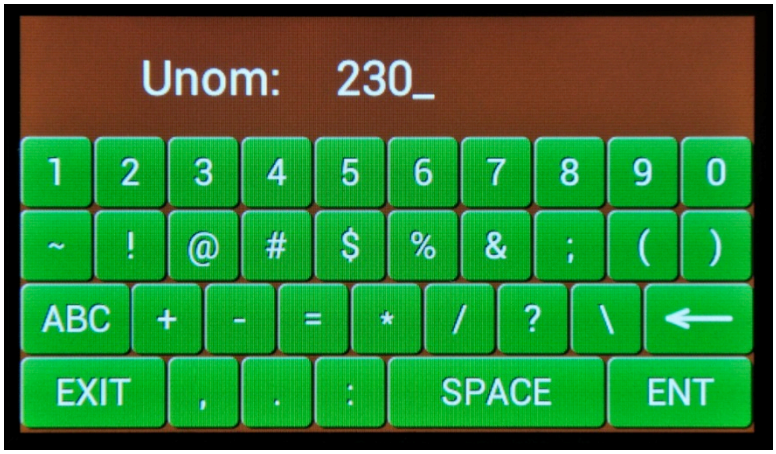


Type proper value of the primary voltage and press **ENT.**

Press **EXIT** twice to go back to the **Menu display**.

This means not programmable setting of the primary voltage. It is just information for the processor, which protects the permitted limits ( up or down) for a given value of the primary voltage (protection circuit).

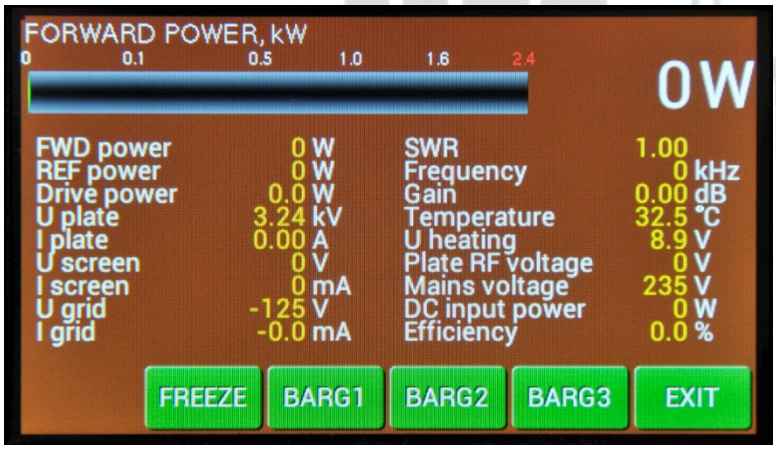


**MEAS** pressing shows this screen. Instantaneous values of the basic parameters are displayed. You can **FREEZE** the screen and measure **AGAIN**.

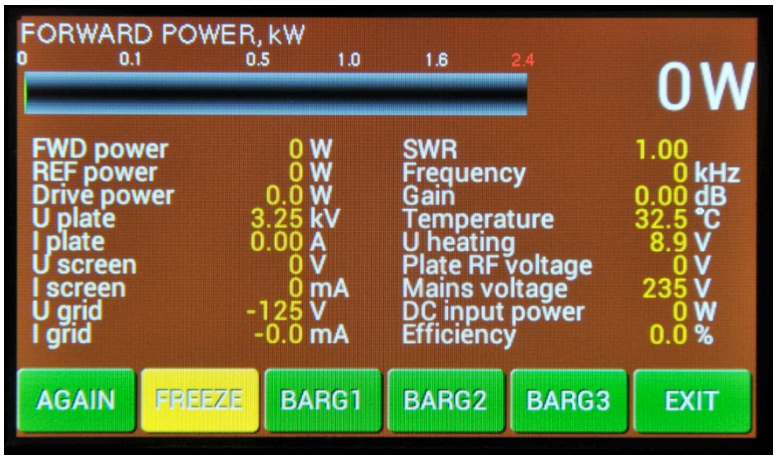


Three different bar graphs can be defined using BARG1, BARG2 or BARG3 button.

Press **BARG1.**