BOOX Nova3

Quick Start Guide

快速说明书

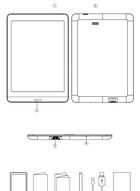

English

① Power ② Back ③ USB-C Port ④ Mic ⑤ Speaker

a. BOOX Device b. Warranty Card c. Quick Start Guide

d. Status Pen e. USB-C Cables f. Protective Film

QUICK START GUIDE

Turn on the device: Hold down the power button for 2~3 second.

Charging: When you see a low battery alert or cannot turn on the device, charge it for at least 30 minutes. Keep charging until the battery is fully charged. Do not unplug until the device is charging, and will turn off after the battery is fully charged.

Firmware update: Download the update packages to the root directory of the local storage, or get the latest firmware from the Internet.

Force restart: If needed, please hold the power button for about 8 seconds.

You can read the full version of the User Manual on the official BOOX website: https://www.boox.com/downloads/

Deutsch

① Einschalten ② Zwischenzurückkehren ③ USB-C-Anschluss

④ Mic ⑤ Speaker

a. BOOX-Tablett b. Garantiekarte c. Schnellstartanleitung

d. Status Pen e. USB-C-Kabel f. Schutzfolie

SCHNELLSTARTANLEITUNG

Gerät einschalten: Halten Sie den Ein- / Ausschalter 2~3 Sekunden lang gedrückt.

Laden: Wenn Sie feststellen, dass der Akku fast leer ist oder sich das Gerät nicht einschalten lässt, laden Sie es mit einem Adapter an der PC über das mitgelieferte Kabel mindestens 30 Minuten lang auf. Lassen das Gerät aufgeladen und, und schaltet, wenn der Akku vollständig aufgeladen ist.

Firmware-Aktualisierung: Legen Sie die Aktualisierungspakete in das Stammverzeichnis des lokalen Speichers. Verwenden oder laden Sie OTA-Aktualisierungen auf dem Gerät herunter.

Halten Sie den Netzschalter ca 8 Sekunden lang gedrückt, um das Neustartverfahren zu erzwingen.

Sie können die Version des Benutzerhandbuchs auf der offiziellen BOOX-Website lesen: https://www.boox.com/downloads/

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

–Reorient or relocate the receiving antenna.

–Increase the separation between the equipment and receiver.

–Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

–Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.