Figure 7
Inside Configuration of the EUT

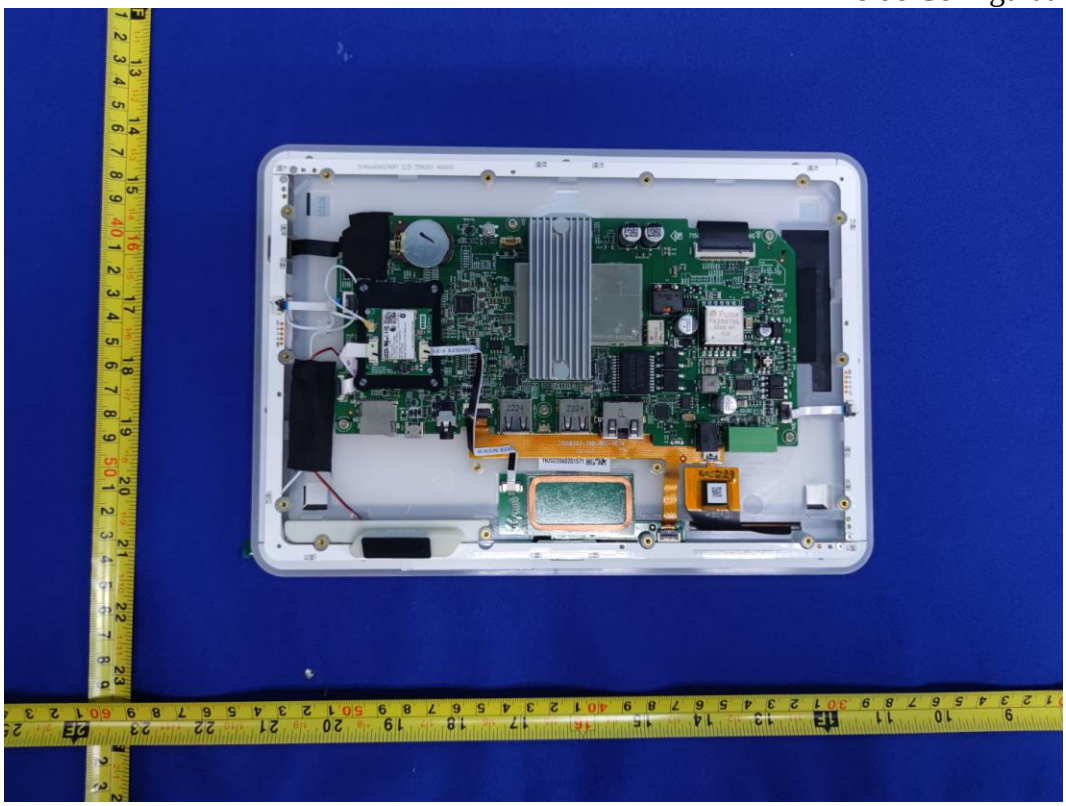

Figure 8
Inside Configuration of the EUT

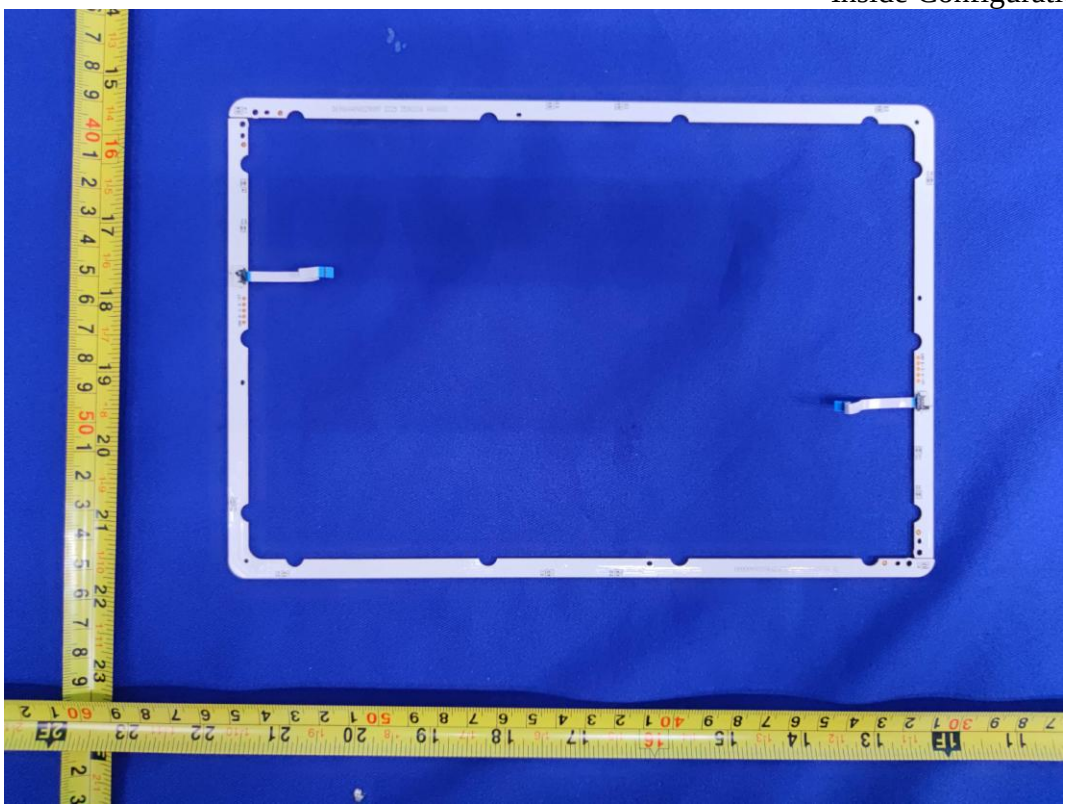

Figure 9
Inside Configuration of the EUT

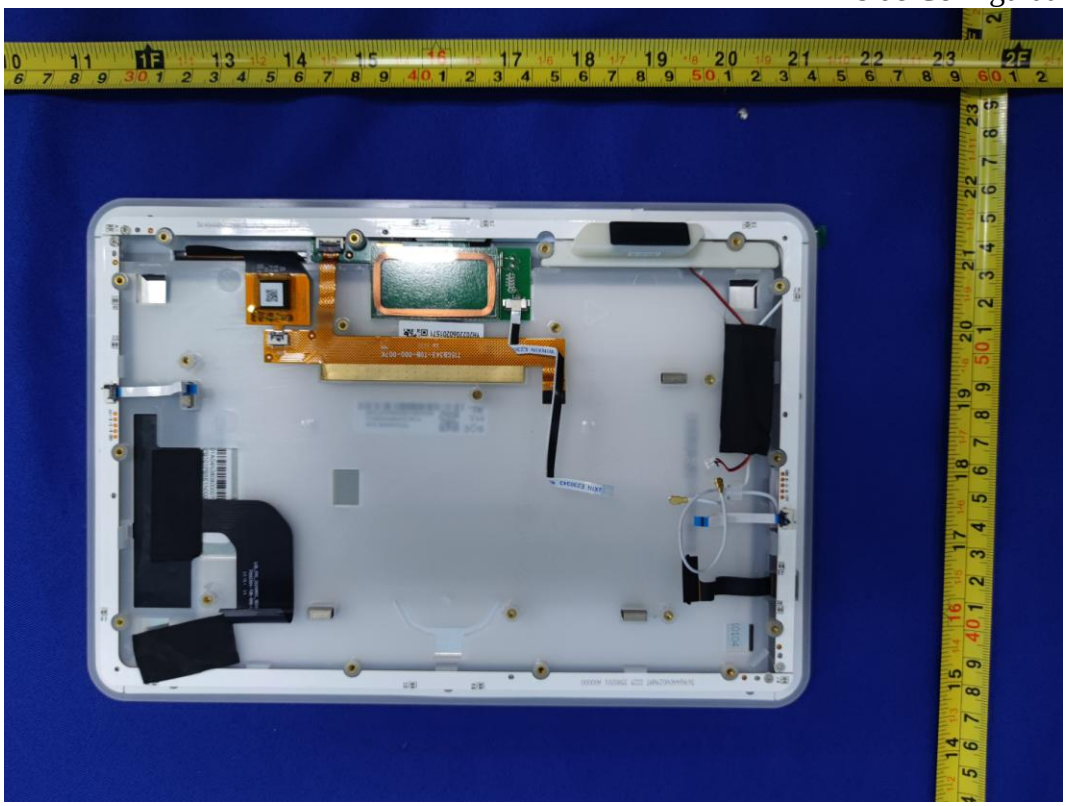

Figure 10
Inside Configuration of the EUT

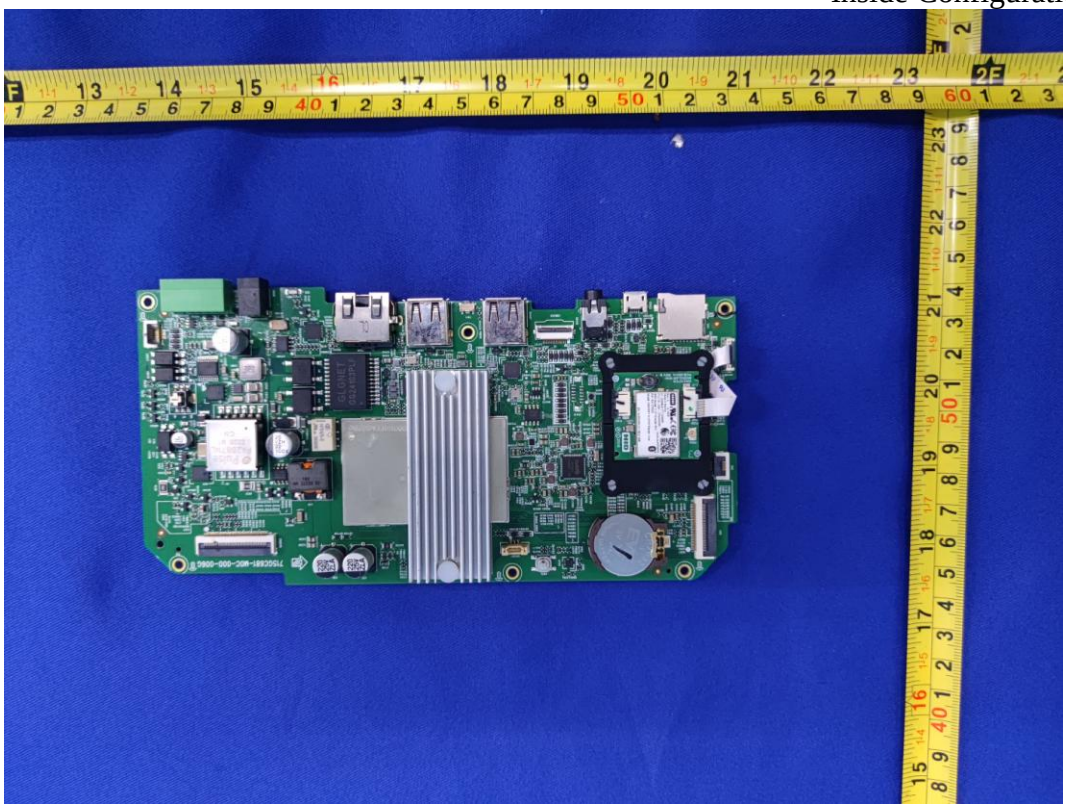

Figure 11
Inside Configuration of the EUT

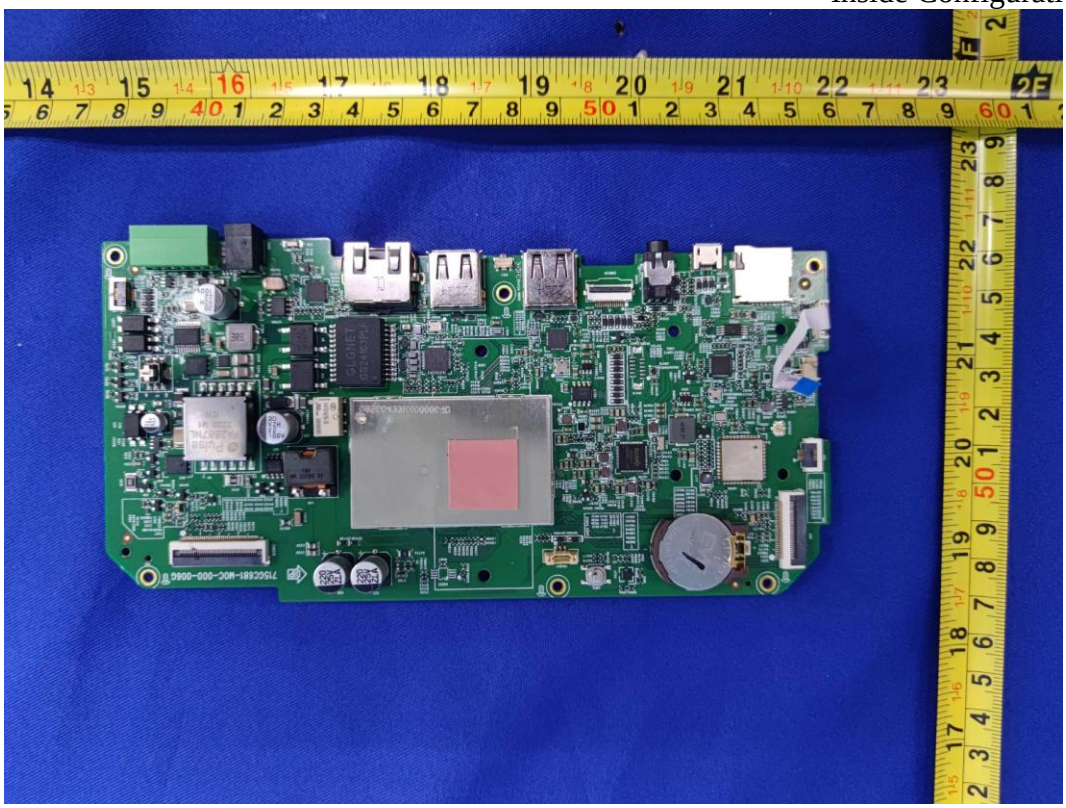

Figure 12
Inside Configuration of the EUT

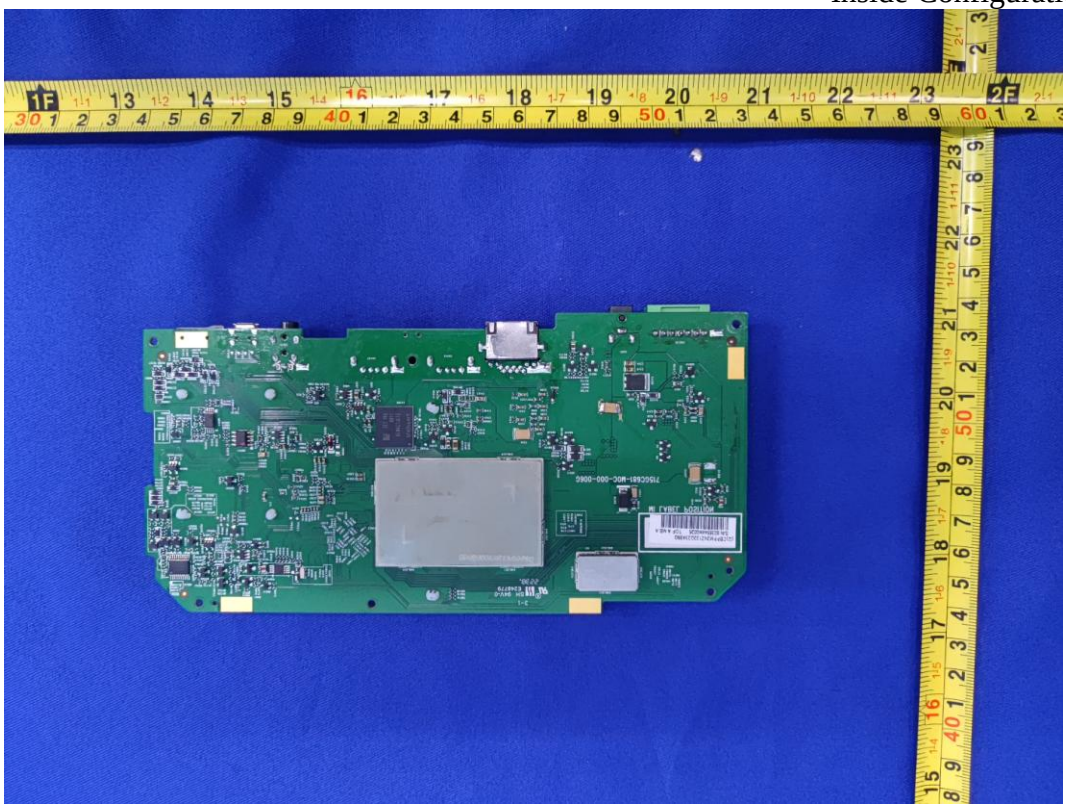

Figure 13
Inside Configuration of the EUT

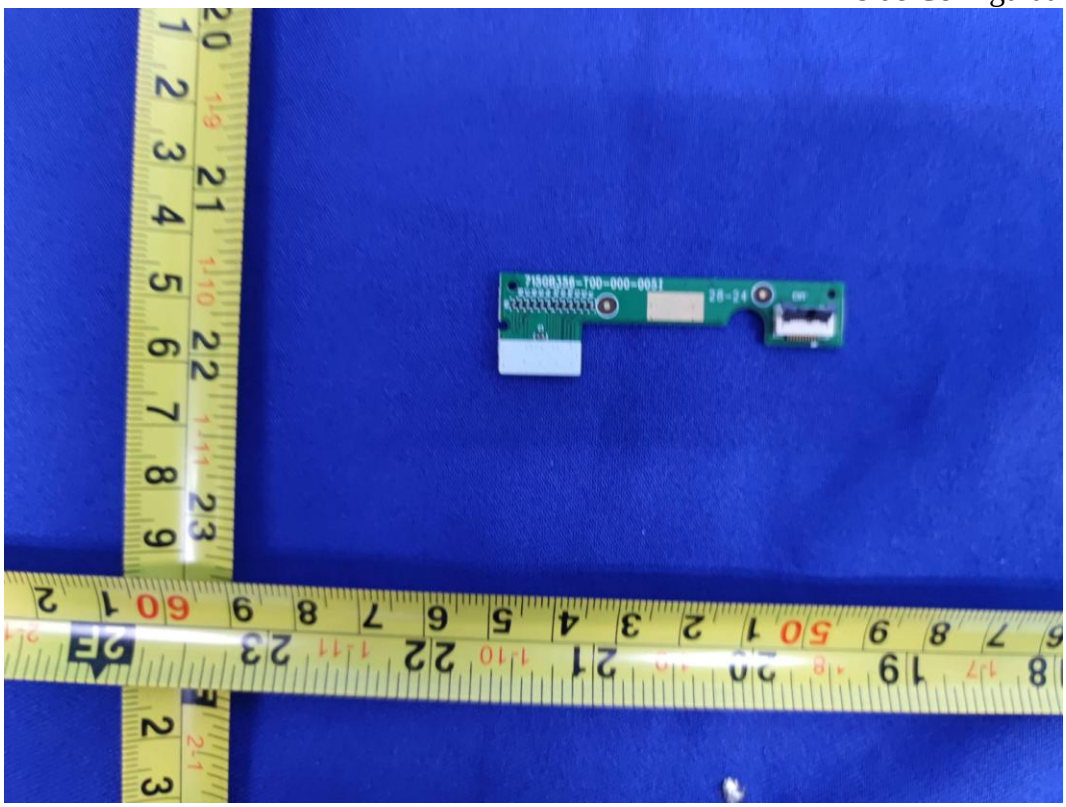

Figure 14
Inside Configuration of the EUT

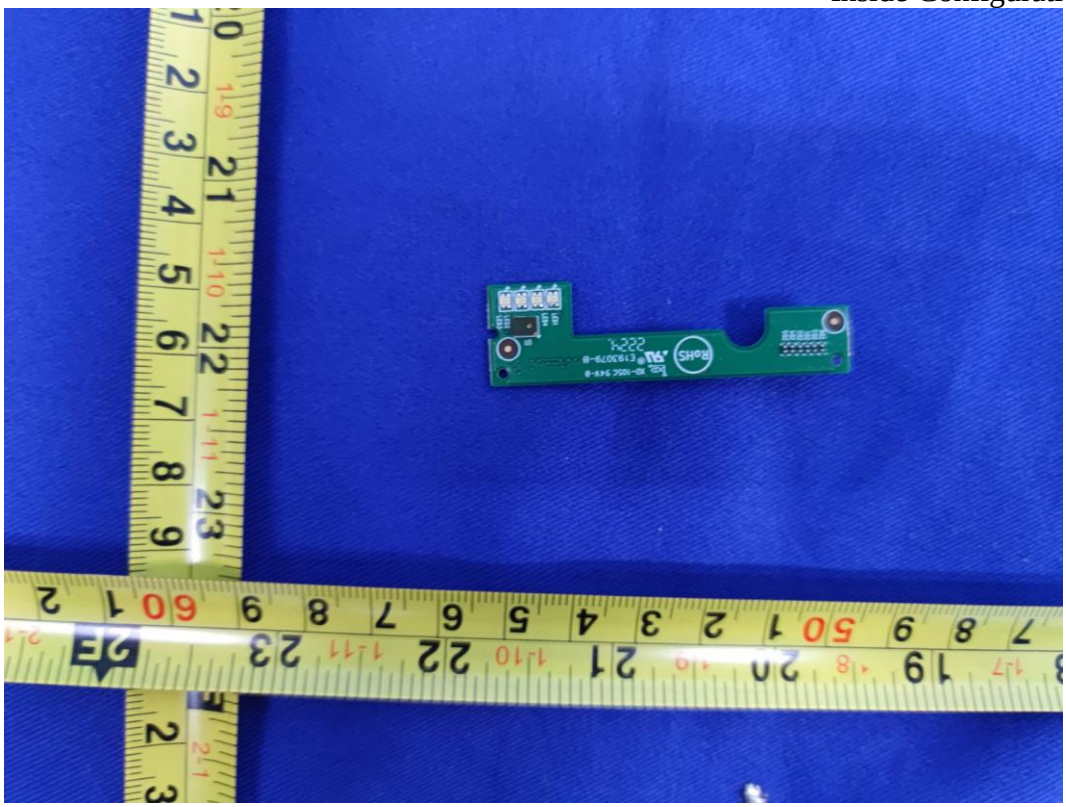

Figure 15
Inside Configuration of the EUT

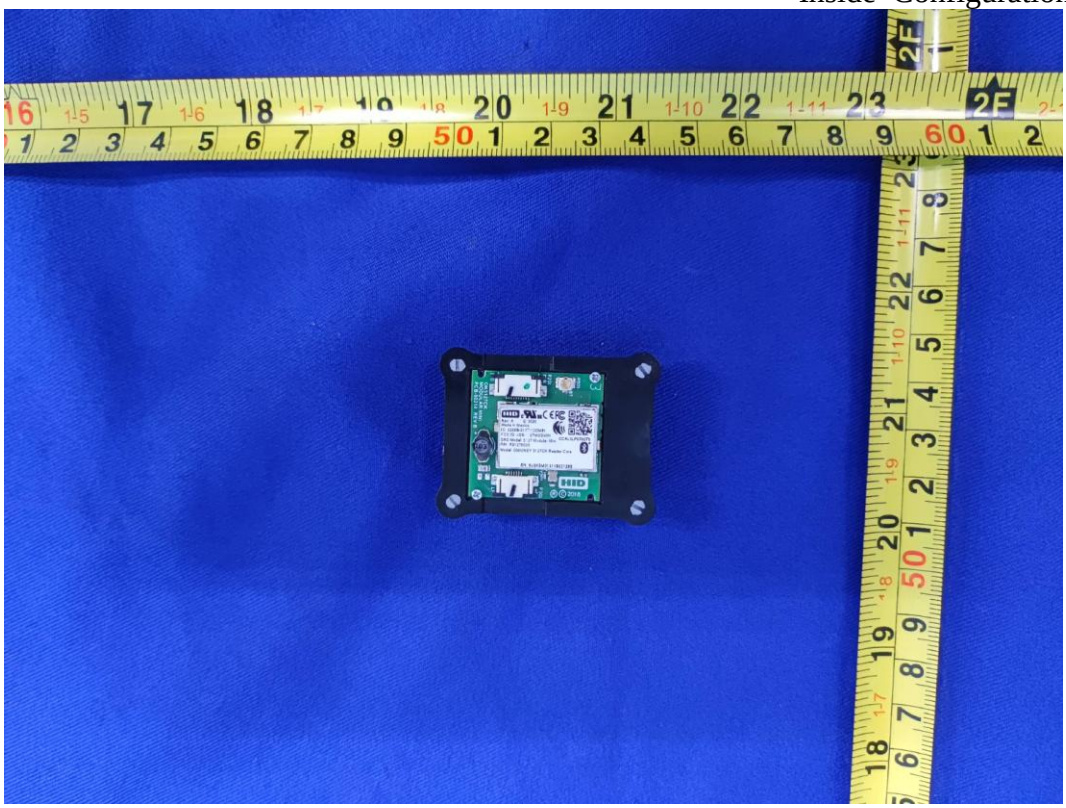

Figure 16
Inside Configuration of the EUT

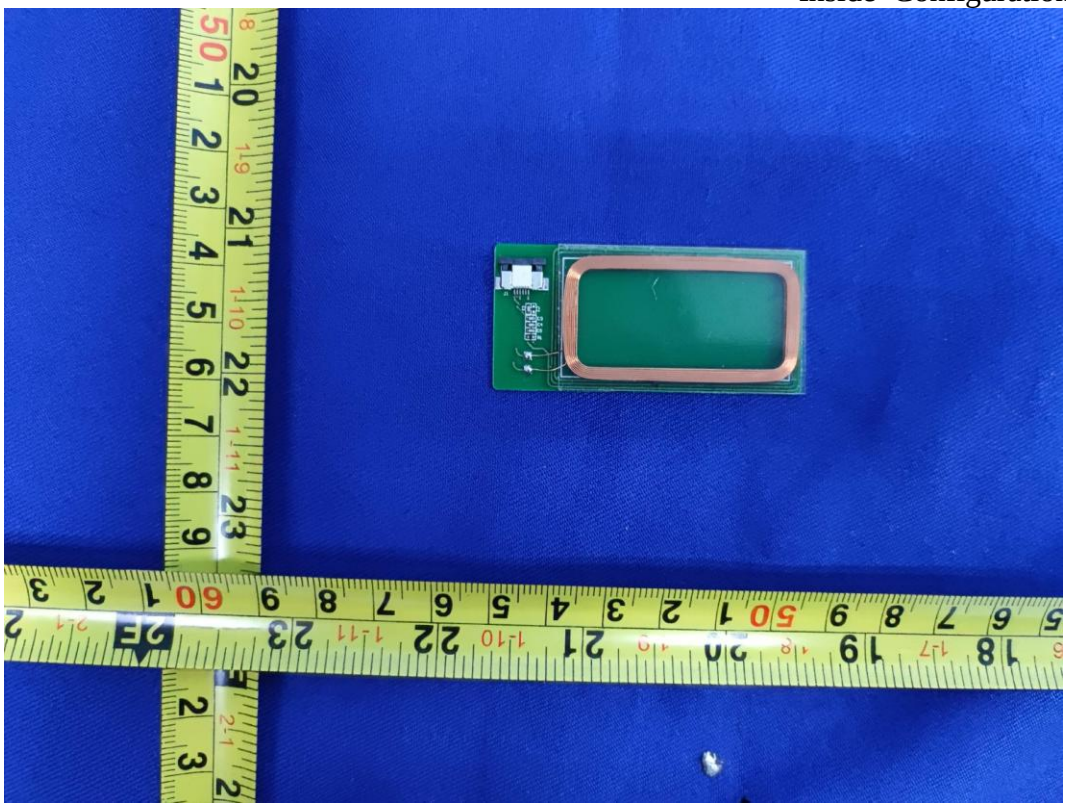

Figure 17
Inside Configuration of the EUT

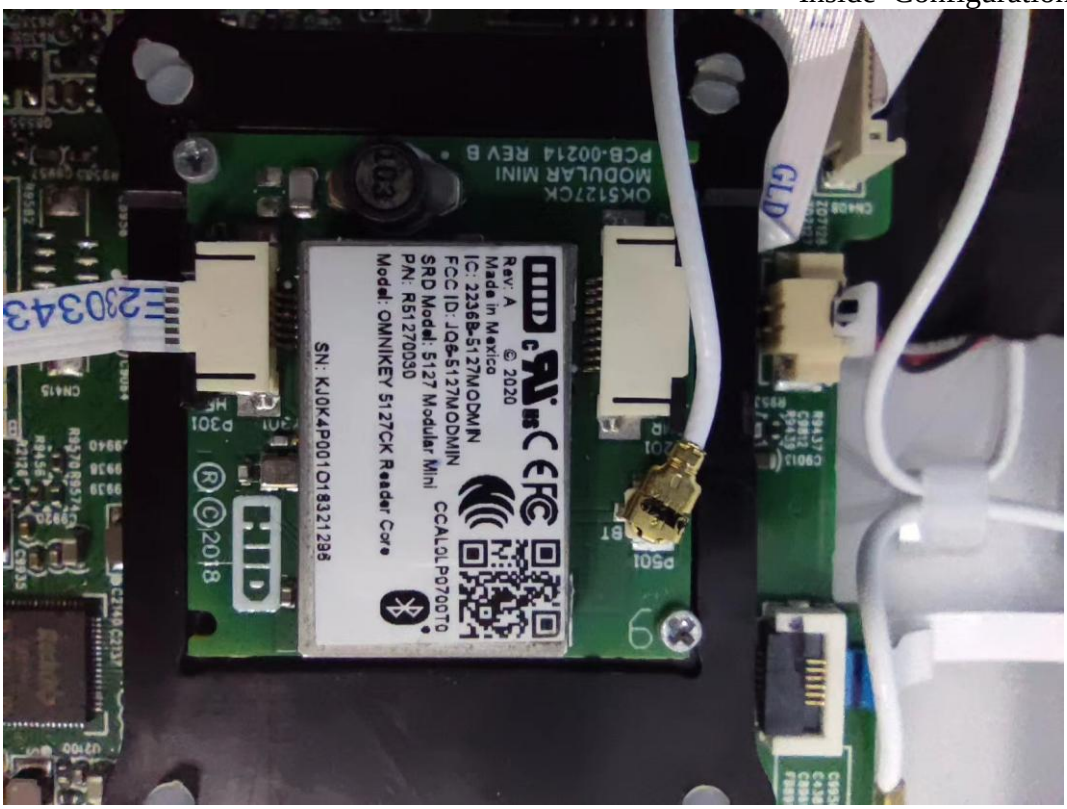

Figure 18
Inside Configuration of the EUT

Figure 19
Inside Configuration of the EUT

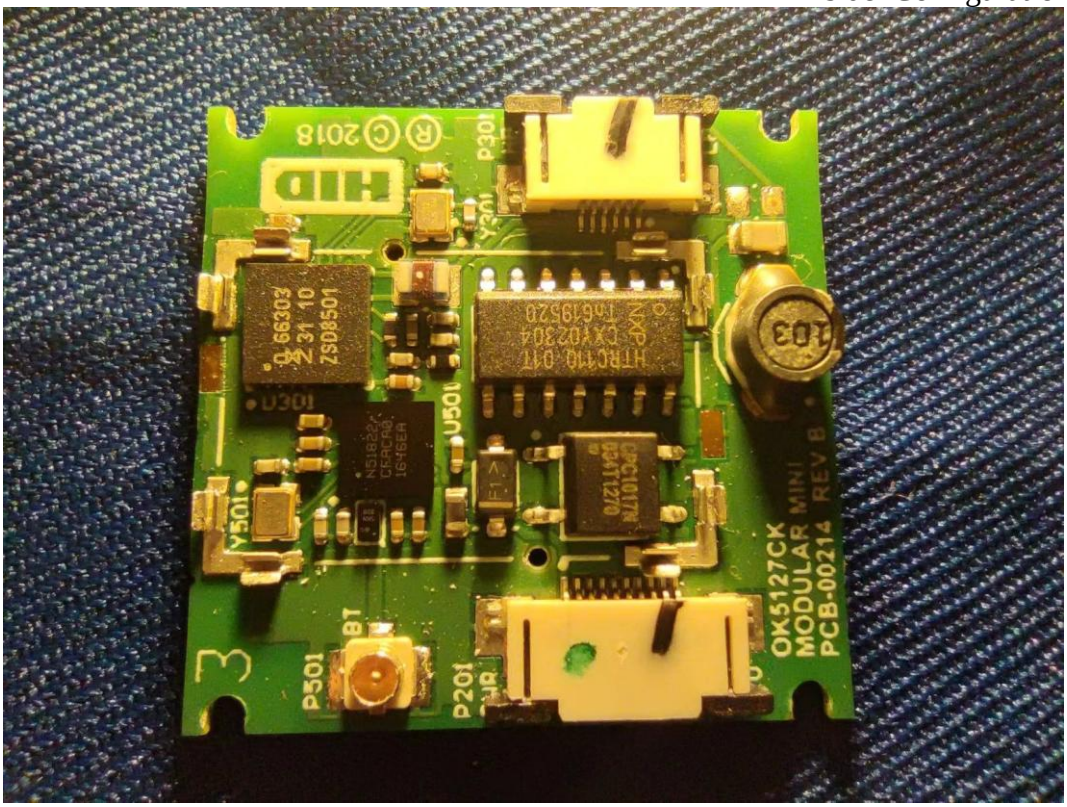

Figure 20
Inside Configuration of the EUT

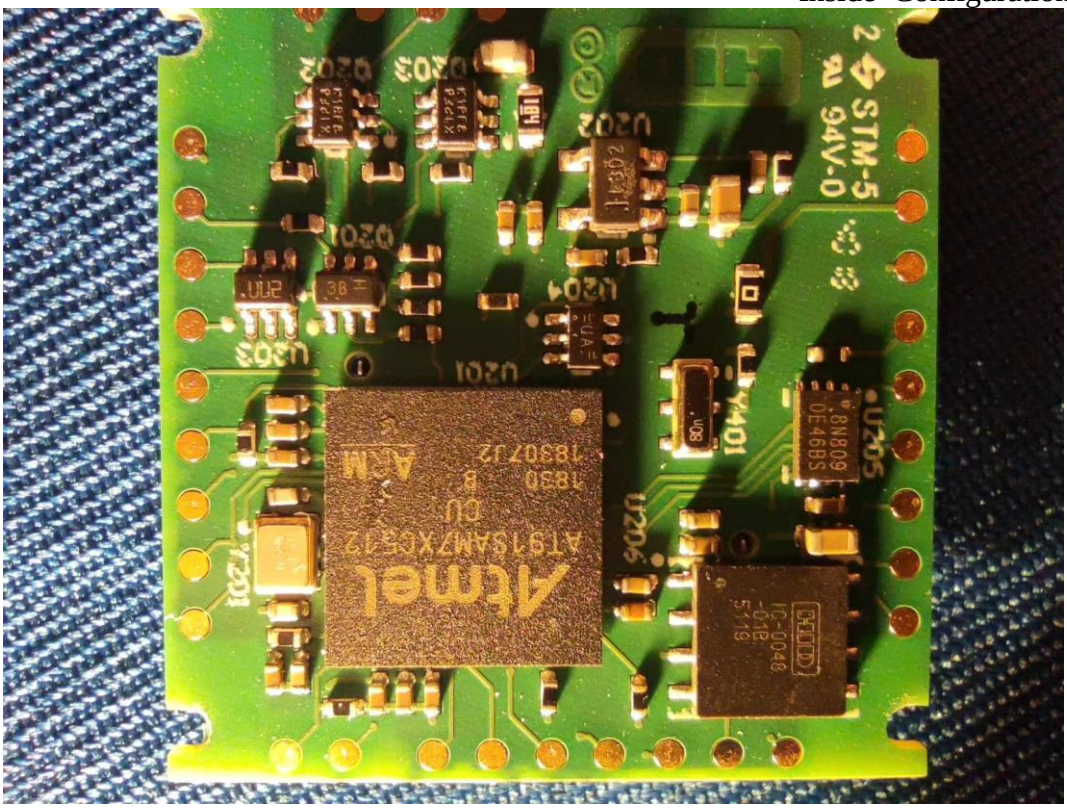

Figure 21
Inside Configuration of the EUT

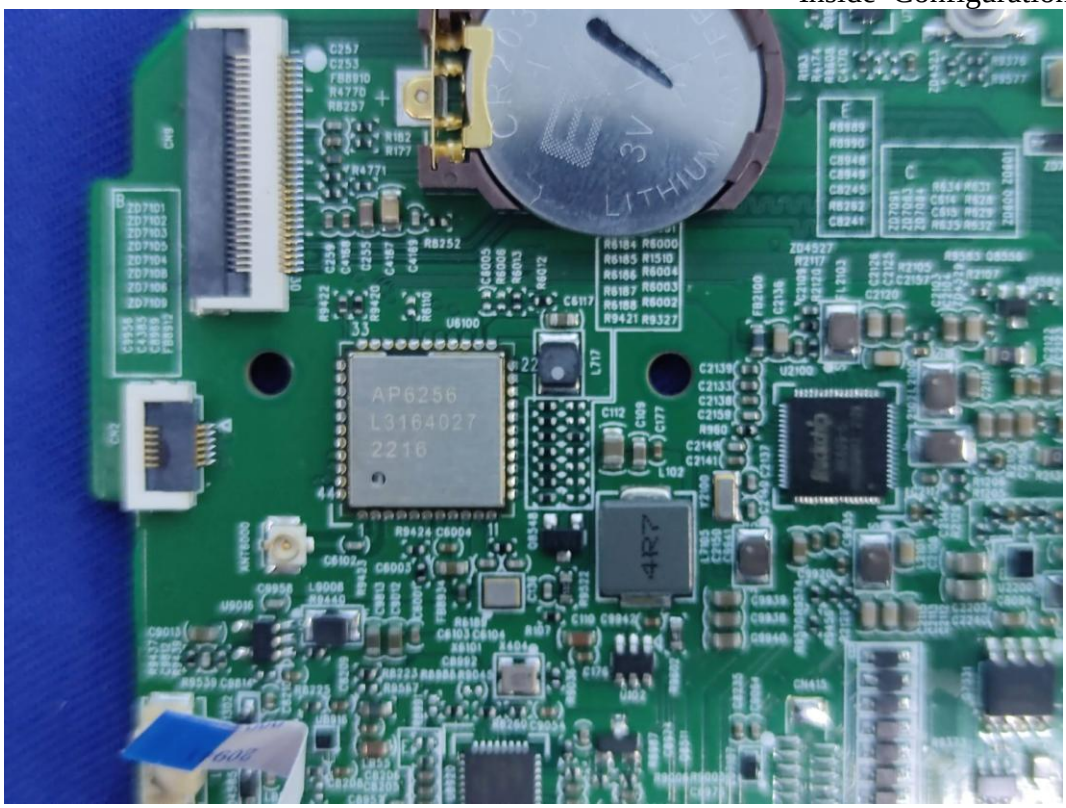

Figure 22
Inside Configuration of the EUT

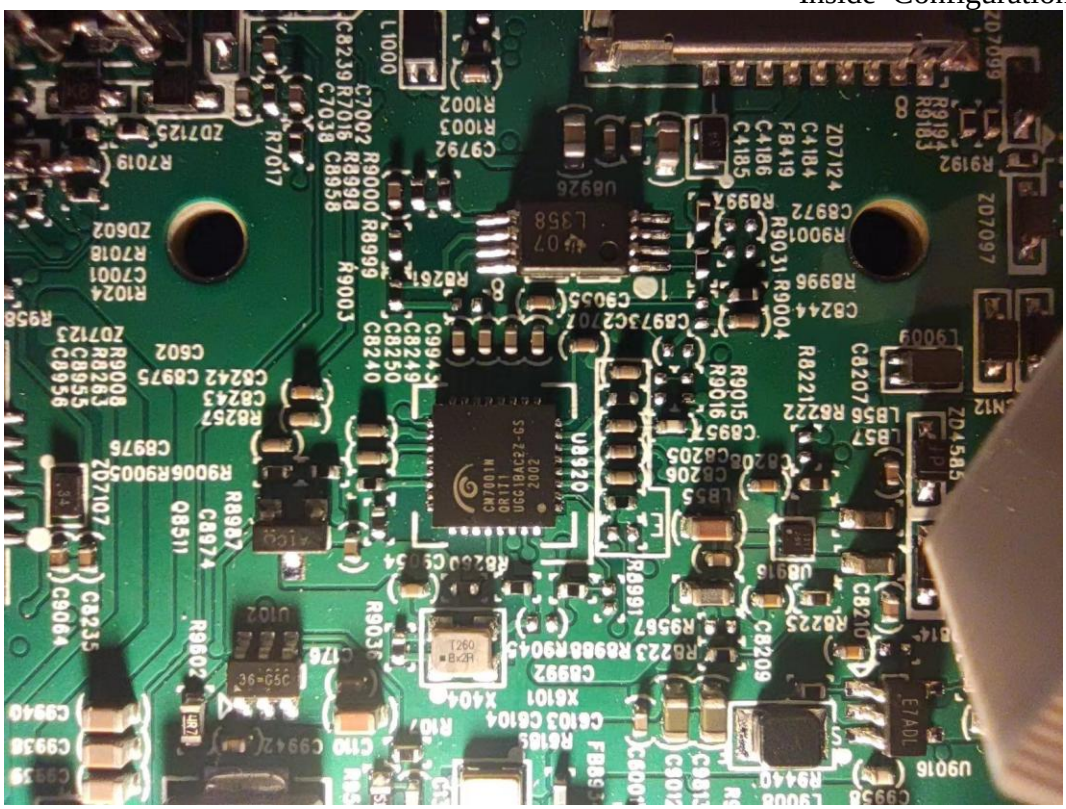

Figure 23
Inside Configuration of the EUT

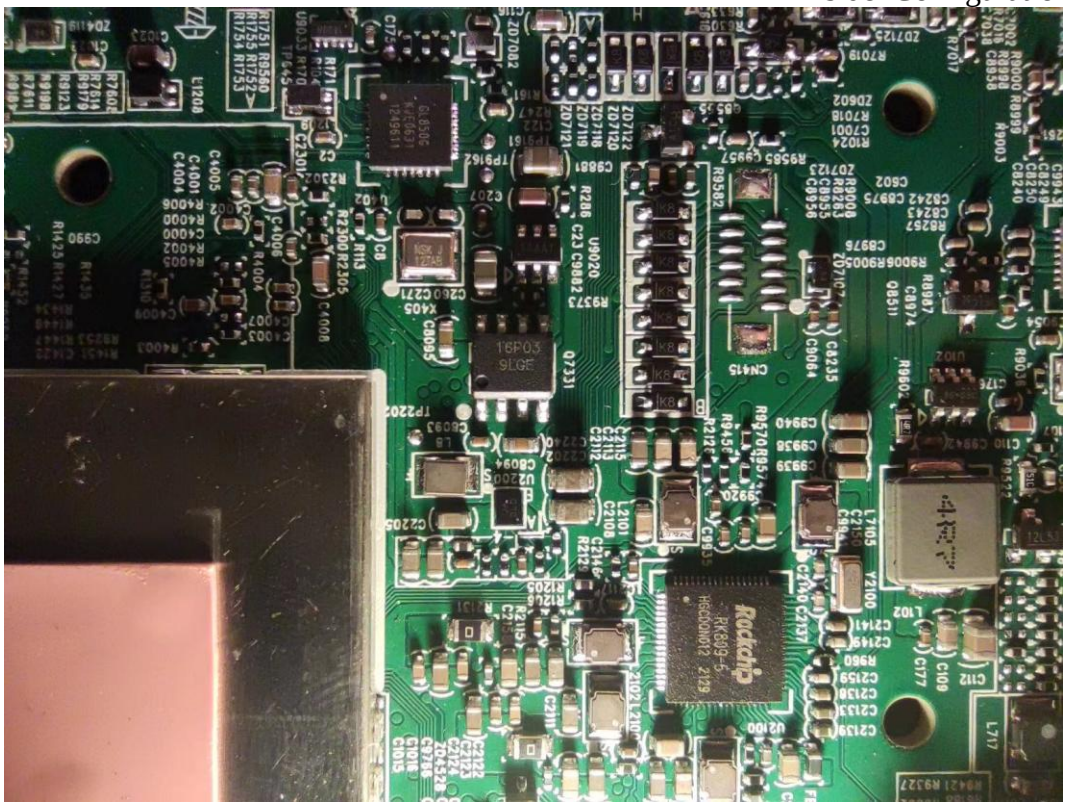

Figure 24
Inside Configuration of the EUT

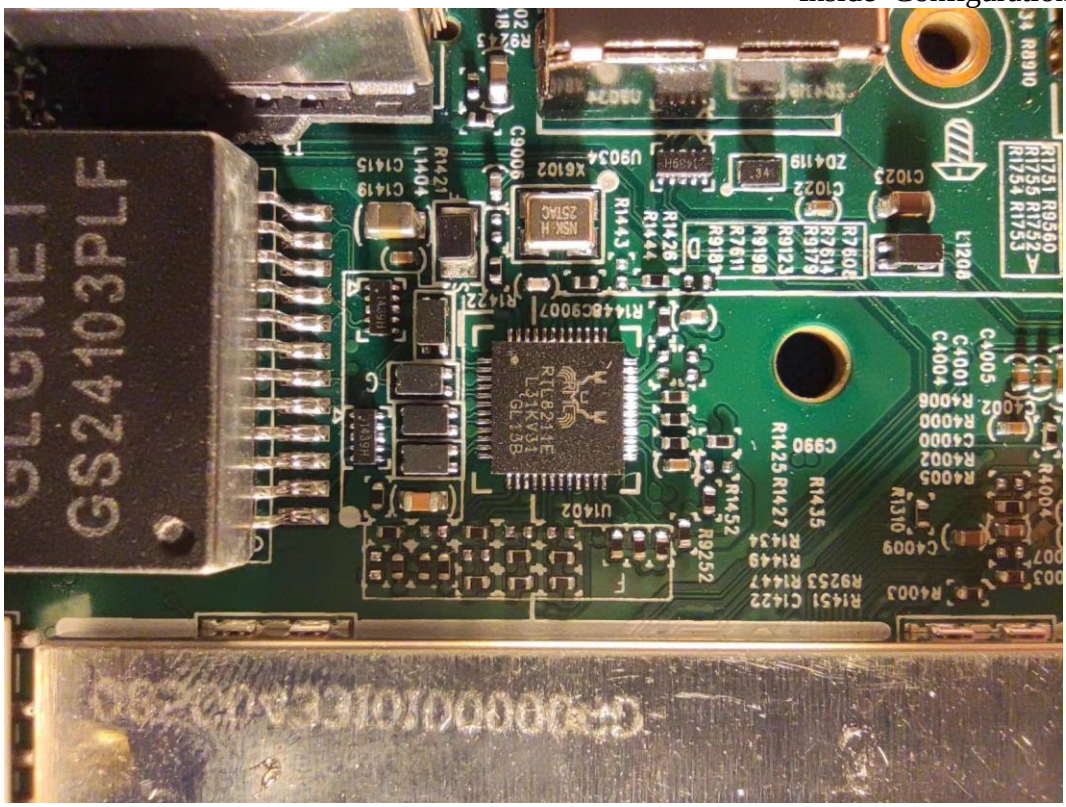

Figure 25
Inside Configuration of the EUT

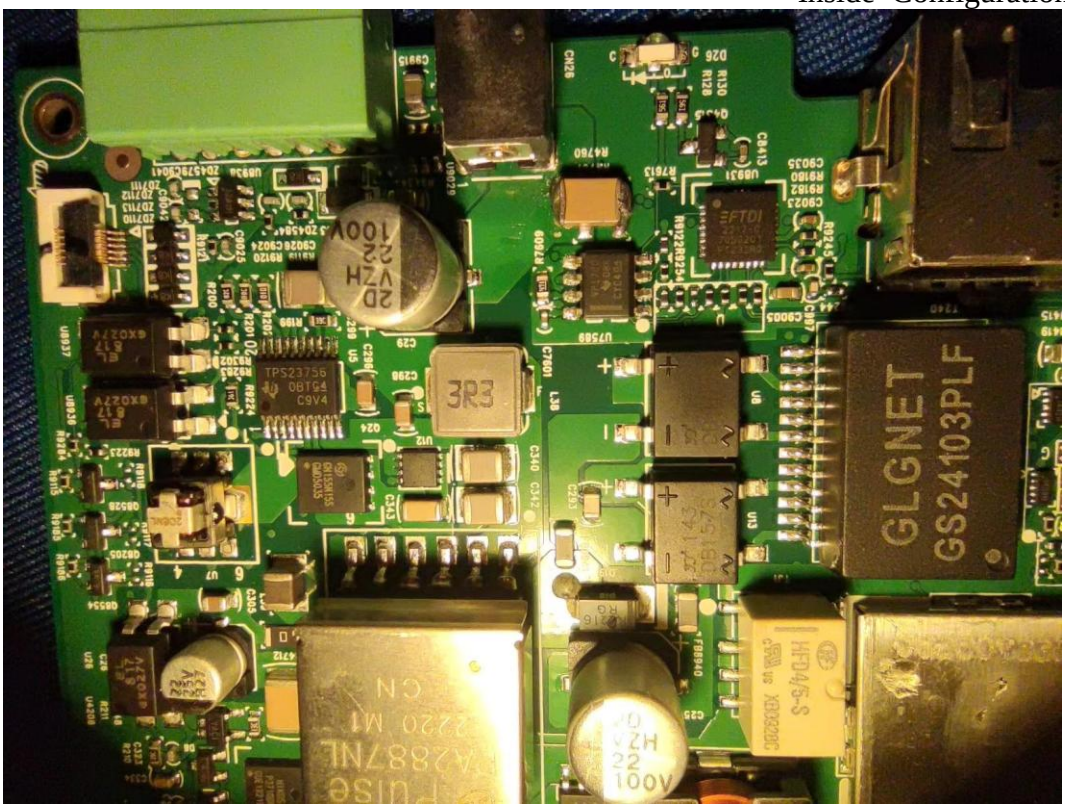

Figure 26
Inside Configuration of the EUT

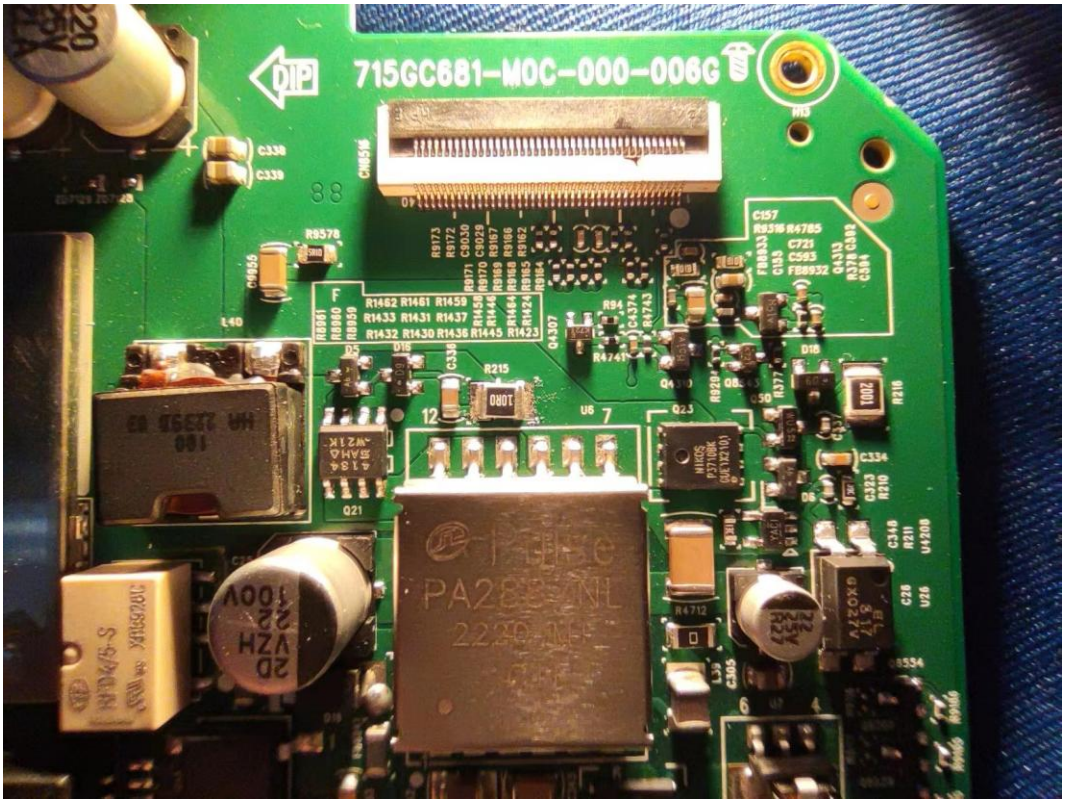

Figure 27
Inside Configuration of the EUT

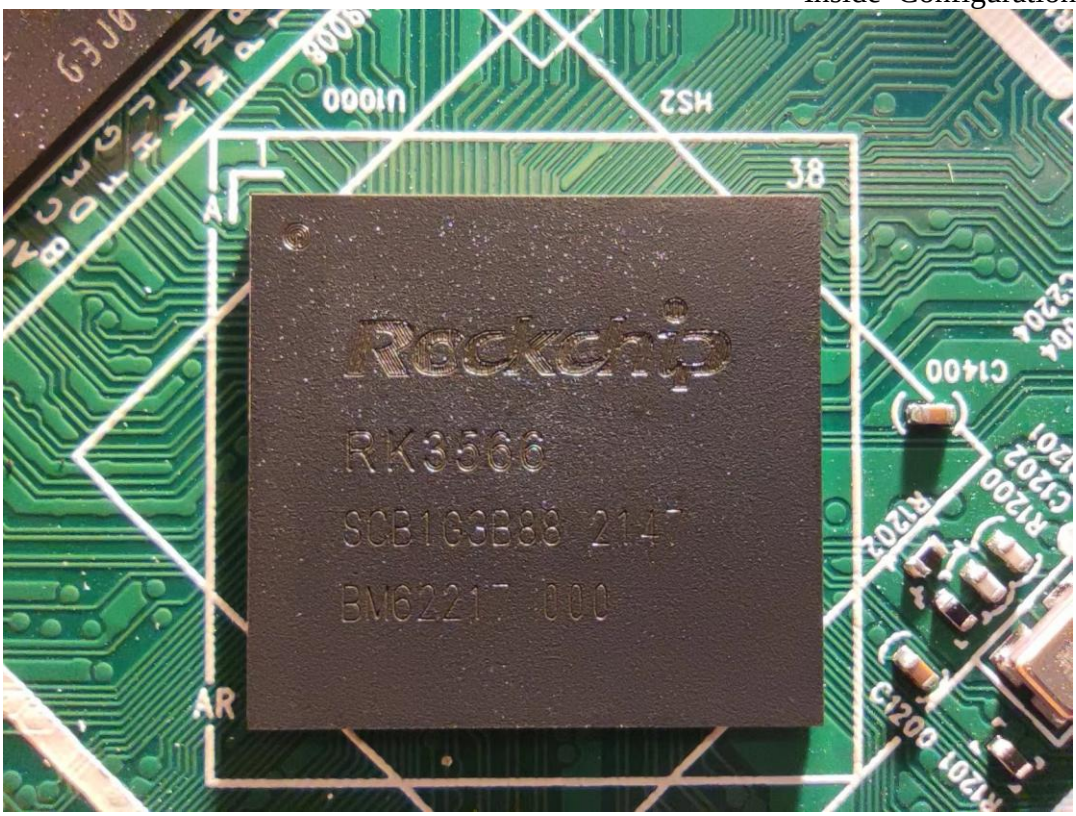

Figure 28
Inside Configuration of the EUT

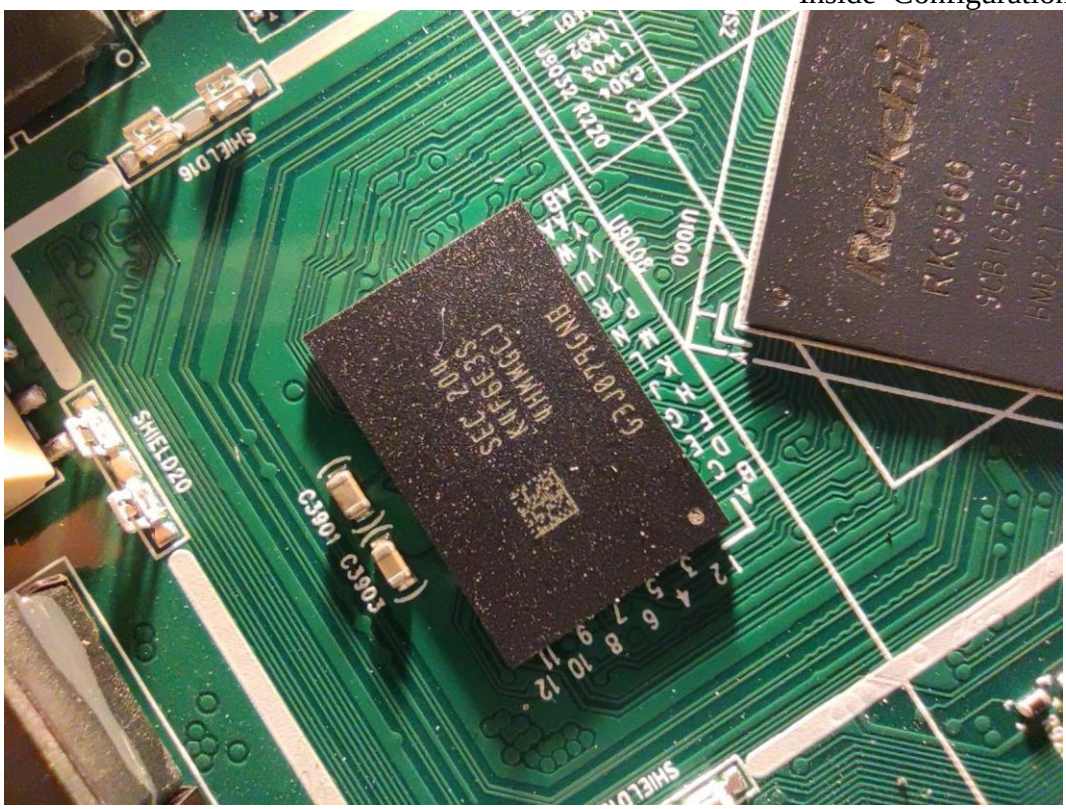

Figure 29
Inside Configuration of the EUT

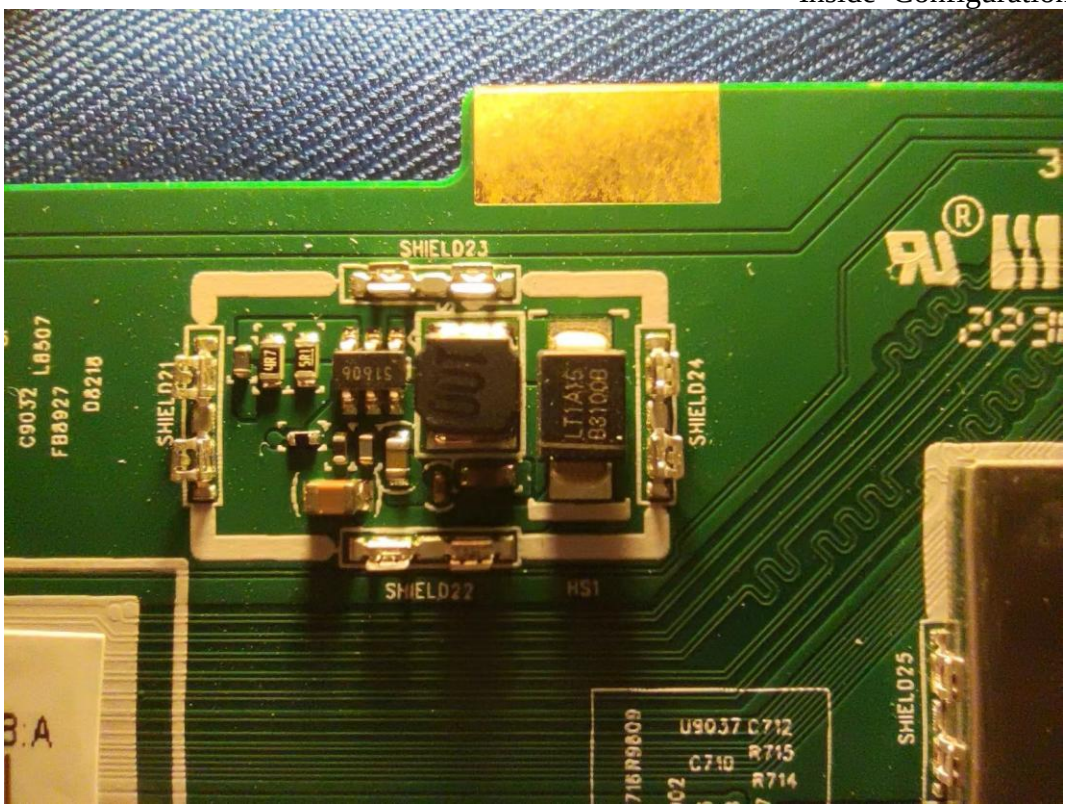

Figure 30
Inside Configuration of the EUT

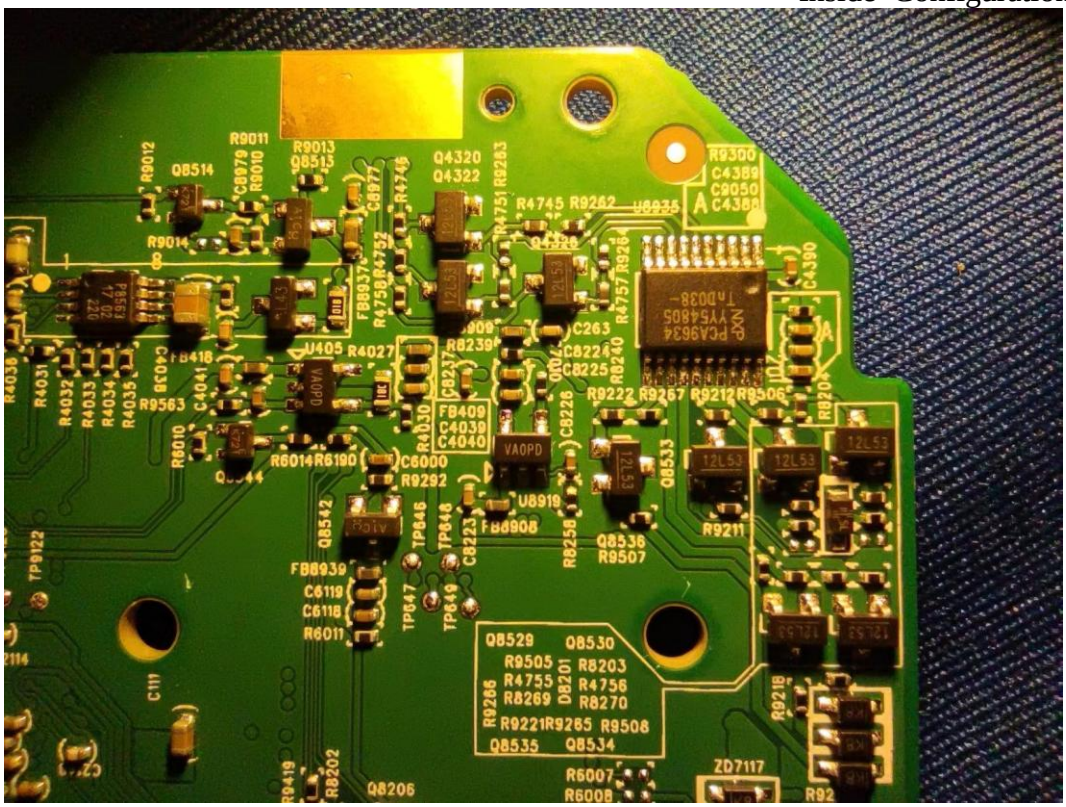

Figure 31
Inside Configuration of the EUT

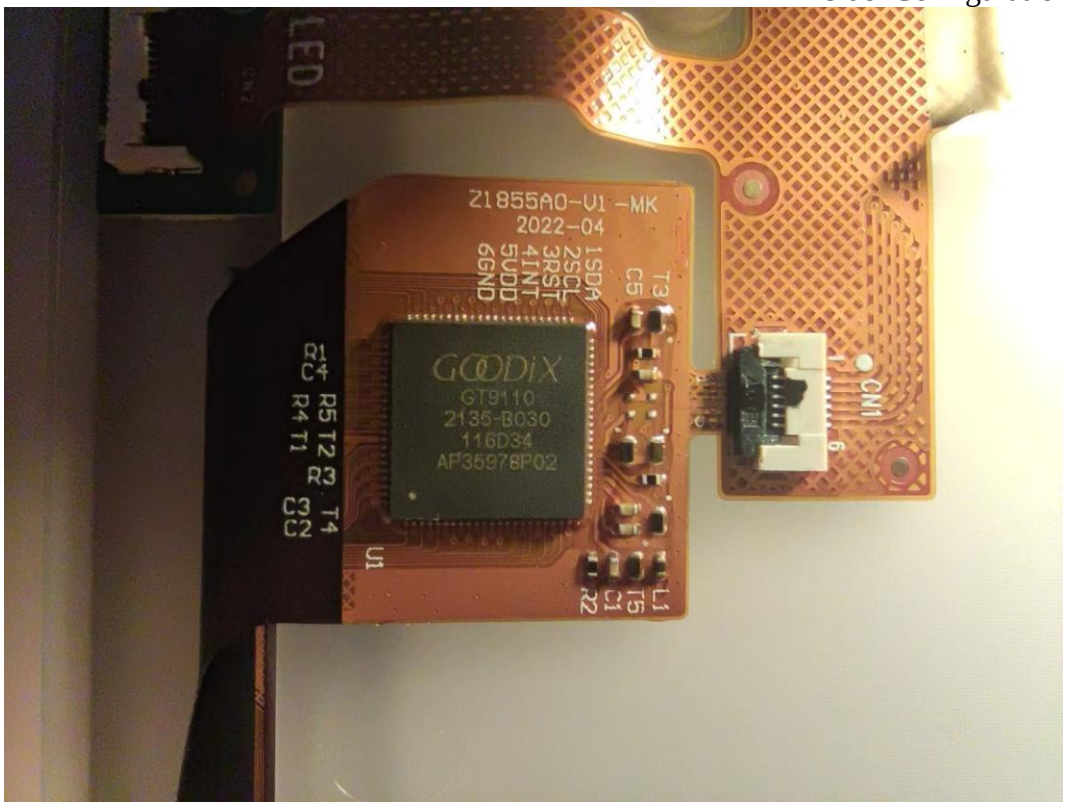

THE END